


# Automatic Gearbox

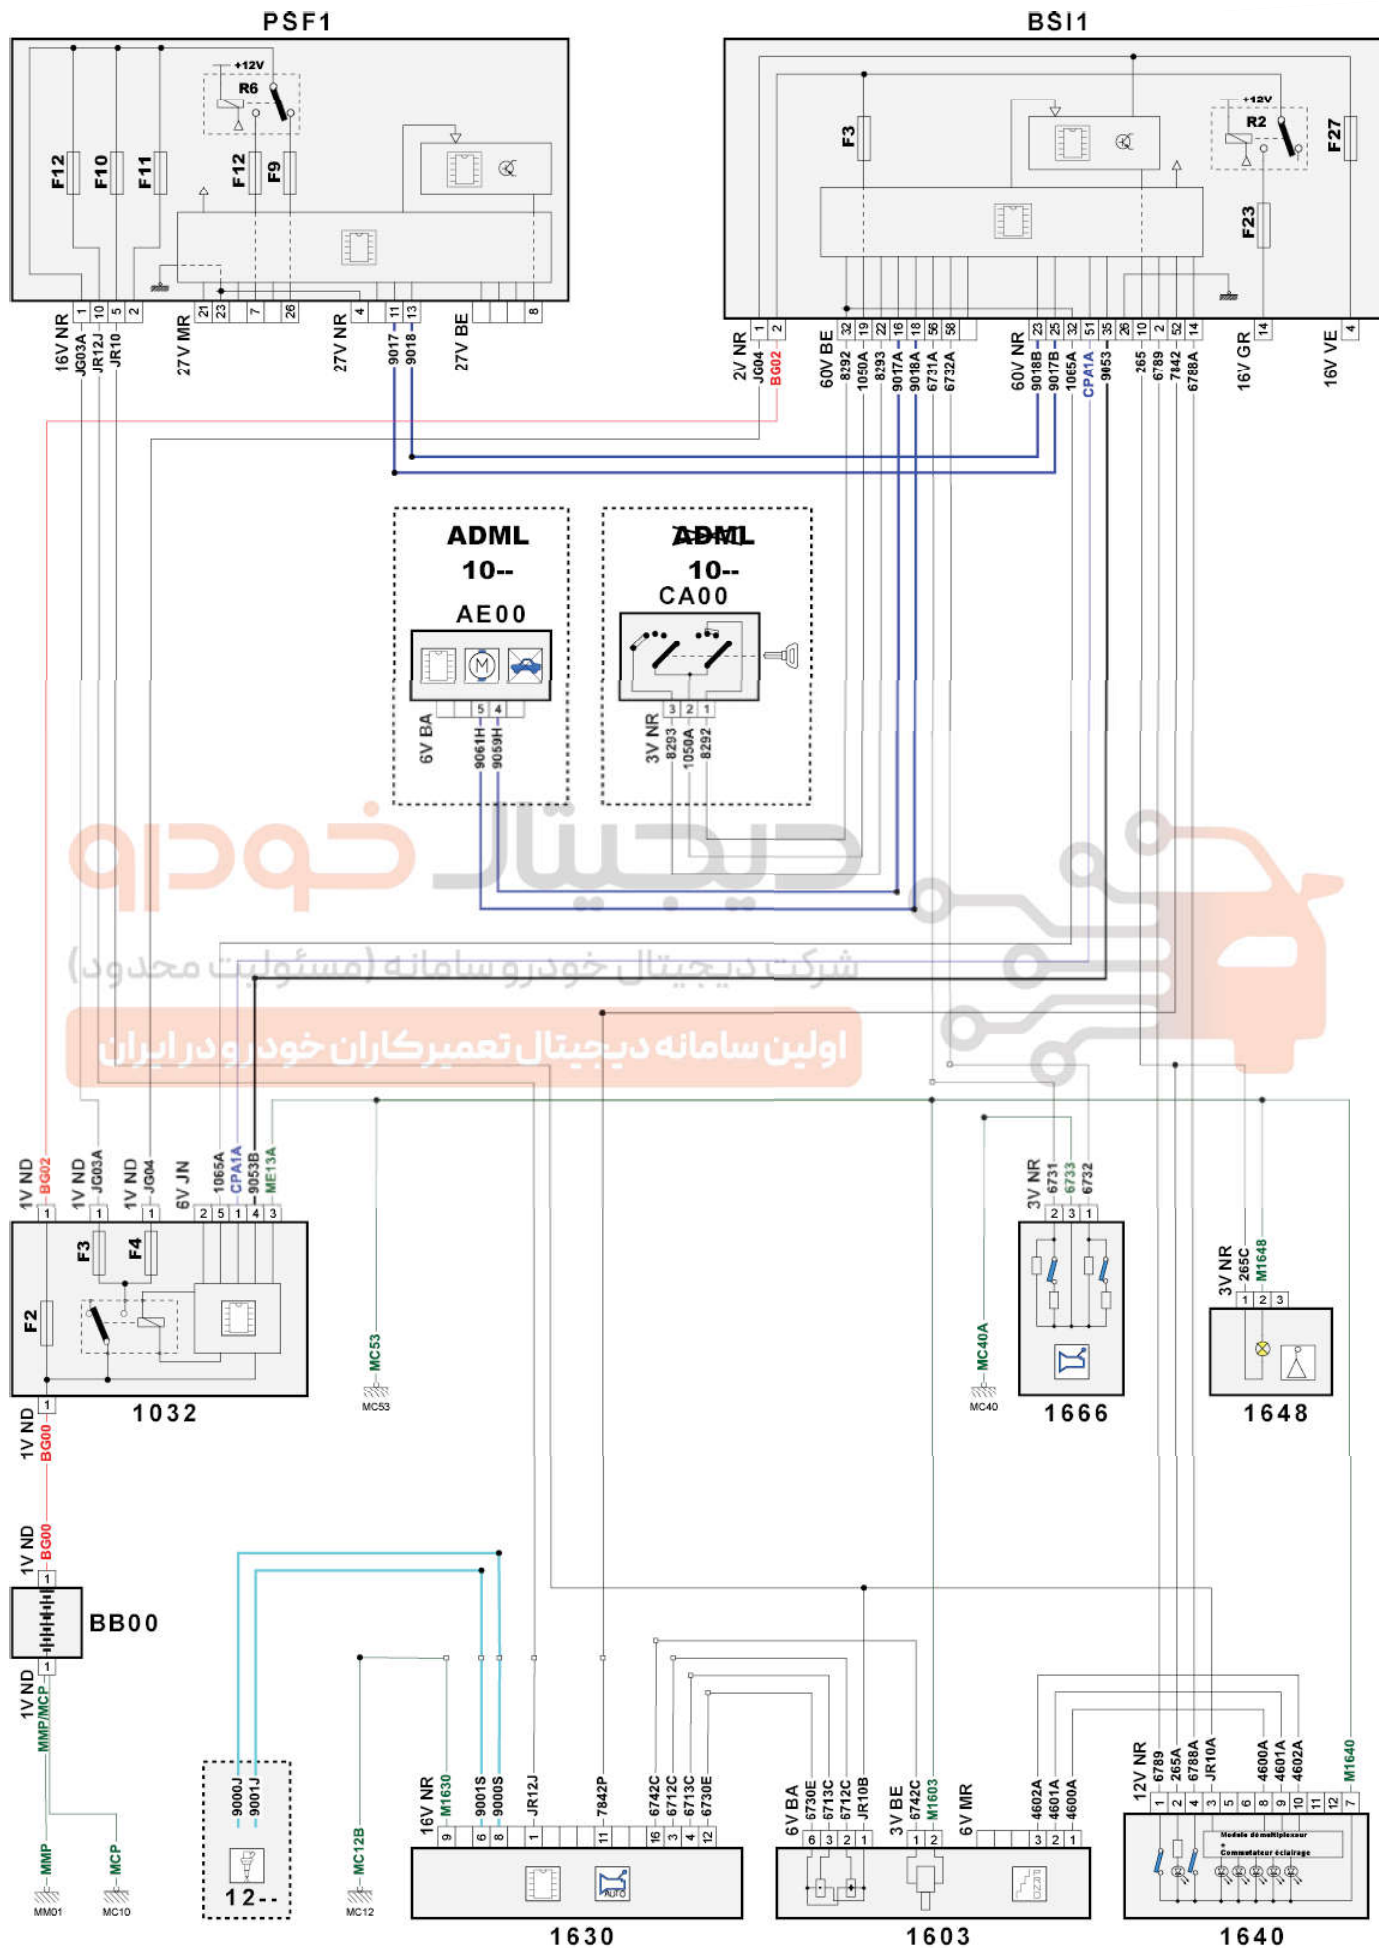

## Automatic Gearbox

| item code | description | information  |
|-----------|-------------|--|
| 1032      | null        | electrical supplies protection and management unit |
| 1320      | null        | engine ECU /                                       |
| 1603      | null        | automatic gearbox control assembly                 |
| 1630      | null        | / automatic gearbox ECU                            |
| 1640      | null        | automatic transmission programme selector          |
| 1648      | null        | back-lit gear lever knob                           |
| 1666      | null        | gear controls at the steering wheel                |
| AE00      | null        | electric steering lock                             |
| BB00      | null        | ancillaries battery                                |
| BSI1      | null        | built-in systems interface                         |
| CA00      | null        | ignition switch                                    |
| E100A     | null        | crimp one information (or equipotential 100A) wire |
| E265      | null        | crimp one information (or equipotential 265) wire  |
| E784      | null        | crimp one information (or equipotential 784) wire  |
| E900A     | null        | crimp one information (or equipotential 276A) wire |
| E901A     | null        | crimp one information (or equipotential 901A) wire |
| E917      | null        | crimp one information (or equipotential 917) wire  |
| E917A     | null        | crimp one information (or equipotential 917A) wire |
| E918      | null        | crimp one information (or equipotential 918) wire  |
| E918A     | null        | crimp one information (or equipotential 918A) wire |
| E953      | null        | crimp one information (or equipotential 953) wire  |
| EM12      | null        | crimp earth (earth point number 12)                |
| EM40A     | null        | crimp earth (earth point number 40A)               |
| EM53      | null        | crimp earth (earth point number 53)                |
| MC10      | null        | body earth point number 10                         |
| MC12      | null        | body earth point number 12                         |
| MC40B     | null        | body earth point number 40                         |
| MC53B     | null        | body earth point number 53B                        |
| MM01      | null        | engine earth point number 01                       |
| PSF1      | null        | engine compartment connection board-fuse box       |

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران