## 0701 Electrical Equipment

1 Battery	974
2 Starting System	977
	98 <sup>2</sup>
4 Instrument Cluster	98
5 Diagnosis and Inspection of the Instrument Cluster	998
6 Body Control Module (BCM)	1023
7 Diagnosis and inspection of the body control module (BCM)	1044
8 Alarm System	1114
9 Interior Lights	1120
10 Exterior Lights	1120
11 Power Windows	
12 Exterior Mirror	1158
13 Horn	1162
14 Wiper and Washer System	116
15 Rear Window Defroster	1173
16 Anti-theft System	117
17 Diagnosis and Inspection of the Anti-theft System	1184
18 Reversing Radar System	1197
19 Audio System	120 <sup>2</sup>
20 Cigarette Lighter	1212
21 CAN Bus	



شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

021 62 99 92 92

www.digitalkhodro.com

### 1 Battery

07

1.1 General information	974
1.2 Removing and installing the battery	97
1.3 Removing and installing the battery tray	

### 1.1 General information

### 1.1.1 Description

This vehicle is equipped with a 12V battery, which is located in the engine compartment and consists of the following components:

- Battery is used to store the chemical energy converted from the electrical energy and convert it back into the electrical energy for electrical equipment when necessary.
- Battery cable connects the positive and negative terminals of the battery and supplies power to the vehicle's electrical system.
- Battery cover fixes the battery in place with the battery tray.
- Battery tray is located inside the engine compartment and used to install the battery.

ح پرچپال حودرو سامانه (مسئولیت محدود)

ولین سامانه دیجیتال تعمیرکاران خودرو در ایران

021 62 99 92 92


07

07 - Electrical System


### 1.2 Removing and installing the battery

#### Removal

- 1. Switch off all electrical equipment and disconnect the battery negative cable.
- 2. Disconnect the battery positive cable (-1-) and pull out the fuse box (-2-) out of the battery cover in the (-arrow-) direction and put it aside.

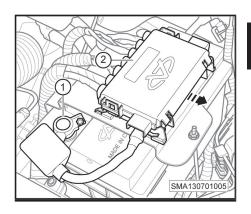

- 3. Loosen the fixing clip (-1-) from the wiring harness.
- 4. Unscrew the battery cover nuts (-2-) and remove the battery cover (-3-).
- 5. Remove the battery.

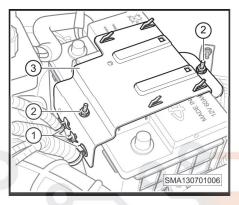



Installation

Installation shall follow the reverse sequence of the


removal procedure.

### 1.3 Removing and installing the battery tray

07

#### Removal

- 1. Remove the battery => refer to page 975.
- 2. Remove the air filter assembly => refer to page 239.
- **3.** Loosen the fixing clips (-1-) from the wiring harness.
- 4. Unscrew the fixing bolts (-2-) from the tray.
- **5.** Remove the battery tray (-3-).

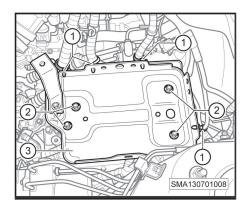

#### Installation

Installation shall follow the reverse sequence of the removal procedure.



021 62 99 92 92


### 2 Starting System

2.1 General information	977
2.2 Circuit diagram	978
2.3 Removing and installing the starter	
2.4 Diagnosis and inspection	980

07

### 2.1 General information

### 2.1.1 Description

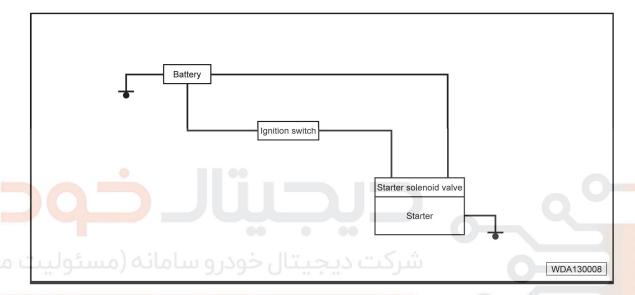

The battery interacts with the charging system to support the proper operation of the vehicle's electrical system. The electrical system is divided into two separate circuits: one is a heavy-current circuit, e.g. starting circuit; and the other is a low-current control circuit, such as the common operating circuit of the electrical system. The starting system consists of the following components:

- Starter
- Battery
- Battery cable
- Ignition switch
- Wiring harness


### 2.1.2 Product specifications

#### **Torque specifications**

Component	Torque (N·m)	
Starter mounting bolt	30	

### 2.2 Circuit diagram


Starting system (page 1)

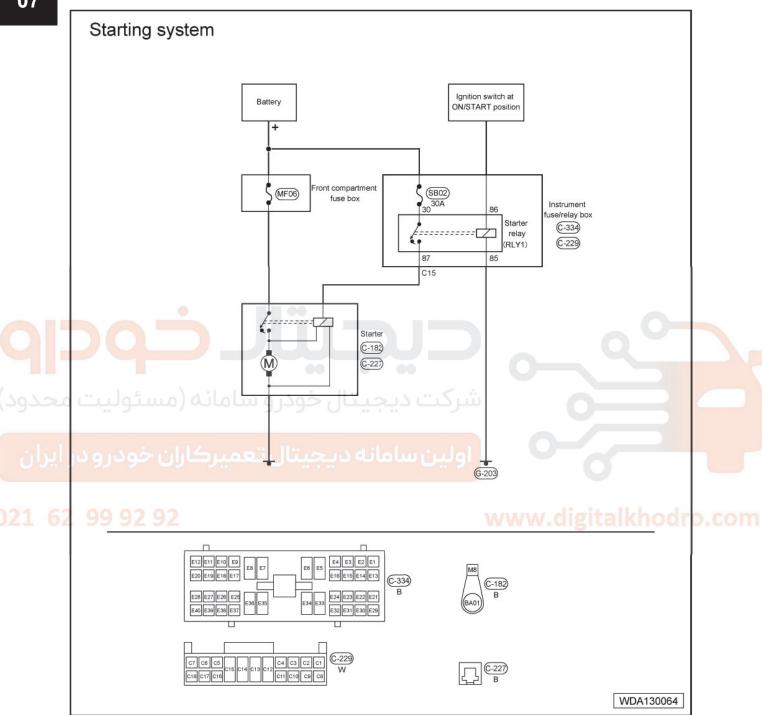

### 2.3 Removing and installing the starter

#### Removal

- 1. Remove the battery.=> refer to page 975
- 2. Remove the air filter assembly.=> refer to page 239
- 3. Remove the battery tray.
- 4. Unscrew the nut (-1-) of the starter terminal B+.
- **5.** Disconnect the connector of the starter solenoid switch (-2-).
- 6. Unscrew the starter fixing bolts (-3-).
  - Tightening torque of the bolt: 30 N°m
- 7. Remove the starter.

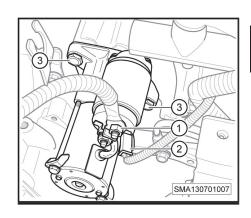

#### Installation

Installation shall follow the reverse sequence of the removal procedure.



021 62 99 92 92

www.digitalkhodro.com

### 2.4 Diagnosis and inspection

### 2.4.1 Testing the starter

**07** 

#### 


- Since it is dangerous when the starter is running at a high speed, the operators shall take precautions.
- Please familiarise yourself with the operating procedures before inspection.
- Supplying power to the starter with the battery for a long time will burn out the coil, so the given time for each test shall be within 3-5 minutes.

#### i Note

- This test can only be applied to the starter removed from the vehicle.
- This test is intended to check the continuous starting performance of the starter.

#### **Procedures**

- 1. Remove the starter from the engine compartment.
- 2. Install the starter onto a soft-palated bench vise.
- Connect the 12V battery to the starter by cables with the battery positive connected to the starter terminal B+ and the negative connected to the starter housing.
- 4. Connect the power supply terminal of the starter solenoid switch to the positive power supply terminal by leads. At this moment, the starter starts to operate. If the starter fails to run, replace the failed starter with a new one.

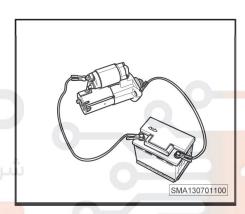

S 4 S Taction the starter a plannid switch

### 2.4.2 Testing the starter solenoid switch


)21 (

#### Note

This test can only be applied to the starter removed from the vehicle.

#### **Procedures**

- **1.** Remove the starter from the engine compartment.
- 2. Disconnect the solenoid switch terminal.
- 3. Connect the battery negative to the starter housing and its positive to the terminal of the starter solenoid switch. When switching on the starter, you shall hear the starter solenoid switch pushing the pinion and engaging it with the gear ring. Otherwise, replace the failed starter assembly.

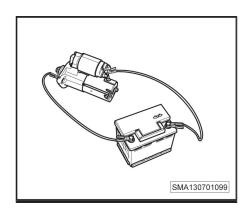


### 3 Charging System

3.1 General information	981
3.2 Circuit diagram	982
3.3 Removing and installing the generator	
3.4 General troubleshooting	

07

### 3.1 General information

### 3.1.1 Description

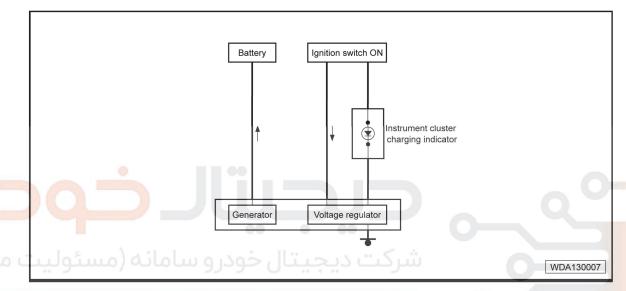

- The generator is a device that converts mechanical energy into electrical energy and serves as one of the main power of the vehicle. When the engine is running, it drives the generator via the poly-V belt, thereby supplying power to electrical equipment (except for the starter) and charging the battery.
- When the engine is running, it drives the energized rotor of the generator exciting winding to rotate so that the Y-shaped stator winding produces induced electromotive force, which is subsequently rectified into DC power by the electronic rectifier, thereby feeding the electricity to vehicle's electrical system. To keep the DC voltage stable, the generator is also equipped with a voltage regulator to stabilize the power voltage of the system.


### 3.1.2 Product specifications

#### **Torque specifications**

Component Torque (N·m)	
Generator cable fixing nut	13
Generator mounting bolt	30

### 3.2 Circuit diagram

Charging system (page 1)

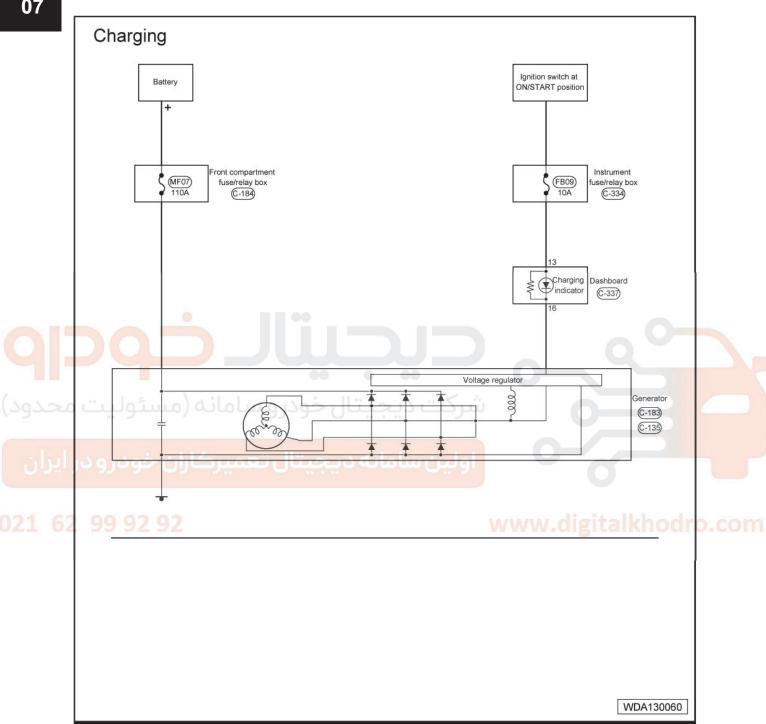

07

07 - Electrical System

### 3.3 Removing and installing the generator


#### Removal


- 1. Switch off all electrical equipment and the ignition
- 2. Disconnect the battery negative cable.
- 3. Remove the poly-V belt of the generator.=> refer to page 72
- 4. Unscrew the fixing nut (-1-) and remove the generator cable.
- 5. Pull off the cable rubber sleeve, unscrew the cable fixing nut (-2-) and remove the generator cable.
- 6. Unscrew the generator bottom fixing bolt (-3-) and the bracket fixing bolt (-4-).
  - Tightening torque of the bolt: 30 N•m
- 7. Remove the generator.



Installation shall follow the reverse sequence of the

removal procedure.

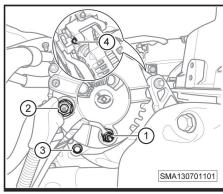

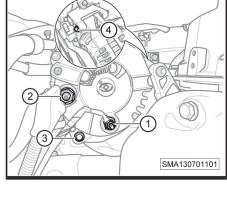



### 3.4 General troubleshooting

07

Symptoms	Causes	Troubleshooting
	Wear, loosening or bearing damage	Replace the generator assembly
Abnormal noise of the generator	Inadequate grease	Add grease
	Improper installation	Re-install as specified requirements
	Inadequate poly-V belt tension	Replace the tensioner
	Disalignment between the poly-V belt pulley and the generator pulley	Re-install as specified requirements
	Internal damage of the generator	Replace the generator assembly





021 62 99 92 92

### 4 Instrument Cluster

4.2 Circuit diagrams987	4.1	General information	985
	4.2	2 Circuit diagrams	987
4.3 Definition of the instrument cluster pins992			
4.4 Assembling the instrument cluster996			


07

### 4.1 General information

### 4.1.1 Description


- The instrument cluster is located on the instrument console in front of the driver and used to monitor and display the operating status of vehicle's systems and parts at any time to ensure that you can drive your vehicle reliably and safely. It shows digits, pointers and indicators and reminds the driver to rectify potential faults timely via flashing lights and sound warnings to effectively prevent accidents.
- The instrument system of Chery A13/A13A has two forms of display depending on different configurations.
   One is the instrument cluster in combination with the auxiliary instrument, and the other is the instrument cluster independently.

The applied instrument cluster and auxiliary instrument:

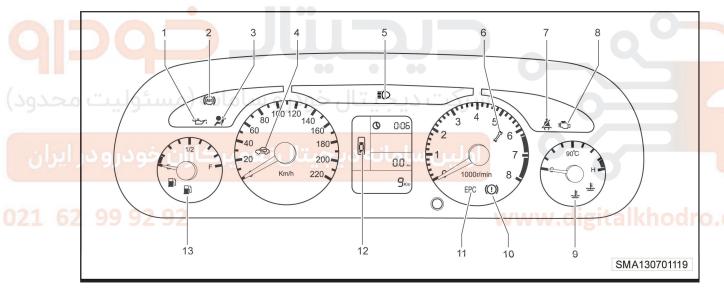


1 Engine oil pressure warning lamp	8 Engine fault indicator	
2 ABS indicator (if equipped) 9 Coolant temperature indicator		
3 Airbag system indicator	10 Brake system indicator	
4 Anti-theft system indicator 11 Electronic throttle fault indicator		
5 High beam indicator	12 Door ajar indicator	
6 Vehicle service indicator	13 Fuel level indicator	
7 Driver side seat belt indicator		

07

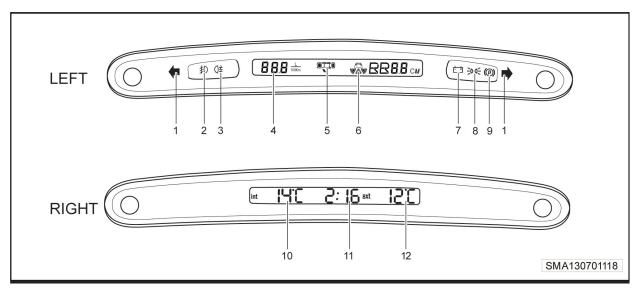

1 Turn signal indicator 7 Charging system indicator		
2 Front fog lamp indicator	8 Parking/position indicator	
3 Rear fog lamp indicator	dicator 9 Parking brake indicator	
4 Instant fuel consumption gauge	10 Interior temperature display unit	
5 Door opening status indicator	11 Clock display unit	
6 Reversing radar system display unit	12 Exterior temperature display unit	

### The independent instrument cluster:

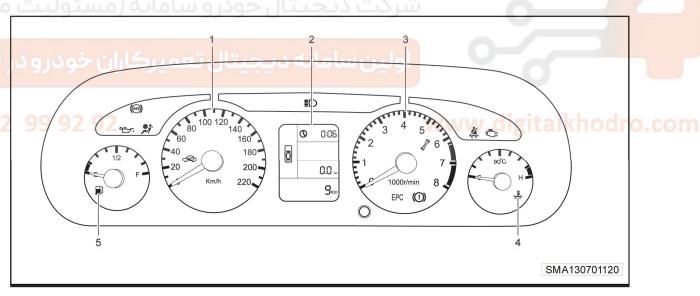

1 Speedometer	4 Coolant temperature gauge
2 LCD display	5 Fuel gauge
3 Tachometer	

### 4.2 Circuit diagrams

Instrument cluster (page 1)


07 Instrument 1 Battery Instrument fuse/relay box FB11 10A FB09 10A C-229 C16 E11 ➤ Diagnostic connector Anti-theft system Odometer sensor K C-226) 9 IG-SW Left instrument C-338 CAN-L CAN-H G-205) To CAN bus C-203 Backlight power C-301 G-317) Instrument SPEED-IN B+ CAN-WAKE UP cluster Microprocessor (C-337) www.digitalkhodro.com E12 E11 E10 E9 E8 E7 E4 E3 E2 E1 112 C4 C3 C2 C1 E20 E19 E18 E17 E16 E15 E14 E13 C7 C6 C5 C15 C16 C-334) C-229 (1 2 3) C-226 B E40 E39 E38 E37 E32 E31 E30 E29 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 L WDA130100

WWW.DIGITALKHODRO.COM

#### Instrument cluster (page 2)

Instrument 2 07 Ignition switch at ON/START position Outside Instrument temperature (FB07) fuse/relay box A/C panel sensor 10A C-334) C-342 (C-122) E32 (CT-1) (C-102) 4 (C-305) C-510 C-508 2 C-329 IG-SW Right instrument C-307) CAN-H CAN-L GND To CAN bus ➤ Backlight power Backlight power G-315 CAN-WAKE UP ILL Instrument cluster Microprocessor (C-337) П (1) (-122) W O COM E12 E11 E10 E9 E8 E7 E4 E3 E2 E1 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 W E6 E5 E16 E15 E14 E13 E20 E19 E18 E17 C-334) B E28 E27 E26 E25 E24 E23 E22 E21 9 8 7 6 5 4 3 2 1 18 17 16 15 14 13 12 11 10 B E40 E39 E38 E37 E32 E31 E30 E29 П 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 W 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 WDA130101

Instrument cluster (page 3)

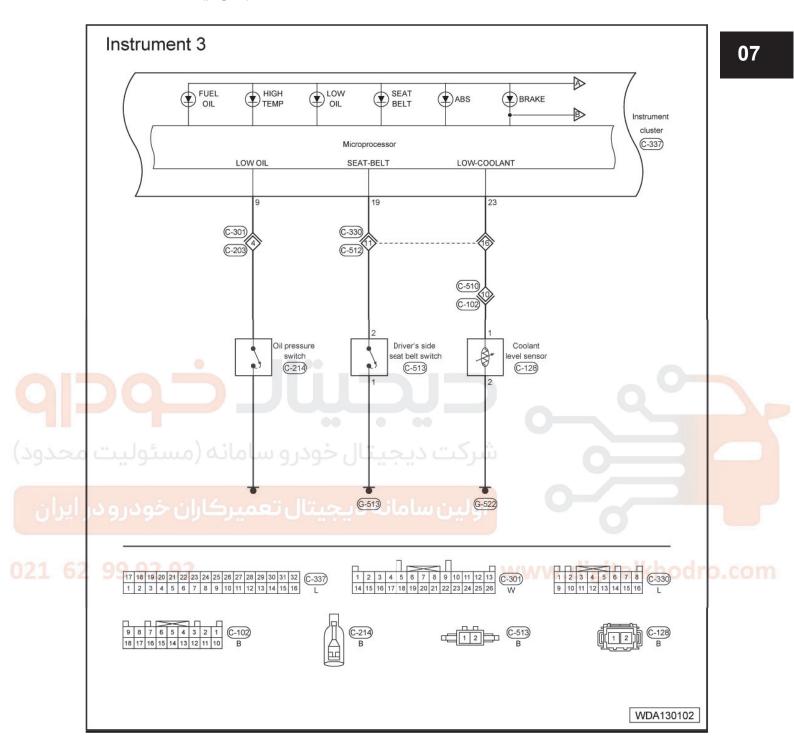


#### Instrument cluster (page 4)

Instrument 4 07 Ø • **(** 1 nstrument cluster PARKING CHARGE C-337 Microprocessor IMMO FUEL BRAKE 411 18 → Generator Anti-theft system ◀ C-330) (C-301) C-336) (C-512) (C-203) (C-536) Oil pump relay (RLY7) Fuel pump and Brake fluid Parking (M) el level sensor evel sensor brake switch C-215 C-525 C-523 G-537) G-522 G-205 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 9 8 7 6 5 4 3 2 1 18 17 16 15 14 13 12 11 10 B (12) C-215 B 1 2 3 4 C-523 B ∇ (C-525) W

WDA130103


Instrument cluster (page 5)

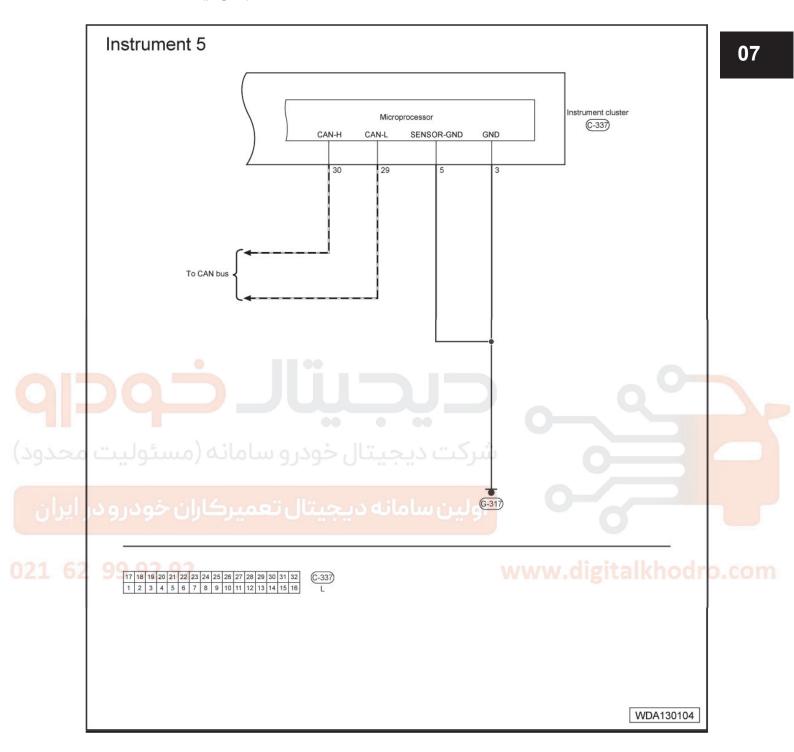

### 4.3 Definition of the instrument cluster pins

### Instrument cluster (independent)


07

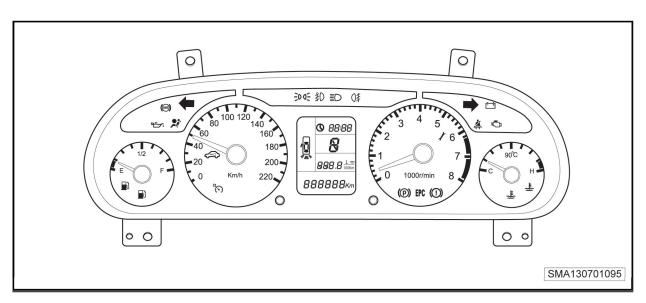

#### Instrument cluster 32-pin connector

	Pin No.	Function	Pin No.	Function
	1 1		17	Q
	2	.00 0	18	Parking brake signal input
4	بانه (مىشئولىت	Grounding	ش19کست در پ	Seat belt switch input
	4		20	
	5	Sensor grounding	21	Fuel sensor
	6		22	0
	7	Vehicle speed output	23	Low coolant level
2	99 92892		24 <b>WW</b>	v.digitalkhodr
	9	Low engine oil pressure	25	Low brake fluid level
	10		26	
	11	KL30	27	Vehicle speed input
	12	Backlight	28	
	13	KL15	29	CAN-L
	14		30	CAN-H
	15		31	Wake up signal
	16	Generator charging and discharging	32	Engine theft protection

### Instrument cluster (with auxiliary instrument)

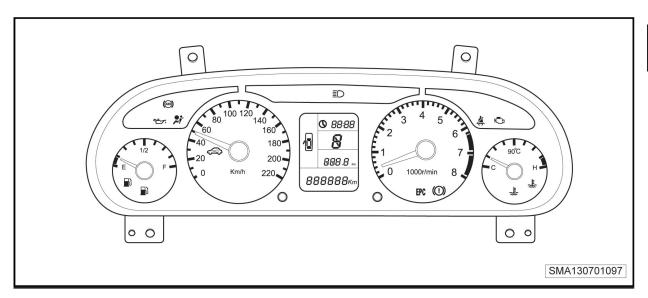


#### Instrument cluster 32-pin connector

Pin No.	Function	Pin No. Function	
1 0	1100	17	
2		18	Parking brake signal input
3	Grounding	19	Seat belt switch input
4		20	
ىانە (مس₃ئولىت	Sensor grounding	21	Fuel sensor
6		22	
برکاران جودرود	Speed output	23 يىن ساھ	Low coolant level
8		24	
9	Low engine oil pressure	25	Low brake fluid level
33 3 103 4		26	w.digitalkhodro
11	KL30	27	Speed input
12	Backlight	28	
13	KL15	29	CAN-L
14		30	CAN-H
15		31	Wake up signal
16	Generator charging and discharging	32	Engine theft protection

#### Left auxiliary instrument

**07** 

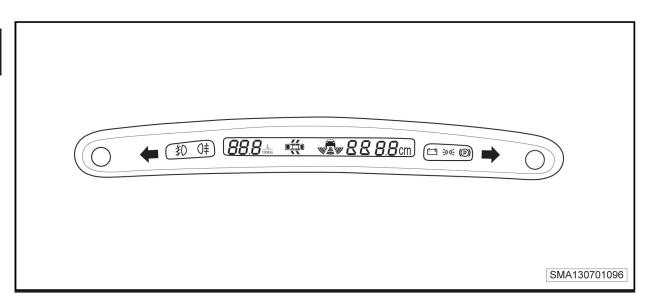

#### 16-pin connector of the left auxiliary instrument


	Pin No.	Function	Pin No.	Function
	1 0	KL30	9	KL15
	2		10	
I	3		11	
	4		12	Backlight
L	بانه (مسوئولیت	عيتال حودرو ساه	<u> </u>	0
	6	Grounding	14	
	برگاران خودرودر	انه ديجيتال تعم	15 سن ساء	
	8		16	Wake up signal

021 62 99 92 92

**07** 

07 - Electrical System

### Right auxiliary instrument

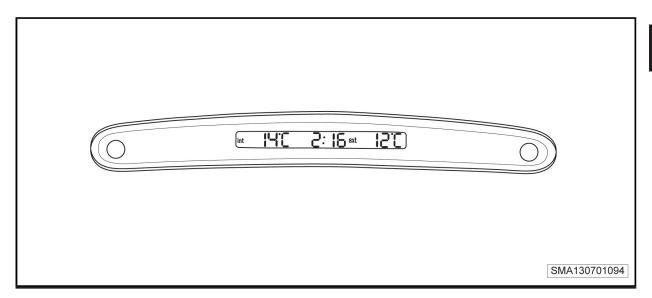

### 16-pin connector of the right auxiliary instrument

	Pin No. Function		Pin No.	Function
	1 0	KL30	9	KL15
	2 Solar sensor		10	
	3	Air-conditioner panel	11	
	4		12	Backlight
2	بانه (مسوئولیت	عيتال حودرو ساه	<u> </u>	0
	6	Grounding	14	
	برکاران حودرو در	انه ديجيتال تعم	15	
	8	Exterior temperature input	16	Wake up signal

021 62 99 92 92


### 4.4 Assembling the instrument cluster

### 4.4.1 Removing and installing the instrument cluster

07


#### Removal

1. Unscrew the shield sleeve assembling screws (-1-) from the instrument cluster.

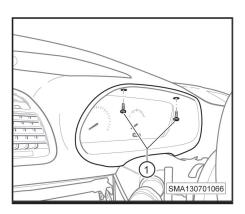


2. Lever out the fixing clips (-arrow-) of the shield sleeve carefully with a tool and remove the shield sleeve.



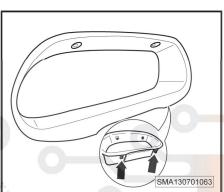

- Unscrew the four fixing screws (-arrow-) from the instrument cluster.
- Remove the instrument cluster (-2-) from the instrument console carefully and disconnect the wiring harness connector (-1-).

021 62 99 92 92

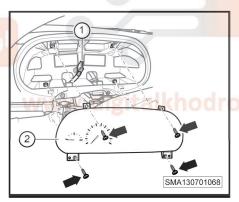

#### Installation

Installation shall follow the reverse sequence of the removal procedure.

### 4.4.2 Removing and installing the auxiliary instrument

#### **Note**


• The removal and installation procedures of the left auxiliary instrument are the same as that of the right one. The method of removing and installing the right auxiliary instrument is taken as an example here.

07

07 - Electrical System

#### Removal


- 1. Lever out the trim covers of the auxiliary instrument fixing screws carefully (-4-).
- 2. Unscrew the two fixing screws (-3-), remove the auxiliary instrument (-2-) and disconnect the wiring harness connector (-1-).

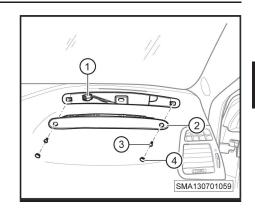

#### Installation

Installation shall follow the reverse sequence of the removal procedure.



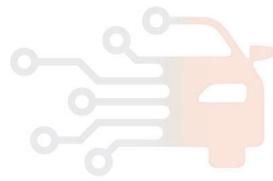

021 62 99 92 92

### 5 Diagnosis and Inspection of the Instrument Cluster

07

5.1 Diagnosis and inspection of sporadic DTC faults	998
5.2 Checking earth connection	
5.3 Canceling the vehicle service indicator	
5.4 Special tools	
5.5 Fault diagnosis (DTC)	

### 5.1 Diagnosis and inspection of sporadic DTC faults

If the sporadic DTC faults occur, please check the following items:

- Check if the connector of the DTC-related actuator or sensor is properly installed.
- Check the connector pins of the actuator or sensor for leakage and corrosion.
- Check the leads for bending or squeezing.
- Check the sensor for dirt or damage.
- Check if the routing of wiring harness is correct and proper.



021 62 99 92 92

**07** 

### 5.2 Checking earth connection

A good earth connection is prerequisite for ensuring the normal operation of the circuit. If the earth terminal of the circuit is always exposed to the wet and dusty environment, the metal of the earth terminal will corrode and affect the circuit smoothness, thus causing various electrical system malfunctions. As the control circuit is very sensitive, the loosened or corroded wires may significantly affect the transmission of various signals in the electronic control circuit. Therefore, please note the followings when inspecting:

- Replace the earth bolts or nuts.
- Check the earth terminal and coil for corrosion.
- Clean and polish the earth terminal and coil when necessary to ensure good contact.
- Check if there is any accessory interfering with the earth circuit.



J21 62 99 92 92

021 62 99 92 92

07 - Electrical System

### 5.3 Canceling the vehicle service indicator


The vehicle service indicator can be canceled by the following two ways:

07

- 1. Cancel via the diagnostic device.
- 2. Cancel via the adjusting knob.

The procedure of clearing the service indicator via the adjusting knob is as follows:

- Turn off the ignition switch.
- Press and hold the adjusting knob (-arrow-) and turn on the ignition switch.
- Press and rotate the adjusting knob for no more than 2 seconds within 30 seconds after releasing it.
- Release the adjusting knob when the indicator goes out to cancel the service indicator.

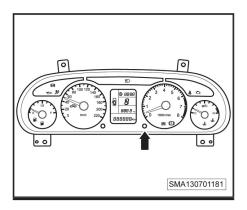



WWW.DIGITALKHODRO.COM

### 5.4 Special tools

- X-431 diagnostic device
- Digital multimeter
- Adapter cable



### 5.5 Fault diagnosis (DTC)

### 5.5.1 Instrument cluster DTC fault list

07

DTC	Definition
B1701	Fuel sensor open circuit/short to battery
B1702	Fuel sensor short to ground
B1709	Failure of the ABS warning lamp
B1713	Failure of the parking warning lamp
U1701	Failure of the instrument and BCM CAN communication
U1702	Failure of the instrument and the engine CAN communication
U1705	Failure of the instrument and ABS CAN communication
U1710	Failure of the instrument and the airbag module CAN communication




شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



021 62 99 92 92

# 5.5.2 B1701 Fuel sensor open circuit/short to battery

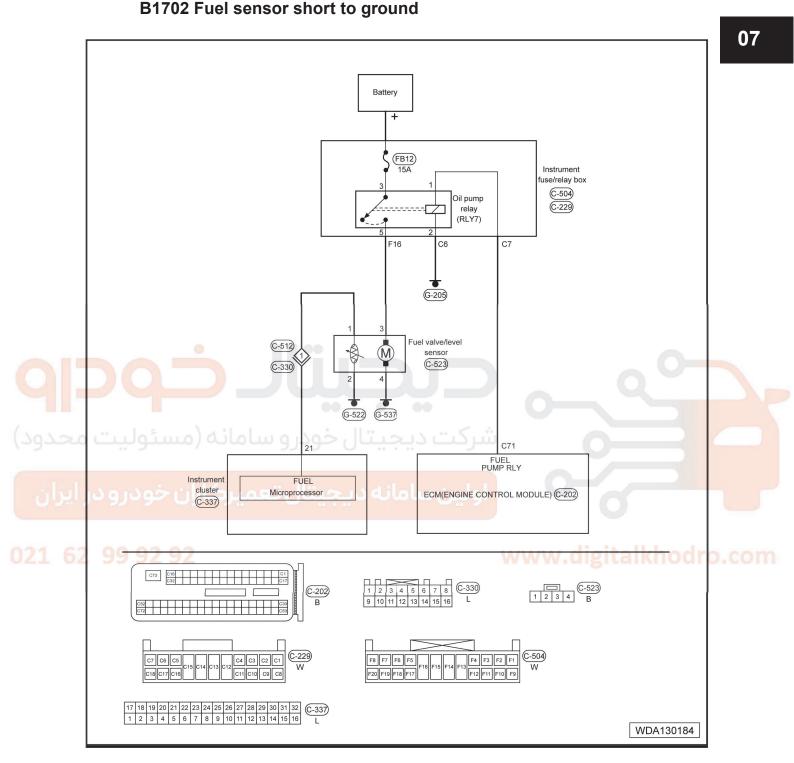

#### Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
B1701	Fuel sensor open circuit/short to battery	The ignition switch in the ON/START position	Wiring harness between the instrument cluster and the fuel sensor open/short circuit	<ul> <li>Failure of the wiring harness or the connector</li> <li>Failure of the fuel sensor</li> </ul>

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
				Failure of the instrument cluster
B1702	Fuel sensor short to ground	The ignition switch in the ON/START position	Wiring harness of the fuel sensor short circuit	<ul> <li>Failure of the wiring harness or the connector</li> <li>Failure of the fuel sensor</li> <li>Failure of the instrument cluster</li> </ul>

#### DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.

- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch and turn it on again after 3 to 5 seconds.
- Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.


If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)

### Diagnosis procedures:


### **Note**

Please verify again if the DTC and its symptoms are present after fault is rectified.

- Turn the ignition switch to the LOCK position, check if the lead between the pin 1 of the fuel sensor connector C-523 and the pin 21 of the instrument cluster connector C-337 is conducted.
  - If yes, go to step 2.
  - If not, check if the lead between the pin 1 of the fuel sensor connector C-523 and the pin 21 of the instrument cluster connector C-337 is open/short circuit. And repair the lead.

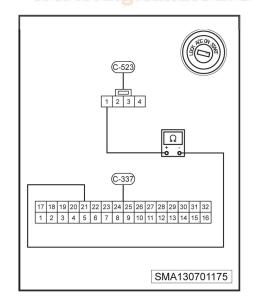


- 2. Turn the ignition switch to the LOCK position and check if the pin 2 of the fuel sensor connector C-523 is grounded properly.
  - If yes, go to step 3.
  - If not, check if the lead between the pin 2 of the fuel sensor connector C-523 and the ground is open circuit. And repair the lead.

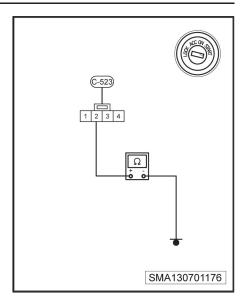

- 3. Test if the voltage between the pin 21 of the instrument connector C-337 and the ground is 0-5V.
  - If yes, check the fuel sensor for failure. And repair or replace the fuel sensor.
  - If not, go to step 4.



- 4. Check if the power supply line and the ground line of instrument cluster are normal.
  - If yes, go to step 5.
  - If not, repair the faulty line.
- 5. Replace the instrument cluster, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, find the fault cause from other symptoms.
  - If not, the fault has been rectified.

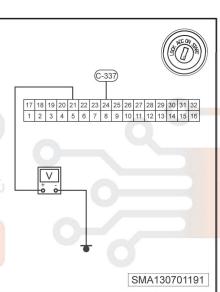

WWW.DIGITALKHODRO.COM 021 62 99 92 92

### 5.5.3 B1709 Failure of the ABS warning lamp

07 Battery Instrument (FB09) use/relay box 10A (C-334) E11 **▼**ABS Dashboard Microprocessor C-337 SENSOR-GND 30 (C-301) C-203 To CAN bus Brake fluid level sensor C-215 G-205) www.digitalkhodro.com 12 11 10 9 8 7 4 3 2 1 16 15 14 13 20 19 18 17 C-334) 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 L 24 23 22 21 28 27 26 25 40 39 38 37 32 31 30 29 WDA130020

#### Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
B1709	Failure of the ABS warning lamp	The ignition switch in the ON position	Brake fluid level switch open/short circuit detected by the instrument cluster	<ul> <li>Failure of the wiring harness or the connector</li> <li>Failure of the instrument cluster</li> <li>Failure of the brake fluid level switch</li> </ul>

#### DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.


- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch and turn it on again after 3 to 5 seconds.
- · Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.

If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)

#### Diagnosis procedures:

#### 1 Note

- Please verify again if the DTC and its symptoms are present after fault is rectified.
- 1. Check if the fluid level in the brake fluid reservoir is normal.
  - If yes, go to step 2.
  - If not, check if the brake fluid level has dropped to low and add adequate brake fluid until it reaches the proper level if necessary.
- Turn the ignition switch to the LOCK position, check if the lead between the pin 1 of the brake fluid level switch connector C-215 and the pin 26 of the instrument cluster connector C-337 is conducted.
  - If yes, go to step 3.
  - If not, check if the lead between the pin 1 of the brake fluid level switch connector C-215 and the pin 26 of the instrument cluster connector C-337 is open/short circuit. And repair the lead.

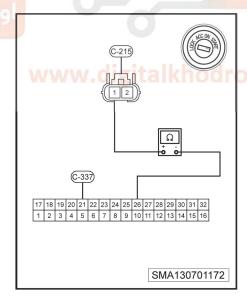


07

Turn the ignition switch to the LOCK position, check if the pin 2 of the brake fluid level switch connector C-215 is grounded properly.

- If yes, go to step 4.


 If not, check if the lead between the pin 2 of the brake fluid level switch connector C-215 and the ground is open/short circuit. And repair the lead.

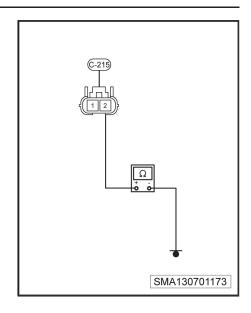

- 4. Check the fault in the brake fluid level switch and confirm if the brake fluid level switch is normal.
  - If yes, go to step 5.
  - If not, replace the brake fluid level switch.
- 5. Check if the power supply line and ground line of the instrument cluster are normal.
  - If yes, go to step 6.
  - If not, repair the faulty line.
  - Replace the instrument cluster, carry out the function test again, and read the fault code to verify if it exists or not.
    - If yes, find the fault cause from other symptoms.
    - If not, the fault has been rectified.

021 62 99 92 92

# 5.5.4 B1713 Failure of the parking warning lamp

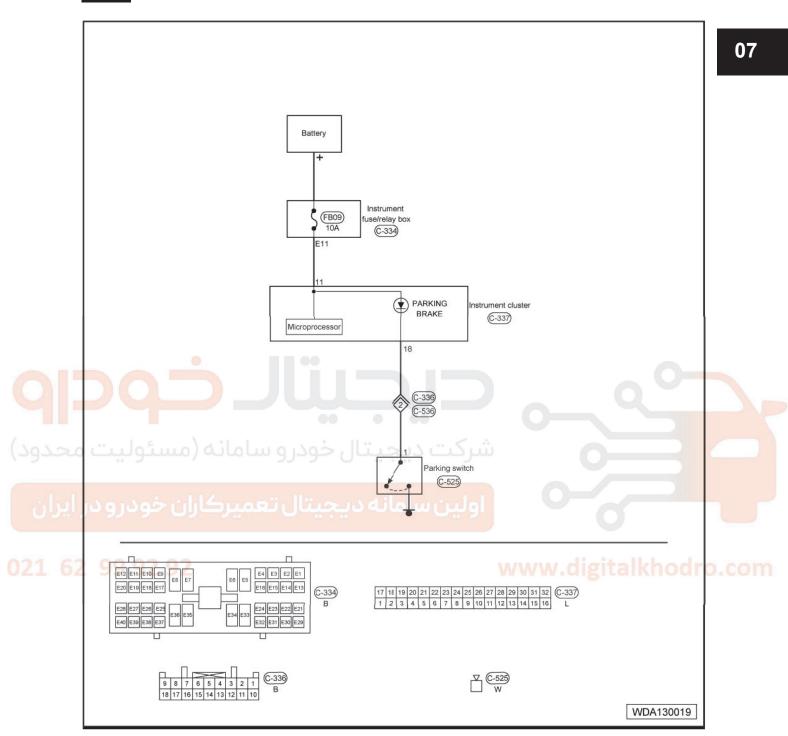

### Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
B1710	Failure of the parking warning lamp	The ignition switch in the ON/START position	Parking switch short/open circuit detected by the instrument cluster	<ul> <li>Failure of the wiring harness or the connector</li> <li>Failure of the instrument cluster</li> <li>Failure of the parking switch</li> </ul>

### DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.

- 07
- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch and turn it on again after 3 to 5 seconds.
- Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.


If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)

#### Diagnosis procedures:

### i Note


- Please verify again if the DTC and its symptoms are present after fault is rectified.
- 1. Turn the ignition switch to the LOCK position, check if the lead between the pin 1 of the parking switch connector C-525 and the pin 18 of the instrument cluster connector C-337 is conducted.
  - If yes, go to step 2.
  - If not, check if the lead between the pin 1 of the parking switch connector C-525 and the pin 18 of the instrument cluster connector C-337 is open/short circuit. And repair the defective lead.

021 62 99 92 92

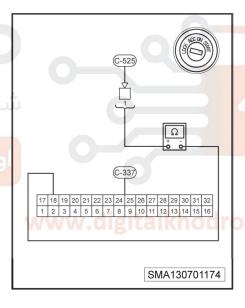

- 2. Check if the parking switch is normal.
  - If yes, go to step 3.
  - If not, replace the parking switch.
- 3. Check if the power supply line and ground line of the instrument cluster are normal.
  - If yes, go to step 6.
  - If not, repair the faulty line.
- **4**. Replace the instrument cluster, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, find the fault cause from other symptoms.
  - If not, the fault has been rectified.

# 5.5.5 U1701 Failure of the instrument and BCM CAN communication

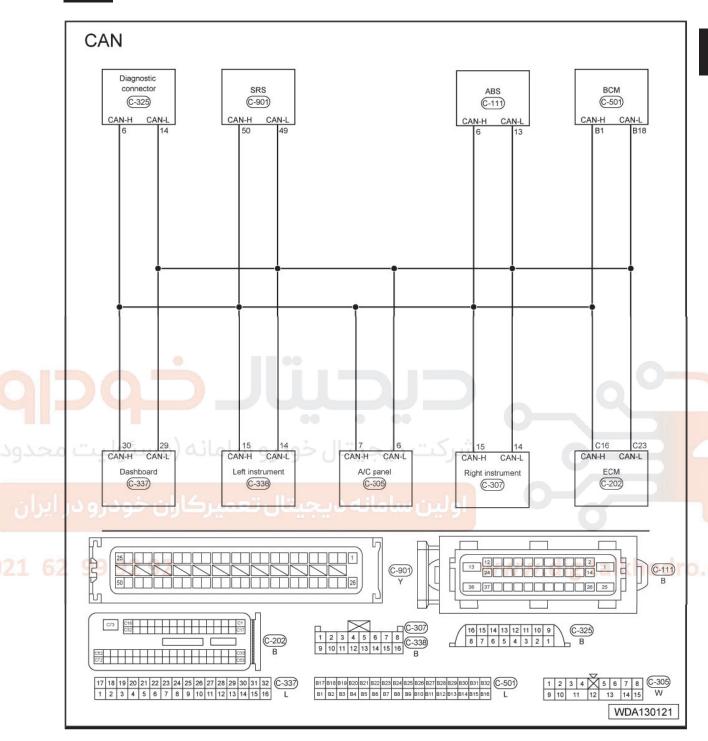

# Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
U1701	Failure of the instrument and BCM CAN communication	The ignition switch in the ON/START position	Wires between the instrument and the BCM CAN communication open/short circuit	<ul> <li>Failure of the wiring harness or the connector</li> <li>Failure of the BCM (Body Control Module)</li> <li>Failure of the instrument cluster</li> </ul>

#### DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.


- 07
- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch and turn it on again after 3 to 5 seconds.
- · Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.

If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)

#### Diagnosis procedures:

### 1 Note

- Please verify again if the DTC and its symptoms are present after fault is rectified.
- Turn the ignition switch to the LOCK position, check if the lead between the pin B1 of the BCM connector C-501 and the pin 30 of the instrument cluster connector C-337 is conducted.
  - If yes, go to step 3.
  - If not, check if the lead between the pin B1 of the BCM connector C-501 and the pin 30 of the instrument cluster connector C-337 is open/short circuit. And repair or replace the defective lead.
- Turn the ignition switch to the LOCK position, check if the lead between the pin B18 of the BCM connector C-501 and the pin 29 of the instrument cluster connector C-337 is conducted.
  - If yes, go to step 4.
  - If not, check if the lead between the pin B18 of the BCM connector C-501 and the pin 29 of the instrument cluster connector C-337 is open/short circuit. And repair or replace the defective lead.
- **3**. Check if the power supply line and the ground line of the BCM are normal.
  - If yes, go to step 4.
  - If not, repair the faulty line.
- Check if the power supply line and ground line of the instrument cluster are normal.
  - If yes, go to step 5.

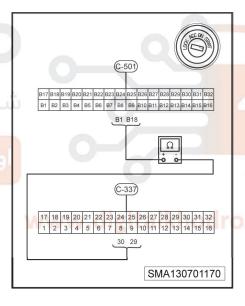

- If not, repair the faulty line.
- Access other control modules via the diagnostic device to check if it can read the fault in the system module normally.
  - If yes, go to step 6.
  - If not, the body control module fails and please replace it.
- Replace the instrument cluster, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, find the fault cause from other symptoms.
  - If not, the fault has been rectified.



021 62 99 92 92

www.digitalkhodro.com

# 5.5.6 U1702 Failure of the instrument and the engine CAN communication

#### Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
U1702	Failure of the instrument and the engine CAN communication	The ignition switch in the ON/START position	Wires between the instrument and the engine CAN communication short/open circuit	<ul> <li>Failure of the wiring harness or the connector</li> <li>Failure of the BCM (Body Control Module)</li> </ul>

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
				Failure of the engine control module

07

### DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.


- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch and turn it on again after 3 to 5 seconds.
- · Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.

If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)

### Diagnosis procedures:



- Please verify again if the DTC and its symptoms are present after fault is rectified.
- Turn the ignition switch to the LOCK position, check if the lead between the pin C16 of the ECM connector C-202 and the pin 30 of the instrument cluster connector C-337 is conducted.
  - If yes, go to step 2.
  - If not, check if the lead between the pin C16 of the ECM connector C-202 and the pin 30 of the instrument cluster connector C-337 is open/short circuit. And repair or replace the defective lead.
- Turn the ignition switch to the LOCK position, check if the lead between the pin C23 of the ECM connector C-202 and the pin 29 of the instrument cluster connector C-337 is conducted.
  - If yes, go to step 3.
  - If not, check if the lead between the pin C23 of the ECM connector C-202 and the pin 29 of the instrument cluster connector C-337 is open/short circuit. And repair or replace the defective lead.
- **3**. Check if the power supply line and ground line of the instrument cluster are normal.
  - If yes, go to step 4.

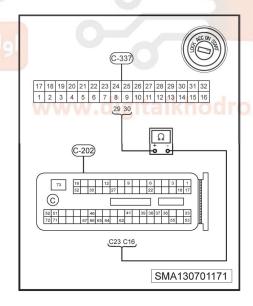

If not, repair the faulty line.


- **4**. Check if the power supply line and the ground line of ECM control module are normal.
  - If yes, go to step 5.
  - If not, repair the faulty line.
- Access other control modules via the diagnostic device to check if it can read the fault in the system module normally.
  - If yes, go to step 6.
  - If not, the engine control module fails and please replace it. ■
- **6**. Replace the instrument cluster, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, find the fault cause from other symptoms.
  - If not, the fault has been rectified.



021 62 99 92 92

www.digitalkhodro.con

# 5.5.7 U1705 Failure of the instrument and the ABS CAN communication

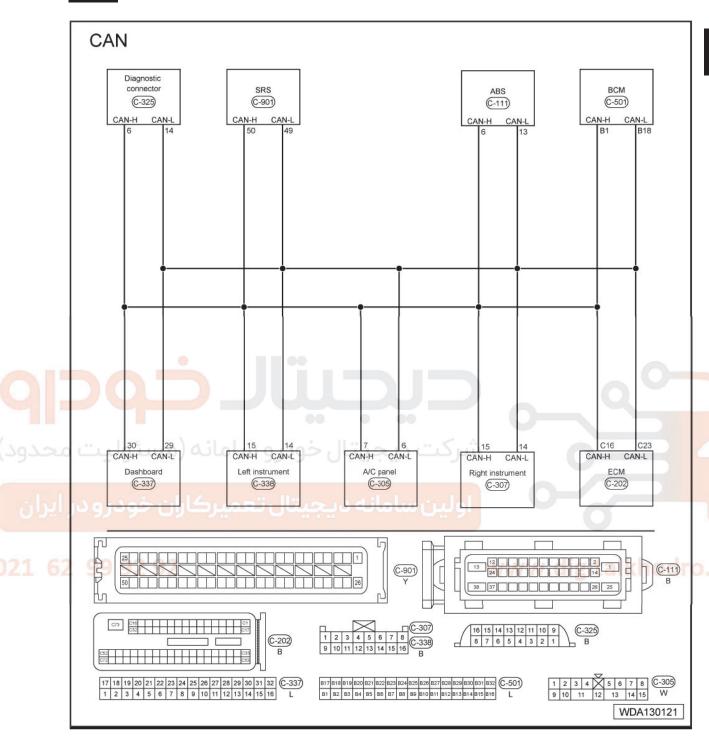

# Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
B1705	Failure of the instrument and ABS CAN communication	The ignition switch in the ON/START position	Wires between the instrument and the ABS CAN communication short/open circuit	<ul> <li>Failure of the wiring harness or the connector</li> <li>Failure of the ABS control unit</li> <li>Failure of the instrument cluster</li> </ul>

#### **DTC** test procedures:

Please confirm that the battery voltage is normal prior to performing the following procedures.

- Turn off the ignition switch.
  - Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
  - Turn on the ignition switch.
  - Measure and clear the DTC with the diagnostic device.
  - Turn off the ignition switch and turn it on again after 3 to 5 seconds.
  - Measure the DTC with the diagnostic device.
  - If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.


If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)

#### Diagnosis procedures:

### 1 Note

Please verify again if the DTC and its symptoms are present after fault is rectified.

- Turn the ignition switch to the LOCK position, check if the lead between the pin 6 of the ABS control module connector C-111 and the pin 30 of the instrument cluster connector C-337 is conducted.
  - If yes, go to step 2.
  - If not, check if the lead between the pin 6 of the ABS control module connector C-111 and the pin 30 of the instrument cluster connector C-337 is open/short circuit. And repair or replace the defective lead.
- Turn the ignition switch to the LOCK position, check if the lead between the pin 13 of the ABS control module connector C-111 and the pin 29 of the instrument cluster connector C-337 is conducted.
  - If yes, go to step 3.
  - If not, check if the lead between the pin 13 of the ABS control module connector C-111 and the pin 29 of the instrument cluster connector C-337 is open/short circuit. And repair or replace the defective lead.
- 3. Check if the power supply line and ground line of the instrument cluster are normal.
  - If yes, go to step 4.
  - If not, repair the faulty line.
- **4**. Check if the power supply line and the ground line of ABS control module are normal.
  - If yes, go to step 5.
  - If not, repair the faulty line.

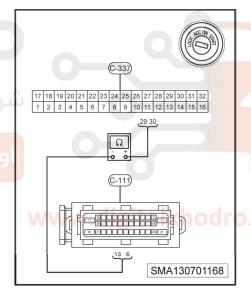


- Access other control modules via the diagnostic device to check if it can read the fault in the system module normally.
  - If yes, go to step 6.
  - If not, the ABS control module fails and please replace it.
- **6**. Replace the instrument cluster, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, find the fault cause from other symptoms.
  - If not, the fault has been rectified.



www.digitalkhodro.com

# 5.5.8 U1710 Failure of the instrument and the airbag module CAN communication

07

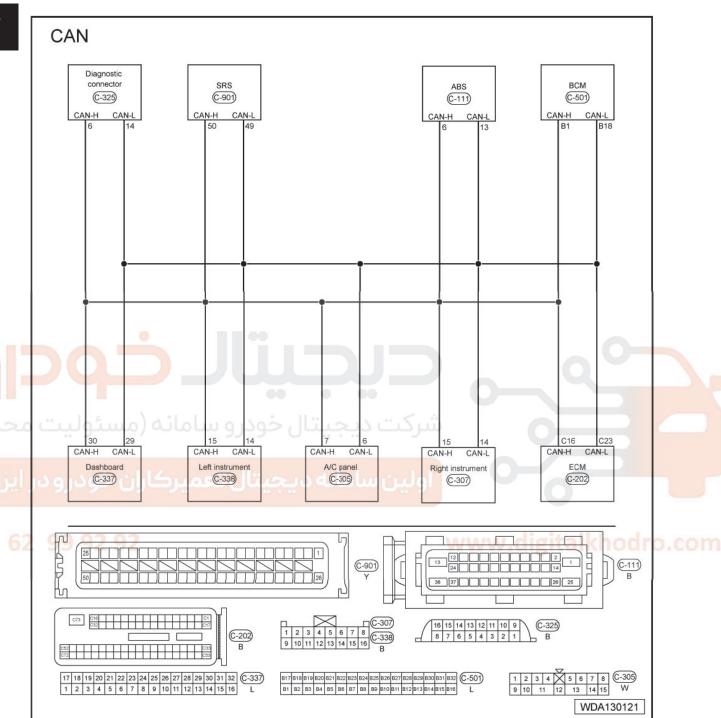

### Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
U1710	Failure of the instrument and the airbag module CAN communication	The ignition switch in the ON/START position	Wires between the instrument and the airbag module CAN communication open/short circuit	<ul> <li>Failure of the wiring harness or the connector</li> <li>Failure of the airbag control module</li> </ul>

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
				Failure of the instrument cluster

07

#### DTC test procedures:

Please confirm that the battery voltage is normal prior to performing the following procedures.

- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch and turn it on again after 3 to 5 seconds.
- Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.


If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)

### Diagnosis procedures:



Please verify again if the DTC and its symptoms are present after fault is rectified.

- Turn the ignition switch to the LOCK position, check if the lead between the pin 50 of the ABS control module connector C-901 and the pin 30 of the instrument cluster connector C-337 is conducted.
  - If yes, go to step 2.
  - If not, check if the lead between the pin 50 of the airbag control module connector C-901 and the pin 30 of the instrument cluster connector C-337 is open/short circuit.
- 2. Turn the ignition switch to the LOCK position, check if the lead between the pin 49 of the airbag control module connector C-901 and the pin 29 of the instrument cluster connector C-337 is conducted.
  - If yes, go to step 3.
  - If not, check if the lead between the pin 49 of the airbag control module connector C-901 and the pin 29 of the instrument cluster connector C-337 is open/short circuit. And repair or replace the defective lead.
- Check if the power supply line and ground line of the instrument cluster are normal.
  - If yes, go to step 4.
  - If not, repair the faulty line.

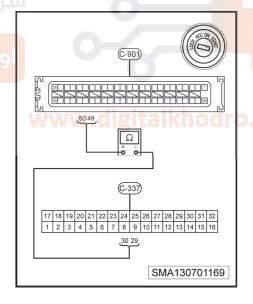

07

- **4**. Check if the power supply line and the ground line of airbag control module are normal.
  - If yes, go to step 5.
  - If not, repair the faulty line.
- Access other control modules via the diagnostic device to check if it can read the fault in the system module normally.
  - If yes, go to step 6.
  - If not, the airbag control module fails and please replace it. ■
- Replace the instrument cluster, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, find the fault cause from other symptoms.
  - If not, the fault has been rectified.



021 62 99 92 92

www.digitalkhodro.com

WWW.DIGITALKHODRO.COM

021 62 99 92 92

# 6 Body Control Module (BCM)

6.1 General information	1023
6.2 Circuit diagrams	
6.3 Definition of the body control module (BCM) pins	
6.4 Removing and installing the body control module(BCM)	

07

# 6.1 General information

# 6.1.1 Description

The body control module (BCM) is installed under the left side of the dashboard. It controls many electrical elements and control systems in the vehicle and serves as the the main control module and information processing centre of the vehicle. It has the following functions:

- Power windows and door lock system control
- Exterior mirror and rear window heating
- Wiper and washer control
- Vehicle lighting
- Light off delay
- Backlight adjustment
- Body theft protection
- Warning of not removing the key or switching off the parking light/position lamp
- Alarm and radio receiver system
- Battery saving protection
- Intelligent overload protection
- Failure logging and diagnosis
- BCM wake up signal
- Automatic door unlocking after a crash
- Gateway

The body control module (BCM) receives the input signals from all sensors and switches of the vehicle, and also outputs signals to relevant components. The BCM receives input signals from the following components:

- Key switch
- Rear window defroster switch
- Hazard warning lamp switch
- Power window switch
- Door lock control switch
- Door ajar switch
- Front fog lamp switch
- Trunk lamp switch
- Horn switch


Lighting and turn signal switch

- Exterior mirror switch
- Wiper and washer switch

The BCM outputs signals to the following components:

- High/low beam relays
- Exterior mirror/rear window defroster heater
- · Front combination light
- Tail light
- Backlight adjusting switch output
- Turn signals
- Anti-theft horn/compound horn
- Parking light/position lamp/turn signal
- Front/rear power window motors
- Door lock motor
- Washer motor
- Wiper motor

# 6.1.2 Functions of the body control module (BCM) fuses

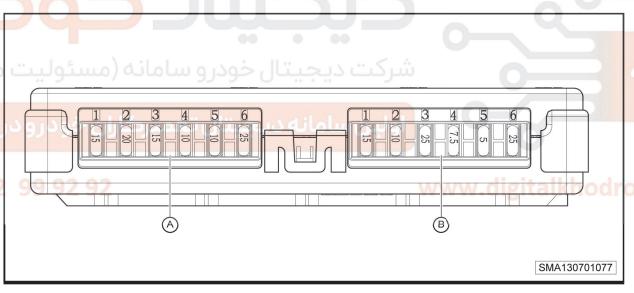

Position code	No.	Ampere (A)	Function
	1	15A	Central door lock
	2	10A	Rear fog lamp
	3	25A	Rear window lifter
A	4	7.5A	Backlight and right position lamp
	5	5A	Left position lamp
	6	25A	Front window lifter
	1	15A	Warning lamp
В	2	20A	Rear window defroster
	3	15A	Fog lamp

Position code	No.	Ampere (A)	Function
	4	10A	Horn
	5	10A	Battery saving protection
	6	25A	Wiper

07






021 62 99 92 92


www.digitalkhodro.com

# 6.2 Circuit diagrams

Body control module (BCM) circuit diagrams (page 1)

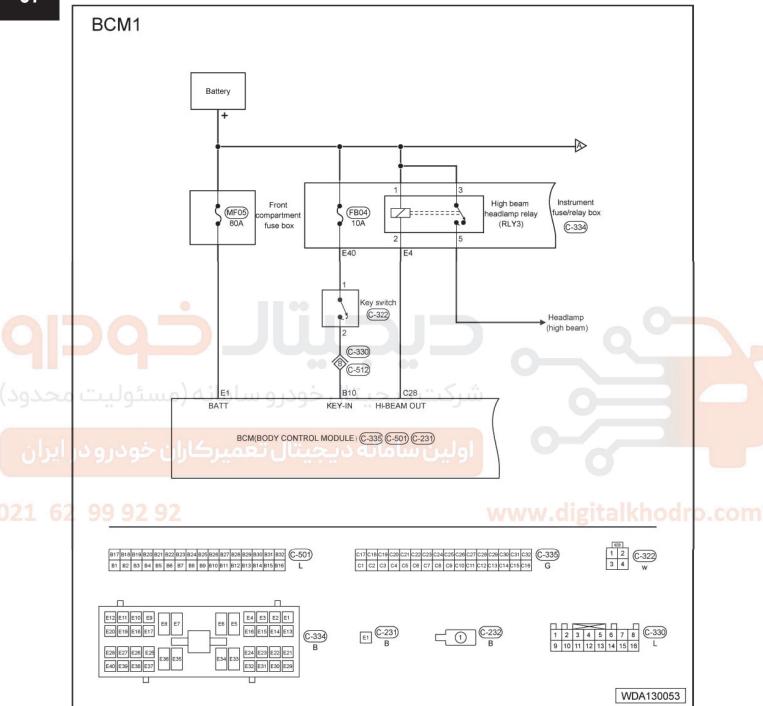


Body control module (BCM) circuit diagrams (page 2)

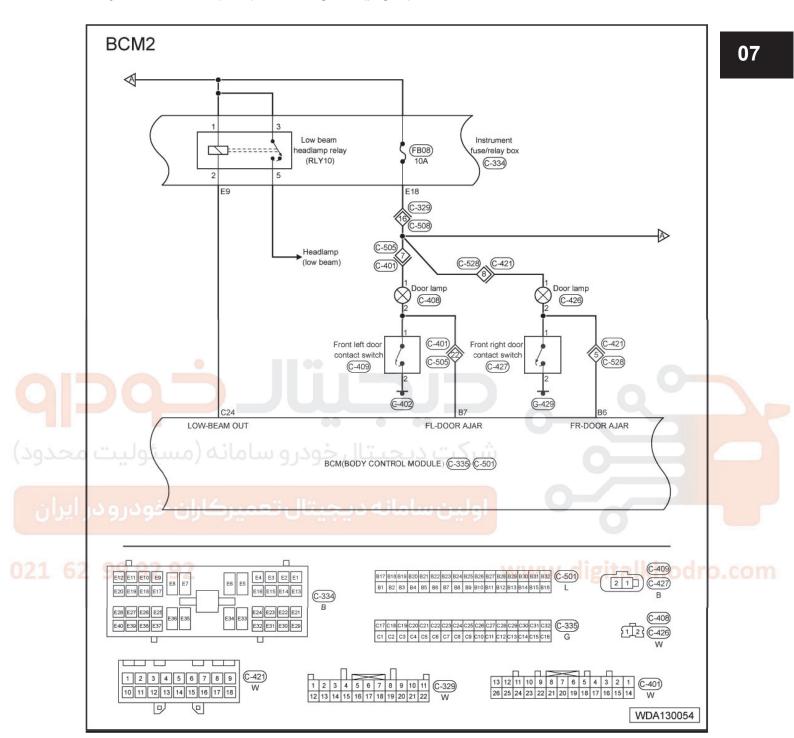

Body control module (BCM) circuit diagrams (page 3)

**ВСМ3** 07 Ignition switch at ON/START position A Instrument FB02 10A fuse/relay bo C-334) E3 Trunk lamp C-533 C-520 C-481 C-484 C-441) C-461 C-488 C-515 C-530 Rear left door contact switch Rear right door contact Trunk contact switch C-485 (C-444) (C-464) G-487 G-466 C-536 C-336 RL-DOOR AJAR BOOT-AJAR RR-DOOR AJAR ACC BCM(BODY CONTROL MODULE) (C-335) (C-501) П E12 E11 E10 E9 E4 E3 E2 E1 o.com 9 8 7 6 5 4 3 2 1 18 17 16 15 14 13 12 11 10 B C-334) C-533 5 6 7 8 9 10 C-461 В E40 E39 E38 E37 E32 E31 E30 E29 C-444 C-464) 1 2 C-481 W 1 2 3 C-485 B 1 2 3 4 C-484 B WDA130055


Body control module (BCM) circuit diagrams (page 4)

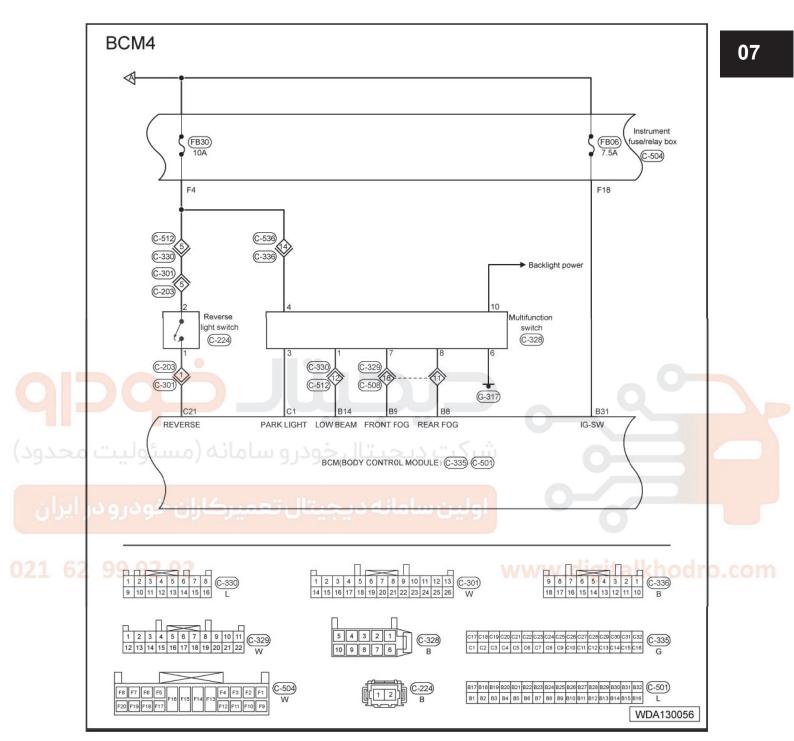

Body control module (BCM) circuit diagrams (page 5)

BCM<sub>5</sub> 07 (C-530) (C-515) C-528) (C-505) (C-421) (C-401) C-461) (C-441) ront right door Front left door Rear right door Rear left door W Ŵ lock motor lock motor lock motor M lock motor W C-410) (C-428) C-465) (C-445) C-461) (C-441) (C-401) (C-505) (C-515) C-421) LOCK UNLOCK BCM(BODY CONTROL MODULE) (C-503) (C-335) BOOT RELEASE HAZARD L TURN A10 (C-520) C-481) (C-484) Backlight power -488 Rear left turn signal Front left Tailoate Left turn signal turn signal Warning switch C-105 C-485 C-517 C-110 C-316 G-487) (G-315) G-537) (G-127) G-123 C-410 C-465 3 2 1 6 5 4 B A1 A2 A3 A4 A5 A6 A7 A8 A9 C-503 C-428 C-445 A10 A11 A12 A13 A14 A15 A16 A17 A18 A19 A20 2 4 6 8 10 C-110 9 8 7 6 5 4 3 2 1 18 17 16 15 14 13 12 11 10 B 13 12 11 10 9 8 7 6 5 4 3 2 1 1 26 25 24 23 22 21 20 19 18 17 16 15 14 W 1 2 3 4 5 6 7 8 9 1 3 5 7 9 10 11 12 13 14 15 16 17 18 9 O 1 2 (C-481) 12 34 (-44) (-461) 2 1 C-105 B C-316 1 2 3 C-485 B 5 6 7 8 9 10 WDA130090

### Body control module (BCM) circuit diagrams (page 6)

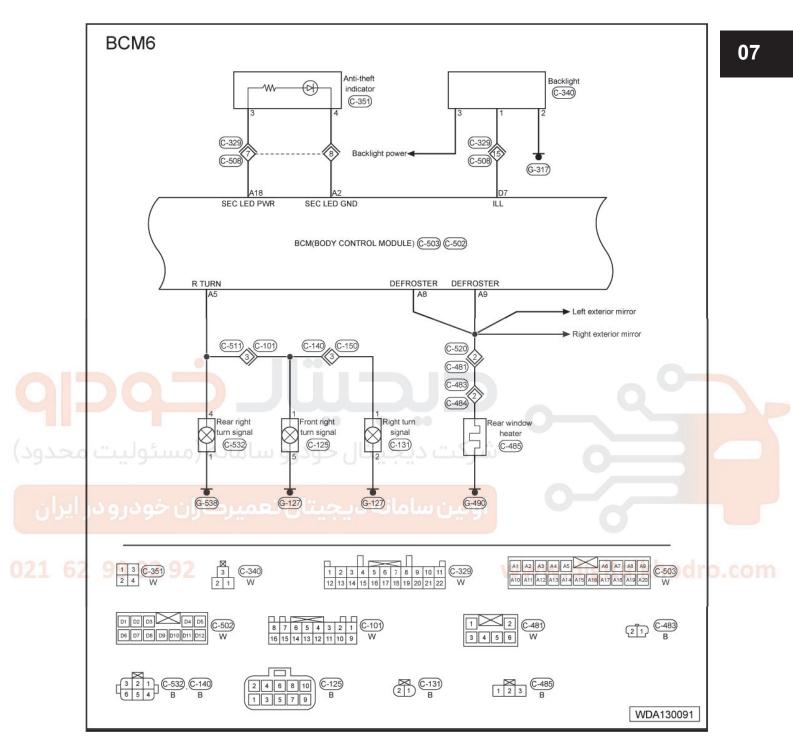

Body control module (BCM) circuit diagrams (page 7)

BCM7 07 Front left windo lifter switch Front left Front right assembly window window C-405 unlock (C-401) Backlight power C-505 C-528) switch C-411 ₽ (C-505) C-505 G-402 G-402 B27 B28 FL FL win up win down FR win up BCM(BODY CONTROL MODULE) C-503 C-501 C-335 FR FOG BOOT RELEASE PEAR DEFR REAR FOG A6 A7 A11 C8 C5 C-510 (C-305) C-140 C-102 (CT-1) C-150 Front left Front right Rear left Rear right fog lamp C-106 fog lamp C-126 fog lamp C-517 fog lamp C-532 REAR REAR DOOR SW A/C panel G-127) G-537 9 10 11 12 13 14 15 16 1 2 3 4 5 6 7 8 R 9 8 7 6 5 4 3 2 1 18 17 16 15 14 13 12 11 10 B 3 2 1 C-411 B dro.com A1 A2 A3 A4 A5 A6 A7 A8 A9 C-503 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 W C-106 C-126 1 2 A10 A11 A12 A13 A14 A15 A16 A17 A18 A19 A20 W W 3 2 1 6 5 4 C-517 B B 1 2 3 4 5 6 7 8 9 C-421


WWW.DIGITALKHODRO.COM

10 11 12 13 14 15 16 17 18 D

U

WDA130092


Body control module (BCM) circuit diagrams (page 8)

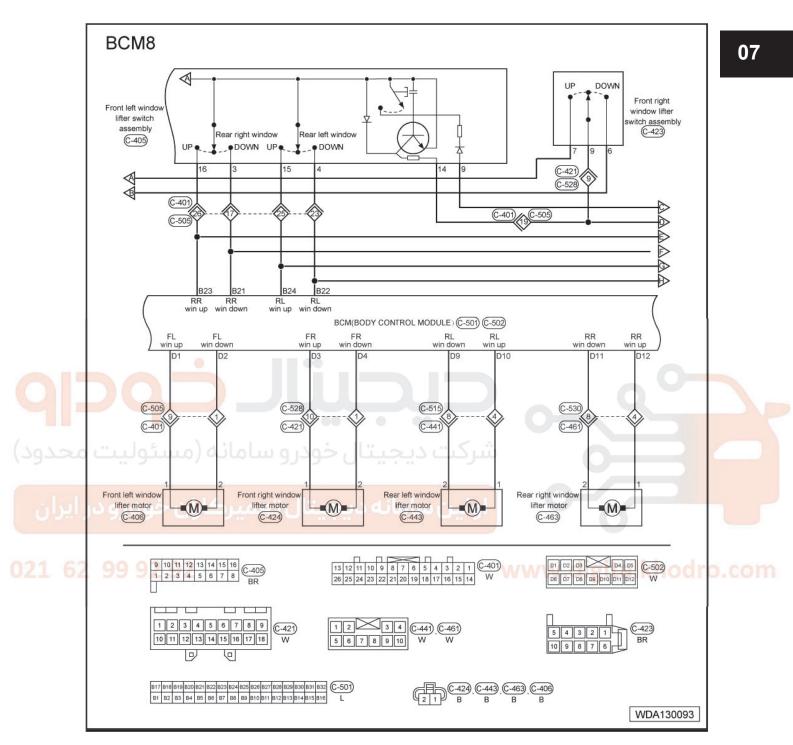

Body control module (BCM) circuit diagrams (page 9)

BCM9 07 Rear right window ear left window lifter switch lifter switch C-462 C-442 C-441) (C-461) C-515 C-530 C-530 4 4 (C-515) C-441) 4 4 BCM(BODY CONTROL MODULE) (C-503) (C-335) BATT SAVE KEY LAMP DOME LAMP A3 Ignition lock light C-536 C-508 C-323 C-336 C-329 C-332 C-631 RH Dome lamp C-332 (C-632) OFF C-631 G-301) 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 W 1 2 3 4 C-461 C-462 C-442 1 2 C-323 W 5 6 7 8 9 10 10 9 8 7 6 9 8 7 6 5 4 3 2 1 9 8 17 16 15 14 13 12 11 10 B A1 A2 A3 A4 A5 A6 A7 A8 A9 C-503 1 2 3 4 C-332 A10 A11 A12 A13 A14 A15 A16 A17 A18 A19 A20 5 6 7 8 9 10 1 2 3 4 C-441 5 6 C-632 1 2 3 4 W 5 6 7 8 9 10 WDA130094


Body control module (BCM) circuit diagrams (page 10)

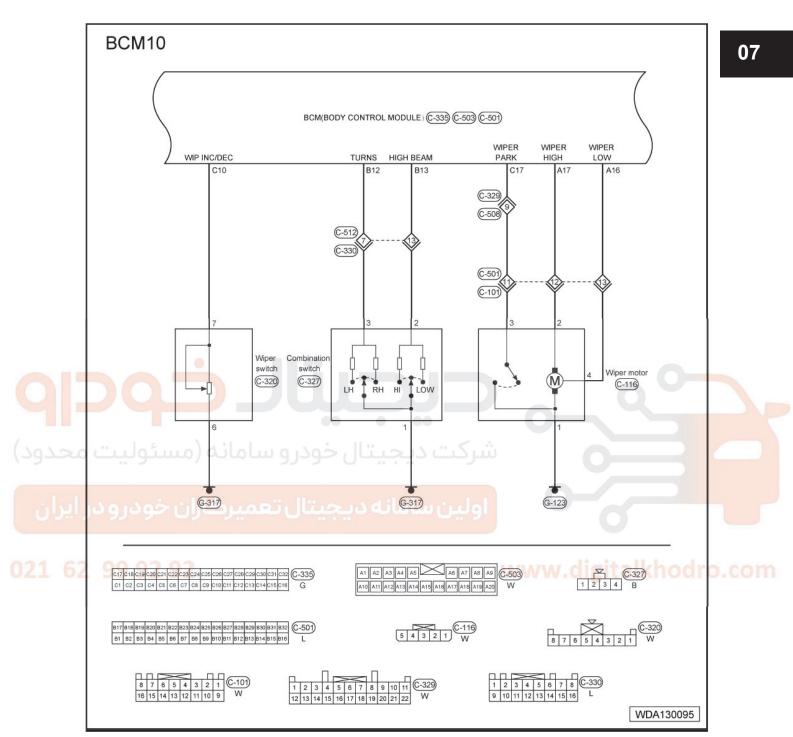


Body control module (BCM) circuit diagrams (page 11)

BCM11 07 BCM(BODY CONTROL MODULE) C-335 REAR WIPER FRONT WASHER FR WIPER COL 1 FR WIPER COL 2 REAR Wiper switch REAR FRONT WASHER WASHER C-320 WIPER AUTO 1ST MIST MIST AUTO 1ST (G317) فيركاران خود www.digitalkhodro.com C17 C18 C19 C20 C21 C22 C23 C24 C25 C26 C27 C28 C29 C30 C31 C32 C-335 C1 C2 C3 C4 C5 C6 C7 C8 C9 C10 C11 C12 C13 C14 C15 C16 G WDA130096


Body control module (BCM) circuit diagrams (page 12)

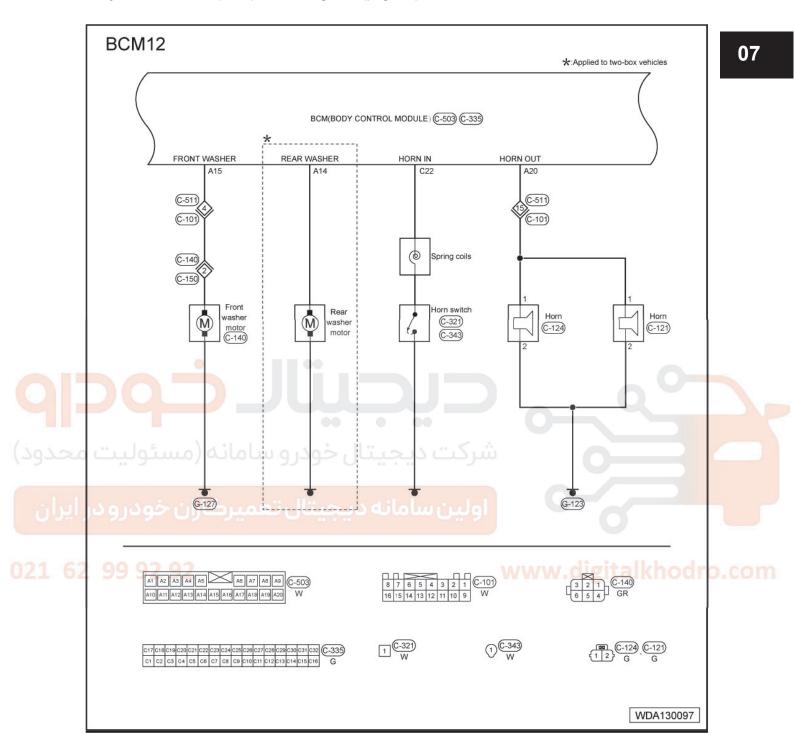

Body control module (BCM) circuit diagrams (page 13)

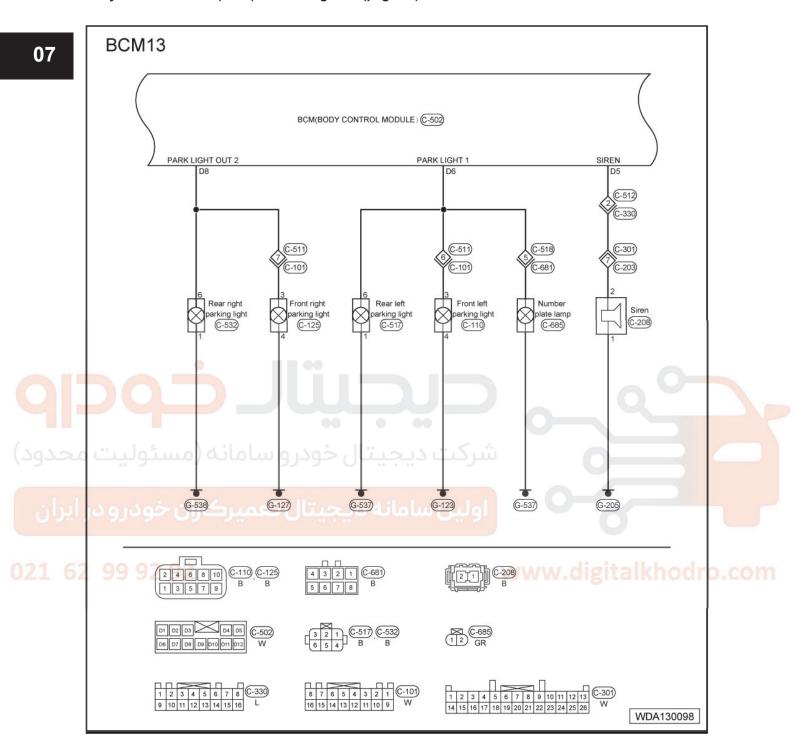


Body control module (BCM) circuit diagrams (page 14)

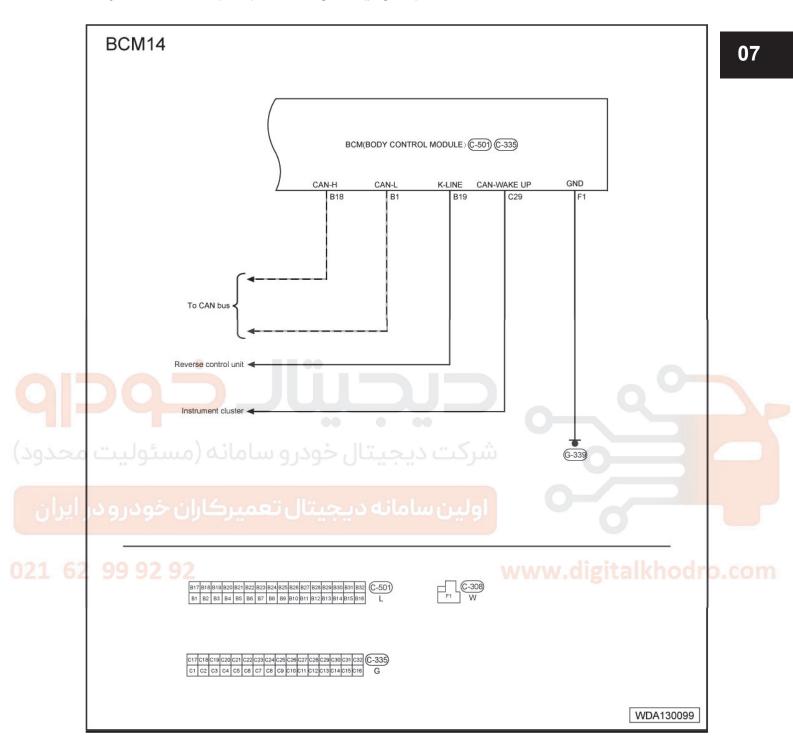

# 6.3 Definition of the body control module (BCM) pins

**07** 

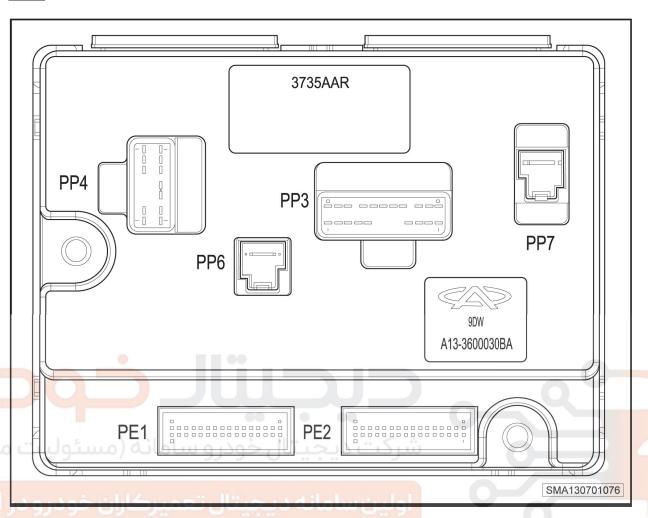

PP3: 20-pin connector of the body control module (BCM)

021 62	Pin No.	Function	Pin No.	Function
021 62 99 9 A1 92	A1	Rear wiper output	A11	Rear fog lamp output
	A2	Safety indicator output	A12	Unlock output
	A3	Interior light output	A13	Lock output
	A4	Left turn signal output	A14	Rear washer output
	A5	Right turn signal output	A15	Front washer output
	A6	Fog lamp output	A16	Wiper low speed output
	A7	Fog lamp output	A17	Wiper high speed output
	A8	Defroster output	A18	Safety indicator output
	A10	Trunk releasing signal output	A20	Horn output

# PP4: 12-pin connector of the body control module (BCM)

Pin No.	Function	Pin No.	Function
D1	Front left window up output	D7	Instrument lighting output
D2	Front left window down output	D8	Parking light/position lamp output

Pin No.	Function	Pin No.	Function	
D3	Front right window up output	D9	Rear left window down output	
D4	Front right window down output	D10	Rear left window up output	
D5	Anti-theft horn output	D11	Rear right window down output	
D6	Parking light/position lamp output	D12	Rear right window up output	

# PE1: 32-pin connector of the body control module (BCM)

Pin No.	Function	Pin No.	Function	
C1	Parking light/position lamp input	C17	Wiper stop position input	
C2	Rear wiper input	C18	_	
C3	_	C19	Trunk contact switch input	
C4	Rear right door open input	C20	Rear left door ajar switch input	
C5 •	Rear defroster input	C21	Reverse gear input	
C6	Hazard warning lamp input	C22	Horn input	
C7	Front washer input	C23	Key lock output	
C8	Trunk releasing input	C24	Low beam output	
C9	Front wiper input	C25	Rear wiper stop position input	
برکاران <sup>C10</sup> و درو در	Wiper intermittent regulator input	C26 سام	Key lighting output	
C11	_	C27	_	
C12	Front wiper input	C28	High beam output	
C13	_	C29	CAN wake up	
C14	_	C30	_	
C15	_	C31	_	
C16	_	C32	_	

# PE2: 32-pin connector of the body control module (BCM)

Pin No.	Function	Pin No.	Function	
B1	CAN (low speed)	B17	_	
B2	_	B18	CAN (high speed)	
В3	_	B19	LIN	
B4	Lock input	B20	LIN	
B5	Unlock input	B21	Rear right window down input	
B6	Front passenger's side door ajar switch input	B22	Rear left window down input	

07

Pin No.	Function	Pin No.	Function	
B7	Driver's side door ajar switch input	B23	Rear right window up input	
B8	Rear fog lamp input	B24	Rear left window up input	
В9	Front fog lamp input	B25	Front right window down input	
B10	Key insertion	B26	Front left window down input	
B11	Front wiper stop position input	B27	Front right window up input	
B12	Steering input	B28	Front left window up input	
B13	High beam input	B29	_	
B14	Low beam input	B30		
B15	ACC input	B31	IGN input	
B16	_	B32	_	

PP6: 1 pin connector of the body control module (BCM)

Pin No.	Function
E1	Grounding

PP7: 1 pin connector of the body control module (BCM)

Pin No.	Function	
F1 9,595 (Jan.	BCM power supply	

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران


021 62 99 92 92

www.digitalkhodro.com

# 6.4 Removing and installing the body control module(BCM)

#### Removal

- **1.** Switch off all electrical equipment and disconnect the battery negative cable.
- 2. Remove the base guard from the driver's side dashboard.=> refer to page 764
- 3. Disconnect the BCM connectors (-2-).
- 4. Remove the BCM fixing bolts (-arrow-).
- 5. Remove the BCM (-1-).

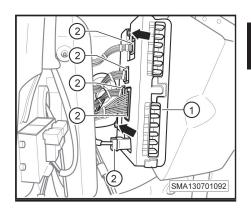

#### Installation

Installation shall follow the reverse sequence of the removal procedure.



021 62 99 92 92

www.digitalkhodro.com

# 7 Diagnosis and inspection of the body control module (BCM)

**07** 

7.1 Diagnosis and inspection of sporadic DTC faults	1044
7.2 Checking earth connection	
7.3 Special tools	
7.4 Fault diagnosis (DTC)	1047

# 7.1 Diagnosis and inspection of sporadic DTC faults

If the sporadic DTC faults occur, please check the following items:

- Check if the connector of the DTC-related actuator or sensor is properly installed.
- Check the connector pins of the actuator or sensor for leakage and corrosion.
- Check the leads for bending or squeezing.
- · Check the sensor for dirt or damage.
- Check if the routing of wiring harness is correct and proper.



021 62 99 92 92

www.digitalkhodro.con

07 - Electrical System

### 7.2 Checking earth connection

A good earth connection is prerequisite for ensuring the normal operation of the circuit. If the earth terminal of the circuit is always exposed to the wet and dusty environment, the metal of the earth terminal will corrode and affect the circuit smoothness, thus causing various electrical system malfunctions. As the control circuit is very sensitive, the loosened or corroded wires may significantly affect the transmission of various signals in the electronic control circuit. Therefore, please note the followings when inspecting:

- Replace the earth bolts or nuts.
- Check the earth terminal and coil for corrosion.
- Clean and polish the earth terminal and coil when necessary to ensure good contact.
- Check if there is any accessory interfering with the earth circuit.





121 62 99 92 92


www.digitalkhodro.com

# 7.3 Special tools

- X-431 diagnostic device
- Digital multimeter
- Adapter cable

07



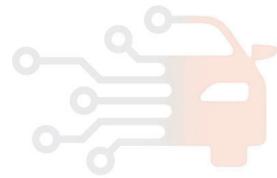

UZ1 6Z 99 9Z 9Z

www.digitalkhodro.com

# 7.4 Fault diagnosis (DTC)

# 7.4.1 Body control module (BCM) fault diagnosis (DTC) list

DTC	Definition
B1001	Low current in the left turn output control circuit
B1002	Left turn output control circuit short to ground
B1004	Low current in the right turn output control circuit
B1005	Right turn output control circuit short to ground
B1045	Front fog lamp output control circuit open circuit
B1046	Low voltage in the front fog lamp output control circuit  B
B1047	High voltage in the front fog lamp output control circuit
B1048	Rear fog lamp output control circuit open circuit
B1049	Low voltage in the rear fog lamp output control circuit
B1050	High voltage in the rear fog lamp output control circuit
B1063	Parking light/position lamp output control circuit open circuit
B1064	Low voltage in the parking light /position lamp output control circuit
B1065	High voltage in the parking light /position lamp output control circuit
B1102	Low voltage in the front roof lamp output control circuit
B1103	High voltage in the front roof lamp output control circuit
B1220 B1220	Low current in the central locking output control circuit
B1221	High current in the central locking output control circuit B1
B1224	High current in the central unlocking output control circuit
B1276	Front wiper high speed output control circuit open circuit
B1277	Low voltage in the front wiper high speed output control circuit
B1278	High voltage in the front wiper high speed output control circuit
B1279	Front wiper low speed output control circuit open circuit
B1280	Low voltage in the front wiper low speed output control circuit
B1281	High voltage in the front wiper low speed output control circuit
B1283	Low voltage in the front washer output control circuit
B1284	High voltage in the front washer output control circuit
B1285	Horn output control circuit open circuit
B1286	Low voltage in the horn output control circuit
B1287	High voltage in the horn output control circuit

07

Rear defroster output control circuit open circuit
Low voltage in the rear defroster output control circuit
High voltage in the rear defroster output control circuit
Low current in the front left window up output control circuit
Low current in the front left window down output control circuit
Low current in the front right window up output control circuit
Low current in the front right window down output control circuit
Low current in the rear left window up output control circuit
Low current in the rear left window down output control circuit
Low current in the rear right window up output control circuit
Low current in the rear right window down output control circuit
Low voltage in the anti-theft horn output control circuit
High voltage in the anti-theft horn output control circuit
Low battery voltage
High battery voltage
Trunk releasing output control circuit open circuit
High voltage in the trunk releasing output control circuit
Low voltage in the trunk releasing output control circuit


021 62 99 92 92

7.4.2 B1001 - Low current in the left turn output control circuit

B1002 - Left turn output control circuit short to ground

B1004 - Low current in the right turn output control circuit

B1005 - Right turn output control circuit short to ground

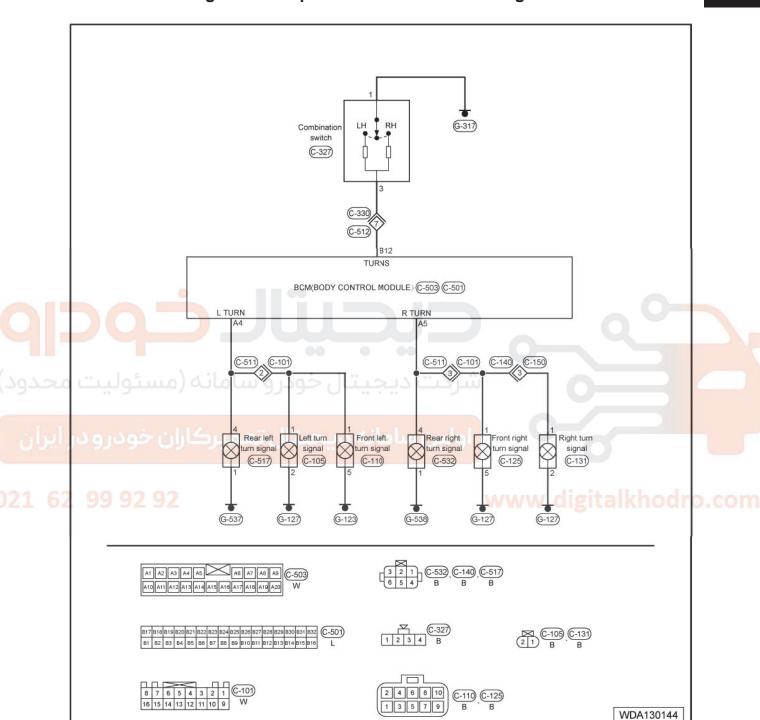

#### Checking the voltage between the body control module (BCM) and the grounding

BCM pin	Function	Condition	Value (DC voltage range)
A4	Left turn signal output	The ignition switch in the ON position with the left turn signal switched on	Intermittent change between 0V and 12V

BCM pin	Function	Condition	Value (DC voltage range)
A5	Right turn signal output	The ignition switch in the ON position with the right turn signal switched on	Intermittent change between 0V and 12V

#### Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes	
B1001	Low current in the left turn output control circuit			<ul><li>Failure of the left turn signal</li><li>Failure of the</li></ul>	
B1002	Left turn output control circuit short to ground	The ignition switch in the OFF position - push the front roof lamp switch to the "DOOR" position,	Left turn signal control circuit short or open circuit detected by the BCM	wiring harness or the connector  • Failure of the BCM  • Failure of the turn signal switch	
B1004	Low current in the right turn output control circuit	close all the doors and press the "lock/unlock" button on the remote key entry (RKE)	and press the "lock/unlock" button on the remote key	Right turn signal	<ul> <li>Failure of the right turn signal</li> <li>Failure of the wiring harness or</li> </ul>
			control circuit short	the connector	
B1005	Right turn output control circuit short		or open circuit detected by the BCM	<ul> <li>Failure of the BCM</li> </ul>	
• (مسئولىت د	to ground	• • ت دیجیتال	شرک	Failure of the turn signal switch	

#### DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.

- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch and turn it on again after 3 to 5 seconds and carry out the respective function tests.
- Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.
   If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)


#### Diagnosis procedures:

#### i Note

- Please verify again if the DTC and its symptoms are present after fault is rectified.
- 1. Check if the power supply line of the turn signal connector is normal.
  - If yes, go to step 2.
  - If not, go to step 4.

07 - Electrical System

- Check if the ground line of the turn signal electrical connector is normal.
  - If yes, go to step 3.
  - If not, repair the ground line.
- 3. Measure the resistance values of the turn signal bulbs and verify if the rated voltage and power of the turn signal bulbs are normal.
  - If yes, go to step 4.
  - If not, replace the turn signal bulbs.
- 4. Turn on the turn signal switch and check if the voltage between the pins A4/A5 of the BCM connector C-503 and the ground is battery voltage.
  - If yes, check if the power circuit between the BCM and the turn signal has the failures of earthing, short circuit, open circuit, over resistance value and virtual connection.
  - If not, go to step 5.

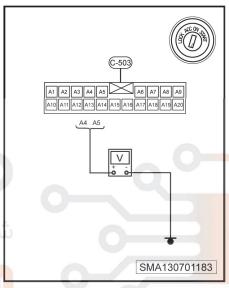

کت دیجیتال خودر و سامانه (مسئولیت محدود

ولین سامانه دیجیتال تعمیرکاران خودرو در

Check if the power supply line and the ground line of the BCM are normal.

021 62 9


- If yes, go to step 6.
- If not, repair the faulty line.
- **6**. Replace the BCM, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, locate fault causes from other symptoms.
  - If not, the fault has been rectified.

www.digitalkhodro.com

7.4.3 B1045 - Front fog lamp output control circuit open circuit

B1046 - Low voltage in the front fog lamp output control circuit

B1047 - High voltage in the front fog lamp output control circuit

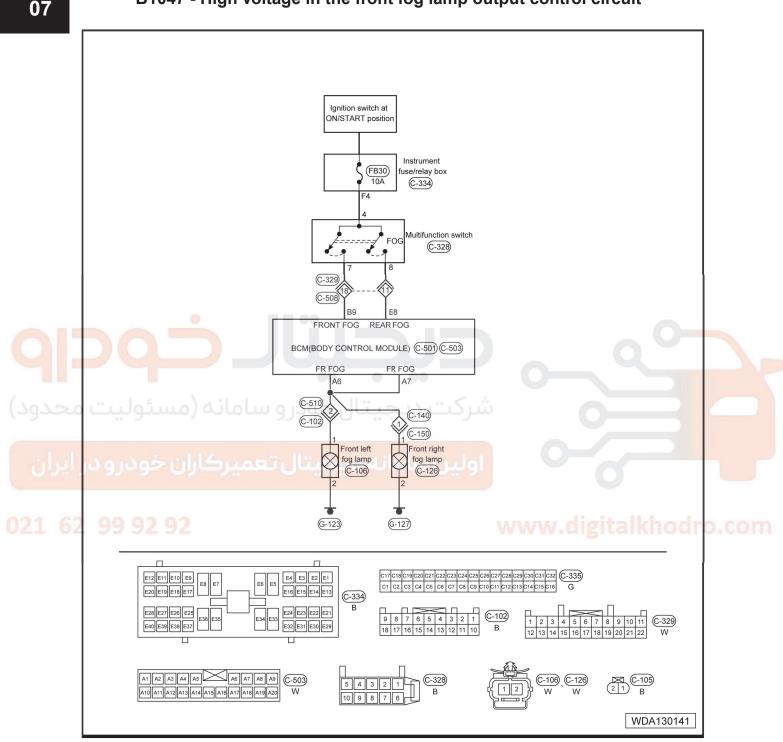

#### Checking the voltage between the body control module (BCM) and the grounding

BCM pin	Function	Condition	Value (DC voltage range)
A6	Fog lamp output	The ignition switch in the ON position with the fog lamp switched on	Battery voltage

BCM pin	Function	Condition	Value (DC voltage range)
A7	Fog lamp output	The ignition switch in the ON position with the fog lamp switched on	Battery voltage

#### Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes		
B1045	Front fog lamp output control circuit open circuit	The ignition switch in the ON position		<ul><li>Failure of the fog lamp</li><li>Failure of the</li></ul>		
B1046	Low voltage in the front fog lamp output control circuit	t The front fog lamp switch in the ON position	the front fog lamp	put The front fog lamp control ci	Front fog lamp control circuit short or open circuit detected by the BCM	wiring harness of the connector  • Failure of the BCM
B1047	High voltage in the front fog lamp output control circuit		detected by the Bow	Failure of the fog lamp switch		

#### DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.

- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch and turn it on again after 3 to 5 seconds and carry out the respective function tests.
- Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.

If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)


#### Diagnosis procedures:

#### 1 Note


- Please verify again if the DTC and its symptoms are present after fault is rectified.
- Check if the fog lamp line of the front fog lamp connector is normal.
  - If yes, go to step 2.
  - If not, go to step 4.
- Check if the ground line of the front fog lamp connector is normal.
  - If yes, go to step 3.
  - If not, repair the fault such as short circuit or virtual connection existing in the front fog lamp ground line.


3. Measure the resistance values of the front fog lamp bulbs and verify if the rated voltage and power of the front fog lamp bulbs are normal.

- If yes, go to step 4.
- If not, replace the front fog lamp bulbs.
- 4. Turn on the front fog lamp switch and check if the voltage between the pins A6/A7 of the BCM connector C-503 and the ground is battery voltage.
  - If yes, check if the power circuit between the BCM and the front fog lamp has the failures of earthing, short circuit, open circuit, over resistance value and virtual connection.
  - If not, go to step 5.

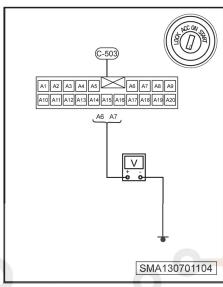


- 5. Check if the front fog lamp fuse FB30 is damaged.
- If yes, replace the fuse with the same specification.
  - If not, go to step 6.
- 6. Check if the circuit between the pin 4 of the multi-functional switch connector C-328 and the power supply terminal is normal.
  - If yes, go to step 7.
  - If not, repair the faulty line.
- 7. Check if the line between the pin B9 of the BCM connector C-501 and the pin 7 of the multi-functional switch connector C-328 is normal.
  - If yes, go to step 8.
  - If not, repair the faulty line.
- 8. Check if the multi-functional switch is normal.
  - If yes, go to step 9.
  - If not, repair or replace the multi-functional switch.

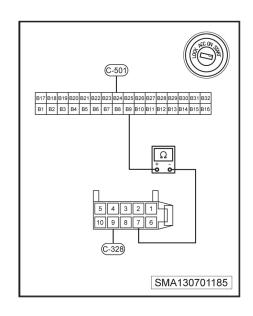

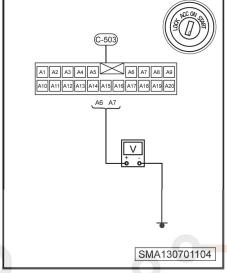

07 - Electrical System

- **9**. Check if the power supply line and the ground line of the BCM are normal.
  - If yes, go to step 10.
  - If not, repair the faulty line.
- **10**. Replace the BCM, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, locate fault causes from other symptoms.
  - If not, the fault has been rectified.

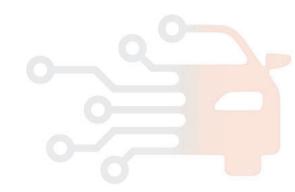

الجاليات حوادرو سامانه (مسئوليت محدود) شركت ديجيتال خودرو سامانه (مسئوليت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

021 62 99 92 92

www.digitalkhodro.con


WWW.DIGITALKHODRO.COM

021 62 99 92 92

7.4.4 B1048 - Rear fog lamp output control circuit open circuit

B1049 - Low voltage in the rear fog lamp output control circuit

B1050 - High voltage in the rear fog lamp output control circuit

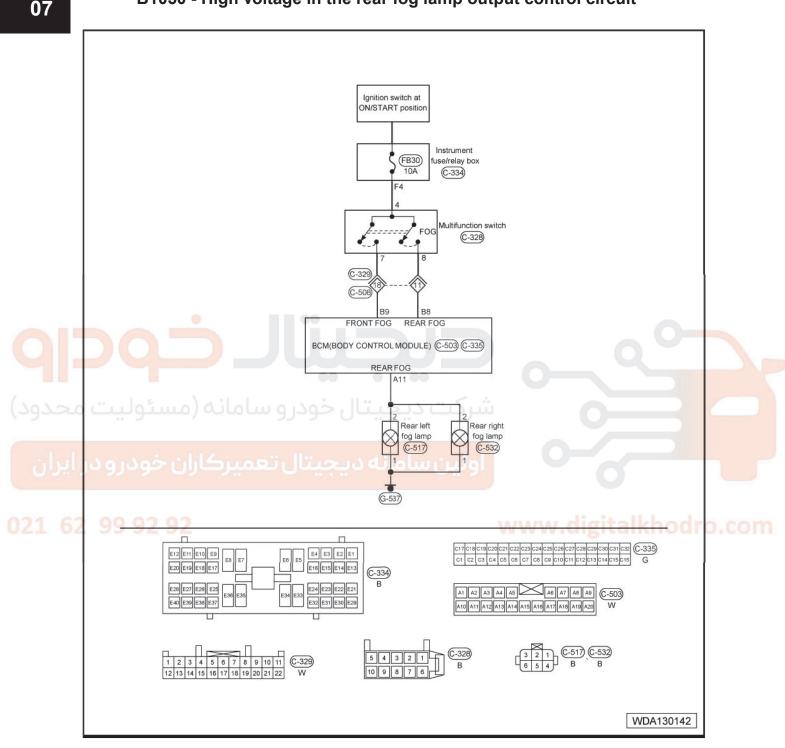

#### Checking the voltage between the body control module (BCM) and the grounding

BCM pin	Function	Condition	Value (DC voltage range)
A011	Fog lamp output	The ignition switch in the ON position with the rear fog lamp switched on	Battery voltage

#### Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
B1048	Rear fog lamp output control circuit open circuit	The ignition switch in the ON position		<ul><li>Failure of the fog lamp</li><li>Failure of the</li></ul>
B1049	Low voltage in the rear fog lamp output control circuit	The rear fog lamp switch in the ON position	Rear fog lamp control circuit short or open circuit detected by the BCM	wiring harness of the connector  • Failure of the BCM
B1050	High voltage in the rear fog lamp output control circuit			Failure of the fog lamp switch

#### DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.

- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch and turn it on again after 3 to 5 seconds and carry out the respective function tests.
- Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.

If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)

#### Diagnosis procedures:

#### Note


- Please verify again if the DTC and its symptoms are present after fault is rectified.
- 1. Check if the fog lamp line of the rear fog lamp connector is normal.
  - If yes, go to step 2.
  - If not, go to step 4.
- 2. Check if the ground line of the rear fog lamp connector is normal.
  - If yes, go to step 3.
  - If not, repair the fault such as short circuit or virtual connection existing in the rear fog lamp ground line.
- Measure the resistance values of the rear fog lamp bulbs and verify if the rated voltage and power of the rear fog lamp bulbs are normal.
  - If yes, go to step 4.
  - If not, replace the rear fog lamp bulbs.

07

4. Turn on the rear fog lamp switch and check if the voltage between the pin A11 of the BCM connector C-503 and the ground is battery voltage.

If yes, check if the power circuit between the BCM and the rear fog lamp has the failures of earthing, short circuit, open circuit, over resistance value and virtual connection.

If not, go to step 5.

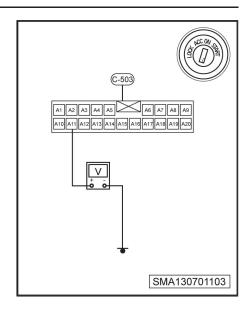

- **5**. Check if the power supply line and the ground line of the BCM are normal.
  - If yes, go to step 6.
  - If not, repair the faulty line.
- Replace the BCM, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, locate fault causes from other symptoms.
- If not, the fault has been rectified.

ولين سامانه ديجيتال تعميركاران خودرودران


021 62 99 92 92

www.digitalkhodro.con

WWW.DIGITALKHODRO.COM

021 62 99 92 92

- 7.4.5 B1063 Parking light/position lamp output control circuit open circuit
  - B1064 Low voltage in the parking light/position lamp output control circuit
  - B1065 High voltage in the parking light/position lamp output control circuit

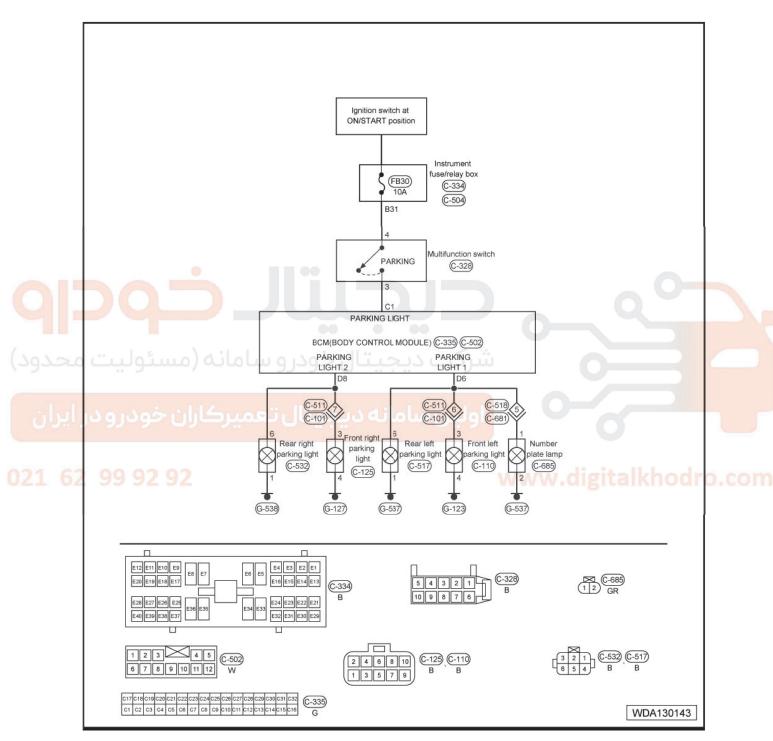

#### Checking the voltage between the body control module (BCM) and the grounding

BCM pin	Function	Condition	Value (DC voltage range)
D6	Parking light/position lamp output	The ignition switch in the ON position with the	Battery voltage

BCM pin	Function	Condition	Value (DC voltage range)
D8	Parking light/position lamp output	parking light/position lamp switched on	

07

#### Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
B1063	Parking light/position lamp output control circuit open circuit	The ignition switch in		Failure of the parking light/position
B1064	Low voltage in the parking light /position lamp output control circuit	the ON position  The parking light/position lamp switch in the ON position	Parking light control circuit short or open circuit detected by	<ul> <li>Failure of the wiring harness or the connector</li> <li>Failure of the</li> </ul>
B1065	High voltage in the parking light /position lamp output control circuit		the BCM	<ul> <li>Failure of the BCM</li> <li>Failure of the parking light/position lamp switch</li> </ul>

#### DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.

- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch and turn it on again after 3 to 5 seconds and carry out the respective function tests.
- Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.


If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)

#### Diagnosis procedures:

#### i Note


- Please verify again if the DTC and its symptoms are present after fault is rectified.
- Check if the parking light/position lamp line of its connector is normal.
  - If yes, go to step 2.
  - If not, go to step 4.
- 2. Check if the ground line of the parking light/position lamp connector is normal.
  - If yes, go to step 3.

- If not, repair the fault such short circuit or virtual connection existing in the parking light/position lamp ground line.
- Measure the resistance values of the parking light/position lamp bulbs and verify if the rated voltage and power of the parking light/position lamp bulbs are normal.
  - If yes, go to step 4.
  - If not, replace the parking light/position lamp bulbs.
- 4. Turn on the parking light/position lamp switch and check if the voltage between the pins D6/D8 of the BCM connector C-502 and the ground is battery voltage.
  - If yes, check if the power circuit between the BCM and the parking light/position lamp has the failures of earthing, short circuit, open circuit, over resistance value and virtual connection.
  - If not, go to step 5.

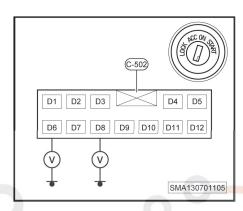



- If yes, replace the fuse with the same specification.
- If not, go to step 6.
- 6. Check if the circuit between the pin 4 of the multi-functional switch connector C-328 and the power supply terminal is normal.
  - If yes, go to step 7.
  - If not, repair the faulty line.
- 7. Check if the line between the pin C1 of the BCM connector C-335 and the pin 3 of the multi-functional switch connector C-328 is normal.
  - If yes, go to step 8.
  - If not, repair the faulty line.
- 8. Check if the multi-functional switch is normal.
  - If yes, go to step 9.
  - If not, repair or replace the multi-functional switch.

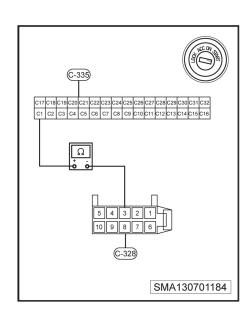

07

**9**. Check if the power supply line and the ground line of the BCM are normal.


- If yes, go to step 10.
- If not, repair the faulty line.
- **10**. Replace the BCM, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, locate fault causes from other symptoms.
  - If not, the fault has been rectified.



021 62 99 92 92

www.digitalkhodro.com

# 7.4.6 B1102 - Low voltage in the roof lamp output control circuit B1103 - High voltage in the roof lamp output control circuit

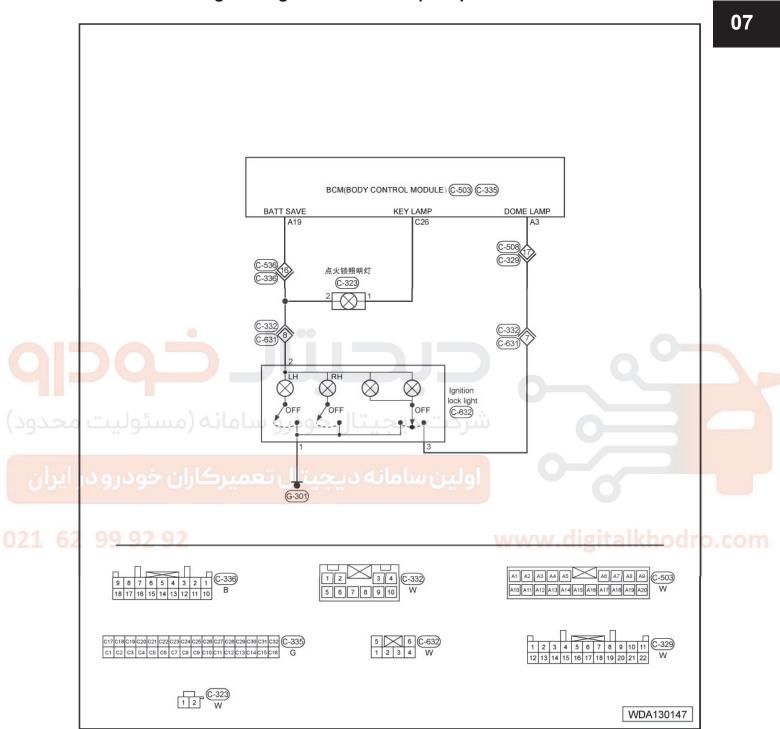

Checking the voltage between the body control module (BCM) and the grounding

BCM pin	Function	Condition	Value (DC voltage range)
A19	Battery energy-saving protection output	The ignition switch in the ON position with the roof lamp switched on	Battery voltage
А3	Interior light output	The ignition switch in the ON position with the roof	Battery voltage

BCM pin	Function	Condition	Value (DC voltage range)
		lamp switched on and door open	

**07** 

#### Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
B1102	Low voltage in the roof lamp output control circuit	The ignition switch in the ON position		<ul><li>Failure of the roof lamp</li><li>Failure of the</li></ul>
B1103	High voltage in the roof lamp output control circuit	The roof lamp switch in the "DOOR" position The door(s) open	Roof lamp control circuit short or open circuit detected by the BCM	wiring harness or the connector  Failure of the BCM  Failure of the roof lamp switch

#### DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.

- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch and turn it on again after 3 to 5 seconds and carry out the respective function tests.
  - Measure the DTC with the diagnostic device.
  - If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.


If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)

#### Diagnosis procedures:


i Note

Please verify again if the DTC and its symptoms are present after fault is rectified.

- Check if the line between the pin 2 of the roof lamp connector C-632 and the pin A19 of the BCM connector C-503 is conducted.
  - If yes, go to step 2.
  - If not, go to step 4.
- 2. Check if the ground line of the roof lamp connector is normal.
  - If yes, go to step 3.
  - If not, repair the fault such as short circuit or virtual connection existing in the roof lamp ground line.
- Measure the resistance values of the roof lamp bulbs and verify if the rated voltage and power of the roof lamp bulbs are normal.
  - If yes, go to step 4.
  - If not, replace the roof lamp bulbs.

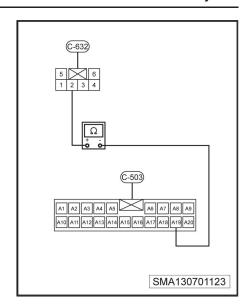

- 4. Check if the voltage between the pin A19 of the BCM connector C-503 and the ground is battery voltage. Open the doors and check if the voltage between the pin A3 of the BCM connector C-503 and the ground is battery voltage.
  - If yes, check if the power circuit between the BCM and the roof lamp has the failures of earthing, short circuit, open circuit, over resistance value and virtual connection.
  - If not, go to step 5.
- 5. Check if the power supply line and the ground line of the BCM are normal.
  - If yes, go to step 6.
  - If not, repair the faulty line.
- **6**. Replace the BCM, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, locate fault causes from other symptoms.
  - If not, the fault has been rectified.

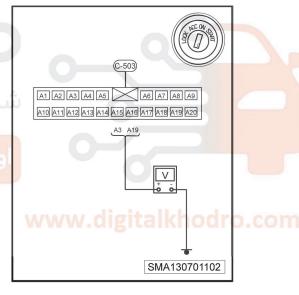



7.4.7 B1220 - Low current in the central locking output control circuit

B1221 - High current in the central locking output control circuit

B1223 - Low current in the central unlocking output control circuit

B1224 - High current in the central unlocking output control circuit

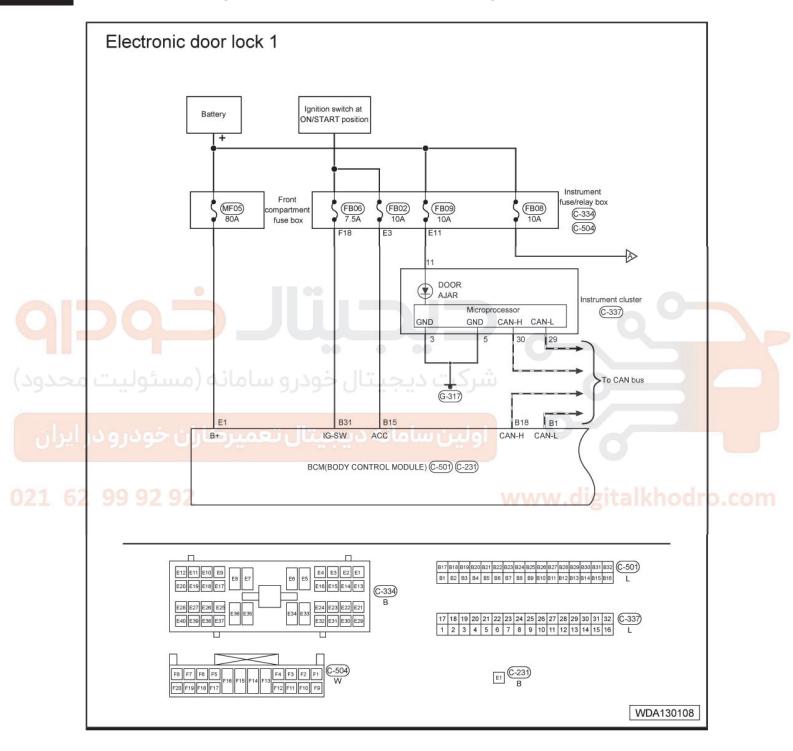

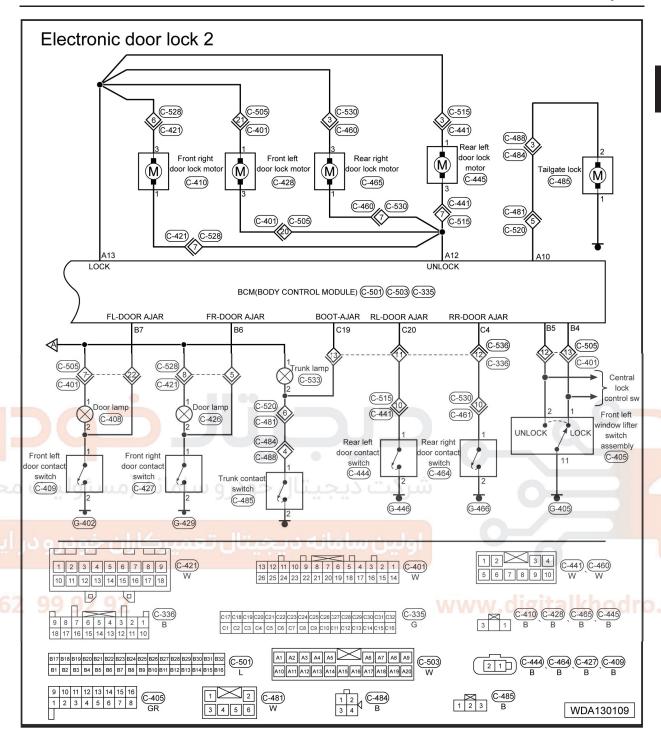

#### Checking the voltage between the body control module (BCM) and the grounding

BCM pin	Function	Condition	Value (DC voltage range)
A12	Unlock output	The central door lock switch or key switch in the UNLOCK position	Battery voltage
A13	Lock output	The central door lock switch or key switch in the LOCK position	Battery voltage
B4	Lock input	Electrical system	Battery voltage
B5	Unlock input	energized	Battery voltage

#### Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
B1220	Low current in the central locking output control circuit	The central door lock switch or key switch		Failure of the door lock motor     Failure of the
B1221	High current in the central locking output control circuit	in the LOCK position	Central door lock control circuit short	<ul> <li>Failure of the wiring harness or the connector</li> <li>Failure of the</li> </ul>
B1223	Low current in the central unlocking output control circuit	Switch of Rey Switch	or open circuit detected by the BCM	BCM • Failure of the central door lock
B1224	High current in the central unlocking output control circuit	in the UNLOCK position		switch or key switch

#### DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.

- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch and turn it on again after 3 to 5 seconds and carry out the respective function tests.
- Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.


If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)

#### Diagnosis procedures:

#### i Note

- Please verify again if the DTC and its symptoms are present after fault is rectified.
- Check if the power supply line and the ground line (locking and unlocking have opposite electrodes) of the central lock connector are normal when the central lock switch is locked and unlocked respectively.
  - If yes, go to step 2.
  - If not, go to step 3.
- Measure the resistance values of the central lock motors of the four doors and check if the power supply line is normal.
  - If yes, go to step 3.
  - If not, replace the central lock motors.


- Check if the power supply line and the ground line of the pins A12 and A13 of the BCM connector C-503 are normal when the central lock switch is locked and unlocked respectively.
  - If yes, check if the line between the pins A12 and A13 of the BCM connector C-503 and the central lock motors of the four doors has the failures of earthing, short circuit, open circuit, over resistance value and virtual connection.
  - If not, go to step 4.

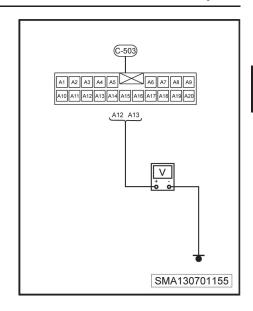

C-411)

SMA130701192


- 4. Check if the line between the pin B4 of the BCM connector C-501 and the pin 1 of the central door lock key switch connector C-411 and the pin 1 of the central door lock connector C-405 is normal.
  - If yes, go to step 5.
  - If not, go to step 7.

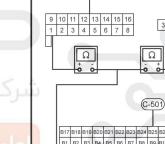

ولين سامانه ديجيتال تعميركاران خودرو در ايران

## 021 62 99 92 92

- 5. Check if the line between the pin B5 of the BCM connector C-501 and the pin 3 of the central door lock key switch connector C-411 and the pin 2 of the central door lock connector C-405 is normal.
  - If yes, go to step 6.
  - If not, go to step 7.

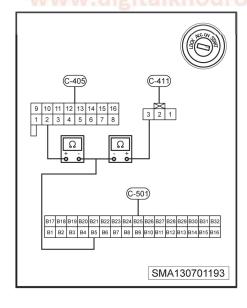

Check if the ground line between the the central door lock key switch connector and the central door lock switch is normal.

 If yes, check if the central door lock key switch and the central door lock switch have any malfunctions.

- If not, go to step 7.

7. Check if the power supply line and the ground line of the BCM are normal.

- If yes, go to step 8.
- If not, repair the faulty line.
- **8**. Replace the BCM, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, find the fault cause from other symptoms.
  - If not, the fault has been rectified.



www.digitalkhodro.com

021 62 99 92 92

7.4.8 B1276 - Front wiper high speed output control circuit open circuit


B1277 - Low voltage in the front wiper high speed output control circuit

B1278 - High voltage in the front wiper high speed output control circuit

B1279 - Front wiper low speed output control circuit open circuit

B1280 - Low voltage in the front wiper low speed output control circuit

B1281 - High voltage in the front wiper low speed output control circuit

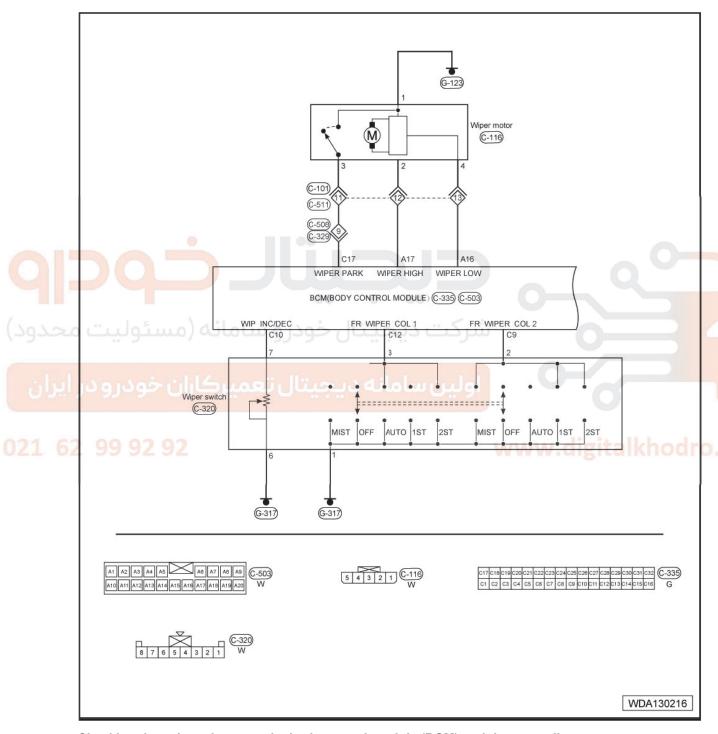

#### Checking the voltage between the body control module (BCM) and the grounding

BCM pin	Function	Condition	Value (DC voltage range)
A16	Wiper low speed output	The ignition switch in the	Battery voltage

BCM pin	Function	Condition	Value (DC voltage range)
		ACC/ON position	
		The wiper switch in the ON position	
		The ignition switch in the ACC/ON position	
A17	Wiper high speed output	The wiper switch in the ON position	Battery voltage

#### Checking the line between the body control module (BCM) and the wiper switch

BCM pin	Function	Condition	Value (DC voltage range)
C9	Front wiper input	The ignition switch in the	Battery voltage
C12	Front wiper input	ACC/ON position	Battery voltage

#### Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering	Possible causes
B1276	Front wiper high speed output control circuit open circuit  Low voltage in the front wiper high speed output control circuit	ت دیجیتال	condition	<ul> <li>Failure of the</li> </ul>
B1278 B1279	High voltage in the front wiper high speed output control circuit  Front wiper low speed output control circuit open circuit	The ignition switch in the ACC/ON position The front wiper switch in the ON position	Front wiper output control circuit short or open circuit detected by the BCM	<ul> <li>wiper motor</li> <li>Failure of the wiring harness or the connector</li> <li>Failure of the BCM</li> <li>Failure of the wiper switch</li> </ul>
B1280	Low voltage in the front wiper low speed output control circuit			
B1281	High voltage in the front wiper low speed output control circuit			

#### **DTC** test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.

- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch and turn it on again after 3 to 5 seconds and carry out the respective function tests.

- · Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.

If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)

07

#### Diagnosis procedures:

#### i Note


- Please verify again if the DTC and its symptoms are present after fault is rectified.
- Check if the line between the pins 2 and 4 of the wiper motor connector C-116 and the pins A17 and A16 of the BCM connector C-503 is normal.
  - If yes, go to step 2.
  - If not, go to step 4.
- 2. Check if the ground line of the wiper motor connector is normal.
  - If yes, go to step 3.
  - If not, repair the fault such as short circuit or virtual connection existing in the wiper motor ground line.
- Measure the resistance value of the front wiper motor and check if the high speed and low speed of the motor are normal.
  - If yes, go to step 4.
  - If not, replace the front wiper motor.

# C-503 A1 A2 A3 A4 A5 A6 A7 A8 A9 A10 A11 A12 A13 A14 A19 A16 A17 A18 A19 A20 A16 A17 C-116 5 4 3 2 1 4 2 SMA130701153

#### 121 62 99 92 92

- 4. Check if the voltage between the pin A17 of the BCM connector C-503 and the ground is battery voltage. Check if the voltage between the pin A16 of the BCM connector C-503 and the ground is battery voltage.
  - If yes, check if the power circuit between the BCM and the roof lamp has the failures of earthing, short circuit, open circuit, over resistance value and virtual connection.
  - If not, go to step 5.

# WWW.CIGITALKHOOKO.COM

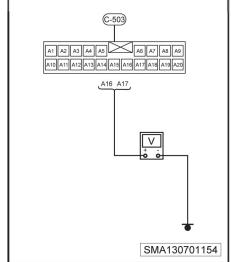


07 - Electrical System

- 5. Check if the line between the pin C9 of the BCM connector C-335 and the pin 2 of the wiper switch connector C-320 is normal. Check if the line between the pin C12 of the BCM connector C-335 and the pin 3 of the wiper switch connector C-320 is normal.
  - If yes, go to step 6.
  - If not, go to step 7.
- 6. Check if the ground line of the wiper switch is normal.
  - If yes, check if the wiper switch is faulty.
  - If not, go to step 7.
- **7**. Check if the power supply line and the ground line of the BCM are normal.
  - If yes, go to step 8.
  - If not, repair the faulty line.
- **8**. Replace the BCM, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, find the fault cause from other symptoms.
  - If not, the fault has been rectified.



اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

021 62 99 92 92

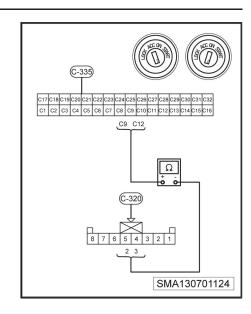



www.digitalkhodro.com

7.4.9 B1283 - Low voltage in the front washer output control circuit
B1284 - Hight voltage in the front washer output control circuit

07 BCM(BODY CONTROL MODULE) (C-335) (C-503) FRONT WASHER FRONT WASHER A15 C-511) (C-101) C-140 C-150 ront washer Wiper switch FRONT REAR (M) WASHER WASHER motor C-320 C-130 (G-317) G-127 8 7 6 5 4 3 2 1 16 15 14 13 12 11 10 9 A1 A2 A3 A4 A5 A6 A7 A8 A9 C-503 A10 A11 A12 A13 A14 A15 A16 A17 A18 A19 A20 WDA130146

#### Checking the voltage between the body control module (BCM) and the grounding

BCM pin	Function	Condition	Value (DC voltage range)
A15	Front washer output	The ignition switch in the ACC/ON position  The washer switch in the ON position	Battery voltage

BCM pin	Function	Condition	Value (DC voltage range)
C7	Front washer input	The ignition switch in the ACC/ON position	Battery voltage

**07** 

#### Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
B1283	Low voltage in the front washer output control circuit	The ignition switch in the ACC/ON position  The washer switch in		<ul> <li>Failure of the washer motor</li> <li>Failure of the wiring harness or the connector</li> <li>Failure of the BCM</li> <li>Failure of the washer switch</li> </ul>
B1284	High voltage in the front washer output control circuit			

#### DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.

- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch and turn it on again after 3 to 5 seconds and carry out the respective function tests.
- Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.


If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)

#### Diagnosis procedures:

#### i Note

Please verify again if the DTC and its symptoms are present after fault is rectified.

- Check if the line between the pin A15 of the BCM connector C-503 and the pin 2 of the washer motor connector C-130 is normal.
  - If yes, go to step 2.
  - If not, go to step 4.
- Check if the ground line of the washer motor is normal.
  - If yes, go to step 3.
  - If not, repair the fault such as short circuit or virtual connection existing in the washer motor ground line.
- Measure the resistance value of the washer motor and check if the motor is normal.
  - If yes, go to step 4.
  - If not, replace the washer motor.

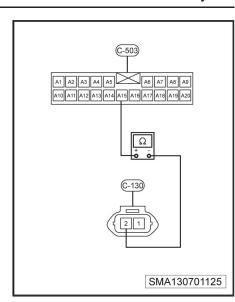



- Turn on the washer switch and check if the voltage between the pin A15 of the BCM connector C-503 and the ground is battery voltage.
  - If yes, check if the power circuit between the BCM and the washer motor has the failures of earthing, short circuit, open circuit, over resistance value and virtual connection.
  - If not, go to step 5.



021 62 99 92 92

- **5**. Check if the line between the pin C7 of the BCM connector C-335 and the pin 4 of the washer switch connector C-320 is normal.
  - If yes, go to step 6.
  - If not, repair the faulty line.

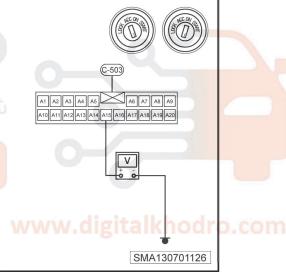

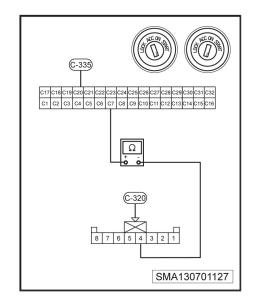

- 6. Check if the ground line of the washer switch is normal.
  - If yes, go to step 7.
  - If not, repair the fault such as short circuit or virtual connection existing in the washer switch ground line. ■
- 7. Check if the washer switch is normal.
  - If yes, go to step 8.
  - If not, repair or replace the washer switch.
- 8. Check if the power supply line and the ground line of the BCM are normal.
  - If yes, go to step 9.
  - If not, repair the faulty line.
- 9. Replace the BCM, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, find the fault cause from other symptoms.
  - If not, the fault has been rectified.




021 62 99 92 92

www.digitalkhodro.com

7.4.10 B1285 - Horn output control circuit open circuit

B1286 - Low voltage in the horn output control circuit

B1287 - High voltage in the horn output control circuit

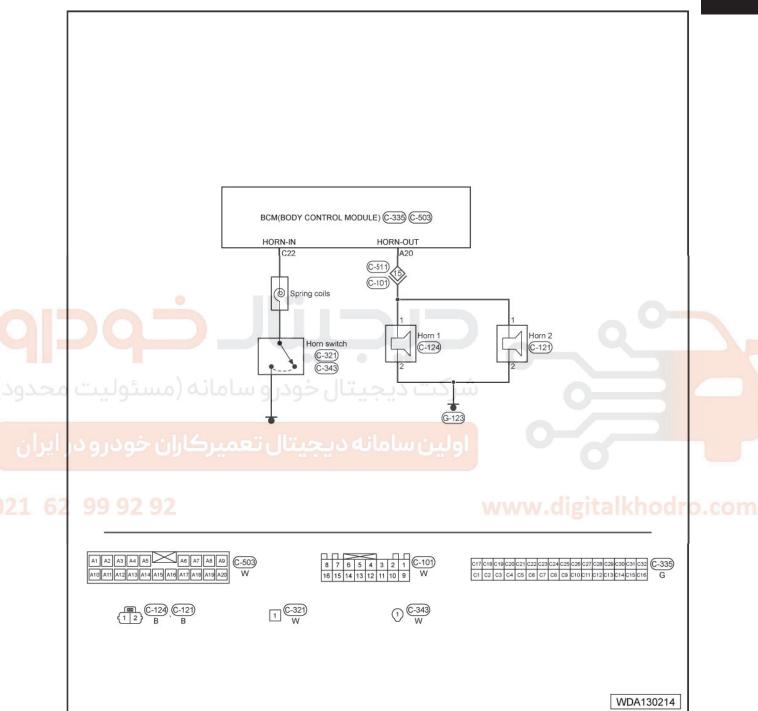

#### Checking the voltage between the body control module (BCM) and the grounding

BCM pin	Function	Condition	Value (DC voltage range)
A20	Horn output	The horn switch in the ON position	Battery voltage
C22	Horn input	Electrical equipment energized	Battery voltage

#### Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
B1285	Horn output control circuit open circuit	The horn switch in the ON position	Horn output control circuit short or open circuit detected by the BCM	Failure of the horn
B1286	Low voltage in the horn output control circuit			Failure of the wiring harness or the connector     Failure of the
B1287	High voltage in the horn output control circuit			BCM • Failure of the horn switch

#### DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.


- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch and turn it on again after 3 to 5 seconds and carry out the respective function tests.
- Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.

If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)


#### Diagnosis procedures:

#### **Note**


- Please verify again if the DTC and its symptoms are present after fault is rectified.
- Check if the line between the pin A20 of the BCM connector C-503 and the pin 1 of the horn switch connector C-121 is normal.
  - If yes, go to step 2.
  - If not, go to step 4.
- 2. Check if the ground line of the horn is normal.
  - If yes, go to step 3.
  - If not, repair the fault such as short circuit or virtual connection existing in the horn ground line.
- **3**. Measure the resistance value of the horn and check if the horn is normal.
  - If yes, go to step 4.
  - If not, replace the horn.

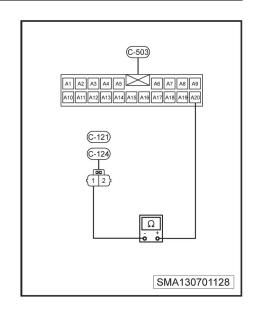

- **4**. Turn on the horn switch and check if the voltage between the pin A20 of the BCM connector C-503 and the ground is battery voltage.
  - If yes, check if the power circuit between the BCM and the horn has the failures of earthing, short circuit, open circuit, over resistance value and virtual connection.
  - If not, go to step 5.

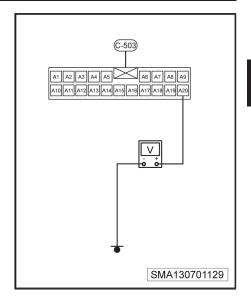


- Check if the line between the pin C22 of the BCM connector C-335 and the horn switch connector C-321 is normal.
  - If yes, go to step 6.
  - If not, repair the faulty line.
- 6. Check if the horn switch is normal.
  - If yes, go to step 7.
- If not, repair or replace the horn switch.
  - 7. Check if the spring coil is normal.
    - If yes, go to step 8.
    - If not, repair or replace the spring coil.
  - 8. Check if the power supply line and the ground line of the BCM are normal.
    - If yes, go to step 9.
    - If not, repair the faulty line.
  - Replace the BCM, carry out the function test again, and read the fault code to verify if it exists or not.
    - If yes, find the fault cause from other symptoms.
    - If not, the fault has been rectified.

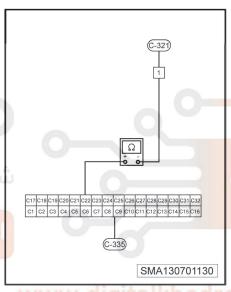

7.4.11 B1288 - Rear defroster output control circuit open circuit

B1289 - Low voltage in the rear defroster output control circuit

B1290 - High voltage in the rear defroster output control circuit

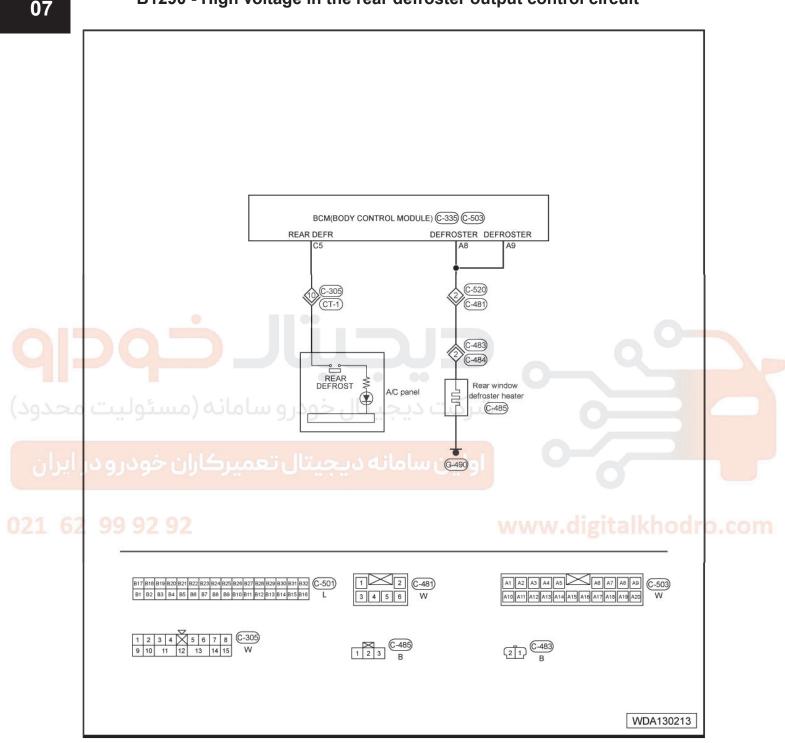

#### Checking the voltage between the body control module (BCM) and the grounding

BCM pin	Function	Condition	Value (DC voltage range)
A8	Defroster output The ignition		Battery voltage
A9	Defroster output	ACC or ON position  The washer switch in the  ON position	Battery voltage

BCM pin	Function Condition		Value (DC voltage range)	
C5	Rear defroster input	The ignition switch in the ACC or ON position	Battery voltage	

#### Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
B1288	Rear defroster output control circuit open circuit	The ignition switch in the ACC or ON	The rear defroster	Failure of the wiring harnesses
B1289	Low voltage in the rear defroster output control circuit	position	output control circuit short or open circuit detected by the body control module	or connector
B1290	High voltage in the rear defroster output control circuit	in the ON position	(BCM)	defroster switch

#### DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.

- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch, turn it on again after 3 to 5 seconds, and carry out the corresponding function test.
  - Measure the DTC with the diagnostic device.
  - If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.

If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)

## Diagnosis procedures:


#### 1 Note

Please verify again if the DTC and its symptoms are present after fault is rectified.

07


#### 07 - Electrical System

- Check if the line between the pins A8, A9 of the body control module connector C-503 and the pin 1 of the rear window defroster heater connector C-485 is normal.
  - If yes, go to step 2.
  - If not, go to step 4.
- Check if the rear window defroster heater ground line is normal.
  - If yes, go to step 3.
  - If not, repair the fault such as short circuit or virtual connection existing in the rear window defroster heater ground line.
- Measure the resistance value of the rear window defroster heater and check if the rear window defroster heater has any breakpoint.
  - If yes, repair or replace it.
  - If not, go to step 4.

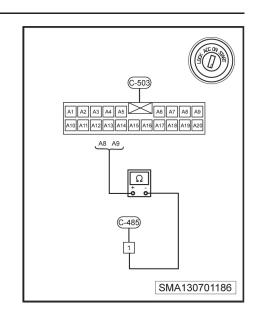


- 4. Turn on the defroster switch and check if the voltage between the pins A8, A9 of body control module connector C-503 and the ground is the battery voltage.
  - If yes, check if the power lines between the body control module and the rear window defroster heater have the following faults such as grounding, short circuit, open circuit, excessive resistance and virtual connection.
  - If not, go to step 5.


021 62 99 92 92

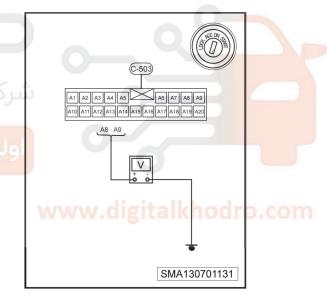

- Check if the line between the pin C5 of the body control module connector C-335 and the pin 10 of the A/C control module connector C-305 is normal.
  - If yes, go to step 6.
  - If not, repair the faulty line.

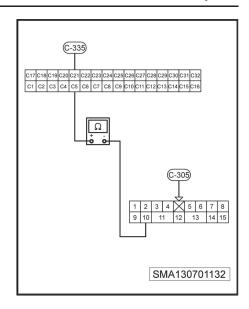


- Turn on the defroster switch and check if the pin 10 of the A/C control module connector C-305 has voltage output.
  - If yes, go to step 7.
  - If not, replace the A/C control module.
- Check if the power supply line and the ground line of the BCM are normal.
  - If yes, go to step 8.
  - If not, repair the faulty line.
- Replace the body control module, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, find the fault cause from other symptoms.
  - If not, the fault has been rectified.

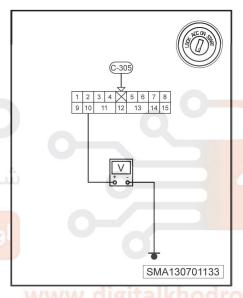

**07** 

7.4.12 B1350 - Low current in the front left window up output control circuit

B1353 - Low current in the front left window down output control circuit

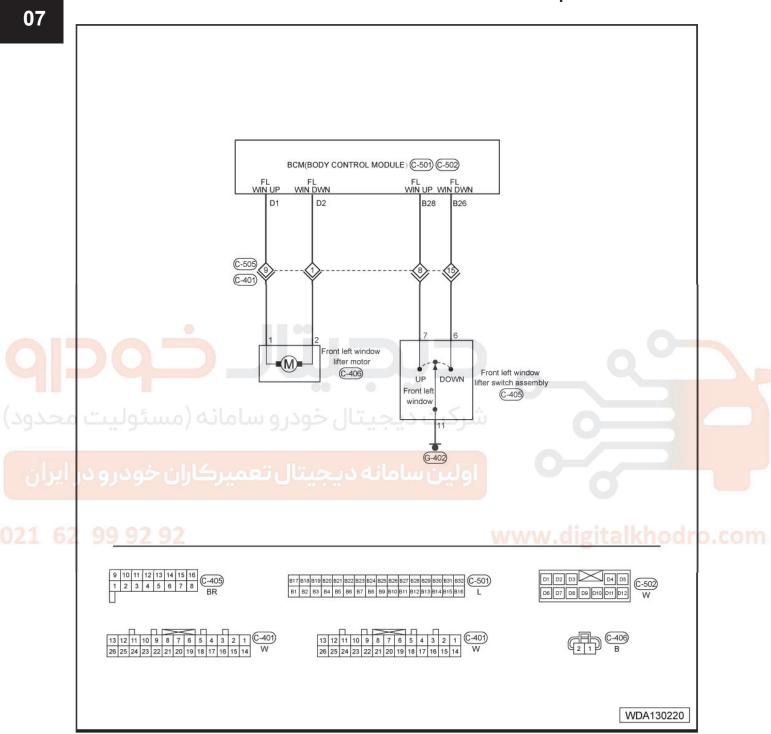

#### Checking the voltage between the body control module (BCM) and the grounding

BCM pin	Function	Condition	Value (DC voltage range)
D1	Front left window up output	The ignition switch in the ACC or ON position  The window lifter switch in the UP position	Battery voltage

BCM pin	Function	Condition	Value (DC voltage range)
D2	Front left window down output	The ignition switch in the ACC or ON position  The window lifter switch in the DOWN position	
B26	Front Left window down input	The ignition switch in the ACC or ON position	Battery voltage
B28	B28 Front left window up input		Battery voltage

#### Fault code definition and fault causes

	DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
	B1350	Low current in the front left window up output control circuit	The ignition switch in the ACC or ON position The window lifter		<ul> <li>Failure of the wiring harnesses</li> </ul>
		بالـ(	switch in the UP position	The front left window output control circuit short or open circuit detected by the body control module (BCM)	<ul><li>Failure of BCM</li><li>Failure of the</li></ul>
_0	(مسئولیت	Low current in the	The ignition switch in the ACC or ON position		window lifter switch • Failure of the window lifter
1	B1353	front left window down output control circuit	The window lifter switch in the DOWN	اول	motor
17	99 92 92		position	www.d	igitalkhodr

## DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.

- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch, turn it on again after 3 to 5 seconds, and carry out the corresponding function test.
- Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.

If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)


#### Diagnosis procedures:

# i Note


07

· Please verify again if the DTC and its symptoms are present after fault is rectified.

- Check if the lines between the pins D1, D2 of the body control module connector C-502 and the pins 1, 2 of the front left window lifter motor connector C-406 are normal.
  - If yes, go to step 2.
  - If not, go to step 3 and 4.
- 2. Measure the resistance value of the window lifter motor and carry out the power supply test (up and down operations have opposite electrodes) to check if the window lifter motor is normal.
  - If yes, go to step 3.
  - If not, replace the front left window lifter motor.

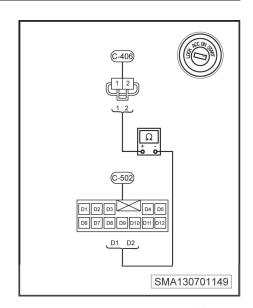


- Turn the front left window lifter switch to the UP
  position and check if the voltage between the pin D1
  of body control module connector C-502 and the
  ground is the battery voltage.
  - If yes, check if the line between the pin D1 of the body control module connector C-502 and the front left window lifter motor has the following faults such as grounding, short circuit, open circuit, excessive resistance and virtual connection.
  - If not, go to step 5.
- 4. Turn the front left window lifter switch to the DOWN position and check if the voltage between the pin D2 of body control module connector C-502 and the ground is the battery voltage.
  - If yes, check if the line between the pin D2 of the body control module connector C-502 and the front left window lifter motor has the following faults such as grounding, short circuit, open circuit, excessive resistance and virtual connection.
  - If not, go to step 6.

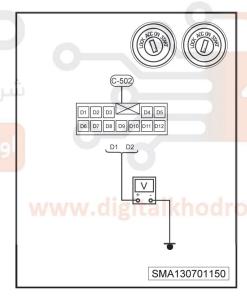


WWW.DIGITALKHODRO.COM

021 62 99 92 92

- Check if the line between the pin B28 of the body control module connector C-501 and the pin 7 of the front left window lifter switch assembly connector C-405 is normal.
  - If yes, go to step 6.
  - If not, repair the faulty line.
- Check if the line between the pin B26 of the body control module connector C-501 and the pin 6 of the front left window lifter switch assembly connector C-405 is normal.
  - If yes, go to step 7.
  - If not, repair the faulty line.
- Check if the line between the pin 11 of the front left window lifter switch assembly connector C-405 and the ground is normal.
  - If yes, go to step 8.
  - If not, repair the faulty line.
- Check if the front left window lifter switch assembly is normal.
  - If yes, repair or replace the front left window lifter switch assembly.
  - If not, go to step 9.
- Check if the power supply line and the ground line of BCM are normal.
  - If yes, go to step 10.
- If not, repair the faulty line.
- Replace the body control module, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, find the fault cause from other symptoms.
  - If not, the fault has been rectified.

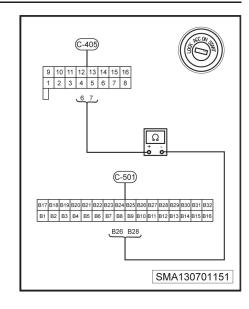


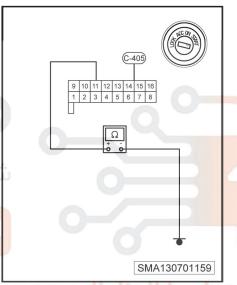

07

7.4.13 B1356 - Low current in the front right window up output control circuit

B1359 - Low current in the front right window down output control circuit

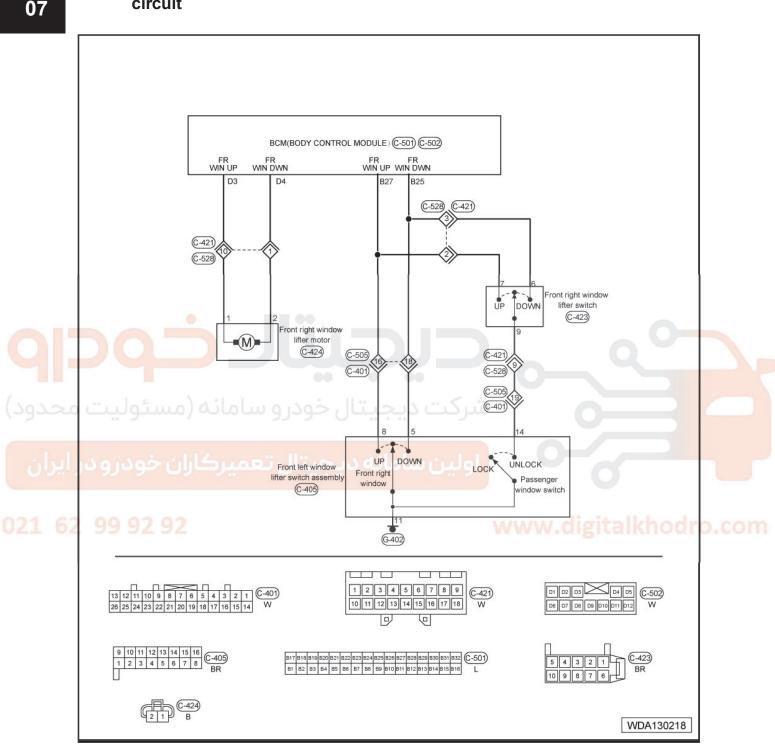

Checking the voltage between the body control module (BCM) and the grounding

BCM pin	BCM pin Function		Value (DC voltage range)	
D3	Front right window up output	The ignition switch in the ACC or ON position	Battery voltage	

BCM pin	Function	Condition	Value (DC voltage range)
-		The window lifter switch in the UP position	
		the or position	
		The ignition switch in the	
	Front right window down output	ACC or ON position	
D4		The window lifter switch in the DOWN position	
B25	Front right window down input	The ignition switch in the ACC or ON position	Battery voltage
B27 Front right window up input		The ignition switch in the ACC or ON position	Battery voltage

#### Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
-		The ignition switch in the ACC or ON position		0
B1356 (مسئولیت	Low current in the front right window up output control circuit		The front right window output control circuit short or open circuit detected by the body control module (BCM)	<ul> <li>Failure of the wiring harnesses or connector</li> <li>Failure of BCM</li> <li>Failure of the window lifter</li> </ul>
اران خودرو در	Low current in the	the ACC or ON control modu		window lifter switch • Failure of the window lifter
B1359	front right window down output control circuit	The window lifter switch in the DOWN position	www.d	motor igitalkhodro

#### **DTC** test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.

- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch, turn it on again after 3 to 5 seconds, and carry out the corresponding function test.
- · Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.


If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)

#### Diagnosis procedures:


07

## 1 Note


- Please verify again if the DTC and its symptoms are present after fault is rectified.
- Check if the lines between the pins D3, D4 of the body control module connector C-502 and the pins 1, 2 of the front left window lifter motor connector C-424 are normal.
  - If yes, go to step 2.
  - If not, go to step 3 and 4.
- Measure the resistance value of the window lifter motor and carry out the power supply test (up and down operations have opposite electrodes) to check if the window lifter motor is normal.
  - If yes, go to step 3.
  - If not, replace the front right window lifter motor.

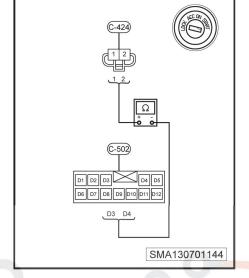

- Turn the front right window lifter switch to the UP
  position and check if the voltage between the pin D3
  of body control module connector C-502 and the
  ground is the battery voltage.
  - If yes, check if the line between the pin D3 of the body control module connector C-502 and the front right window lifter motor has the following faults such as grounding, short circuit, open circuit, excessive resistance and virtual connection.
  - If not, go to step 5.
- 4. Turn the front right window lifter switch to the DOWN position and check if the voltage between the pin D4 of body control module connector C-502 and the ground is the battery voltage.
  - If yes, check if the line between the pin D4 of the body control module connector C-502 and the front right window lifter motor has the following faults such as grounding, short circuit, open circuit, excessive resistance and virtual connection.
  - If not, go to step 6.

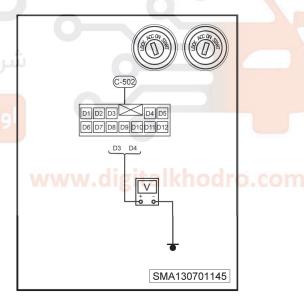

- 5. Check if the lines between the pin B27 of the body control module connector C-501 and the pin 8 of the front left window lifter switch assembly connector C-405 and the pin 7 of the front right window lifter switch connector C-423 are normal.
  - If yes, go to step 7.
  - If not, repair the faulty line.

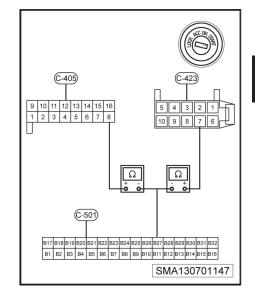


- 6. Check if the lines between the pin B25 of the body control module connector C-501 and the pin 5 of the front left window lifter switch assembly connector C-405 and the pin 6 of the front right window lifter switch connector C 423 are normal.
  - If yes, go to step 7.
  - If not, repair the faulty line.


رکت دیجیتال خودرو سامانه (مسئولیت محدود)

ولین سامانه دیجیتال تعمیرکاران خودرو در ایران

# 021 62 99 92 92

- Check if the line between the pin 14 of the front left window lifter switch assembly connector C-405 and the pin 9 of the front right window lifter switch assembly connector C-423 is normal.
  - If yes, go to step 8.
  - If not, repair the faulty line.

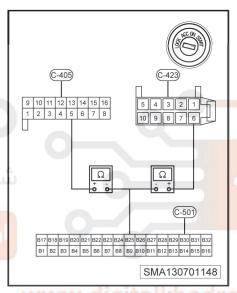

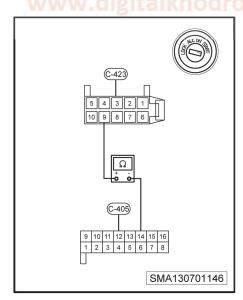

07


8. Check if the line between the pin 11 of the front left window lifter switch assembly connector C-405 and the ground is normal.

- If yes, go to step 9.
- If not, repair the faulty line.
- **9**. Check if the front left window lifter switch assembly is normal.
  - If yes, repair or replace the front left window lifter switch assembly.
  - If not, go to step 10.
- **10**. Check if the power supply line and the ground line of BCM are normal.
  - If yes, go to step 11.
  - If not, repair the faulty line.
- 11. Replace the body control module, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, find the fault cause from other symptoms.
  - If not, the fault has been rectified.

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

021 62 99 92 92

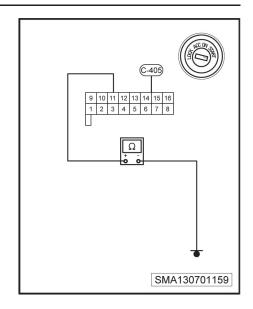




www.digitalkhodro.com

7.4.14 B1361 - Low current in the rear left window up output control circuit

B1363 - Low current in the rear left window down output control circuit

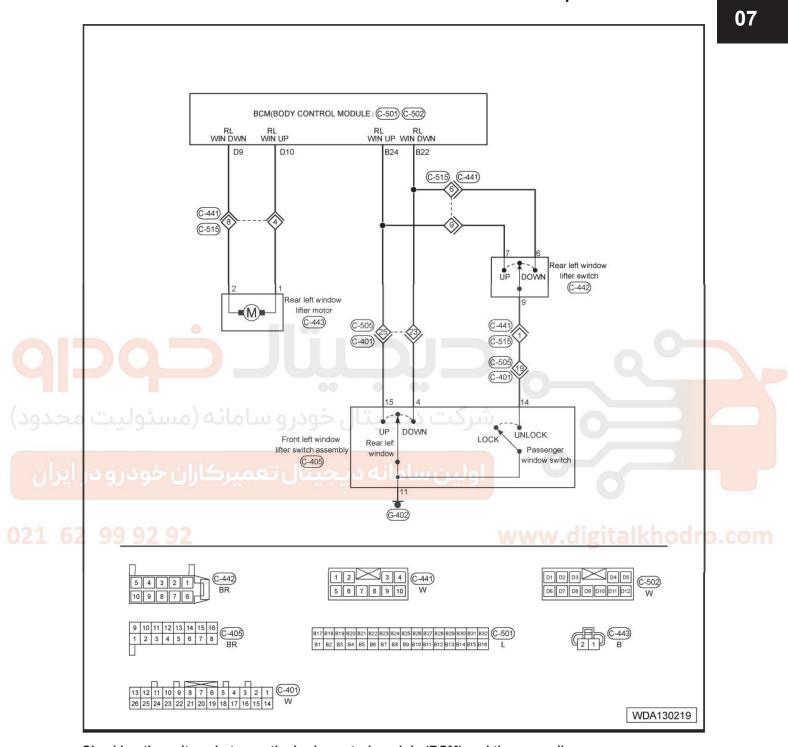

# Checking the voltage between the body control module (BCM) and the grounding

BCM pin	Function	Condition	Value (DC voltage range)
		The ignition switch in the ACC or ON position	
D9	Rear left window up output	The window lifter switch in the UP position	Battery voltage

BCM pin	Function	Condition	Value (DC voltage range)
D10	Rear left window down output	The ignition switch in the ACC or ON position  The window lifter switch in the DOWN position	
B22	Rear left window down input	The ignition switch in the ACC or ON position	Battery voltage
B24	B24 Rear left window up input		Battery voltage

#### Fault code definition and fault causes

	DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
	B1351	Low current in the rear left window up output control circuit	The ignition switch in the ACC or ON position  The window lifter switch in the UP	The rear left window	<ul> <li>Failure of the wiring harnesses or connector</li> </ul>
I			position	output control circuit short or open circuit	<ul><li>Failure of BCM</li><li>Failure of the</li></ul>
0	(مسئولیت	خودرو سامانه	The ignition switch in the ACC or ON	detected by the body control module (BCM)	window lifter switch  • Failure of the
1	B1353	Low current in the rear left window down output control circuit	The window lifter switch in the DOWN	اول	window lifter motor
12			position	www.d	igitalkhodr

## DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.


- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch, turn it on again after 3 to 5 seconds, and carry out the corresponding function test.
- Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.

If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)


#### Diagnosis procedures:

## 1 Note

- · Please verify again if the DTC and its symptoms are present after fault is rectified.
- Check if the lines between the pins D9, D10 of the body control module connector C-502 and the pins 1, 2 of the rear left window lifter motor connector C-443 are normal.
  - If yes, go to step 2.
  - If not, go to step 3 and 4.
- Measure the resistance value of the window lifter motor and carry out the power supply test (up and down operations have opposite electrodes) to check if the window lifter motor is normal.
  - If yes, go to step 3.
  - If not, replace the rear left window lifter motor.

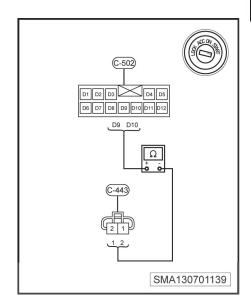


- Turn the rear left window lifter switch to the UP
  position and check if the voltage between the pin
  D10 of body control module connector C-502 and
  the ground is the battery voltage.
- If yes, check if the line between the pin D10 of the body control module connector C-502 and the rear left window lifter motor connector C-443 has the following faults such as grounding, short circuit, open circuit, excessive resistance and virtual connection.
  - If not, go to step 5.
- 4. Turn the rear left window lifter switch to the DOWN position and check if the voltage between the pin D9 of body control module connector C-502 and the ground is the battery voltage.
  - If yes, check if the line between the pin D9 of the body control module connector C-502 and the rear left window lifter motor connector C-443 has the following faults such as grounding, short circuit, open circuit, excessive resistance and virtual connection.
  - If not, go to step 6.

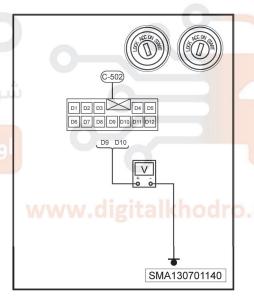

07 - Electrical System

- 5. Check if the lines between the pin B24 of the body control module connector C-501 and the pin 15 of the front left window lifter switch assembly connector C-442 and the pin 7 of the rear left window lifter switch connector C 462 are normal.
  - If yes, go to step 7.
  - If not, repair the faulty line.

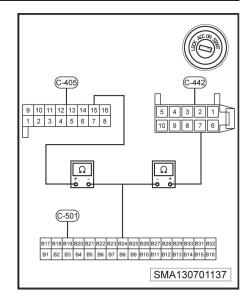


- 6. Check if the lines between the pin B22 of the body control module connector C-501 and the pin 4 of the front left window lifter switch assembly connector C-405 and the pin 6 of the rear left window lifter switch connector C 422 are normal.
  - If yes, go to step 7.
  - If not, repair the faulty line.


کت دیجیتال خودرو سامانه (مسئولیت محدود

بلین سامانه دیجیتال تعمیرکاران خودرو در ایران

# 021 62 99 92 92

- Check if the line between the pin 14 of the front left window lifter switch assembly connector C-405 and the pin 9 of the rear left window lifter switch assembly connector C-442 is normal.
  - If yes, go to step 8.
  - If not, repair the faulty line.

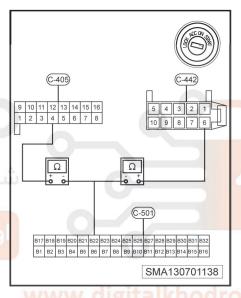

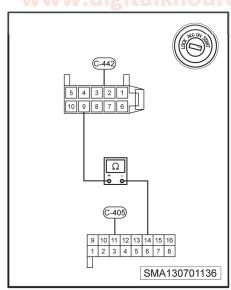


07 - Electrical System

- 8. Check if the line between the pin 11 of the front left window lifter switch assembly connector C-405 and the ground is normal.
  - If yes, go to step 9.
  - If not, repair the faulty line.
- **9**. Check if the front left window lifter switch assembly is normal.
  - If yes, repair or replace the front left window lifter switch assembly.
  - If not, go to step 10.
- **10**. Check if the power supply line and the ground line of BCM are normal.
  - If yes, go to step 11.
  - If not, repair the faulty line.
- 11. Replace the body control module, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, find the fault cause from other symptoms.
  - If not, the fault has been rectified.

شرکت دیجیتال خودرو سامانه (مسئولیت محدود

اولین سامانه دیجیتال تعمیرکاران خودرو در ایرار

021 62 99 92 92

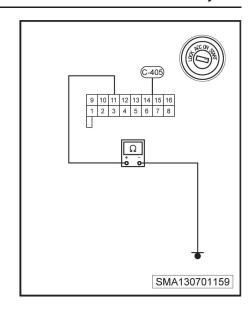




www.digitalkhodro.com

7.4.15 B1365 - Low current in the rear right window up output control circuit

B1367 - Low current in the rear right window down output control circuit

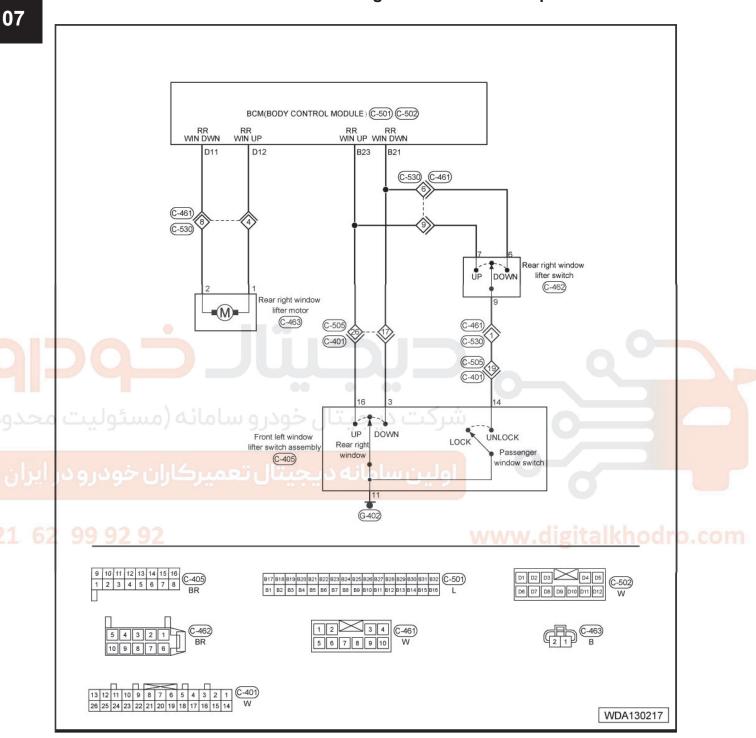

# Checking the voltage between the body control module (BCM) and the grounding

BCM pin	Function	Condition	Value (DC voltage range)
D11	Rear right window up output	The ignition switch in the ACC or ON position  The window lifter switch in the UP position	Battery voltage

BCM pin	Function	Condition	Value (DC voltage range)
D12	Rear right window down output	The ignition switch in the ACC or ON position  The window lifter switch in the DOWN position	
B21	Rear right window down input	The ignition switch in the ACC or ON position	Battery voltage
B23	Rear right window up input	The ignition switch in the ACC or ON position	Battery voltage

#### Fault code definition and fault causes

	DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
			The ignition switch in		
			the ACC or ON		
		Low current in the	position		
	B1365	rear right window up output control circuit	The window lifter		<ul> <li>Failure of the wiring harnesses</li> </ul>
			switch in the UP	The rear right	or connector
			position	window output	<ul> <li>Failure of BCM</li> </ul>
			0 00	control circuit short	<ul> <li>Failure of the</li> </ul>
	n 1-8 -\	4 11 - 1 - 1 - 2 - 1	The ignition switch in	or open circuit detected by the body	window lifter switch
-43		خودرو سامانه	the ACC or ON	control module	Failure of the
		Low current in the	position	(BCM)	window lifter
n	B1367	rear right window		· O-	motor
Ц	باران خوتار و در	down output control	The window lifter	اولا	
		circuit	switch in the DOWN		
			position		
			<u>'</u>	AA/AA/AA/	igitalkhodri

## DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.

- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch, turn it on again after 3 to 5 seconds, and carry out the corresponding function test.
- Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.

If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)


#### Diagnosis procedures:

i Note


07

Please verify again if the DTC and its symptoms are present after fault is rectified.


- Check if the lines between the pins D11, D12 of the body control module connector C-502 and the pins 1, 2 of the rear right window lifter motor connector C-463 are normal.
  - If yes, go to step 2.
  - If not, go to step 3 and 4.
- 2. Measure the resistance value of the window lifter motor and carry out the power supply test (up and down operations have opposite electrodes) to check if the window lifter motor is normal.
  - If yes, go to step 3.
  - If not, replace the rear right window lifter motor.

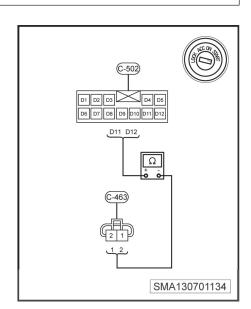

- Turn the rear right window lifter switch to the UP position and check if the voltage between the pin D12 of body control module connector C-502 and the ground is the battery voltage.
  - If yes, check if the line between the pin D12 of the body control module connector C-502 and the rear right window lifter motor connector C-463 has the following faults such as grounding, short circuit, open circuit, excessive resistance and virtual connection.
  - If not, go to step 5.
- 4. Turn the rear right window lifter switch to the DOWN position and check if the voltage between the pin D11 of body control module connector C-502 and the ground is the battery voltage.
  - If yes, check if the line between the pin D11 of the body control module connector C-502 and the rear right window lifter motor connector C-463 has the following faults such as grounding, short circuit, open circuit, excessive resistance and virtual connection.
  - If not, go to step 6.

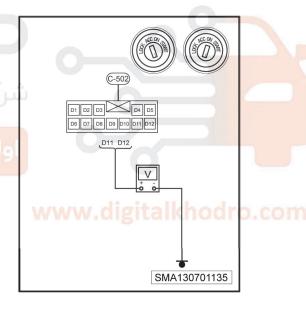

- 5. Check if the lines between the pin B23 of the body control module connector C-501 and the pin 16 of the front left window lifter switch assembly connector C-405 and the pin 7 of the rear right window lifter switch connector C-462 are normal.
  - If yes, go to step 7.
  - If not, repair the faulty line.

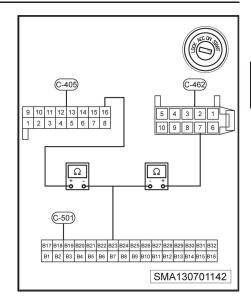


- 6. Check if the lines between the pin B21 of the body control module connector C-501 and the pin 3 of the front left window lifter switch assembly connector C-405 and the pin 6 of the rear right window lifter switch connector C-462 are normal.
  - If yes, go to step 7.
  - If not, repair the faulty line.


کت دیجیتال خودرو سامانه (مسئولیت محدود

ولین سامانه دیجیتال تعمیرکاران خودرو در ایران

# 021 62 99 92 92

- Check if the line between the pin 14 of the front left window lifter switch assembly connector C-405 and the pin 9 of the rear right window lifter switch assembly connector C-462 is normal.
  - If yes, go to step 8.
  - If not, repair the faulty line.

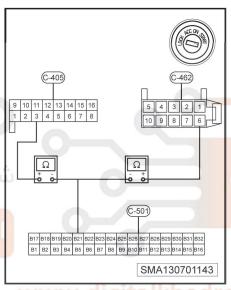

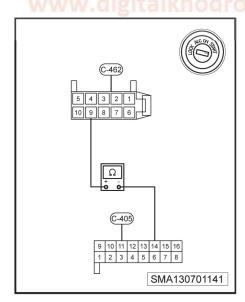

07


8. Check if the line between the pin 11 of the front left window lifter switch assembly connector C-405 and the ground is normal.

- If yes, go to step 9.
- If not, repair the faulty line.
- **9**. Check if the front left window lifter switch assembly is normal.
  - If yes, repair or replace the front left window lifter switch assembly.
  - If not, go to step 10.
- **10**. Check if the power supply line and the ground line of BCM are normal.
  - If yes, go to step 11.
  - If not, repair the faulty line.
- 11. Replace the body control module, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, find the fault cause from other symptoms.
  - If not, the fault has been rectified.

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران


021 62 99 92 92

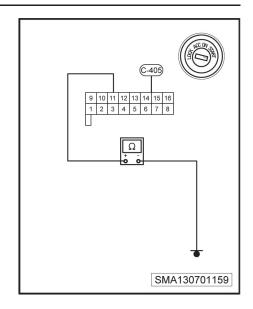



www.digitalkhodro.com

# 7.4.16 B1397 - Low voltage in the anti-theft horn output control circuit B1398 - High voltage in the anti-theft horn output control circuit

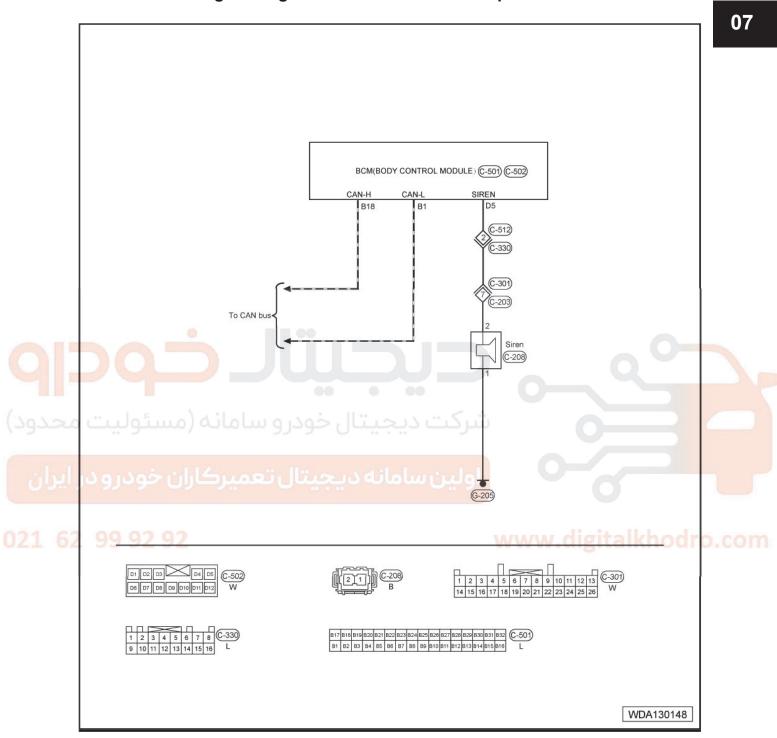

#### Checking the voltage between the body control module (BCM) and the grounding

BCM pin	Function	Condition	Value (DC voltage range)
D5	Anti-theft horn output	The ignition switch in the ACC or ON position	Battery voltage

Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
B1397	Low voltage in the anti-theft horn output control circuit	The ignition switch in the ACC or ON position	The anti-theft horn output control circuit short or open circuit	Failure of the wiring harnesses or connector
B1398	High voltage in the anti-theft horn output control circuit	The ignition switch in the ACC or ON position	detected by the body control module • Failur	<ul><li>Failure of BCM</li><li>Failure of the anti-theft horn</li></ul>

#### DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.


- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch, turn it on again after 3 to 5 seconds, and carry out the corresponding function test.
- Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.

If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)


#### Diagnosis procedures:

## i Note

- Please verify again if the DTC and its symptoms are present after fault is rectified.
- Check if the line between the pin D5 of the body control module connector C-502 and the pin 2 of the anti-theft horn connector C-208 is normal.
  - If yes, go to step 2.
  - If not, go to step 3.
- 2. Check if the line between the pin 1 of the anti-theft horn connector C-208 and the ground is normal.
  - If yes, go to step 3.
  - If not, repair the faulty line.
- Measure the resistance value of the anti-theft horn and carry out the power supply test to check if the anti-theft horn is normal.
  - If yes, go to step 4.
  - If not, replace the anti-theft horn.

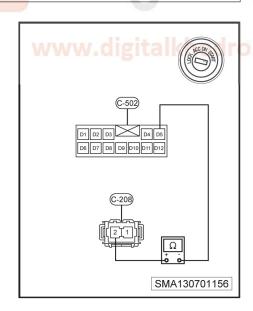

- Check if the voltage between the pin D5 of body control module connector C-502 and the ground is the battery voltage.
  - If yes, check if the line between the pin D5 of the body control module connector C-502 and the anti-theft horn has the following faults such as grounding, short circuit, open circuit, excessive resistance and virtual connection.
  - If not, go to step 5.
- **5**. Check if the power supply line and the ground line of BCM are normal.
  - If yes, go to step 6.
  - If not, repair the faulty line.
- **6**. Replace the body control module, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, find the fault cause from other symptoms.
  - If not, the fault has been rectified.

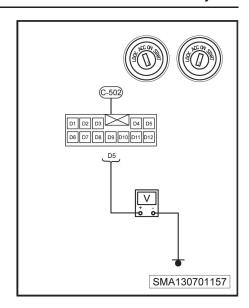



شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

021 62 99 92 92


www.digitalkhodro.com

07

# 7.4.17 B1400 Low battery voltage

# **B1401 High battery voltage**

07

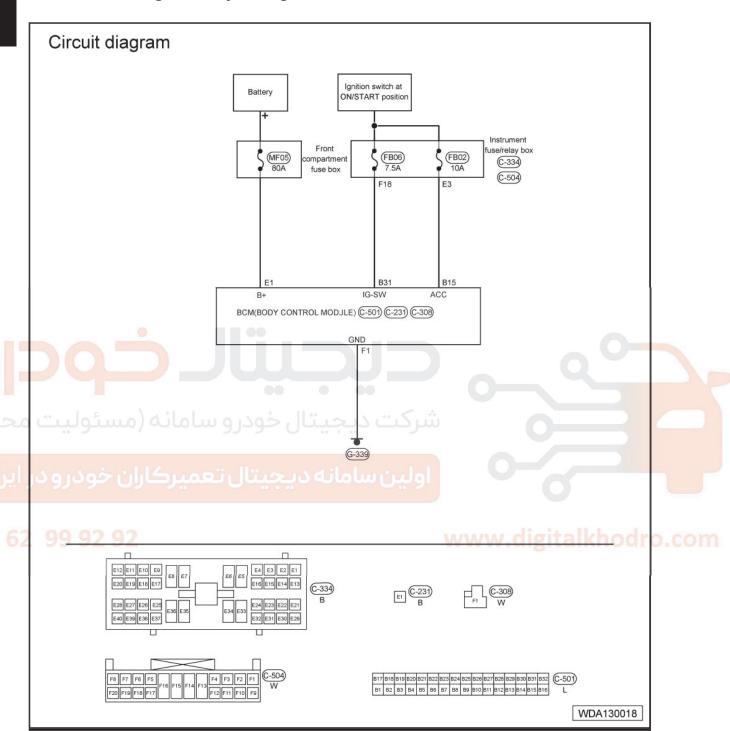

# Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
B1400	Low battery voltage		Low or high body	• Failure of the
B1401	High battery voltage	Power on	control module (BCM) output voltage detected	wiring harnesses or connector • Failure of BCM

#### DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.


- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch and turn it on again after 3 to 5 seconds.
- · Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.

If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)

#### Diagnosis procedures:

## i Note

- · Please verify again if the DTC and its symptoms are present after fault is rectified.
- 1. When the body control module has a fault, check if the battery voltage is excessive or not.
  - If yes, check if the fault is caused by the battery or the charging system.
  - If not, go to step 3.
- Check if the voltage between the pin E1 of body control module connector C-231 and the ground is the battery voltage.
  - If yes, go to step 3.
  - If not, check if the line between the pin E1 of the body control module connector C-231 and the battery power supply has the following faults such as grounding, short circuit, open circuit, excessive resistance and virtual connection.

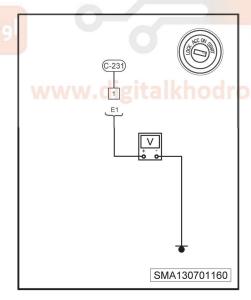

- 3. Check if the ground line of BCM is normal.
  - If yes, go to step 4.
  - If not, repair the faulty line.

07

07

- **4**. Replace the body control module, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, find the fault cause from other symptoms.
  - If not, the fault has been rectified.




021 62 99 92 92

www.digitalkhodro.com

7.4.18 B2311 - Trunk releasing output control circuit open circuit

B2313 - Low voltage in the trunk releasing output control circuit

B2312 - High voltage in the trunk releasing output control circuit

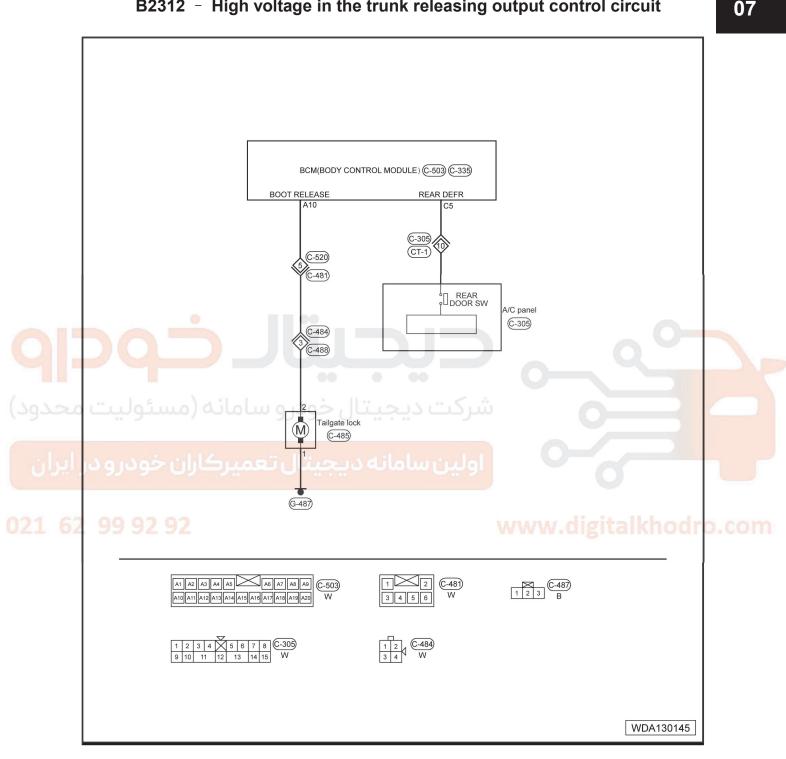

#### Checking the voltage between the body control module (BCM) and the grounding

BCM pin	Function	Condition	Value (DC voltage range)
A10	Body control module energized	Power on	Battery voltage

Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
B2311	Trunk releasing output control circuit open circuit	The ignition switch in	The trunk releasing	Failure of the wiring harnesses or connector
B2312	High voltage in the trunk releasing output control circuit	the ACC or ON position Trunk lid lock switch in the ON	output control circuit short or open circuit detected by the body control module	Failure of BCM
B2313	Low voltage in the trunk releasing output control circuit	position	(BCM)	compartment motor

#### DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.

- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch and turn it on again after 3 to 5 seconds.
- · Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.


If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)

# Diagnosis procedures:

## i Note


Please verify again if the DTC and its symptoms are present after fault is rectified.

- Check if the line between the pin A10 of the body control module connector C-503 and the pin 1 of the trunk lid lock motor connector C-485 is normal.
  - If yes, go to step 2.
  - If not, go to step 3.

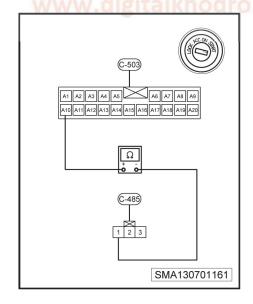

- 2. Check if the line between the trunk lid lock motor connector C-485 and the ground is normal.
  - If yes, go to step 3.

- If not, repair the faulty line.
- Measure the resistance value of the trunk lid lock motor and carry out the power supply test to check if the trunk lid lock motor is normal.
  - If yes, go to step 4.
  - If not, replace the trunk lid lock motor.
- 4. Turn on the trunk lid lock switch and check if the voltage between the pin A10 of body control module connector C-503 and the ground is the battery voltage.
  - If yes, check if the line between the pin A10 of the body control module connector C-503 and the trunk lid lock motor has the following faults such as grounding, short circuit, open circuit, excessive resistance and virtual connection.
  - If not, go to step 5.

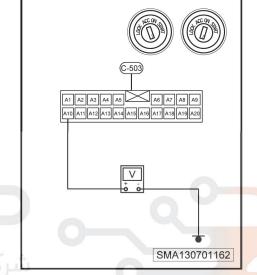



- **5**. Check if the ground line of BCM is normal.
  - If yes, go to step 6.
  - If not, repair the faulty line.

# 021 62 99 92 92

- Replace the body control module, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, find the fault cause from other symptoms.
  - If not, the fault has been rectified.

www.digitalkhodro.com

# 8 Alarm System

07

8.1 General information	1114
8.2 Circuit diagrams	1115

# 8.1 General information

# 8.1.1 Description

The alarm system warns the driver with flashing lights and audible alarms in case of any malfunction or problem occurring to the vehicle. It checks the vehicle conditions through sensors and switches and activates the indicators on the instrument cluster to flash and the buzzer to produce warning tones. The buzzer is integrated into the instrument cluster. The system will give the corresponding warnings under the following conditions:

- The turn signal turned on
- The hazard warning lamp switch pressed
- Unfastened seat belt
- Low fuel level
- Low oil pressure
- Low brake fluid level
- Unlocked door
- Failure of the charging system
- Failure of the engine
- Failure of the airbag system
- Low coolant level
- Failure of the anti-theft control module
- Engine overheating

021 62 99 92 92

www.digitalkhodro.con

# 8.2 Circuit diagrams


Alarm system (page 1)

**07** CHIME1 Ignition switch at Battery ON/START position Instrument use/relay box FB06 7.5A Front compartment MF05 (FB02) C-334 fuse box 10A C-504) F18 E3 IG-SW ACC BCM(BODY CONTROL MODULE) (C-335) (C-503) (C-501) (C-231) (C-308) HAZARD L TURN C-336 C-536 C-511) C-101) ►Backlight power Rear left signal Naming switch C-517 C-105 C-110 C-316 G-315) G-537) G-127) G-123 www.digitalkhodro.com П П E12 E11 E10 E9 E4 E3 E2 E1 E20 E19 E18 E17 2 4 6 8 10 C-110 C-334 1 3 5 7 9 E28 E27 E26 E25 E24 E23 E22 E21 E40 E39 E38 E37 E32 E31 E30 E29 B1 B2 B3 B4 B5 B6 B7 B8 B9 B10 B11 B12 B13 B14 B15 B16 E1 C-231) F8 F7 F6 F5 F4 F3 F2 F1 C-504) A1 A2 A3 A4 A5 A6 A7 A8 A9 C-503 (C-105) B 8 7 6 5 4 3 2 1 16 15 14 13 12 11 10 9 A10 A11 A12 A13 A14 A15 A16 A17 A18 A19 A20 WDA130065


Alarm system (page 2)

CHIME2 07 BCM(BODY CONTROL MODULE) (C-502) (C-503) R TURN SIREN D5 C-512 C-330 C-140 C-150 (C-511) (C-101) (C-301) (C-203) Right turn signal Front right Rear right turn signal turn signal Siren C-532 C-125 C-131) C-208 Suu (G-205) G-127) (G-127) alkhodro.com A1 A2 A3 A4 A5 A6 A7 A8 A9 C-503 W D1 D2 D3 D4 D5 C-502 W 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 8 7 6 5 4 3 2 1 16 15 14 13 12 11 10 9 W 2 1 5 4 B B B 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 L 2 4 6 8 10 C-125 (C-131) B 1 3 5 7 9 WDA130246


#### Alarm system (page 3)

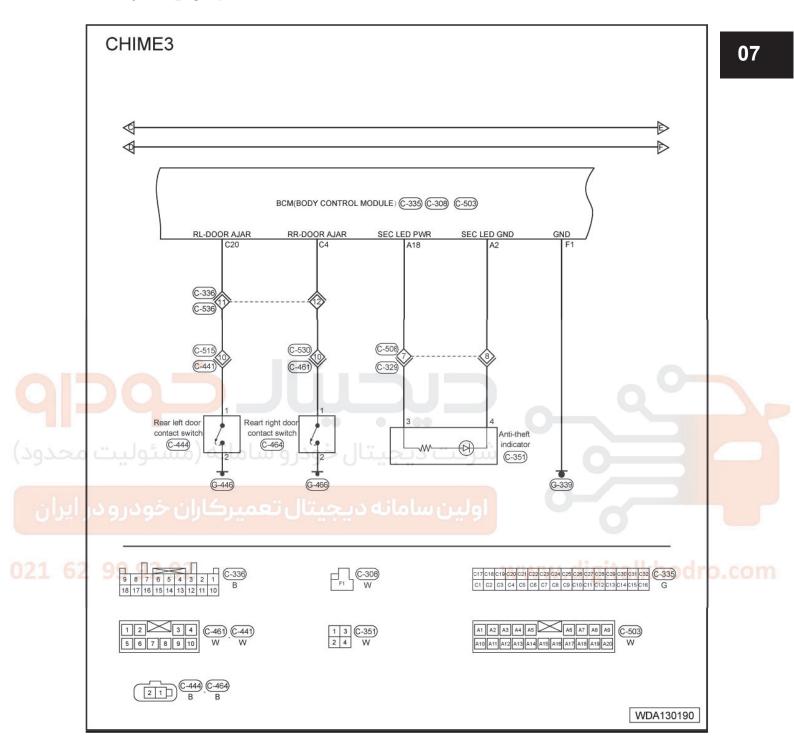

Alarm system (page 4)

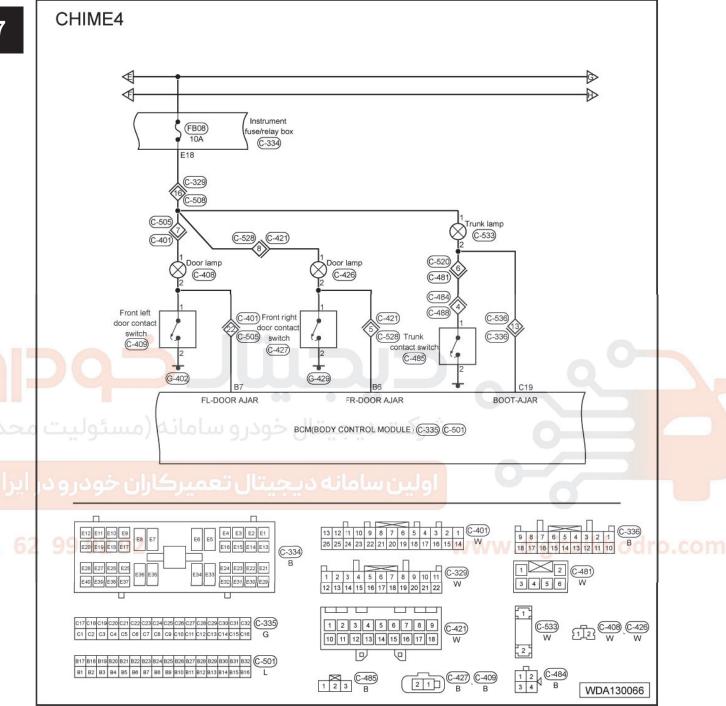

#### Alarm system (page 5)

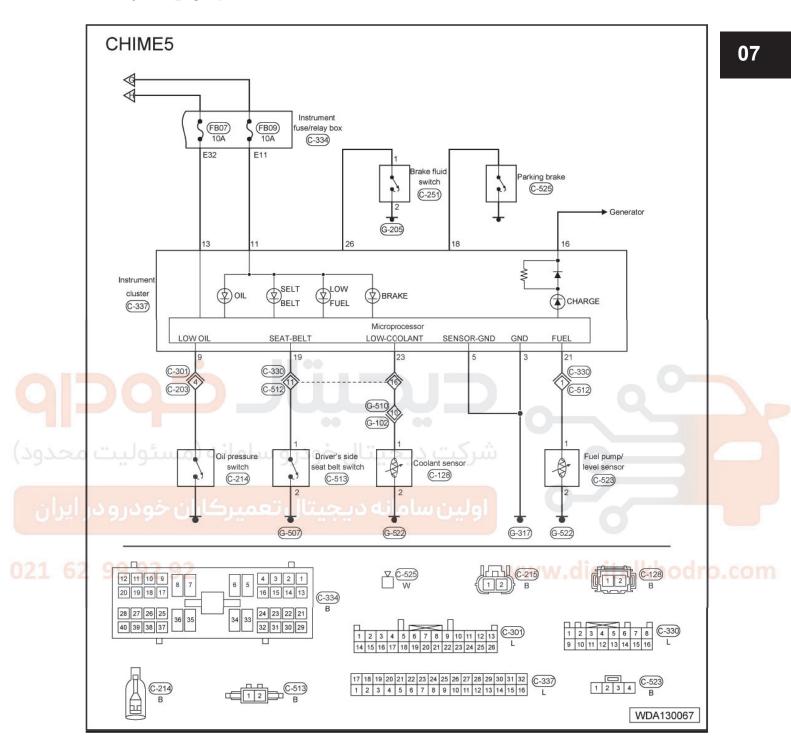

# 9 Interior Lights

07

9.1 General information	1120
9.2 Circuit diagrams	1121
9.3 Removing and installing the trunk lamp	
9.4 Removing and installing the courtesy light bulbs	
9.5 Removing and installing the front roof lamp	

# 9.1 General information

# 9.1.1 Description

Interior lights are controlled by the body control module (BCM) and consist of the following:

- Front roof lamp
- Backlight adjustment switch
- Instrument cluster
- Combination switch
- Hazard warning lamp switch lighting
- Cigarette lighter (lighting)
- Radio
- Door lock remote control switch lighting
- Power window main switch lighting
- Front power window switch lighting
- Rear power window switch lighting
- Trunk lamp

021 62 99 92 92


www.digitalkhodro.com

# 9.2 Circuit diagrams

Interior lights (page 1)

Interior lights 01 Ignition switch at Battery ON/START position Instrument use/relay box MF05 80A Front compartment FB06 7.5A FB02 10A C-334 fuse box C-504) F18 E3 B31 B15 IG-SW ACC BCM(BODY CONTROL MODULE) (C-501) (C-503) (C-335) (C-231) (C-308) DOME LAMP KEY LAMP BATT SAVE A19 (C-536) C-508) Ignition lock light (C-336) C-323 C-332 (C-631) Roof lamp (C-632) 630) www.digitalkhodro.com G-339 1 2 3 4 C-332 П П E12 E11 E10 E9 E8 E7 E4 E3 E2 E1 5 6 7 8 9 10 E16 E15 E14 E13 C-334) E24 E23 E22 E21 B17 B18 B19 B20 B21 B22 B23 B24 B25 B26 B27 B28 B29 B30 B31 B32 C-501
B1 B2 B3 B4 B5 B6 B7 B8 B9 B10 B11 B12 B13 B14 B15 B16
L E28 E27 E26 E25 E34 E33 E32 E31 E30 E29 9 8 7 6 5 4 3 2 1 18 17 16 15 14 13 12 11 10 E40 E39 E38 E37 A1 A2 A3 A4 A5 A8 A9 A10 A11 A12 A13 A14 A15 A16 A17 A18 A19 A20 C-503 5 6 C-632 1 2 3 4 W 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 W F1 (C-308) 1 2 C-323 W E1 C-231 WDA130088

Interior lights (page 2)

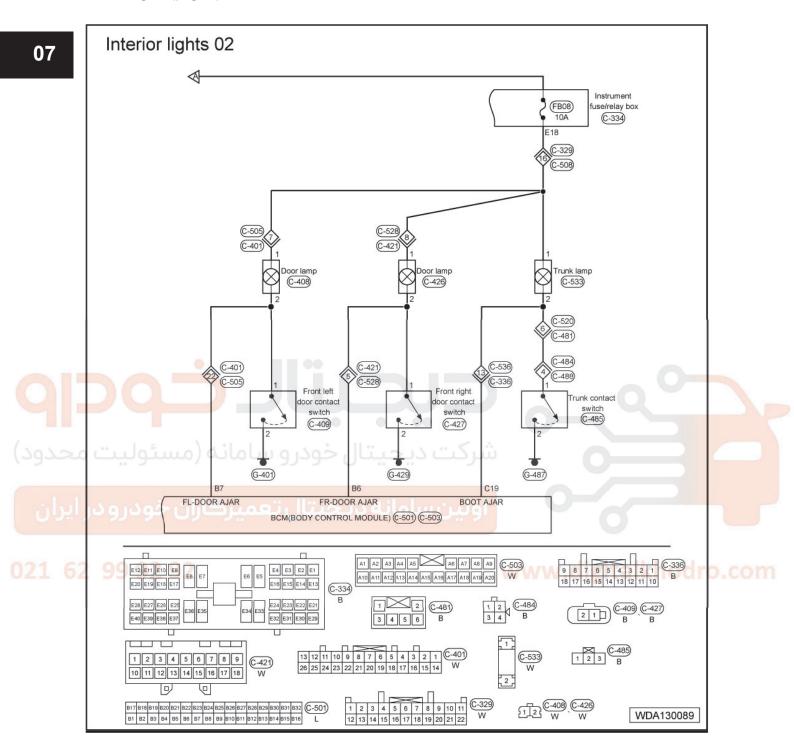


07

07 - Electrical System

# 9.3 Removing and installing the trunk lamp

#### Removal


- 1. Switch off all electrical equipment and the ignition switch, and disconnect the battery negative cable.
- Lever out the trunk lamp from the luggage compartment side trim (-arrow-) with the tools.
- **3.** Disconnect the trunk lamp connector (-1-) and replace the trunk lamp.

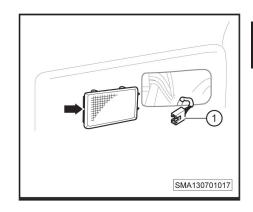

#### Installation

Installation shall follow the reverse sequence of the removal procedure.



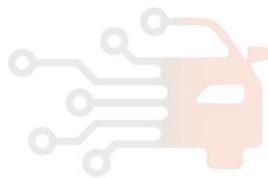

021 62 99 92 92


www.digitalkhodro.com

# 9.4 Removing and installing the courtesy light bulbs

07

#### Removal

- 1. Switch off all electrical equipment and the ignition switch, and disconnect the battery negative cable.
- Lever out the courtesy light cover (-3-) from the door trim (-1-).
- **3.** Pull out the courtesy light bulbs (-2-) from the light holder and replace them.

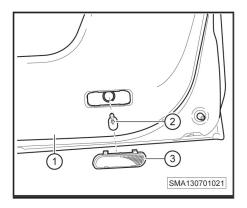

#### Installation

Installation shall follow the reverse sequence of the removal procedure.





021 62 99 92 92

www.digitalkhodro.com


07

07 - Electrical System

# 9.5 Removing and installing the front roof lamp

#### Removal

- 1. Switch off all electrical equipment and the ignition switch, and disconnect the battery negative cable.
- 2. Lever out the front roof lamp cover (-1-) carefully and remove the 4 bulbs.
- 3. Unscrew the 3 fixing screws (-2-) inside the front roof lamp, lever out the front roof lamp assembly (-3-) from the roof, and disconnect the front roof lamp connector.

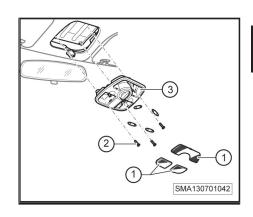

#### Installation

Installation shall follow the reverse sequence of the removal procedure.



021 62 99 92 92

www.digitalkhodro.com

WWW.DIGITALKHODRO.COM

021 62 99 92 92

# 10 Exterior Lights

07

10.1 General information	1126
10.2 Circuit diagrams	
10.3 Headlamp	
10.4 Tail lights	
10.5 Front fog lamp	
10.6 Removing and installing the high-level brake lamp	
10.7 Turn signal and hazard warning lamp	
10.8 Removing and installing the number plate lamp	
10.9 Removing and installing the reversing light bulbs	

# 10.1 General information

# 10.1.1 Description

Exterior lights consist of the following:

- Headlamp
- Turn signal
- Fog lamp
- Brake lamp
- Reversing light
- Number plate lamp

The power is supplied as follows:

- Headlamp: When the headlamp switch is turned on and the high beam or low beam relay works, the power supply is supplied to the fuse beneath the dashboard via the relay before supplying the headlamp through the fuse.
- Turn signal switch: When the ignition switch is in the ON position and the turn signal switch is pulled up or down, the power supply transmits power to the left or right turn signal.
- Hazard warning lamp switch: When the switch is in the ON position, the power supply transmits power to all turn signals.
- Fog lamp: When the front/rear fog lamp switch is in the ON position, the power supply transmits power to the fog lamps.
- Brake lamp: When the brake pedal is depressed, the power supply transmits power to the brake lamp through the brake switch.
- Reversing light: When the shift lever is in the R position and the reversing switch is turned on, the power supply transmits power to the reversing light.

# 10.2 Circuit diagrams

Headlamp (page 1)

Headlamp Ignition switch at Battery ON/START position Instrument fuse/relay box Front compartmen MF05 80A FB06 7.5A (FB02) C-334) fuse 10A (C-504) F18 E3 B15 IG-SW B+ ACC BCM(BODY CONTROL MODULE) C-501) C-231) C-308) **TURNS** HIGH BEAM GND B12 B13 Backlight power C-512 (C-330 Headlamp adjustment switch ≱ C-326 C-329 (C-327) RH HI C-508 LOW C-510 C-102 G-317 G-339 (G-317) www.digitalkhodro.com П П E12 E11 E10 E9 E8 E7 E4 E3 E2 E1 E16 E15 E14 E13 F8 F7 F6 F5 F16 F15 F14 F13 F2 F1 F10 F9 C-334) C-329 E1 (C-231) E40 E39 E38 E37 E36 E35 E32 E31 E30 E29 F1 (C-308) 5 6 C-326 1 2 3 4 W 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 9 8 7 6 5 4 3 2 1 18 17 16 15 14 13 12 11 10 B17 B18 B19 B20 B21 B22 B23 B24 B25 B26 B27 B28 B29 B30 B31 B32 C-501
B1 B2 B3 B4 B5 B6 B7 B6 B9 B10 B11 B12 B13 B14 B15 B16
L C-102 WDA130076

#### Headlamp (page 2)

Headlamp 07 4 High beam relay Low beam relay Instrument (RLY3) (RLY10) use/relay box C-334) C-103 F21 5 F23 10A 10A F20 5 F22 10A D4 D3 D2 E9 M Right M eadlam C-110 C-125 G-123 C28 C24 HI-BEAM LOW-BEAM BCM(BODY CONTROL MODULE) (C-335) 24 6 8 10 1 3 5 7 9 B B Www.digitalkhodro.com 1 3 5 7 9 E12 E11 E10 E9 E8 E7 E4 E3 E2 E1 E16 E15 E14 E13

C-334)

E24 E23 E22 E21

E32 E31 E30 E29

D6 D5 D4 D13 D12 D11 D10 D3 D2 D1

D16 D15 D14 D13 D12 D11 D10 D9 D8 D7


C-103)

WWW.DIGITALKHODRO.COM

E40 E39 E38 E37 E36 E35

WDA130077


Position lamp and number plate lamp (page 1)

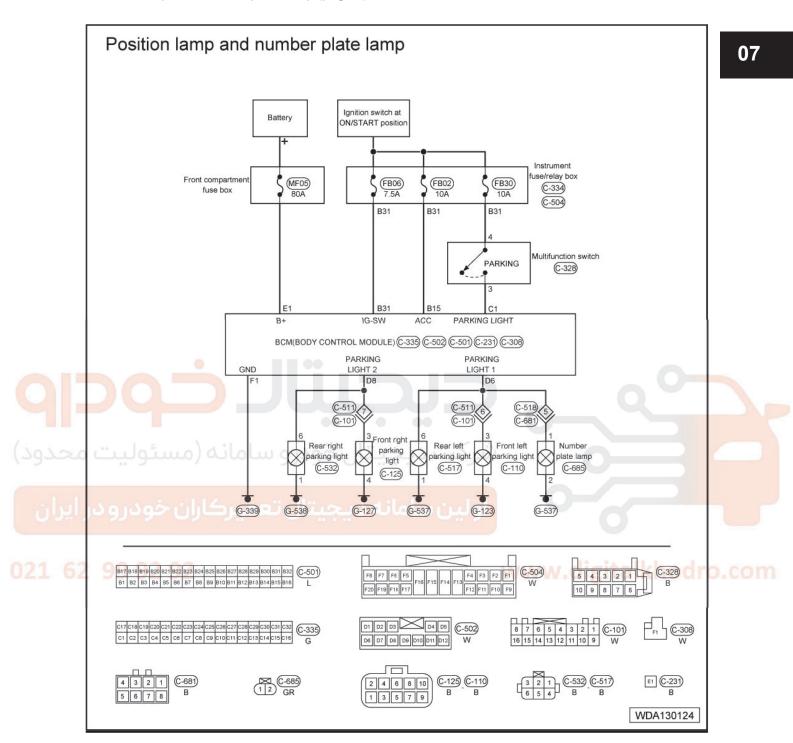


Reversing light (page 1)

Reversing light 07 Ignition switch at ON/START position Instrument (FB30) use/relay box 10A C-504 C-512 (C-330) C-301 C-203 Reversing switch C-224) C-203 (C-301) (C-329) C-508 Reversing Reversing REVERSE light light C-517) C-532 BCM(BODY CONTROL MODULE) C-335 G-538 G-537 khodro.com 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 3 2 1 6 5 4 B B C-504) F16 F15 F14 F13 F4 F3 F2 F1 F12 F11 F10 F9 F8 F7 F6 F5 C17 C18 C19 C20 C21 C22 C23 C24 C25 C28 C27 C28 C29 C30 C31 C32 C1 C2 C3 C4 C5 C6 C7 C8 C9 C10 C11 C12 C13 C14 C15 C16 G WDA130125


Fog lamp (page 1)

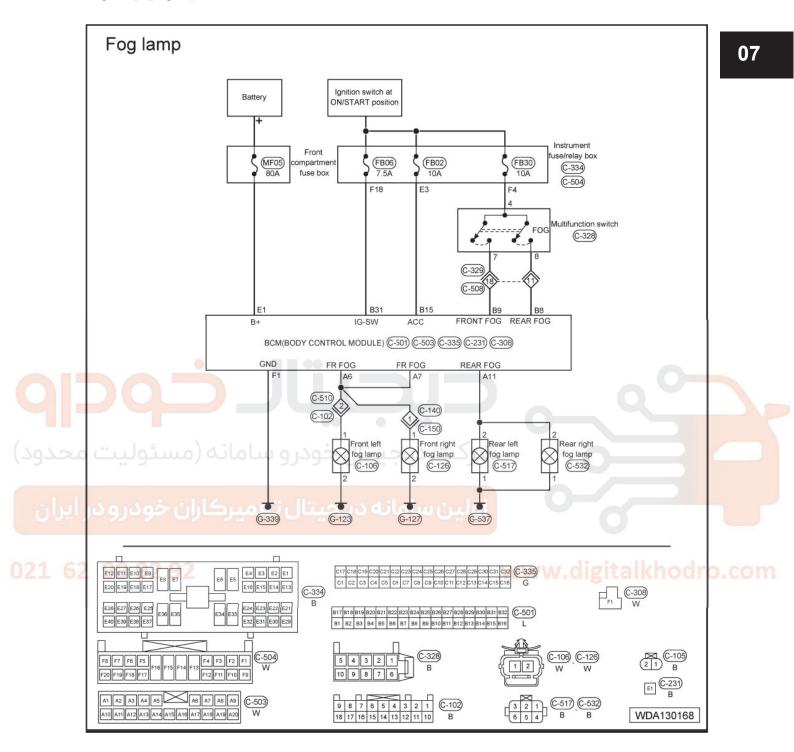

Turn signal and hazard warning lamp (page 1)

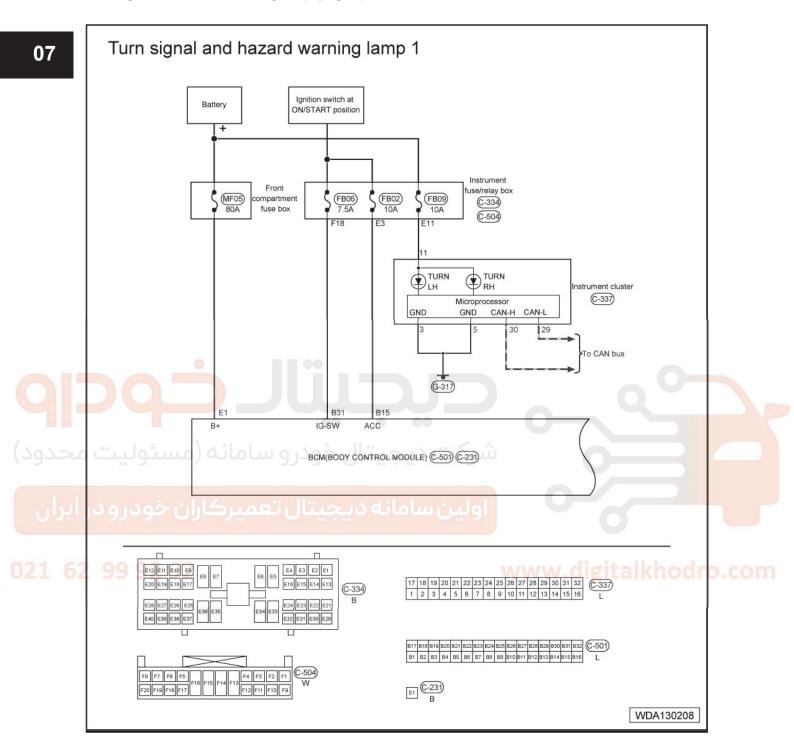

Turn signal and hazard warning lamp (page 2)

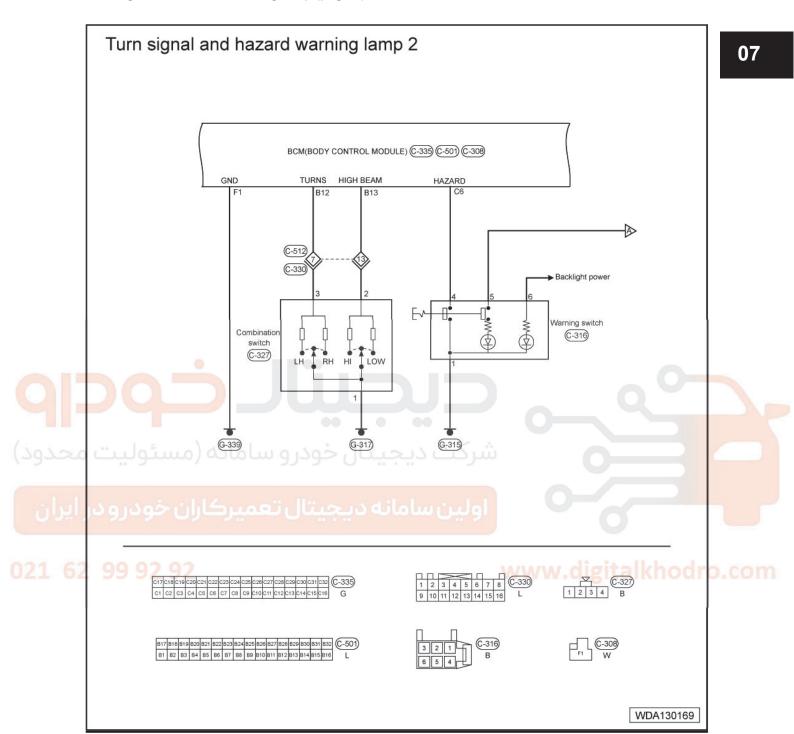

Turn signal and hazard warning lamp (page 3)


Turn signal and hazard warning lamp 3 07 BCM(BODY CONTROL MODULE) C-503 L TURN R TURN C-511) (C-101) (C-511) (C-101) C-140 Front right turn signal Rear right turn signal (C-532) Right turn signal C-105 turn signa turn signal signal (C-131) C-517 G-537) G-127) G-123 G-127) G-127) G-538 2 4 6 8 10 C-125 C-110 (NOC 1) COM A1 A2 A3 A4 A5 A6 A7 A8 A9 C-503 A10 A11 A12 A13 A14 A15 A16 A17 A18 A19 A20 1 3 5 7 9 3 2 1 6 5 4 B B B B C-131 C-105 B B WDA130131

# 10.3 Headlamp

# 10.3.1 Removing and installing the headlamp

The right figure shows the lamps at the rear of the headlamp:

- 1. High beam headlamp/parking light/position lamp
- 2. Low beam headlamp
- 3. Turn signal

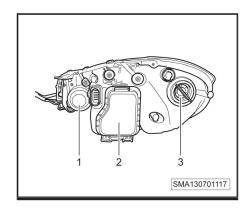


#### 1 Note

• The removal and installation procedures of the left headlamp are the same as that of the right one. The method of removing and installing the right headlamp is taken as an example here.

#### Two-box model


#### Removal

- Switch off all electrical equipment and the ignition switch, and disconnect the battery negative cable.
  - 2. Remove the front bumper .=> refer to page 838
  - 3. Unscrew the headlamp assembly fixing bolt (-arrow-).

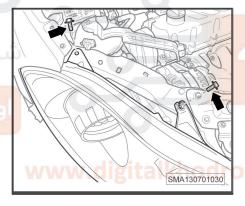

# 021 62 99 92 92

- 4. Unscrew the headlamp lower fixing bolts.
- **5**. Remove the headlamp assembly and disconnect the headlamp connector.

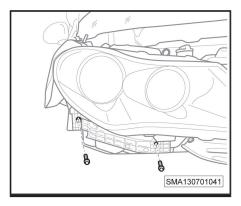

#### Installation


Installation shall follow the reverse sequence of the removal procedure.

#### Three-box model


#### Removal

1. Switch off all electrical equipment and the ignition switch, and disconnect the battery negative cable.

- 2. Remove the front bumper .=> refer to page 838
- 3. Unscrew the headlamp fixing bolts (-arrow-).

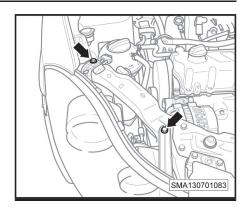

- **4**. Unscrew the headlamp lower fixing bolts (-arrow-).
- **5**. Remove the headlamp assembly and disconnect the headlamp connector.

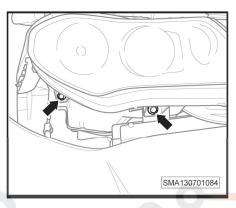


### Installation

Installation shall follow the reverse sequence of the removal procedure.

# 10.3.2 Removing and installing the turn signal bulbs

#### Removal

- 1. Remove the headlamp.
- 2. Unscrew the holder of turn signal ( 1 ) in the (-arrow-) direction.
- 3. Unscrew the bulb anticlockwise and replace it.

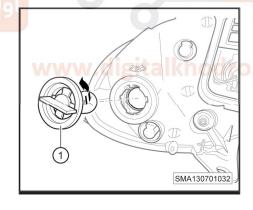

#### Installation

Installation shall follow the reverse sequence of the removal procedure.

Turn signal bulb specification: 21 W

# 10.3.3 Removing and installing the low beam bulbs


#### **Note**

• The removal and installation procedures of the low beam bulbs are the same as that of the high beam ones. The method of removing the low beam bulbs is taken as an example here.


#### Two-box model

#### Removal

1. Press the fixing clip of the low beam waterproof cover (-arrow-) at the rear of the headlamp and remove the waterproof cover (-1-).

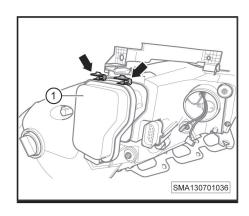

- 2. Loosen the fixing clamp spring (-1-) at the rear of the headlamp in the (-arrow-) direction and remove the lamp holder.
- 3. Disconnect the bulb connector (-3-) and replace the low beam bulb (-2-).

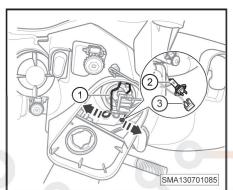

# حودرو

# شرکت دیدیتال خودر و سامانه (میس Installation


Installation shall follow the reverse sequence of the removal procedure.

High beam/low beam bulb specification: 55 W

#### Three-box model


#### Removal

 Loosen the fixing clamp spring (-1-) of the low beam waterproof cover at the rear of the headlamp in the (-arrow-) direction and remove the waterproof cover (-2-).

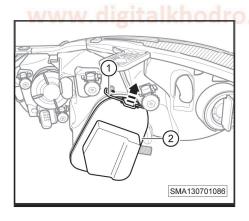

2. Loosen the fixing clamp spring (-1-) in the (-arrow-) direction and remove the lamp holder.

3. Disconnect the bulb connector (-3-) and replace the bulb (-2-).

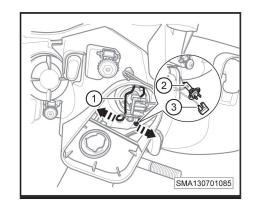

#### Installation


Installation shall follow the reverse sequence of the removal procedure.

High beam/low beam bulb specification: 55 W

# 10.3.4 Removing and installing the parking light/position lamp bulbs


#### Removal

 Remove the high beam waterproof cover (-1-) at the rear of the headlamp.

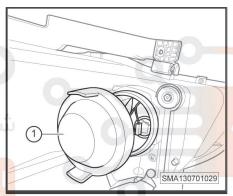

ولین سامانه دیجیتال تعمیرکاران خودرو در ایران

- Unscrew the parking light/position lamp holder from the headlamp anticlockwise and take it out.
- 3. Pull out the bulb (-1-) from the lamp holder and replace it.

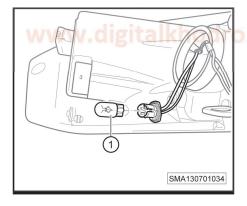

#### Installation

Installation shall follow the reverse sequence of the removal procedure.

Parking light/position lamp bulb specification: 5 W


10.3.5 Removing and installing the low beam electric adjustment motor

Two-box model


07

#### Removal

- Remove the headlamp assembly .=> refer to page 1135
- Loosen the fixing clip of the low beam waterproof cover (-arrow-) and remove the waterproof cover (-1-).

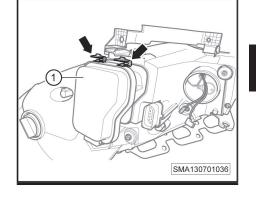

- 3. Unscrew the fixing screws of the low beam electric adjustment motor (-arrow-) and remove the adjustment motor (-1-).
- 4. Disconnect the adjustment motor connector.

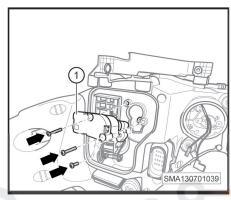

# Installation


Installation shall follow the reverse sequence of the removal procedure.

Low beam electric adjustment motor specification: 5 W


# لین سامانه دیجیتال تعمیر کار Three-box model

#### Removal

- 1. Remove the headlamp assembly.=> refer to page
  - 2. Loosen the fixing clamp spring of the low beam waterproof cover (-1-) in the (-arrow-) direction and remove the waterproof cover (-2-).

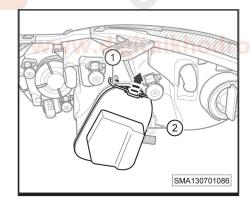

- 3. Disconnect the wiring harness connector of the low beam electric adjustment motor (-1-).
- **4**. Unscrew and pull out the adjustment motor (-2-) in the (-arrow-) direction.

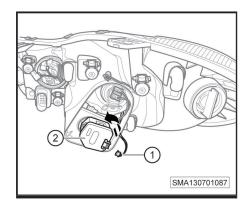

#### Installation

Installation shall follow the reverse sequence of the removal procedure.


07

Low beam electric adjustment motor specification: 5 W

# 10.3.6 Removing and installing the combination switch

#### Removal

- Lever out the combination switch base (-1-) from the dashboard carefully with the tools and disconnect the switch wiring harness connector.
- **2.** Press the fixing clip of the combination switch and push out the combination switch (-2-).

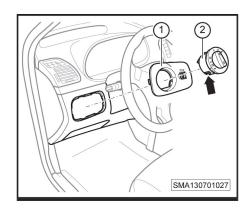


#### Installation

Installation shall follow the reverse sequence of the removal procedure.

# 10.3.7 Removing and installing the low beam height adjustment switch

# Removal ( ) a lolu o pos

- 1. Switch off all electrical equipment and the ignition switch, and disconnect the battery negative cable.
- 2. Lever out the combination switch panel assembly from the dashboard with tools.
- Disconnect the low beam height adjustment switch connector.
- Remove the adjustment switch (-1-) from the combination switch panel assembly.

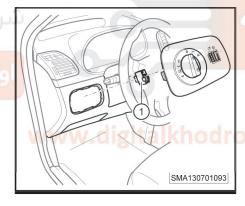

#### Installation

Installation shall follow the reverse sequence of the removal procedure.

# 10.4 Tail lights

# 10.4.1 Removing and installing the tail lights


#### 1 Note

• The lamps of the left tail light are in the same position as that of the right one. The left tail light is taken as an example here.

#### Two-box model

The right figure shows the lamps at the rear of the tail light:


- 1. Position lamp
  - Bulb specification: 5 W
- 2. Turn signal
  - Bulb specification: 21 W
- 3. Brake lamp
  - Bulb specification: 21 W

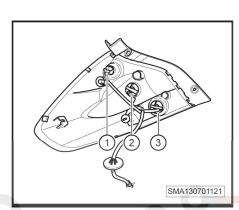

#### Three-box model شرکت دیجیتال خودر و سامانه (مستولیت

The right figure shows the lamps at the rear of the tail light:

- 1. Rear fog lamp
  - Bulb specification: 21 W
- 2. Turn signal
  - Bulb specification: 21 W
- 3. Brake/position lamp
  - Bulb specification: 5 W
- 4. Reversing light
  - Bulb specification: 21 W

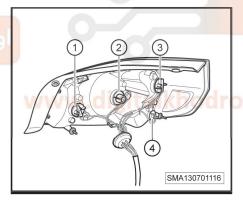

#### i Note

• The removal procedures of the left tail light are the same as that of the right one. The method of removing the left tail light is taken as an example here.

#### Two-box model

Removal

1. Remove the luggage compartment side trim and disconnect the tail light connector.

- Unscrew the fixing screws of the tail light assembly (-arrow-) and the fixing nuts.
- **3.** Remove the tail light assembly. Pay attention to the fixing clip of the tail light assembly and the body (-1-).




Installation shall follow the reverse sequence of the removal procedure.

# SMA130701023

#### Three-box model

#### Removal

- 1. Remove the luggage compartment side trim and disconnect the tail light connector.
- 2. Unscrew the fixing screws of the tail light assembly (-arrow-) and the fixing nuts.
- 3. Remove the tail light assembly.

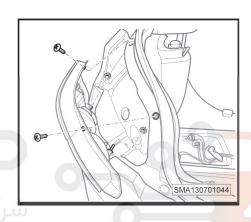

#### Installation

Installation shall follow the reverse sequence of the removal procedure.

10.4.2 Removing and installing the reversing light, rear fog lamp, brake lamp and turn signal www.digitalkhodr


#### Three-box model

#### i Note

• The removal procedures of the brake lamp, turn signal, rear fog lamp and reversing light of the three-box model are the same. The method of removing the reversing light is taken as an example here.

#### Removal

- 1. Remove the tail light assembly .
- Unscrew the reversing light holder (-1-) in the (-arrow-) direction.
- 3. Remove the bulb (-2-) from the lamp holder (-1-).

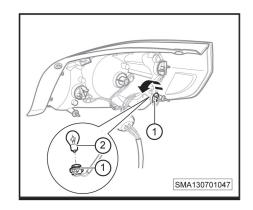

#### Installation

Installation shall follow the reverse sequence of the removal procedure.

07



021 62 99 92 92

www.digitalkhodro.con


# 10.5 Front fog lamp

# 10.5.1 Removing and installing the front fog lamp

# **07**

#### Removal

- 1. Switch off all electrical equipment and the ignition switch, and disconnect the battery negative cable.
- 2. Remove the front wheel trim .
- **3.** Disconnect the front fog lamp wiring harness connector.
- Unscrew the fixing screws of the front fog lamp assembly (-arrow-) and remove the front fog lamp.

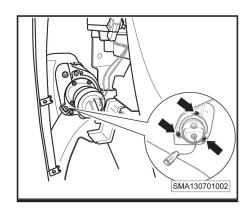

#### Installation


Installation shall follow the reverse sequence of the removal procedure.

# 10.5.2 Removing and installing the front fog lamp bulbs

#### Two-box model

#### Removal


- Remove the front fog lamp assembly .=> refer to page 998
  - Loosen the clip of the fog lamp waterproof cover (-arrow-) and remove the waterproof cover.
  - Loosen the fixing clamp spring of the front fog lamp holder (-1-).
  - 4. Take the fog lamp out of the front fog lamp assembly.
  - **5.** Disconnect the fog lamp connector (-3-) and replace the fog lamp (-2-).

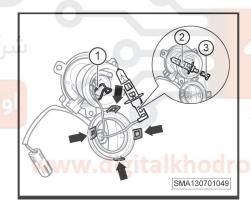

#### Three-box model

#### Removal

- 1. Remove the front wheel trim.
- **2.** Remove the waterproof cover of the fog lamp (-4-).
- Loosen the fixing clamp spring of the front fog lamp holder (-1-).
- 4. Take the fog lamp out of the front fog lamp assembly.
- **5.** Disconnect the fog lamp connector (-3-) and replace the fog lamp (-2-).

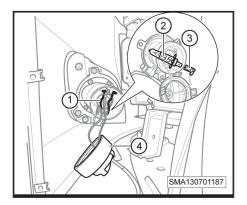

#### Installation


Installation shall follow the reverse sequence of the removal procedure.

# 10.6 Removing and installing the high-level brake lamp

#### Two-box model

#### Removal

- Remove the rear fender assembly (-1-).=> refer to page 857
- 2. Unscrew the fixing screws of the high-level brake lamp and remove the high-level brake lamp assembly (-2-) from the rear fender assembly.

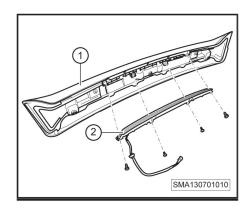


#### Installation

Installation shall follow the reverse sequence of the removal procedure.

#### Three-box model

#### Removal

- Press the fixing clip (-arrow A-), and remove the high-level brake lamp (-2-) from the brake lamp cover (-3-).
- 2. Disconnect the high-level brake lamp connector (-1-).
  - 3. Press the fixing clip of the lamp cover (-arrow C-) and remove the cover (-3-) from the rear windshield in the (-arrow B-) direction.

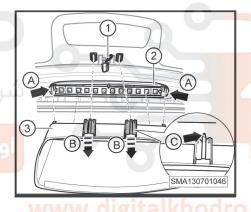

# 021 62 99 92 92

#### Installation

Installation shall follow the reverse sequence of the removal procedure.


# 10.7 Turn signal and hazard warning lamp

# 10.7.1 Removing and installing the side turn signal

**07** 

#### Removal

- **1.** Switch off all electrical equipment and the ignition switch, and disconnect the battery negative cable.
- 2. Lever out the side turn signal (-arrow) from the fender with the tools.
- **3.** Disconnect the side turn signal connector (-1-) and remove the side turn signal.

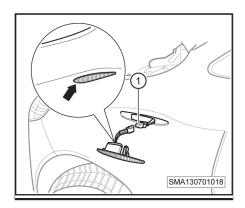


#### Installation

Installation shall follow the reverse sequence of the removal procedure.

# 10.7.2 Removing and installing the turn signal switch

#### Removai

- Remove the steering column upper and lower covers
- 2. Disconnect the turn signal switch connector.
- Press the fixing clip of the turn signal switch (-arrow-) and remove the switch from the steering column.

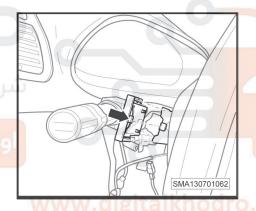

021 62 99 92 92


#### Installation

Installation shall follow the reverse sequence of the removal procedure.

# 10.7.3 Removing and installing the hazard warning lamp switch

#### Removal

- Lever out the hazard warning lamp switch (-arrow-) from the A/C control panel with tools.
- 2. Disconnect the hazard warning lamp switch connector.

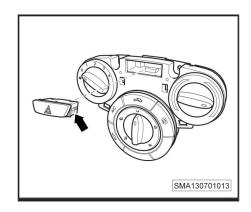

Installation

Installation shall follow the reverse sequence of the removal procedure.

07





JZ1 6Z 99 9Z 9Z


www.digitalkhodro.com

# 10.8 Removing and installing the number plate lamp

07

#### Removal

- 1. Press the fixing clip of the number plate lamp (-arrow-) with the tools and lever out the number plate lamp assembly (-1-).
- 2. Unscrew the lamp holder (-2-) from the number plate lamp assembly.
- 3. Pull out the bulb (-3-) and replace it.

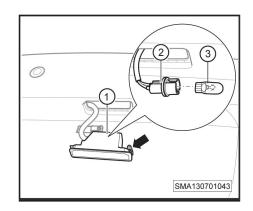

#### Installation

Installation shall follow the reverse sequence of the removal procedure.



021 62 99 92 92

www.digitalkhodro.con

# 10.9 Removing and installing the reversing light bulbs


#### i Note

• The reversing lights of the two-box model are located at the right side of the rear bumper and the rear fog lamps are located at the left side of the rear bumper.

**07** 

#### Removal

- 1. Remove the rear right wheel trim.
- **2.** Unscrew the reversing light holder (-2-) from the reversing light assembly anticlockwise.
- 3. Unscrew the bulb (-1-) from the lamp holder (-2-).

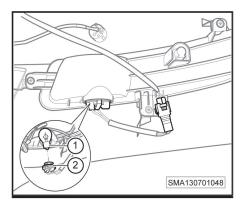

#### Installation

Installation shall follow the reverse sequence of the removal procedure.

شرکت دیجیتال خودرو سامانه (مسئولیت محدود

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

021 62 99 92 92

www.digitalkhodro.con

# 11 Power Windows

07

11.1	General information	1150
	Circuit diagrams	
11.3	Removing and installing the power window main switch	1154
11.4	Power window lifter motor	1155

## 11.1 General information

# 11.1.1 Description

- Window lifter switch controls the current flow of the window lifter motor via the BCM so as to control the up
  or down movement of the power window.
- Each door has a window lifter switch. The driver's side door can be used to control the up or down movement and the lock of all power windows (when the power window safety switch on the driver's side door is pressed, all other doors' window lifter switches will be disabled).
- The window lifter motor is a permanent-magnet motor, which can modify the rotation direction of motor by changing the current direction.



021 62 99 92 92

www.digitalkhodro.com

# 11.2 Circuit diagrams

Power windows (page 1)


Power window Ignition switch at Battery ON/START position fuse/relay box Front compartm FB06 7.5A (MF05) (FB02) C-334) fuse 10A C-504) F18 ЕЗ B31 B15 IG-SW B+ ACC BCM(BODY CONTROL MODULE) (C-501) (C-502) (C-231) (C-308) RR RR WIN DWN WIN UP FL WIN UP FL WIN DWN FR WIN UP FR WIN DWN RL WIN DWN RL WIN UP GND D1 D3 D10 C-401) C-421 C-441) C-461 C-505 C-528 C-515 C-530 Front left Front right Rear left Rear right G-339 window window window window -(M)--(M)-(M) lifter motor lifter motor lifter motor lifter motor C-406 C-424) C-443 C-463 khodrp.com E12 E11 E10 E9 E8 E7 D1 D2 D3 D4 D5 C-502 E4 E3 E2 E1 E20 E19 E18 E17 E16 E15 E14 E13 1 2 3 4 5 6 7 8 9 (C-421) D6 D7 D8 D9 D10 D11 D12 C-334) 10 11 12 13 14 15 16 17 18 E34 E33 E22 E21 E32 E31 E30 E29 E28 E27 E26 E25 E36 E40 E39 E38 E37 回 回 П П F1 (C-308) W C-504) E1 (C-231) F8 F7 F6 F5 F4 F3 F2 F1 F20 F19 F18 F17 1 2 3 4 C-441 C-461 C-424) C-406 C-443 C-463 B B B 5 6 7 8 9 10 W WDA130105

Power windows (page 2)

Power window 07 BCM(BODY CONTROL MODULE) (C-501) FR FR WIN UP WIN DWN RR RR WIN UP WIN DWN RL RL WIN UP WIN DWN FL FL WIN UP WIN DWN B28 B26 B27 B25 B23 B21 B24 **₽** Þ (C-505) → Backlight power C-401 Front left window lifter switch UP UP DOWN UP DOWN DOWN DOWN UP UNLOCK LOCK assembly Front Rear Front left Rear left right right right C-405 window window window switch talkhodro.com 9 10 11 12 13 14 15 16 1 2 3 4 5 6 7 8 ER B11 B16 B19 B20 B21 B22 B23 B24 B25 B26 B27 B26 B29 B30 B31 B32 C-501 B1 B2 B3 B4 B5 B6 B7 B8 B9 B10 B11 B12 B13 B14 B15 B16 13 12 11 10 9 8 7 6 5 4 3 2 1 1 C-401 W

WDA130106

Power windows (page 3)

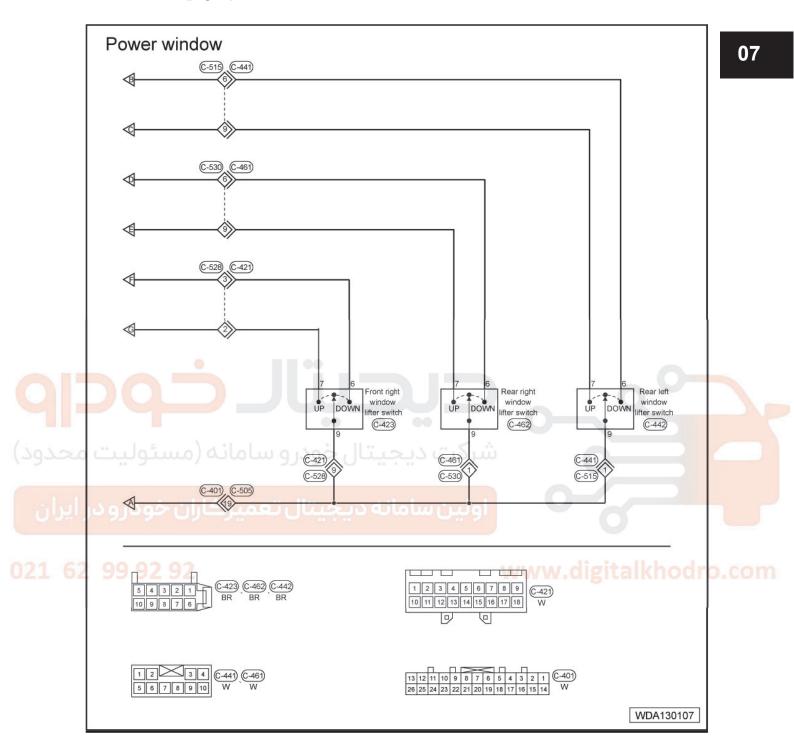


## 11.3 Removing and installing the power window main switch


#### Removal

07

- Lever out the decorative cover for the main switch screws carefully and unscrew the fixing screws of the main switch (-1-).
- 2. Lever out the main switch assembly (-arrow-) from the door trim with the tool.

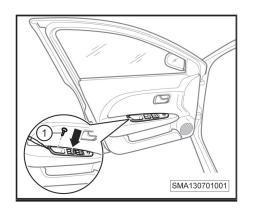

- 3. Disconnect the main switch connector (-arrow-).
- 4. Remove the main switch assembly (-1-).

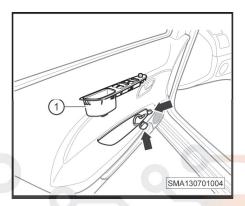


# :پجيتال خودرو

- **5**. Unscrew the fixing screws of the main switch button (-1-).
- 6. Remove the main switch button.



021 62 99 92 92

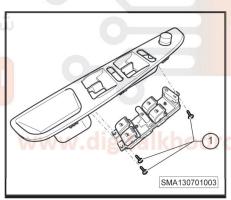

#### Installation


## 07


## 11.4 Power window lifter motor

## 11.4.1 Removing and installing the front power window lifter motor

#### Removal

- 1. Turn off the ignition switch.
- 2. Remove the door interior trim .=> refer to page 764
- 3. Remove the front door triangular interior trim.
- **4**. Unscrew the screws (-1-) and remove the main switch fixing parts.
- **5**. Lever out the mounting tab for the inner pull handle fixing screws (-2-).
- 6. Disconnect the exterior mirror connector (-3-).
- 7. Remove the door dust cover.
- 8. Lower the window lifter.
- 9. Unscrew the fixing bolts of the windshield (-arrow-).
- 10. Remove the windshield.

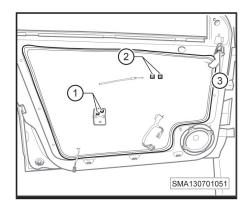

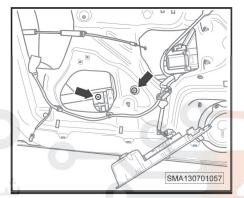






**12.** Unscrew the fixing nuts of the window lifter rail (-1-).

- 13. Unscrew the fixing nuts of the window lifter motor
- **14**. Take out the window lifter rail along with the motor.



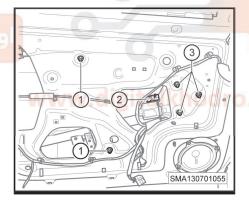


#### Installation

## 11.4.2 Removing and installing the rear power window lifter motor


#### Removal

07

- 1. Turn off the ignition switch.
- 2. Remove the door interior trim .=> refer to page 768
- 3. Unscrew the screws (-1-) and remove the fixing parts.
- **4**. Lever out the mounting tab for the inner pull handle fixing screws (-2-).
- 5. Remove the door dust cover.

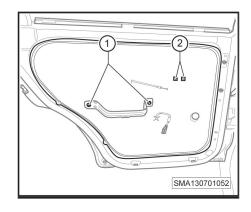


- 6. Lower the window lifter.
- 7. Unscrew the fixing bolts of the windshield (-arrow-).
- 8. Remove the windshield.

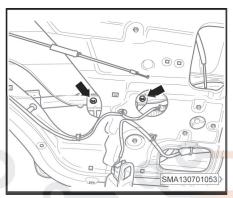



- 9. Disconnect the window lifter motor connector (-2-).
- 10. Unscrew the fixing nuts of the window lifter rail (-1-).
- Unscrew the fixing nuts of the window lifter motor (-3-).
- 12. Take out the window lifter rail along with the motor.

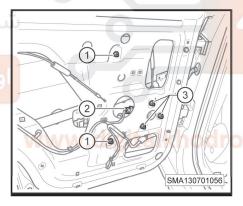

021 62 99 92 92

#### Installation

## 11.4.3 Testing the power window lifter motor

#### Testing the motor down operation

Connect the battery to the motor as shown in the figure.

Connect the positive pole of the battery to No.1 terminal of the motor

Connect the negative pole of the battery to No.2 terminal of the motor

The motor rotates anticlockwise, otherwise the motor assembly should be replaced.





Connect the battery to the motor as shown in the figure.

Connect the positive pole of the battery to No.2 terminal of the motor

Connect the negative pole of the battery to No.1 terminal of the motor

The motor rotates clockwise, otherwise the motor assembly should be replaced.

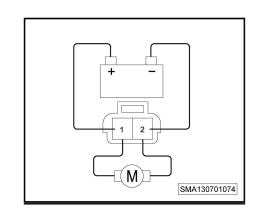

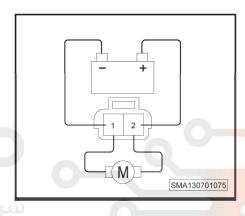

اولین سامانه دیجیتال تعمیرکاران خودرو در ایرار

021 62 99 92 92

www.digitalkhodro.com

07

## 12 Exterior Mirror

07


12.1 General information	1158
12.2 Circuit diagrams	1159
12.3 Removing and installing the exterior mirror	1161

## 12.1 General information

## 12.1.1 Description

- The exterior mirror adjustment switch is installed on the power window main switch at the driver's side door
  trim. When the ignition switch is switched on, turn the exterior mirror adjustment switch to left or right to
  adjust the left or right exterior mirror. Select the exterior mirror to be adjusted and you can adjust the exterior
  mirror lens up and down by turning the rocker forward and backward; and left and right by turning the rocker
  left and right.
- When water vapor is found in the exterior mirror lens, turn on the window defroster switch and the lens will be heated by the heating wires installed on the lens to eliminate the vapor.



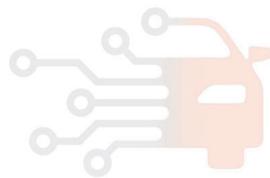

021 62 99 92 92

## 12.2 Circuit diagrams

Exterior mirror (page 1)

Exterior mirror Ignition switch at ON/START position Instrument (FB26) use/relay box 10A (C-504) **→**BCM Right Exterior mirror C-404) Left exterior mirror A BCM ◀ Left exterior -(M)mirror C-407 •(M)• (G-402) www.digitalkhodro.com 4 5 6 1 2 3 C-407 F8 F7 F6 F5 F14 F13 F4 F3 F2 F1 W WDA130061

07


Exterior mirror (page 2)

Exterior mirror 07 C-401) C-505 ВСМ◀ -(M)= Right exterior mirror C-425 -(M)= G-429 www.digitalkhodro.com 13 12 11 10 9 8 7 6 5 4 3 2 1 26 25 24 23 22 21 20 19 18 17 16 15 14 4 5 6 1 2 3 B WDA130062

## 12.3 Removing and installing the exterior mirror

#### Removal

- Remove the front door interior trim. => refer to page 766
- 2. Remove the front door triangular trim.
- **3.** Remove the protective cover for the exterior mirror fixing nuts (-1-) and unscrew the nuts.
- 4. Unscrew the fixing nuts of the exterior mirror (-2-).
- **5.** Disconnect the wiring harness connector (-3-).
- 6. Remove the exterior mirror.

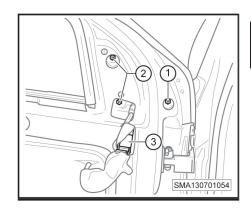

#### Installation

Installation shall follow the reverse sequence of the removal procedure.



021 62 99 92 92

www.digitalkhodro.com

07

# 13 Horn

07


13.1 General information	1162
13.2 Circuit diagram	1163
13.3 Removing and installing the horn	

## 13.1 General information

## 13.1.1 Description

- Horn is a device that can produce sound by vibrating the metal diaphragm with the inside electromagnetic coil energized and deenergized constantly.
- This model comes with two horns.
- The horns are installed on the cross member behind the front intake grid.
- The horn switch is installed on the steering wheel.




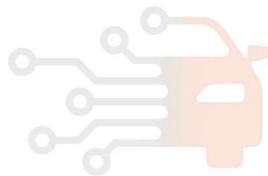

021 62 99 92 92

## 13.2 Circuit diagram

Horn (page 1)

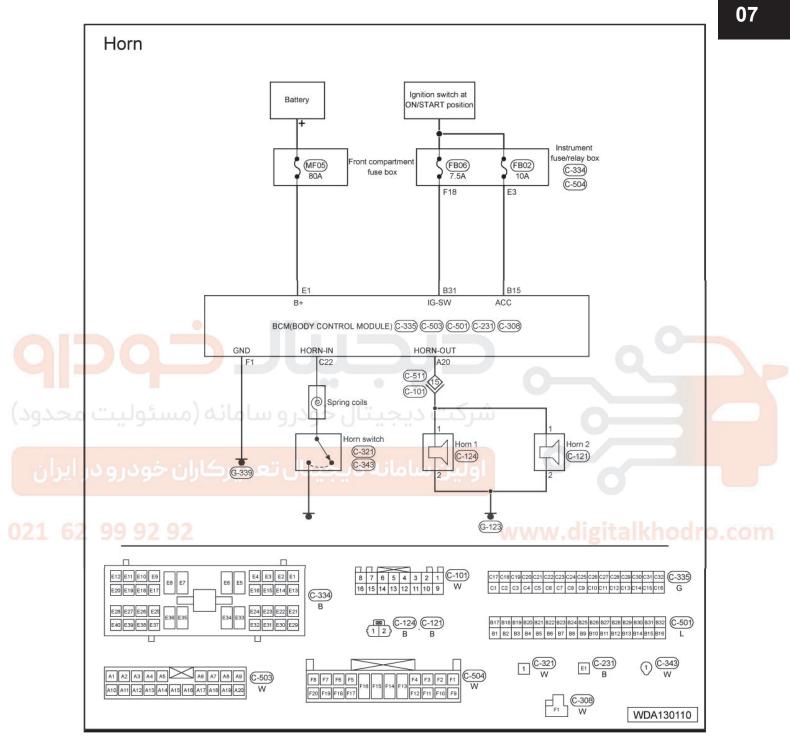


WWW.DIGITALKHODRO.COM

# 13.3 Removing and installing the horn

07

#### Removal

- 1. Switch off all electrical equipment and the ignition switch, and disconnect the battery negative cable.
- 2. Remove the front intake grid .
- 3. Disconnect the horn wiring harness connector (-1-).
- **4.** Unscrew the fixing bolts (-arrow-) and remove the horn.

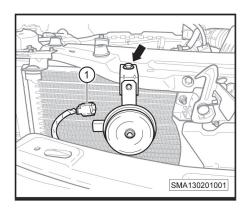

#### Installation

Installation shall follow the reverse sequence of the removal procedure.





021 62 99 92 92

# 14 Wiper and Washer System

14.1 General Information	1165
14.2 Circuit diagrams	1166
14.3 Front wiper	
14.4 Rear wiper	
14.5 Washer reservoir	
14.6 Removing and installing the wiper switch	

07

## 14.1 General Information

## 14.1.1 Description

The wiper and washer system serves to keep a clear vision by wiping off the raindrops on the windshield and rear window when it is raining. The system can remove the dirt on the windshield with the spray washer. This is an indispensable system for safe driving. It consists of the following components:

- Wiper motor
- Wiper arm
- Front wiper motor linkage
- Washer reservoir, washer pump
- Wiper switch

شرکت دیجیتال خودرو سامانه (مسئولیت محدود


ولین سامانه دیجیتال تعمیرکاران خودرو در ایران

021 62 99 92 92


## 14.2 Circuit diagrams

Wiper and washer system (page 1)

07

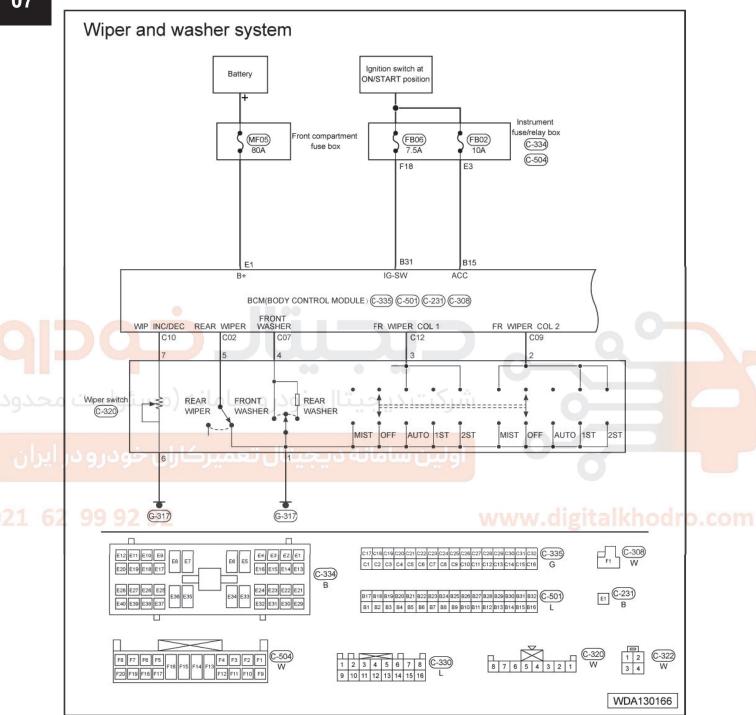

Wiper and washer system (page 2)

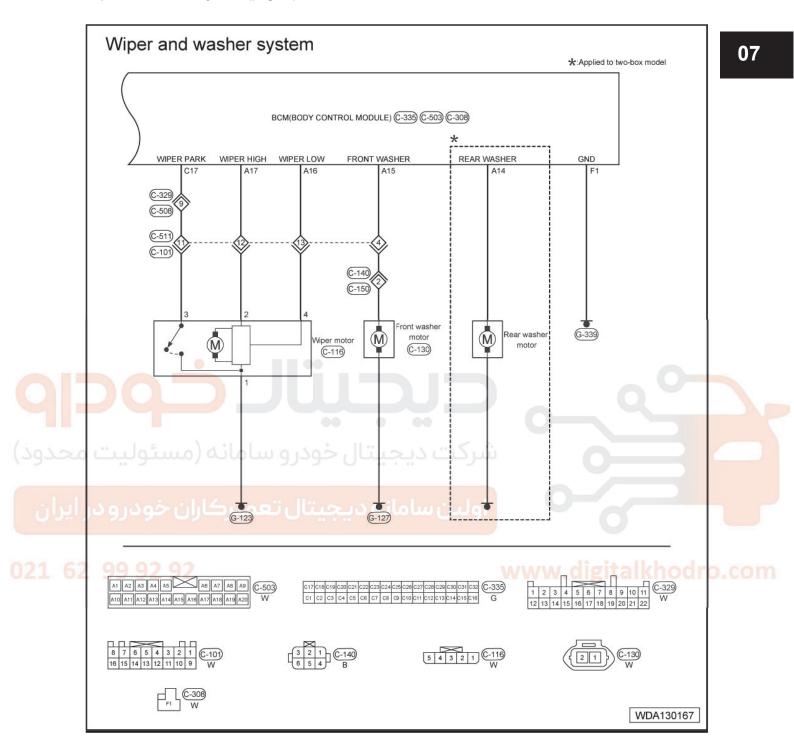


## 14.3 Front wiper

## 14.3.1 Removing and installing the front wiper motor


07

#### Removal

- 1. Lever out the decorative cover for front wiper arm nut (-3-) carefully.
- 2. Unscrew the fixing nuts of the wiper arm (-2-).
- **3**. Remove the wiper blade and wiper arm (-1-) from the linkage.

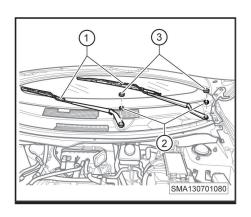


- Remove the water drain cover from the engine compartment .
- **5**. Disconnect the wiring harness connector of the front wiper motor (-1-).
- **6**. Unscrew the fixing bolts of the front wiper linkage (-arrow-).
- 7. Remove the linkage and wiper motor.

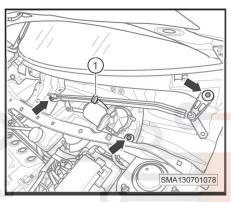

- Unscrew the fixing bolts and nuts of the wiper motor (-arrow-).
- 9. Remove the front wiper motor.

021 62 99 92 92

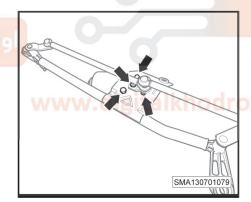

#### Installation

## 14.4 Rear wiper


## 14.4.1 Removing and installing the rear wiper motor

#### 1 Note


Chery A13A model is equipped with the rear wiper and washer system.

#### Removal

- 1. Lever out the cover for rear wiper arm nuts (-2-).
- 2. Unscrew the fixing nuts of the wiper arm (-1-).
- 3. Disconnect the washer fluid pipe.
- 4. Remove the wiper arm from the wiper motor.

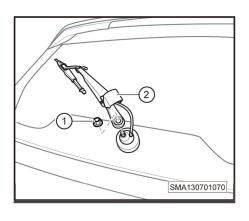


- Remove the trunk lid guard assembly .
- Disconnect the wiring harness connector of the rear wiper motor (-1-).
- Unscrew the fixing parts bolts of the rear wiper motor (-arrow-).
- 8. Remove the fixing parts and rear wiper motor assembly.

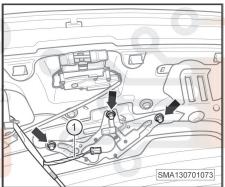

# بلین سامانه دیجیتال تعمیرکاران خودرو در ایران

- Unscrew the fixing bolts of the rear wiper motor (-arrow-).
  - **10**. Remove the rear wiper motor.

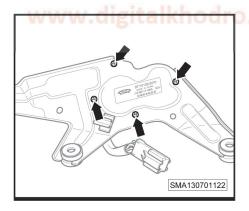

#### Installation

Installation shall follow the reverse sequence of the removal procedure.

07


## 14.5 Washer reservoir

## 14.5.1 Removing and installing the washer reservoir


## 07

#### Removal

- 1. Remove the right headlamp.
- 2. Unscrew the fixing bolts (-2-) of the washer fluid filler (-1-).
- 3. Detach the washer fluid filler (-1-) from the washer reservoir.

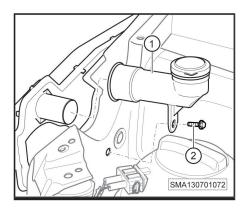

- **4**. Disconnect the connector of the washer pump wiring harness and the front compartment wiring harness (-1-).
- **5**. Disconnect the washer reservoir pipe (-2-).

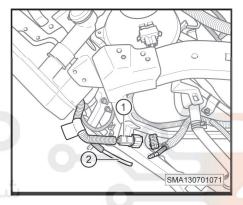




#### i Note

## اولین سامانه دیجیتال تعمیر کاران خودرو د

- For better display of the washer reservoir, the figure shows the status when the rear right fender is removed.
- 2 33 32 32
- 6. Remove the front right wheel trim.
- Unscrew the washer reservoir lower fixing bolts (-arrow-).
- **8**. Pull out the right turn signal connector (-1-).
- **9**. Pull out the water outlet pipe of rear window washer motor (-2-) and remove the washer reservoir.

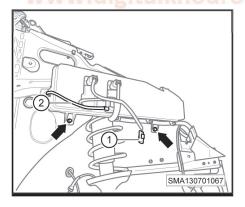

#### Installation


07

07 - Electrical System

## 14.5.2 Removing and installing the washer pump

#### Removal


- 1. Remove the front right fender.=> refer to page 842
- **2.** Disconnect the washer pump wiring harness connector (-2-).
- 3. Pull out the washer pump guide.
- **4.** Pull out the washer pump (-1-) from the washer reservoir in the (-arrow-) direction.

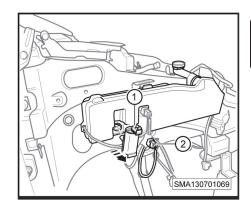

#### Installation

Installation shall follow the reverse sequence of the removal procedure.



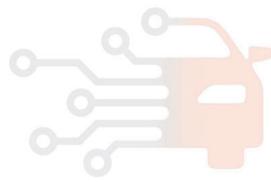

021 62 99 92 92

www.digitalkhodro.com

WWW.DIGITALKHODRO.COM


021 62 99 92 92

## 14.6 Removing and installing the wiper switch

07

#### Removal

- 1. Remove the steering column upper and lower covers.
- 2. Disconnect the wiring harness connector of the wiper switch.
- **3.** Press the fixing clip of the wiper switch (-arrow-) and remove the switch from the steering column.

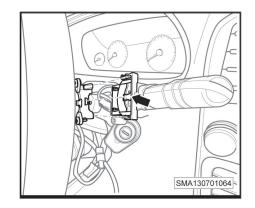

#### Installation

Installation shall follow the reverse sequence of the removal procedure.





021 62 99 92 92

# 15 Rear Window Defroster

15.1	General information	173
15.2	Circuit diagram1	174

**07** 

## 15.1 General information

## 15.1.1 Description

- This function is used to remove frost, fog or water vapor on the rear windshield by heating the windshield with electric wires at the bottom of the rear windshield, thus to get a clearer vision.
- The rear window defroster function is controlled by the BCM. When the ignition switch is in the ACC position, turn on the defroster switch and the BCM will supply power to the rear window heating wires.






021 62 99 92 92

## 15.2 Circuit diagram

Rear window defroster system (page 1)

07

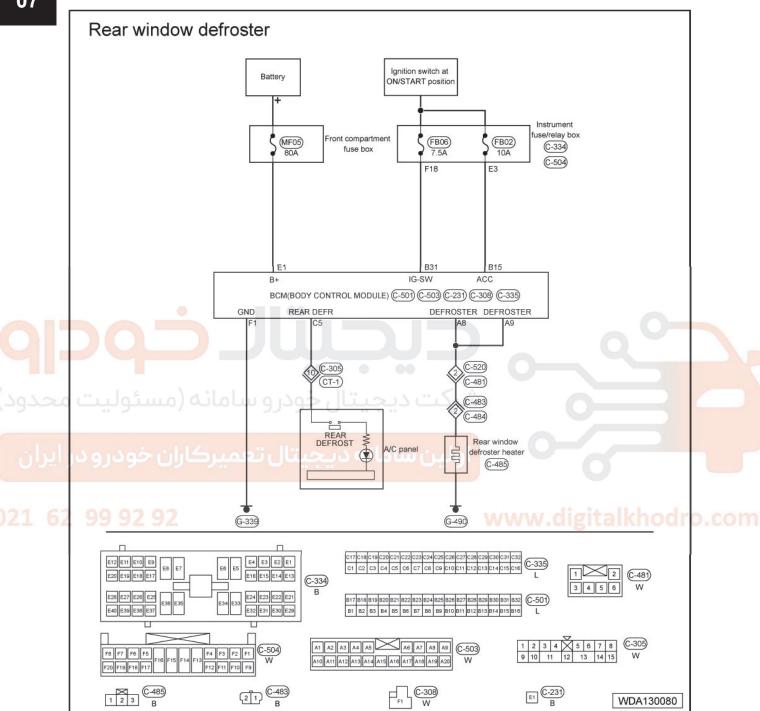

## 16 Anti-theft System

16.1 General information	1175
16.2 Circuit diagrams	1176
16.3 Definition of the anti-theft control module pin	
16.4 Removing and installing the anti-theft control module	
16.5 Anti-theft system adaption	1182


07

## 16.1 General information

## 16.1.1 Description

- The vehicle anti-theft system is controlled by the anti-theft control module and identifies through the anti-theft induction coil to prevent any improper ignition key from starting the engine.
- If the improper ignition key is inserted into the ignition switch, the anti-theft coil will sense the incorrect password and send signals to the anti-theft control module and the engine control module (ECM) to forbid the start of the engine for the anti-theft purpose.



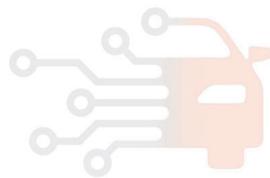

021 62 99 92 92

## 16.2 Circuit diagrams

Anti-theft system (447F+UAES) (page 1)

07 Anti-theft system 1 Ignition switch at Battery ON/START position Instrument FB09 10A FB10 10A fuse/relay box C-334) **Т** ІММО Instrument Microprocessor C-337) GND GND IMMO 03 32 (G-317) IMMO IG-5W IMMOBILIZER CONTROL MODULE (C-312) R-LINE W-LINE GND K-LINE 5 ECM Diagnostic connector (C-201) C-325 digitalkhodro.com 1 2 9 10 11 12 13 14 15 16 17 18 19 20 21 22 3 4 23 24 25 28 27 28 29 30 31 32 33 34 35 36 1 2 3 C-312) W C-201) 4 5 6 7 8 5 6 37 38 39 40 41 42 43 44 45 46 47 48 49 50 7 8 61 62 63 64 65 66 67 68 69 60 61 62 63 64 П E12 E11 E10 E9 E8 E7 E4 E3 E2 E1 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 E16 E15 E14 E13 E20 E19 E18 E17 C-334)

> 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 B


WWW.DIGITALKHODRO.COM

E40 E39 E38 E37

E32 E31 E30 E29

WDA130200

Anti-theft system (447F+UAES) (page 2)

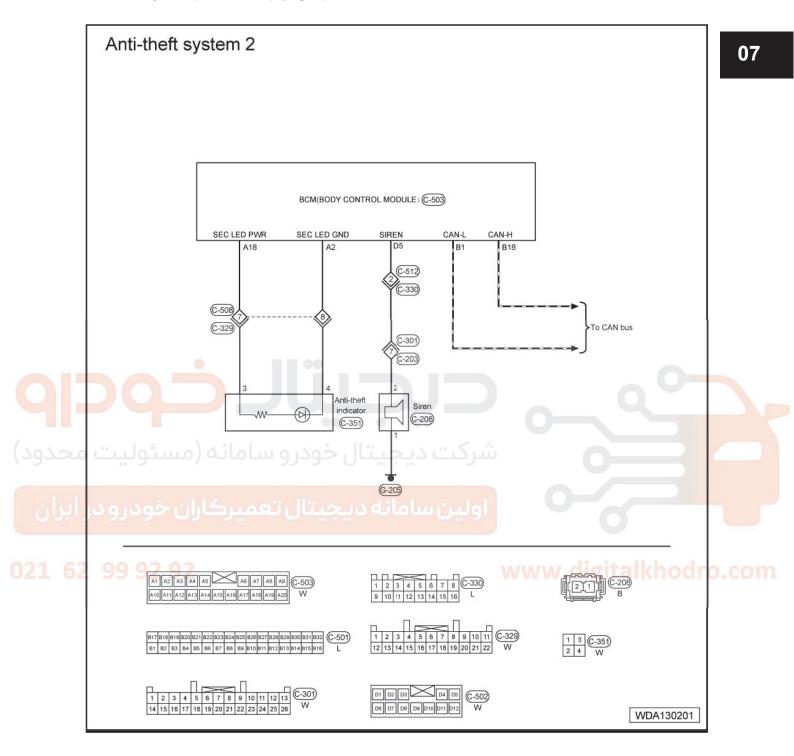


Anti-theft system (447F+DELPHI) (page 1)

Anti-theft system 07 Ignition switch at Battery N/START position Instrument (FB10) (FB09) fuse/relay box 10A 10A C-334) E11 E37 **Т** ІММО nstrument cluster Microprocessor C-337 GND **GND** IMMO 32 G-317) В1 B4 B3 IG-5W IMMO IMMOBILIZER CONTROL MODULE (C-312) (C-344) COIL COIL COIL GND В7 A1 A2 A3 B2 Diagnostic ECM -ll connector Spring coils C-202 C-325 G-301) B1 B2 ВЗ 
 17
 18
 19
 20
 21
 22
 23
 24
 25
 26
 27
 28
 29
 30
 31
 32


 1
 2
 3
 4
 5
 6
 7
 8
 9
 10
 11
 12
 13
 14
 15
 16
 C-325 odro.com B4 B5 B6 B7 B8 E12 E11 E10 E9 E8 E7 C73 C16 C1 C17 C-334) (C-202) A3 A2 A1 C-344 E28 E27 E26 E25 E36 E35 E24 E23 E22 E21 C52 C33 C53 C53 E32 E31 E30 E29 WDA130188

Anti-theft system (447F+DELPHI) (page 2)

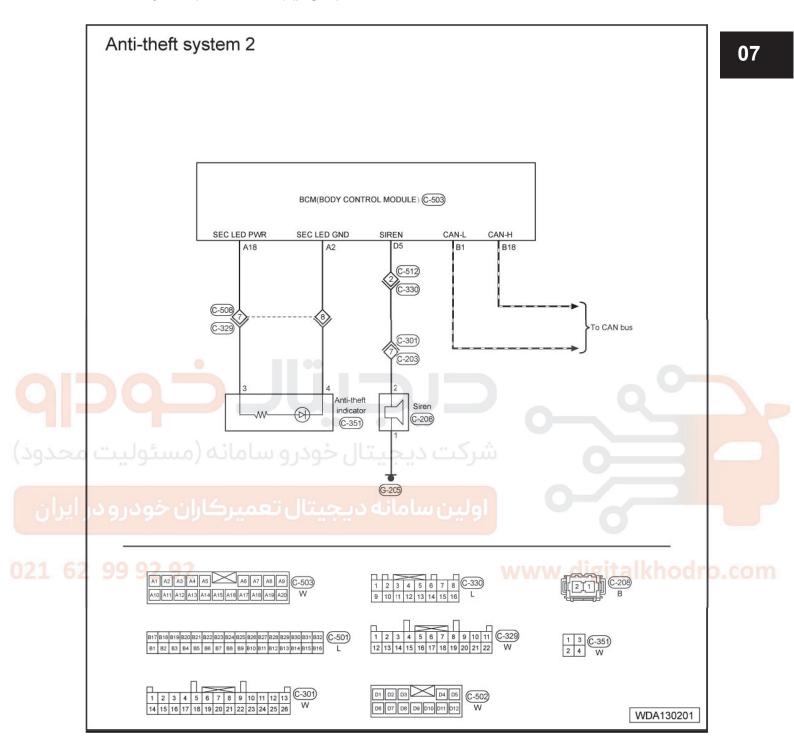

# 16.3 Definition of the anti-theft control module pin

07

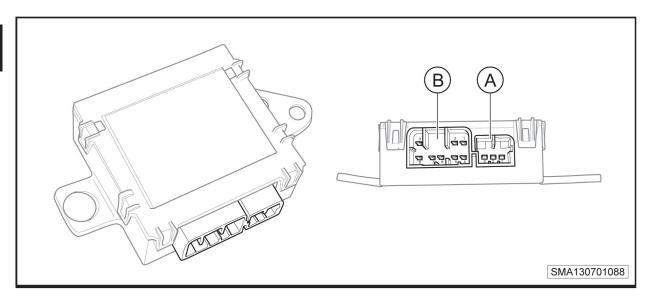

#### B: 8-pin connector of the anti-theft control module (447F+UAES control system)

Pin No.	Function	Pin No.	Function
1	KL30	5	EMS wake-up line
2	Ground	6	- 0
3	Anti-theft indicator	7 89	Diagnostic line
انه (مسئولیت4	KL15	8	EMS communication port

#### A: 3-pin connector of the anti-theft control module (447F+DELPHI control system)

Pin No.	Function	Pin No.	Function
1	Anti-theft identification coil (positive)	3	Anti-theft identification coil (negative)
2 99 92 92	_	WWV	v.digitalkhodr


#### B: 8-pin connector of the anti-theft control module (447F+UAES control system)

Pin No.	Function	Pin No.	Function
1	Warning lamp	5	_
2	Ground	6	_
3	KL15	7	Communication diagnostic connector
4	KL30	8	_

## 16.4 Removing and installing the anti-theft control module

#### Removal

- **1.** Switch off all electrical equipment and disconnect the battery negative cable.
- Remove the base guard of the driver's side dashboard => refer to page 832.
- 3. Pull out the anti-theft control module connector (-3-).
- **4.** Unscrew the fixing bolts of the anti-theft control module (-1-).
- 5. Remove the anti-theft control module (-2-).

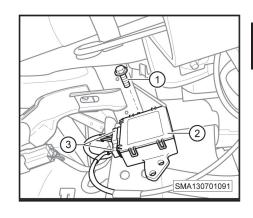

#### Installation

Installation shall follow the reverse sequence of the removal procedure.



021 62 99 92 92

www.digitalkhodro.con

07

## 16.5 Anti-theft system adaption

## 16.5.1 Key adaption

## 07

#### Caution

Security code (PIN code) is only entered through a special diagnostic device of Chery. When entering,
please note that the letters are case sensitive and the ECM will be locked permanently after the erroneous
codes are entered consecutively for more than a certain number of times.

#### Key adaption procedures:

- 1. Connect the diagnostic connector of the diagnostic device to the diagnostic connector inside the cockpit.
- 2. Insert the key to be adapted into the ignition switch and turn it to the ON position.
- 3. Access the diagnostic device option menu and select "Anti-theft control" → "Adaption" → "Authorization code setting" → "Enter the security code" and then return to "Adaption" → "Enter the user authorization code".
- 4. Return to "Adaption" and select the menu "Clear the key list" to clear the previously lost key information.
- Return to the "Adaption" and select the menu "Adapt the key" and perform the adaption operation according to the steps shown on the diagnostic device.
- **6.** After adaption, turn off the ignition switch and turn it on again and start the engine to verify if the adaption is successful.

#### Remote control adaption procedures:

#### 1 Note

- This function can be used to adapt 2 remote controls.
- Connect the diagnostic connector of the diagnostic device to the diagnostic connector inside the cockpit.
- 2. Insert the key to be adapted into the ignition switch and turn it to the ON position.
- 3. Access the diagnostic device option menu and select "Body control module" → "Select the functions" → "Write the data flow" → "Erase all the remote control keys". Clear the previously lost key information.
- 4. Return to the "Select the functions" and select the menu "Key learning" and perform the adaption operation according to the steps shown on the diagnostic device.
- 5. After adaption, verify if the adaption is successful.

## 16.5.2 Anti-theft control adaption

#### Caution

 Security code (PIN code) is only entered through a special diagnostic device of Chery. When entering, please note that the letters are case sensitive and the ECM will be locked permanently after the erroneous codes are entered consecutively for more than a certain number of times.

#### Anti-theft control adaption procedures:

- 1. Turn off the ignition switch and replace the anti-theft control with a new one.
- 2. Insert the key into the ignition switch and turn it to the ON position.
- 3. Access the diagnostic device option menu and select "Anti-theft control" → "Adaption" → "Authorization code setting" → "Enter the security code" and then return to "Adaption" → "Enter the user authorization code".
- **4.** Return to the "Adaption" and select the menu" Replace the anti-theft control" and perform the adaption operation according to the steps shown on the diagnostic device.

#### WWW.DIGITALKHODRO.COM

5. After the completion of the anti-theft control adaption, adapt the original keys one by one.

07





021 62 99 92 92

# 17 Diagnosis and Inspection of the Anti-theft System

07

17.1 Diagnosis and inspection of sporadic DTC faults	1184
17.2 Checking earth connection	1185
17.3 Special tools	1186
17.4 Fault diagnosis (DTC)	1187

## 17.1 Diagnosis and inspection of sporadic DTC faults

If the sporadic DTC faults occur, please check the following items:

- Check if the connector of the DTC-related actuator or sensor is properly installed.
- Check the connector pins of the actuator or sensor for leakage and corrosion.
- Check the leads for bending or squeezing.
- · Check the sensor for dirt or damage.
- Check if the routing of wiring harness is correct and proper.



021 62 99 92 92

**07** 

07 - Electrical System

## 17.2 Checking earth connection

A good earth connection is prerequisite for ensuring the normal operation of the circuit. If the earth terminal of the circuit is always exposed to the wet and dusty environment, the metal of the earth terminal will corrode and affect the circuit smoothness, thus causing various electrical system malfunctions. As the control circuit is very sensitive, the loosened or corroded wires may significantly affect the transmission of various signals in the electronic control circuit. Therefore, please note the followings when inspecting:

- Replace the earth bolts or nuts.
- Check the earth terminal and coil for corrosion.
- Clean and polish the earth terminal and coil when necessary to ensure good contact.
- Check if there is any accessory interfering with the earth circuit.





121 62 99 92 92

www.digitalkhodro.com

WWW.DIGITALKHODRO.COM

021 62 99 92 92

# 17.3 Special tools

- X-431 diagnostic device
- Digital multimeter
- · Adapter cable

07



021 62 99 92 92

07

07 - Electrical System

# 17.4 Fault diagnosis (DTC)

# 17.4.1 Anti-theft system diagnosis (DTC) list

DTC	Definition	
B1001	Failure of the anti-theft control	
B1005	K line short to ground	
B1017	Failure of warning lamp output	



021 62 99 92 92

www.digitalkhodro.com

WWW.DIGITALKHODRO.COM

021 62 99 92 92

# 17.4.2 B1001 Failure of the anti-theft control

Anti-theft system 07 Ignition switch at Battery ON/START position Instrument (FB09) (FB10) fuse/relay box 10A 10A C-334) E11 E37 ▼ IMMO nstrument cluster Microprocessor C-337 **GND** GND IMMO G-317) В1 ВЗ B4 IG-5W IMMO IMMOBILIZER CONTROL MODULE C-312 C-344 COIL COIL COIL (ANT) B2 В7 A1 A2 A3 Diagnostic ECM -leconnector Spring coils C-202 C-325 G-301) 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 ВЗ C-312) W 
 17
 18
 19
 20
 21
 22
 23
 24
 25
 26
 27
 28
 29
 30
 31
 32

 1
 2
 3
 4
 5
 6
 7
 8
 9
 10
 11
 12
 13
 14
 15
 16
 odro.com C-325 B4 B5 B6 B7 B8 E12 E11 E10 E9 E8 E7 E4 E3 E2 E1 C16 C17 C17 C-202 (C-334) A3 A2 A1 C-344 E28 E27 E26 E25 E24 E23 E22 E21 C52 C33 C53 C53 E40 E39 E38 E37 E36 E35 33 E32 E31 E30 E29

#### Checking the voltage between the anti-theft control module and the grounding

Pin No.	Function	Condition	Value (DC voltage range)
В3	The anti-theft control energized	The ignition switch in the LOCK position	Battery voltage
B4	The anti-theft control energized	The ignition switch in the ON/START position	Battery voltage

WWW.DIGITALKHODRO.COM

WDA130188

#### Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
B1001	Failure of the anti-theft control	The ignition switch in the ON position or the START position	The anti-theft control module short or open circuit detected by the system	<ul> <li>Failure of the wiring harnesses or connector</li> <li>Failure of the anti-theft control module</li> </ul>

07

#### DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.

- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch and turn it on again after 3 to 5 seconds.
- · Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.

If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)

#### Diagnosis procedures:

#### i Note

- Please verify again if the DTC and its symptoms are present after fault is rectified.
- 1. Check if the power supply fuse FB09/FB10 in the anti-theft control module has a fault.
  - If yes, replace the corresponding fuses.
  - If not, go to step 2.


Check if the voltage between the pin B4 of the anti-theft control module connector C-312 and the ground is the battery voltage from the anti-theft control module connector side.

- If yes, go to step 3.
- If not, check if the power supply line of the pin B4 of the anti-theft control module connector C-312 has the following faults such as short circuit, open circuit, excessive resistance and virtual connection.
- C-312 B1 B2 B3 B4 B5 B6 B7 B8 V • • •
- 3. Turn the ignition switch to the ON/START position, and check if the voltage between the pin B3 of the anti-theft control module connector C-312 and the ground is the battery voltage from the anti-theft control module connector side.
  - If yes, go to step 4.
  - If not, check if the power supply line of the pin B3 of the anti-theft control module connector C-312 has the following faults such as short circuit, open circuit, excessive resistance and virtual connection.




## 021 62 99 92 92

- 4. Check if the ground line of the pin B2 of the anti-theft control module connector C-312 is normal.
  - If yes, go to step 5.
  - If not, repair the faulty line.

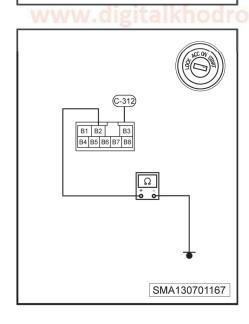


Replace the anti-theft control module, carry out the function test again, and read the fault code to verify if it exists or not.

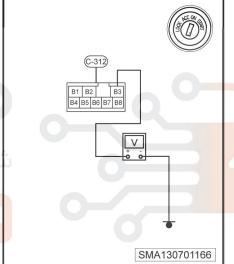

- If yes, find the fault cause from other symptoms.
- If not, the fault has been rectified.

## 17.4.3 B1005 K line open circuit to ground

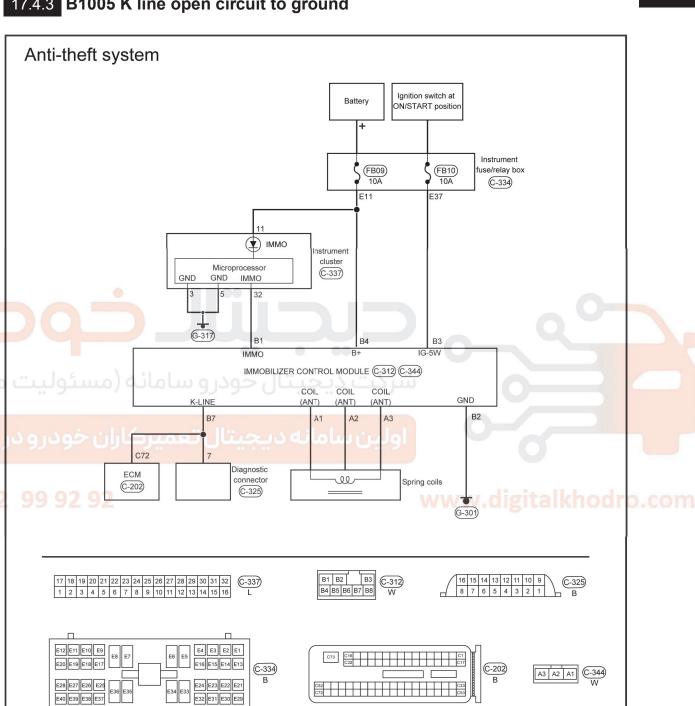

#### Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
B1005	K line open circuit to ground	The ignition switch in the ON/START position	The K line of anti-theft control module short or open	Failure of the wiring harnesses or connector

07

WDA130188

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
			circuit detected by the engine control module	Failure of the anti-theft control module

#### DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.


- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch and turn it on again after 3 to 5 seconds.
- · Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.

If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)


#### Diagnosis procedures:



- Please verify again if the DTC and its symptoms are present after fault is rectified.
- Turn the ignition switch to the LOCK position, and check if the lead between the pin B7 of the anti-theft control module connector C-312 and the pin 7 of the diagnostic connector C-325 is conducted.
  - If yes, go to step 2.
  - If not, check if the lead between the pin B7 of the anti-theft control module connector C-312 and the pin 7 of the diagnostic connector C-325 has open circuit and repair or replace the defective lead.

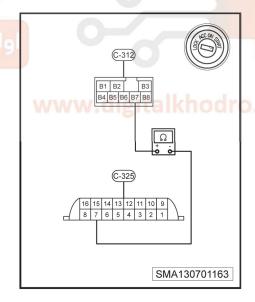


- 2. Turn the ignition switch to the LOCK position, and check if the lead between the pin B7 of the anti-theft control module connector C-312 and the pin C72 of the engine control module connector C-202 is conducted.
  - If yes, go to step 3.
  - If not, check if the lead between the pin B7 of the anti-theft control module connector C-312 and the pin C72 of the engine control module connector C-202 has open circuit and repair or replace the defective lead.

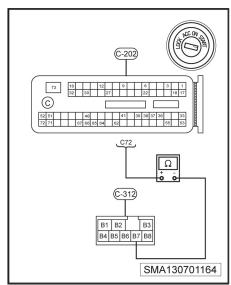


- 3. Check if the power supply line and the ground line of the anti-theft control module are normal.
  - If yes, go to step 4.
  - If not, repair the faulty line.
- Replace the anti-theft control module, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, go to step 5.
  - If not, the fault has been rectified.



- 5. Check if the power supply line and ground line of the engine control module are normal.
  - If yes, go to step 6.
  - If not, repair the faulty line.
- 6. Replace the engine control module, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, find the fault cause from other symptoms.
  - If not, the fault has been rectified.

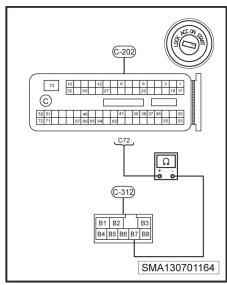

## 17.4.4 B1017 Failure of warning lamp output

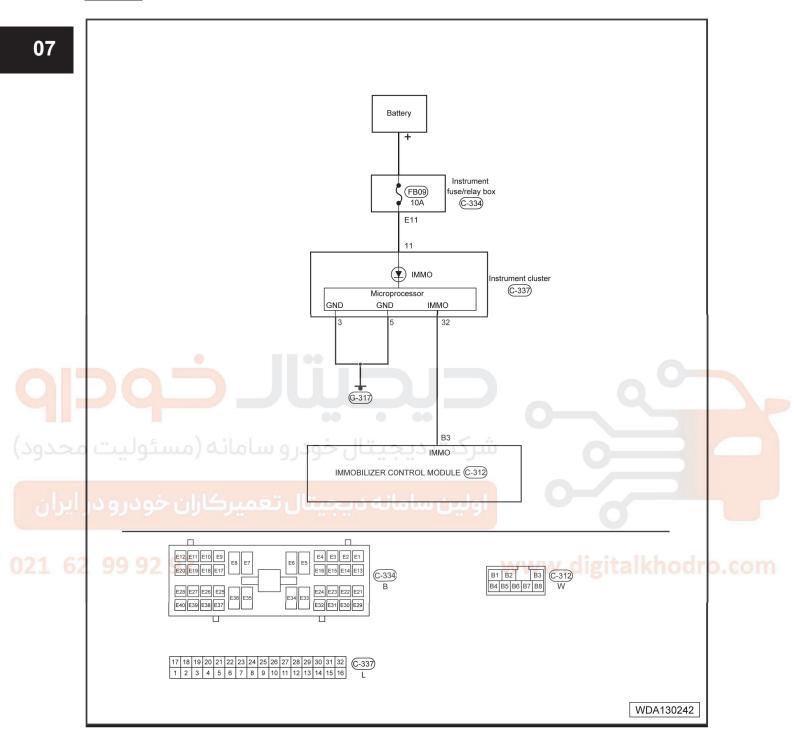

#### Fault code definition and fault causes

DTC	DTC definition	DTC test condition	DTC triggering condition	Possible causes
B1017	Failure of warning lamp output	The ignition switch in the ON/START position	The anti-theft indicator circuit short or open circuit detected by the instrument cluster	<ul> <li>Failure of the wiring harnesses or connector</li> <li>Failure of the anti-theft control module</li> <li>Failure of the instrument cluster</li> </ul>

#### DTC test procedures:

Please confirm that the battery voltage is normal before performing the following procedures.

- Turn off the ignition switch.
- Connect the X-431 diagnostic device to the DLC and perform the test with the updated software.
- Turn on the ignition switch.
- Measure and clear the DTC with the diagnostic device.
- Turn off the ignition switch and turn it on again after 3 to 5 seconds.
- Measure the DTC with the diagnostic device.
- If a DTC is detected, it indicates that the vehicle is faulty, please perform corresponding diagnostic procedures.


If no DTC is detected, it indicates that the previously detected faults are sporadic. (Please refer to the chapters on the sporadic DTC and check faults)

#### Diagnosis procedures:

#### 1 Note

- Please verify again if the DTC and its symptoms are present after fault is rectified.
- Turn the ignition switch to the LOCK position, and check if the lead between the pin B3 of the anti-theft control module connector C-312 and the pin 32 of the instrument cluster connector C-337 is conducted.
  - If yes, go to step 2.
  - If not, check if the lead between the pin B3 of the anti-theft control module connector C-312 and the pin 32 of the instrument cluster connector C-337 has open or short circuit and repair or replace the defective lead.

021 62 99 92 92

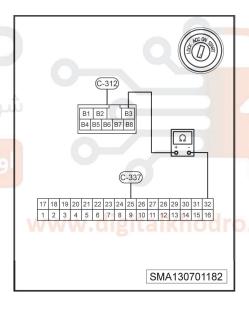

- 2. Check if the power supply line and the ground line of the anti-theft control module are normal.
  - If yes, go to step 3.
  - If not, repair the faulty line.
- **3**. Check if the power supply line and the ground line of the instrument cluster are normal.
  - If yes, go to step 4.
  - If not, repair the faulty line.
- Replace the anti-theft control module, carry out the function test again, and read the fault code to verify if it exists or not.
  - If yes, find the fault cause from other symptoms.

- If not, the fault has been rectified.

**07** 





J21 62 99 92 92

## 18 Reversing Radar System

18.1 General information	1197
18.2 Circuit diagram	1198
18.3 Removing and installing the reversing radar sensor	
18.4 Removing and installing the reversing radar control module	

07

## 18.1 General information

## 18.1.1 Description

- When the shift lever is in the R position, the reversing radar sensor will send the ultrasonic waves to detect objects near the vehicle and send out a warning tone. As the vehicle approaches the objects closer and closer, the warning tone frequency will be increased.
- Power supply transmits power to the reversing radar system via the reversing switch. When the shift lever
  is in the R position, turn on the reversing switch to activate the reversing radar control module. During this
  time, the reversing radar sensor will sense the obstacles while sending the signals to the reversing radar
  control module and it will send the distance message to the BCM through the LIN bus. Then the BCM will
  transmit it to the instrument cluster via the CAN bus. The instrument cluster controls the frequency of buzzer
  beeping to give a sound alert.






021 62 99 92 92

## 18.2 Circuit diagram

Reversing radar system (page 1)

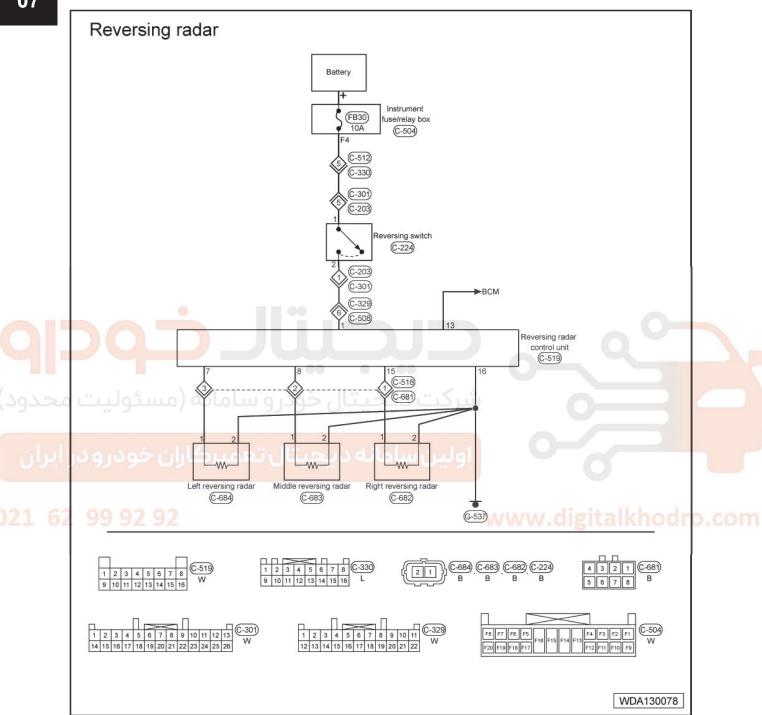


07

07 - Electrical System

## 18.3 Removing and installing the reversing radar sensor

#### Removal


- Remove the rear bumper assembly => refer to page 848.
- 2. Pull out the reversing radar sensor connector.
- **3.** Press the fixing clip of the reversing radar sensor (-arrow-) and push the sensor out of the bumper.

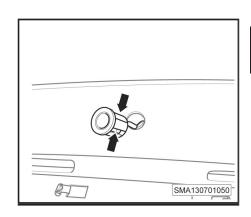

#### Installation

Installation shall follow the reverse sequence of the removal procedure.



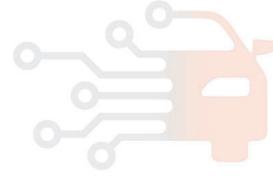

UZ1 6Z 99 9Z 9Z

www.digitalkhodro.com

WWW.DIGITALKHODRO.COM

021 62 99 92 92


## 18.4 Removing and installing the reversing radar control module

#### Two-box model

## **07**

#### Removal

- 1. Remove the left luggage compartment trim => refer to page 783.
- 2. Disconnect the radar control module connector (-1-).
- **3.** Unscrew the fixing bolts of the control module (-arrow-) and remove the control module.

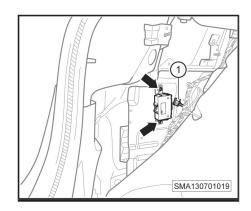


#### Installation

Installation shall follow the reverse sequence of the removal procedure.

#### Three-box model

#### Removal

- Remove the left luggage compartment trim => refer to page 783.
- 2. Disconnect the radar control module connector (-1-).
- Unscrew the fixing bolts of the control module (-arrow-) and remove the control module.

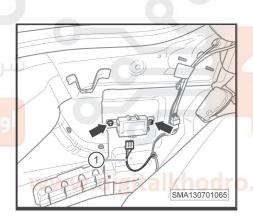

## 021 62 99 92 92

#### Installation

Installation shall follow the reverse sequence of the removal procedure.

## 19 Audio System

19.1	General information1	201
19.2	Circuit diagrams1	202
19.3	Definition of audio system module pin1	204
19.4	Removing and installing the radio1	205
19.5	Speaker1	206
19.6	Removing and installing the antenna amplifier1	208
	General fault diagnosis of the audio system1	

07

## 19.1 General information

## 19.1.1 Description

Audio system is powered by the battery via the ignition switch. When the ignition switch is in the ACC position, the audio system can be switched on. The radio antenna receives the electrical wave signals of audio and transmits them to the audio system for processing. Then the sound will be produced by the speaker. The audio system consists of the following components:


- Audio device
- Two front speakers
- Two A pillar tweeters
- Two rear speakers
- Radio antenna assembly

أولين سامانه ديجيتال تعميركاران خودرو


021 62 99 92 92

## 19.2 Circuit diagrams

Audio system (page 1)

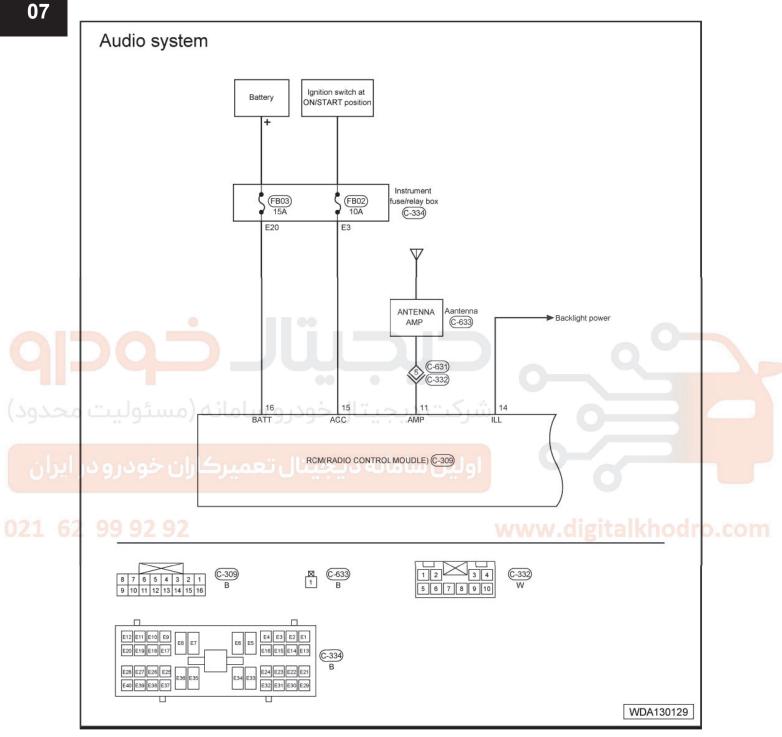


#### Audio system (page 2)

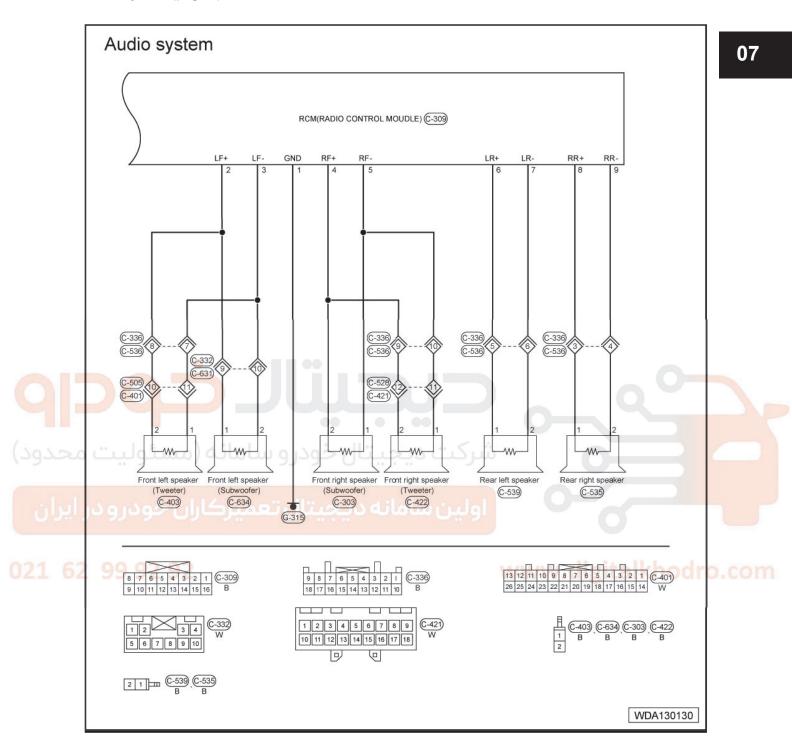

WWW.DIGITALKHODRO.COM

## 19.3 Definition of audio system module pin

07

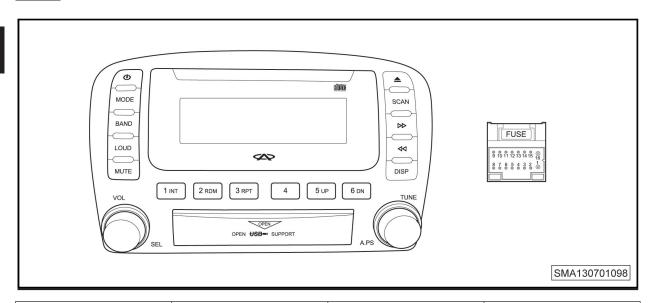

Pin No.	Function	Pin No.	Function
1	Power supply	9	Rear right speaker (negative)
2	Front left speaker (positive)	10	Not used
3	Front left speaker (negative)	1100	Automatic antenna
اله (مستولیت)	Front right speaker (negative)	سرکت کرے 12	Not used
برکاران خودرو ۵	Front right speaker (positive)	اولین س13	Steering wheel button signal
6	Rear left speaker (positive)	14	Backlight power
27 99 92 92	Rear left speaker (negative)	15 <b>WWV</b>	Power supply
8	Rear right speaker (positive)	16	Power supply

o.com


07

07 - Electrical System

## 19.4 Removing and installing the radio

#### Removal

- 1. Remove the central control panel air outlet assembly
- Unscrew the lower fixing screws of the radio (-arrow-).
- **3.** Remove the radio assembly and disconnect the radio connector.

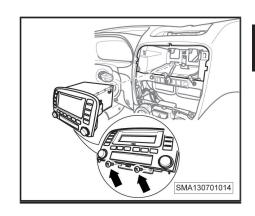

#### Installation

Installation shall follow the reverse sequence of the removal procedure.



021 62 99 92 92




## 19.5 Speaker

## 19.5.1 Removing and installing the front speaker

07

#### Removal

- 1. Remove the front door interior trim assembly => refer to page 764.
- 2. Unscrew the fixing screws of the speaker (-1-).
- 3. Disconnect the speaker wiring harness connector and take out the speaker (-1-).

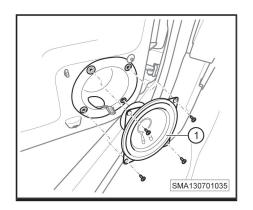


#### Installation

Installation shall follow the reverse sequence of the removal procedure.

19.5.2 Removing and installing the A pillar tweeter

#### Removal

- 1. Remove the A pillar upper trim .=> refer to page 771
- 2. Pull out the tweeter connector (-2-).
- 3. Carefully lever out the tweeter (-1-) from the A pillar upper trim (-3-).

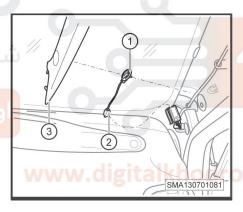


#### Installation

Installation shall follow the reverse sequence of the removal procedure.

## 19.5.3 Removing and installing the rear speaker

#### Removal

- 1. Disconnect the rear speaker connector.
- **2.** Unscrew the screws of the speaker (-arrow-) and take out the rear speaker.

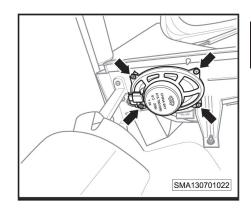

#### Installation

Installation shall follow the reverse sequence of the removal procedure.



021 62 99 92 92




## 19.6 Removing and installing the antenna amplifier

1. Remove the roof.

07

- 2. Disconnect the connector (-2-) between the amplifier and antenna.
- 3. Disconnect the antenna amplifier connector (-1-).
- 4. Disconnect the window antenna connector (-3-).
- **5.** Unscrew the fixing screws of the amplifier (-arrow-) and remove the antenna amplifier.

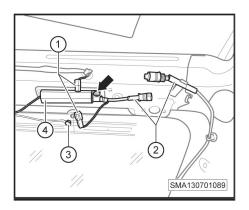

Installation

Installation shall follow the reverse sequence of the removal procedure.





021 62 99 92 92

## 19.7 General fault diagnosis of the audio system

#### Caution

- The audio system is powered by a DC 12V power.
- Switch off all electrical equipment and the ignition switch, and disconnect the battery negative cable during the removal and installation of the components.
- · During the use and maintenance of the audio system, pay attention to protecting the display.
- When inspecting the general faults of audio system, you shall carry out inspection in a nearby open area without obstacles.

How to carry out the fault diagnosis when no radio signal is received or the radio signal is very weak.

- 1. Check if the radio can receive the radio signals properly?
  - If yes, the audio system works properly.
  - If not, go to step 2.
- 2. Check if the antenna connector is inserted into the radio correctly?
  - If not, go to step 3.
  - If not, reinsert the antenna connector into the radio correctly.
- Check if the antenna is conducted?
  - If yes, go to step 4.
  - If not, replace the antenna lead.
- 4. Check if the circuit between the central signal wire peripheral terminal and the audio device housing is conducted?
  - If yes, replace the antenna amplifier.
  - If not, replace the audio device.

## How to carry out the fault diagnosis when there is noise in the radio. Www.digitalkhodro.com

- 1. Check the noise level of the audio system and verify if it can receive any radio signal properly?
  - If yes, go to step 2.
  - If not, the audio system works properly.
- 2. Check if the noise of radio is caused by the electrical wave interference?
  - If yes, the audio system works properly.
  - If not, replace the audio device.

# If the CD eject button is pressed and the CD cannot removed from the driver, please carry out the fault diagnosis for this.

- 1. Press the CD eject button and check if the CD can be ejected properly?
  - If yes, it works properly.
  - If not, go to step 2.
- 2. Check if it can be fully ejected from the audio device and not jammed?

07

- If yes, go to step 3.
- If not, replace the audio device.
- 3. Check if the antenna is conducted?
  - If yes, replace the audio device.
  - If not, replace the CD.

#### How to carry out the fault diagnosis when the CD cannot be inserted normally.

- 1. Insert CD into the audio device and check if the same symptom occurs again?
  - If yes, it works properly.
  - If not, go to step 2.
- 2. Insert another CD and check if it can be inserted normally?
  - If yes, replace the CD.
  - If not, replace the audio device.

#### How to carry out the fault diagnosis when the CD play is interrupted.

- 1. Insert a CD and check if the same symptom occurs again?
  - If yes, go to step 2.
  - If yes, it works properly.
- 2. Check if the CD has any corrupted point?
  - If yes, insert a normal CD and check it again.
  - If not, go to step 3.
- 3. Check if the same symptom occurs again.
  - If yes, replace the audio device.
    - If yes, it works properly.

#### How to carry out the fault diagnosis when you cannot hear any sound.

- 1. Check if only one speaker cannot function normally?
  - If yes, go to step 2.
  - If not, go to step 5.
- 2. Check if the dead speaker is damaged?
  - If yes, replace the speaker and check it again.
  - If not, go to step 3.
- 3. Check if the speaker connector is connected with the speaker firmly?
  - If yes, go to step 4.
  - If not, check it again and this may be a temporary fault.
- 4. Remove the audio device connector and speaker connector, and check if they are conducted?
  - If yes, go to step 5.





- If not, repair the lead.
- 5. Check if the audio device connector is connected with the audio device firmly?
  - If yes, replace the audio device.
  - If not, reconnect the audio device connector and check it again.

#### How to carry out the fault diagnosis if the sound is low or distorted.

- 1. Check if all CDs have the symptom?
  - If yes, go to step 2.
  - If not, replace the CDs.
- 2. Check if the speakers are damaged?
  - If yes, replace the speakers.
  - If not, replace the audio device.



021 62 99 92 92

www.digitalkhodro.com

## 20 Cigarette Lighter

07

20.1	General information	1212
20.2	Circuit diagram	1213
20.3	Removing and installing the cigarette lighter	1214

## 20.1 General information

## 20.1.1 Description

- The cigarette lighter is located under the console, next to the ashtray, which can be used as a 12V onboard socket.
- Turn the ignition switch to the ON position when using cigarette lighter socket.

### Caution

• The rated voltage of the cigarette lighter socket is 12V DC. Do not use any electrical equipment whose voltage is beyond the rated voltage.



021 62 99 92 92

## 20.2 Circuit diagram

Cigarette lighter (page 1)


07 Cigarette lighter Ignition switch at ON/START position Instrument FB27 20A (C-334) Cigarette lighter (C-311) www.digitalkhodro.com E12 E11 E10 E9 E8 E7 E4 E3 E2 E1 E16 E15 E14 E13 (C-334) C-311) E40 E39 E38 E37 E36 E35 E32 E31 E30 E29 WDA130128

## 20.3 Removing and installing the cigarette lighter

07

#### Removal

- 1. Remove the ashtray assembly (-1-) from the front section of shift lever and disconnect the cigarette lighter connector.
- 2. Remove the cigarette lighter (-3-), press the fixing clip of the ashtray and lever out the cigarette lighter socket (-2-).

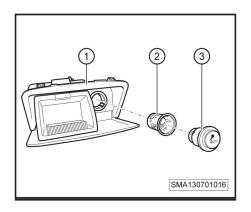

#### Installation

Installation shall follow the reverse sequence of the removal procedure.



021 62 99 92 92

## 21 CAN Bus

21.1 General information	1215
21.2 Circuit diagram	1216

**07** 

## 21.1 General information

## 21.1.1 Description

- CAN bus is the abbreviation of controller area network (CAN) and it is a multi-channel communication system
  divided into the CAN-H and CAN-L (high speed data cables and low speed data cables). The system is
  connected to different control modules inside the vehicle and simultaneously send and receive information
  data at a high speed, thus achieving mutual communication of each control module and sharing the overall
  vehicle information data timely and reliably.
- The data transmission of the controller area network (CAN) employs the international standardized serial
  communication protocol. Its data signals use variable pulse width modulation signals, the change of the
  signal voltage differences between the high and low speed CAN buses can generate data signals with
  different lengths and these signals are transmitted to each control module for processing.





021 62 99 92 92

## 21.2 Circuit diagram

CAN bus (page 1)

