



## Turn signal lamp and hazard warning lamp

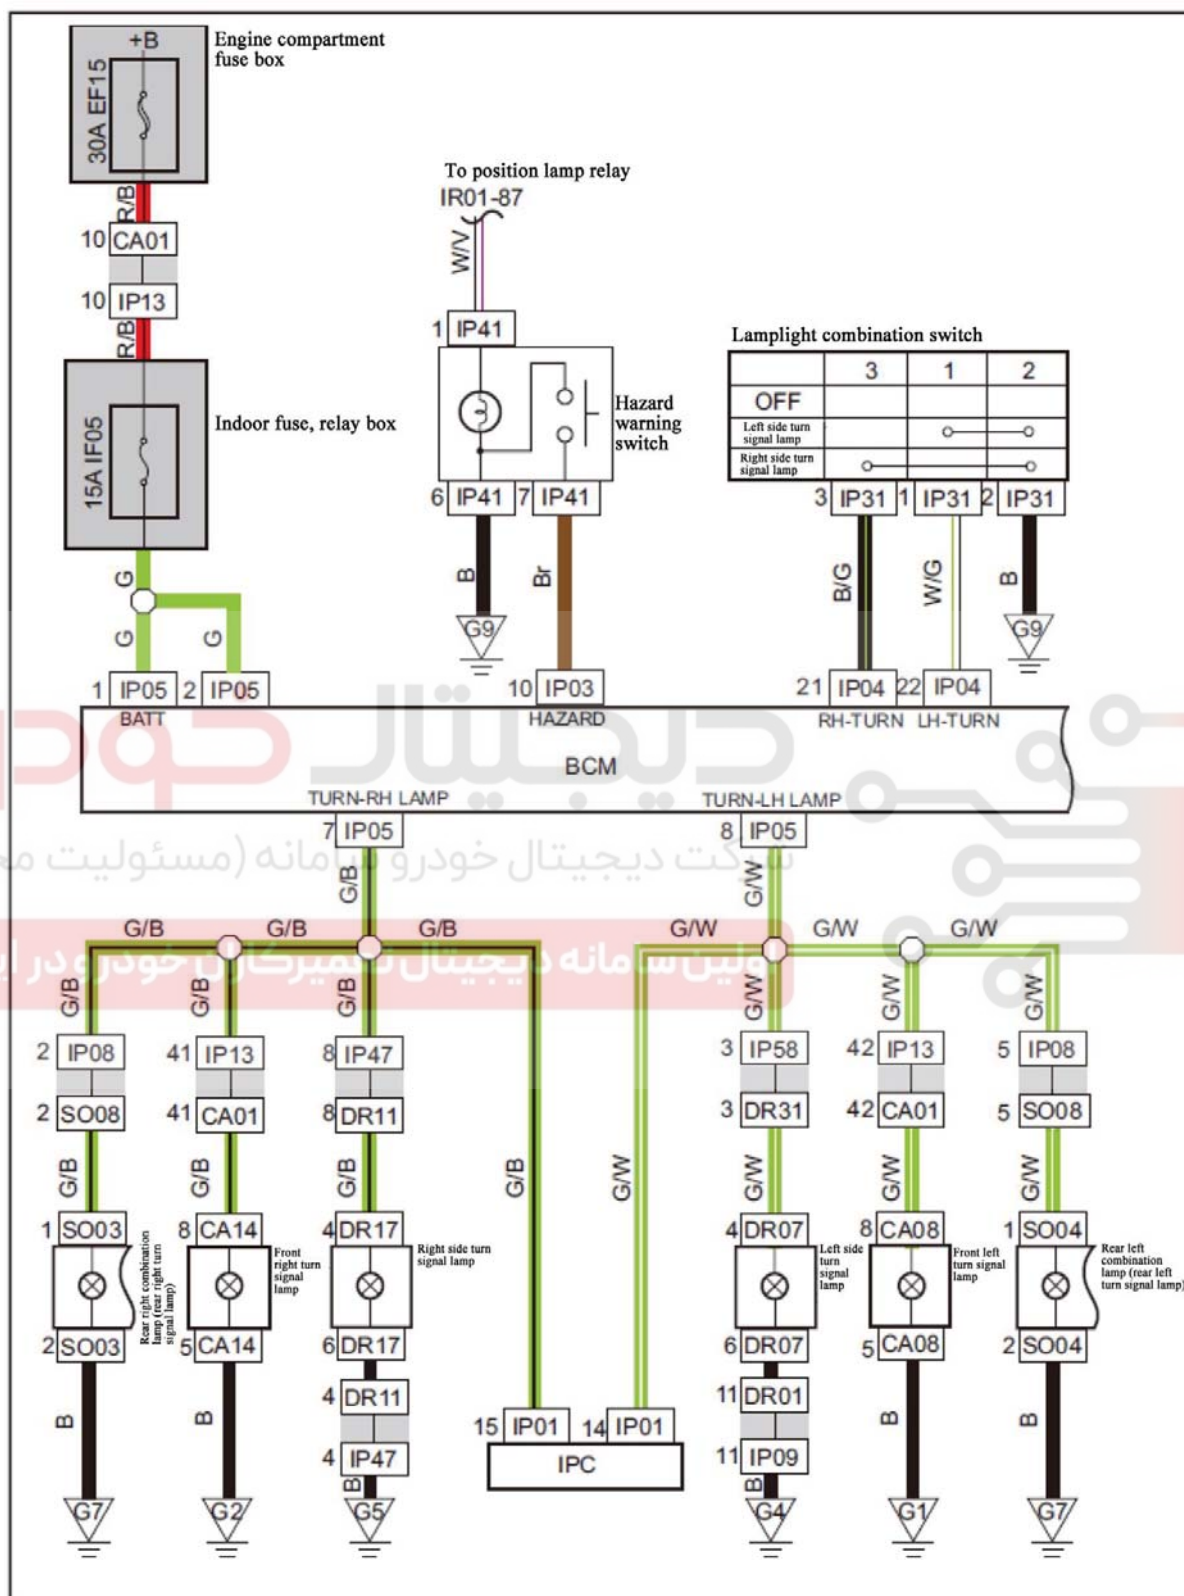

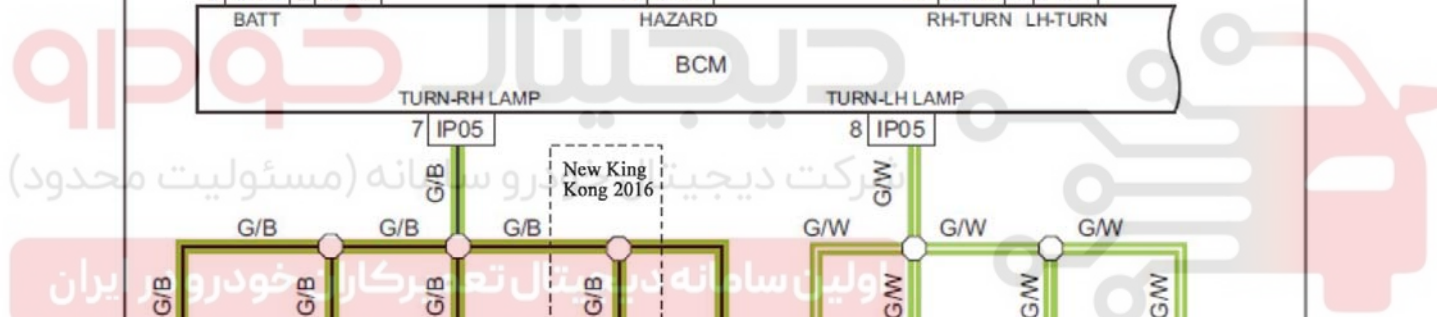

Harness connector	Name	Page
CA01	To instrument harness connector	33
CA08	Front left combination headlamp harness connector	32
CA14	Front right combination headlamp harness connector	32
IP01	Combination instrument harness connector	54
IP03	BCM harness connector A1	54
IP04	BCM harness connector A2	54
IP05	BCM harness connector B	54
IP08	To floor harness connector B	54
IP09	To front left door harness connector A	54
IP13	To engine compartment harness connector	54
IP31	Left combination switch harness connector	54
IP41	Middle switch harness connector	54
IP47	To front right door harness connector A	54
IP58	To front left door harness connector C	54
IP85	To front left door harness connector B (GC6)	54
SO03	Right rear combination lamp harness connector	65
SO04	Rear left combination lamp harness connector	65
SO08	To instrument panel harness connector B	65
DR01	Driver side door connected to instrument harness connector A	71
DR07	Left power rearview mirror harness connector	71
DR11	Passenger side door connected to instrument harness connector A	71
DR17	Right power rearview mirror harness connector	71
DR31	Driver side door connected to instrument harness connector C	71
G1	Engine compartment grounding	80
G2	Engine compartment grounding	80
G4	Instrument panel grounding	84
G5	Instrument panel grounding	84
G7	Floor grounding	85
G9	Instrument panel grounding	84

Connection point	Description	Page
IP41-1	To position lamp relay IR01-87	234