


## Position lamp

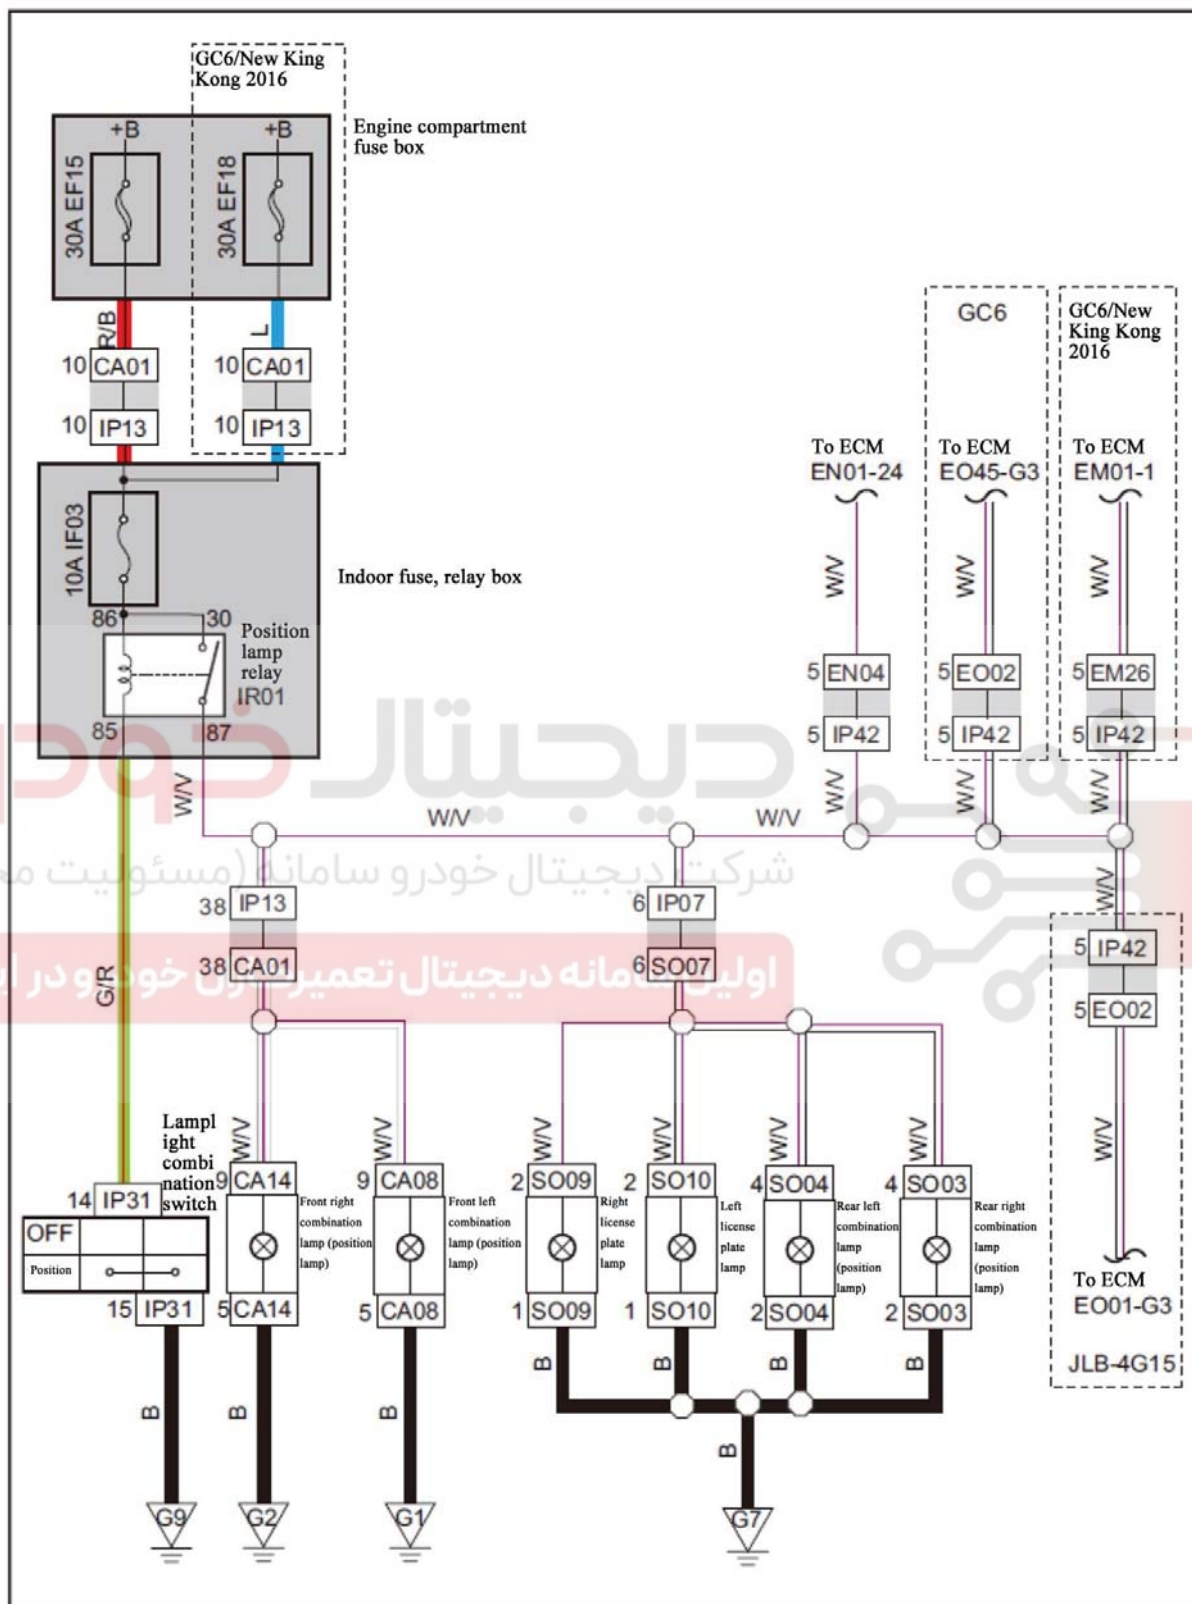

| Harness connector | Name                                               | Page |
|-------------------|----------------------------------------------------|------|
| CA01              | To instrument harness connector                    | 33   |
| IP13              | To engine compartment harness connector            | 54   |
| IP07              | To floor harness connector A                       | 54   |
| SO07              | To instrument panel harness connector A            | 65   |
| IP42              | To engine harness connector                        | 54   |
| EN04              | To instrument harness connector                    | 39   |
| EO02              | To instrument harness connector                    | 49   |
| EO45              | Engine control module A harness connector (GC6)    | 49   |
| IP31              | Left combination switch harness connector          | 54   |
| CA14              | Front right combination headlamp harness connector | 32   |
| CA08              | Front left combination headlamp harness connector  | 32   |
| SO09              | Right license plate lamp harness connector         | 65   |
| SO10              | Left license plate lamp harness connector          | 65   |
| SO04              | Rear left combination lamp harness connector       | 65   |
| SO03              | Right rear combination lamp harness connector      | 65   |
| G1                | Engine compartment grounding                       | 80   |
| G2                | Engine compartment grounding                       | 80   |
| G7                | Floor grounding                                    | 85   |
| G9                | Instrument grounding                               | 84   |

| Connection point | Description    | Page |
|------------------|----------------|------|
| IR01-87          | To ECM EN01-27 | 129  |
|                  | To ECM EO01-G3 | 154  |