


seat belts / air bags

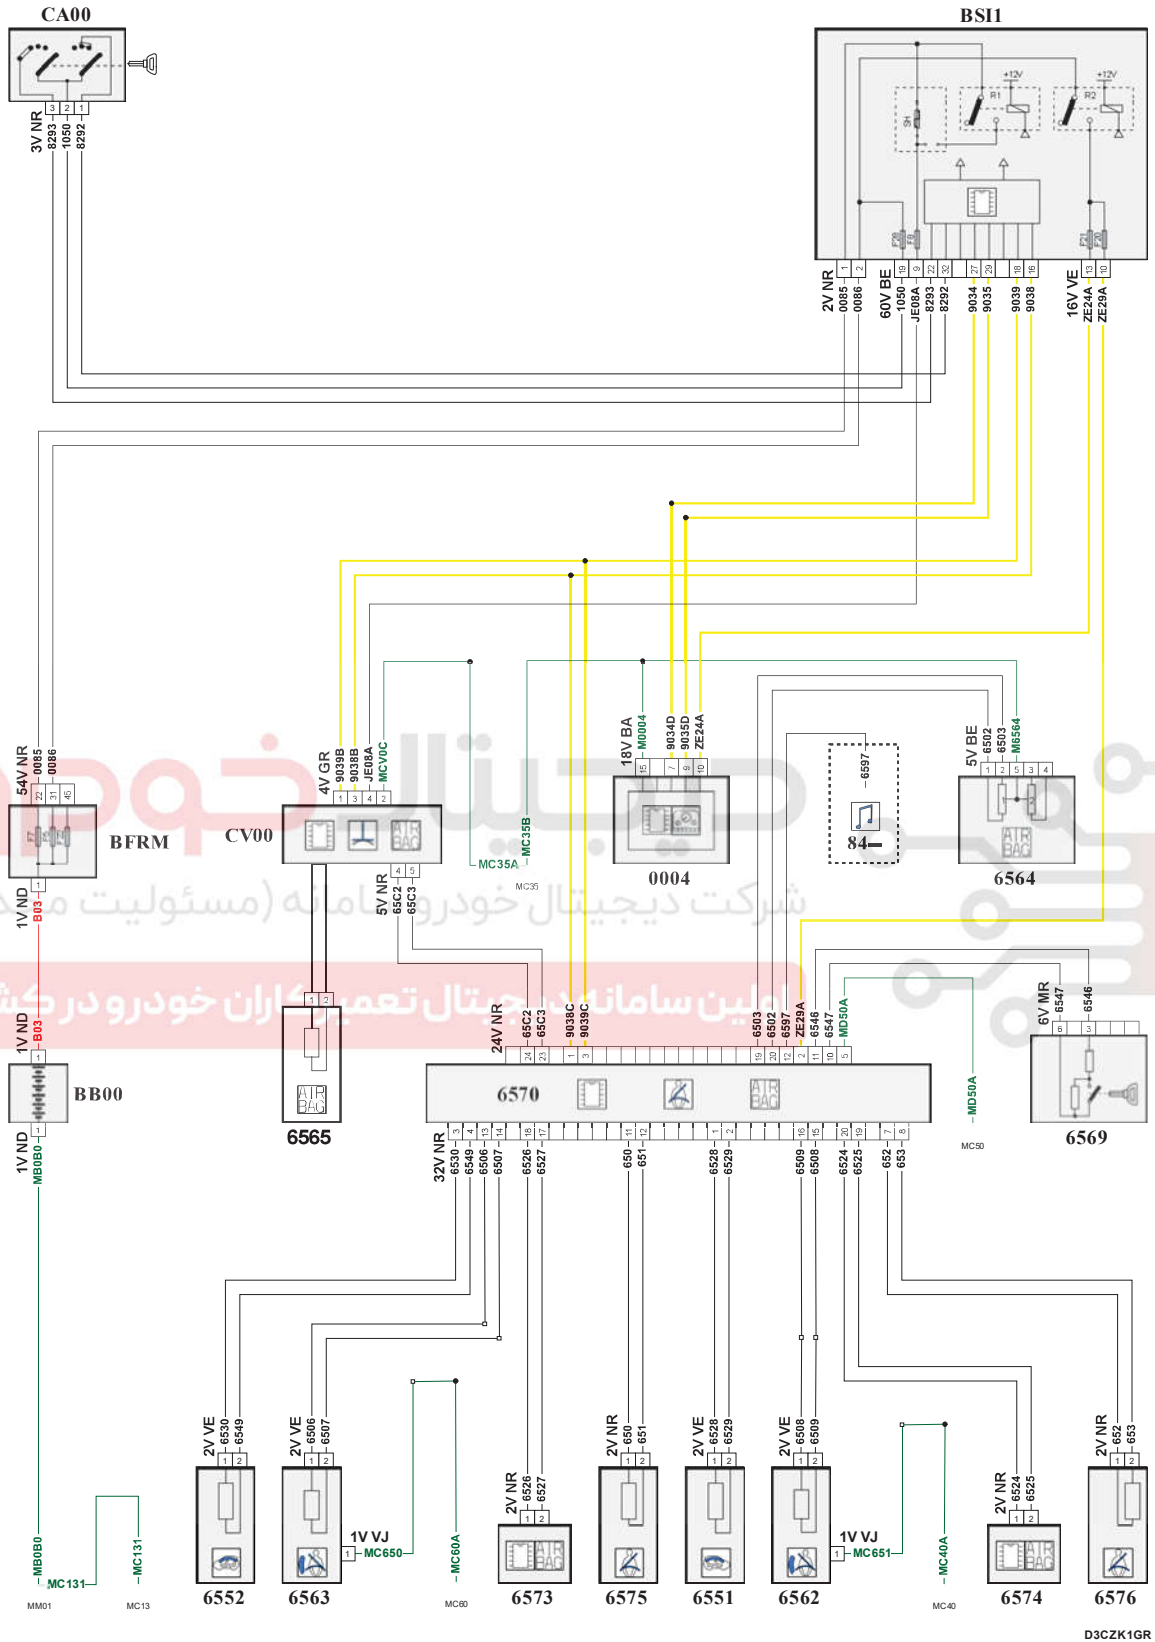

## seat belts / air bags

item code	description	information
0004	null	/ instrument panel
6551	null	curtain type right-hand side airbag
6552	null	curtain type left-hand side airbag
6562	null	chest type right-hand side airbag
6563	null	chest type left-hand side airbag
6564	null	front passenger's airbag
6569	null	passenger's airbag deactivation switch
6570	null	airbags and pretensioners ECU
6573	null	left-hand lateral acceleration sensor /
6574	null	right-hand lateral acceleration sensor /
6575	null	front left pyrotechnic pretensioner
6576	null	front right pyrotechnic pretensioner
84C4	null	independent telematic unit
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E904	null	crimp one information (or equipotential 904) wire
E905	null	crimp one information (or equipotential 905) wire
E907	null	crimp one information (or equipotential 907) wire
E908	null	crimp one information (or equipotential 908) wire
EM35A	null	crimp earth (earth point number 35A)
EM35B	null	crimp earth (earth point number 35B)
EM40	null	crimp earth (earth point number 40)
EM60	null	crimp earth (earth point number 60)
MC13	null	body earth point number 13
MC35A	null	body earth point number 35
MC40A	null	body earth point number 40
MC50B	null	body earth point 50B
MC60A	null	body earth point number 60
MM01	null	engine earth point number 01