 


HARNESS CONNECTOR EB67BAB5

 
Harness Connectors (1)

CC-1

CLGIG

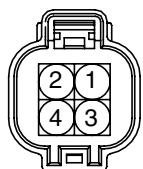


KUM_KNWMP_04F_Gr

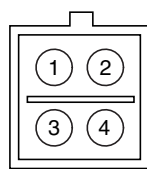


KUM_NMWP_04M_Gr

 CLGINJ

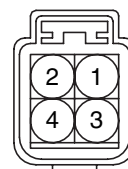


KUM_NMWP_04F_B

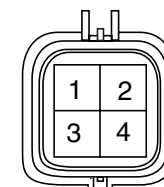 


KUM_NMWP_04M_B

 CLGOCV

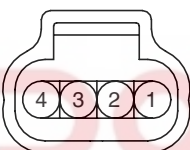


PKD_GT150_04F_Gr

 


PKD_GT150_04M_Gr

 EC01

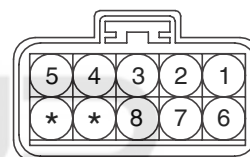


KUM_NMWP_10F_B

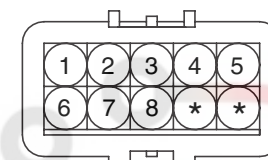 

KUM_NMWP_10M_B

 EC11

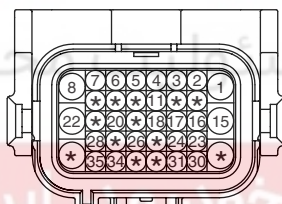


AMP_MTIJPT_36F_B




AMP_MTIJPT_36M_B

 EF11

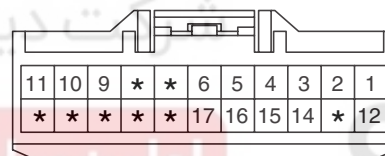


AMP_090III_22F_W

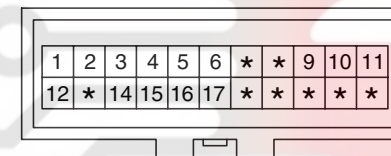 


AMP_090III_22M_W

 EF21

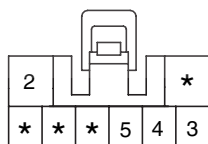


KET_2507_08F_W

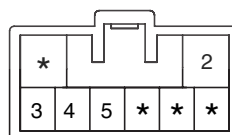 


KET_2507_08M_W

 EM11

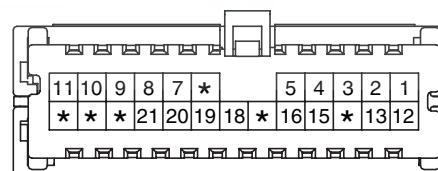


KET_040III_24F_GR

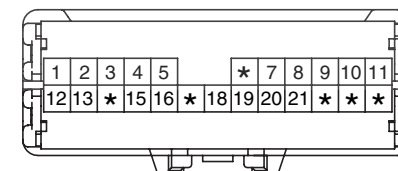 


KET_040III_24M_GR

 EM21

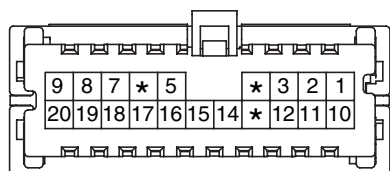


KET_040III_20F_W

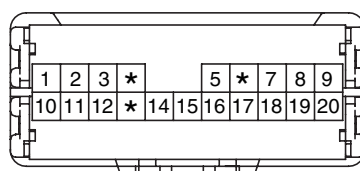 


KET_040III_20M_W

 EM31

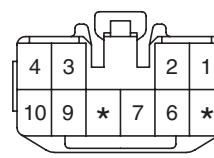

KET_090III_10F_W

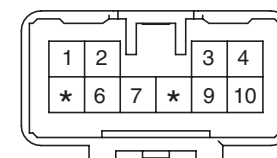 


KET_090III_10M_W

HARNESS CONNECTOR


Harness Connectors (2)

CC-2

 FA01

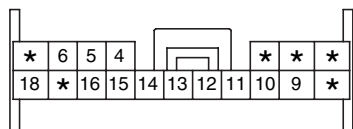


KUM_2504HY_18F_B

 


KUM_2504HY_18M_B

 FD11

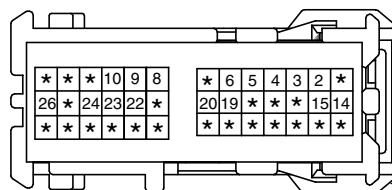


KET_LIF0409_39F_W

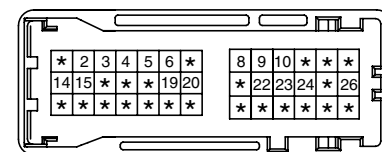 


KET_LIF0409_39M_W_DR

 FD12

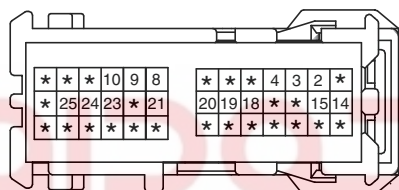


KET_LIF0409_39F_W

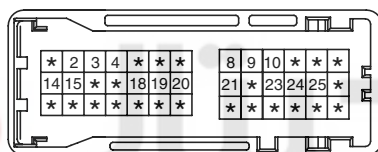 


KET_LIF0409_39M_W_DR

 FD21

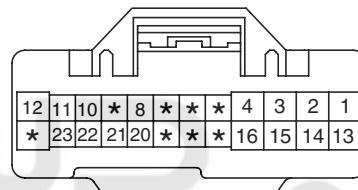


KET_0409_24F_W

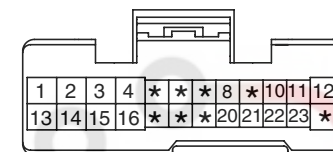 


KET_0409_24M_W

 FD22

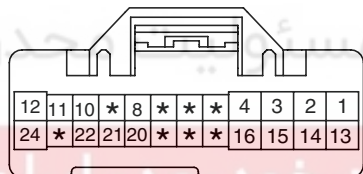


KET_0409_24F_W

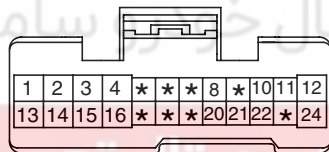 


KET_0409_24M_W

 FF02

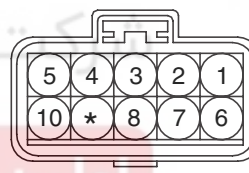


KUM_NMWP_10F_B

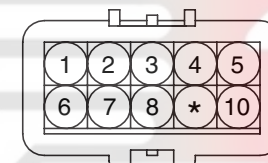 


KUM_NMWP_10M_B

 FF11

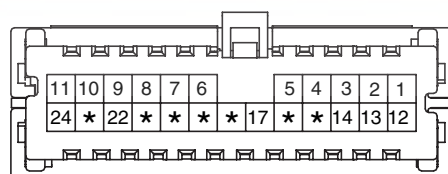


KET_040III_24F_GR

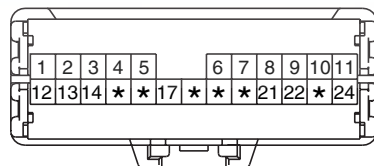 


KET_040III_24M_GR

 FF21

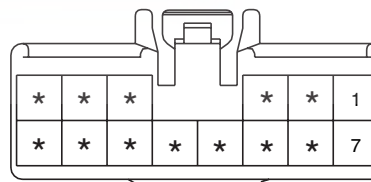


KET_090III_14F_B

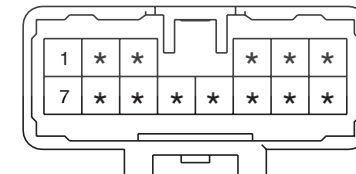 


KET_090III_14M_B

 FF31

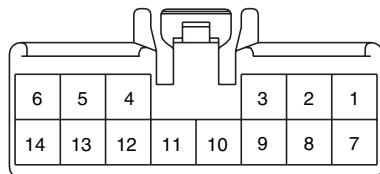


KET_090III_14F_B

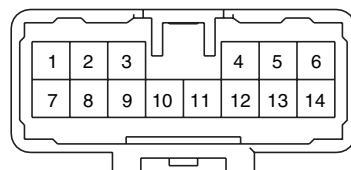 


KET_090III_14M_B

 FR11

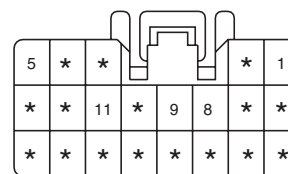

KET_050_21F_W

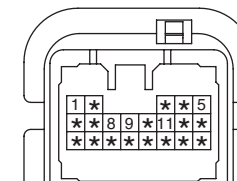 


KET_18905_21M_W

HARNESS CONNECTOR


Harness Connectors (3)

CC-3

 FR21

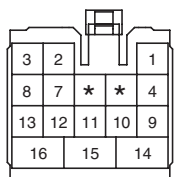


KET_090II_16F_Lg_DR

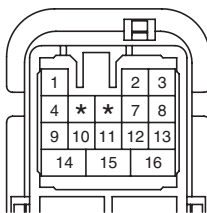 


KET_18905_16M_W

 FR41

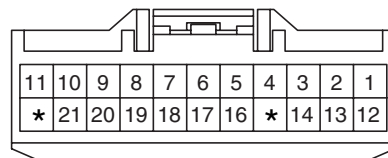

AMP_090III_22F_W

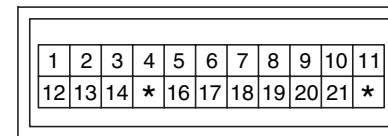 

AMP_090III_22M_W

FR71




KUM_NMWP_04F_Gr




KUM_NMWP_04M_Gr

 FS01

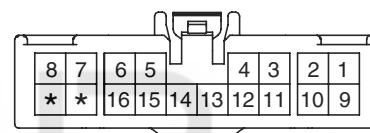


KET_090III_18F_W

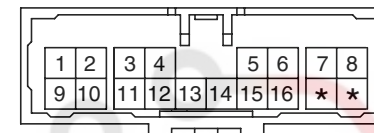 

KET_090III_18M_W

 FS02

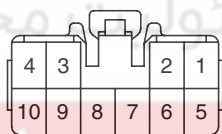


KET_090III_10F_W



KET_090III_10M_W

 FS03

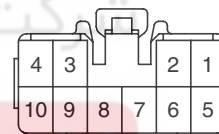


KET_090III_10F_W




KET_090III_10M_W

 MA01

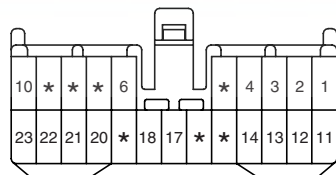


KET_050_23F_W

 


KET_050_23M_W

 MF21

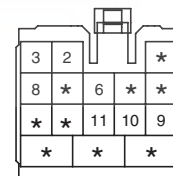


KET_090II_16F_Lg_DR

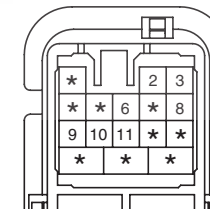 


KET_18905_16M_W

 MF31

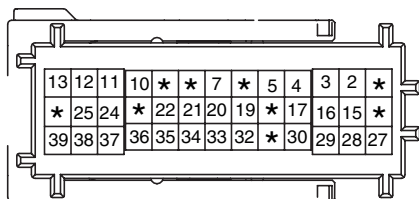


AMP_0409LIF_39F_W_A

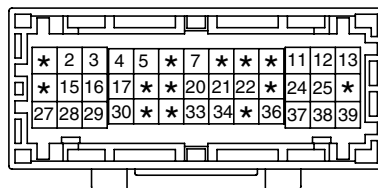 


AMP_0409LIF_39M_W_A

 MF51

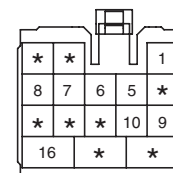

KET_090II_16F_Lg_DR

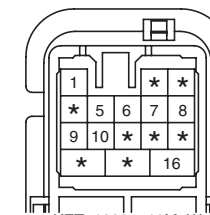 


KET_18905_16M_W

HARNESS CONNECTOR


Harness Connectors (4)

CC-4

 MF61

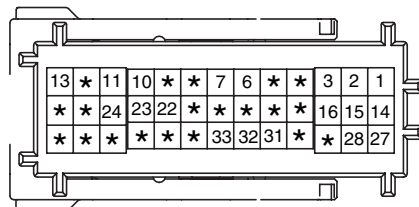


AMP_0409LIF_39F_W_A

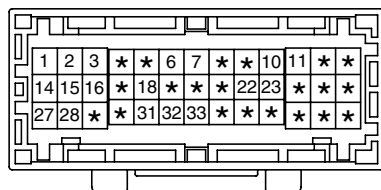 


AMP_0409LIF_39M_W_A

 MM01

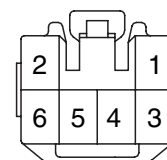


KET_090II_06F_W

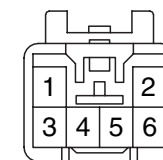 


KET_090II_06M_W

 MM11

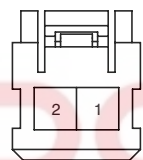

AMP_090III_02F_W

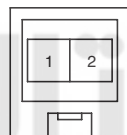 

AMP_090III_02M_W

 
BLANK

FRONT AREA MODULE (FAM) E43668AC

Front Area Module (FAM) (1)


CC-5

BCM-FC

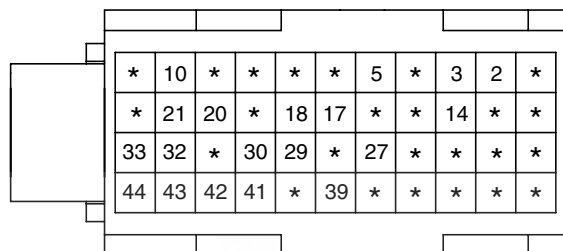


PKD_BCM_44F_B

 BCM-FE

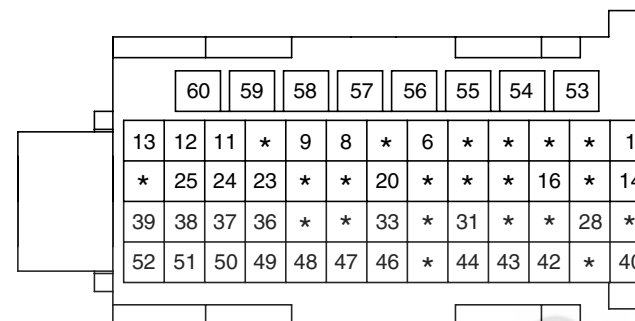


PKD_BCM_60F_B

 BEC-FC

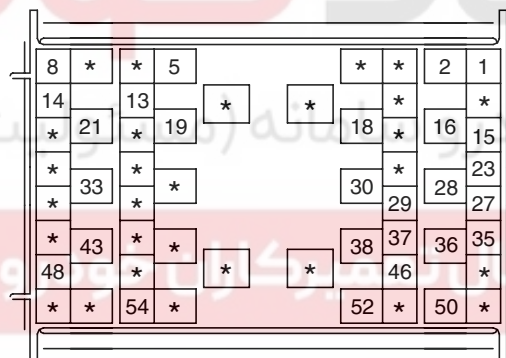


PKD_PE_56F_B_2

 BEC-FE

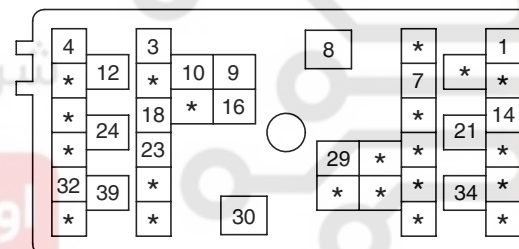

PKD_PE_40F_GR

 BEC-FF

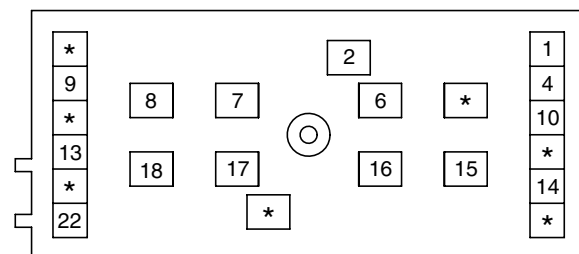

PKD_PE_22F_B

BLANK

 
IN-PANEL MODULE (IPM)

ED88EDC3

In-Panel Module (IPM) (1)


CC-6

BCM-IF

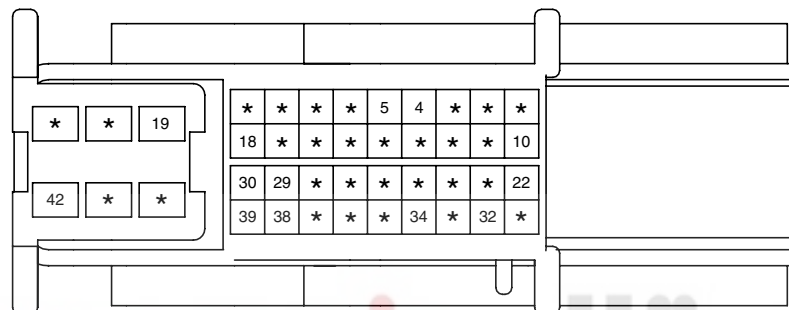


PKD_BCM_42F_B

 BCM-IM

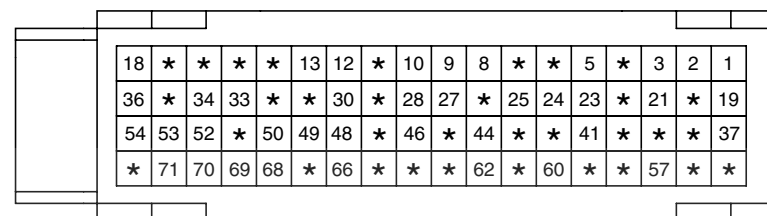


PKD_BCM_72F_GR

 BEC-IA

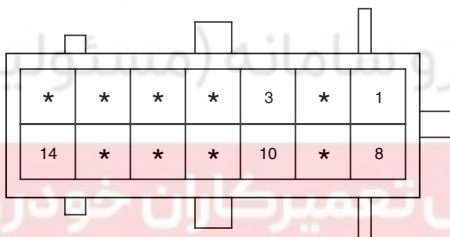


PKD_GT150_14F_Y_MIX

 BEC-IF

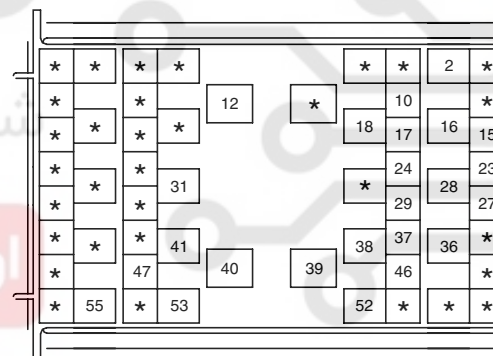

PKD_PE_56F_B_3

 BEC-IM

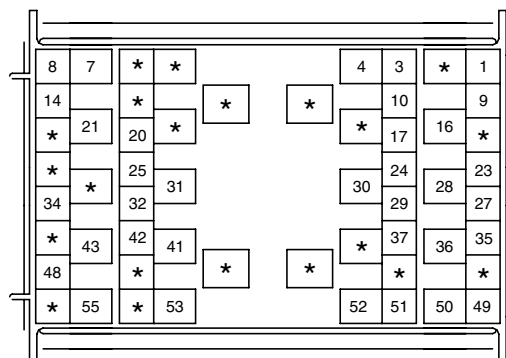

PKD_PE_56F_GR

BLANK

E85F21CA

CC-7

PKD BCM 42F GR

PKD BCM 42F B

 
 
 
 
 
 
 
 
 
 
 
PKD_ASM_16F_B_01

PKD_PE_56F_B

PKD_MIX_14F_B_ABG

PKD_MIX_14F_GR_ABG


JOINT CONNECTOR EADE2247

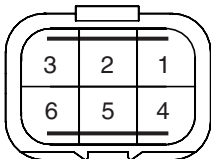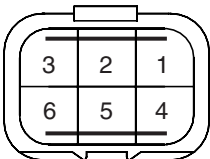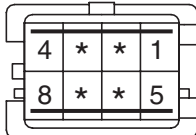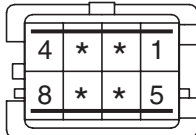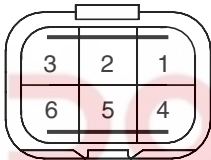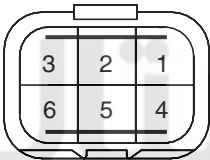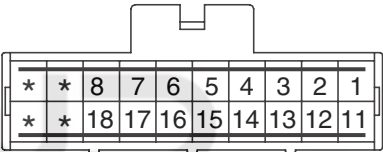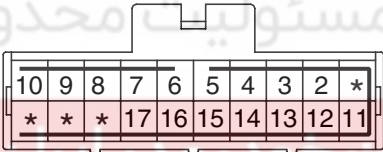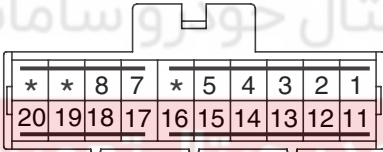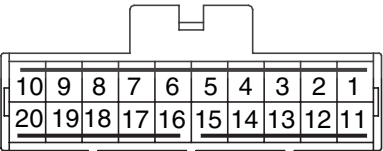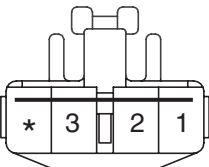Joint Connectors (1)				CC-8
CJG4WD  KET_090IWP_06F_B_JCH	CJGTCU  KET_090IWP_06F_B_JCH	JD01  KET_070_08F_B_JCH	JD02  KET_070_08F_B_JCH	
JE01  KET_090IWP_06F_B_JCH	JE02  KET_090IWP_06F_B_JCH	JF01  KET_090II_20F_B_JCH	JF02  KET_070_08F_B_JCH	
JM01  KET_090II_20F_B_JCH	JM02  KET_090II_20F_B_JCH	JM03  KET_070_08F_B_JCH	JM04  KET_070_08F_B_JCH	
JS01  KET_090II_20F_B_JCH	JS02  KET_090II_04F_B	BLANK	BLANK	

MAIN HARNESS E7FF32C3

Main Harness (1)

 HL-1

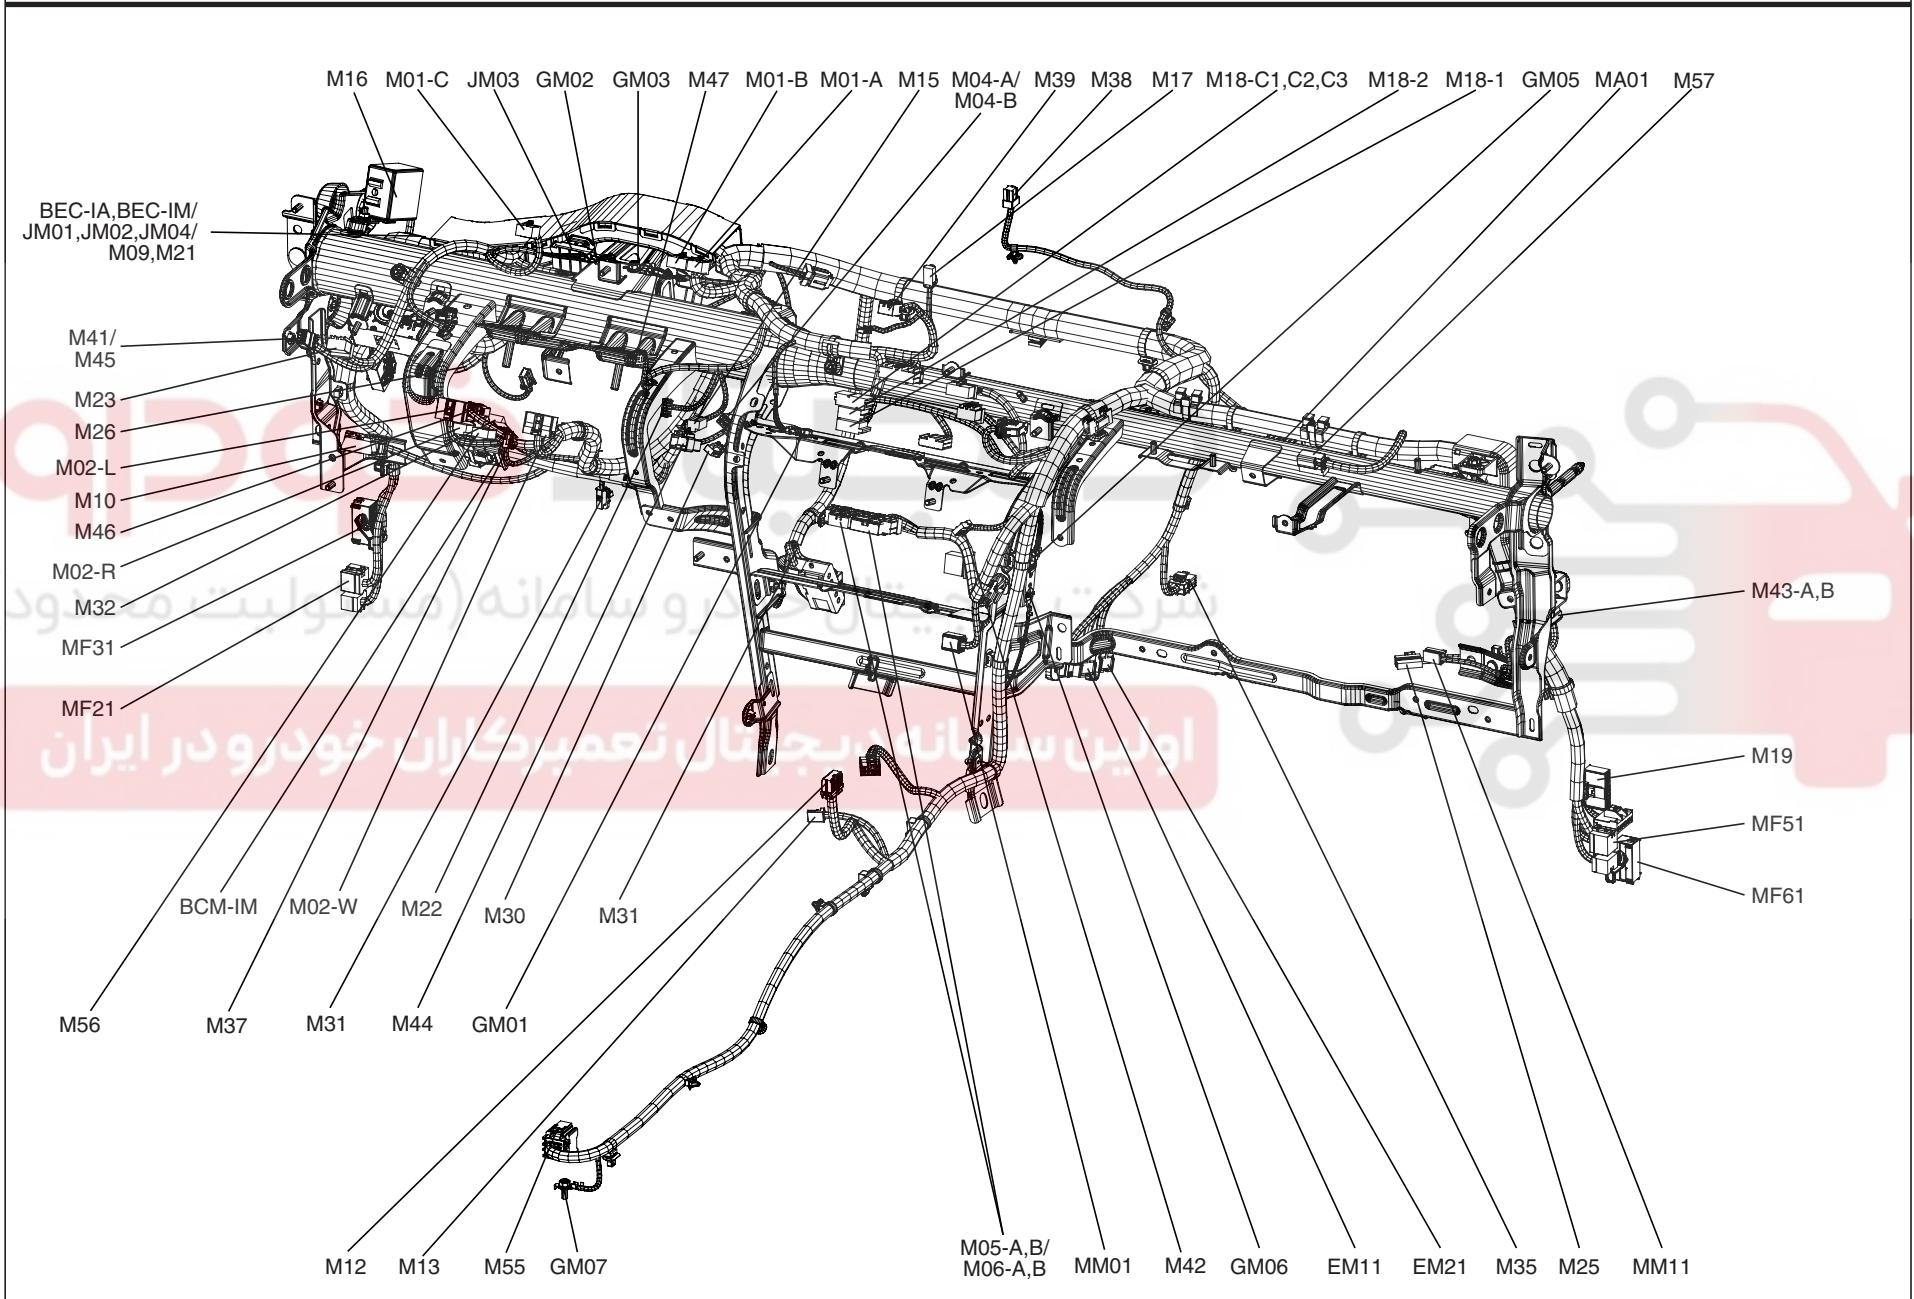

MAIN HARNESS

Main Harness (2)

HL-2

MAIN HARNESS

M01-A	Instrument cluster	M30	Ignition key ill. & Door warning switch	MM01	Connection with POWER OUTLET harness
M01-B	Instrument cluster	M31	Telescopic motor & sensor	MM11	Connection with GLOVE BOX harness
M01-C	Instrument cluster	M32	Tilt motor & sensor	GM01	Ground
M02-L	Multifunction switch(Light)	M35	Front FET(Field effect transistor)	GM02	Ground
M02-R	Multifunction switch(Remocon)	M37	Steering angle sensor	GM03	Ground
M02-W	Multifunction switch(Wiper)	M38	Auto light & photo sensor	GM05	Ground
M04-A	PDM	M39	Hazard switch	GM06	Ground
M04-B	PDM	M41	Head lamp leveling switch	GM07	Ground
M05-A	Front A/C control module (Auto)	M43-A	Tilt & Telescopic module		
M05-B	Front A/C control module (Auto)	M43-B	Tilt & Telescopic module		
M06-A	Front A/C control module (Manual)	M42	Incar temperature sensor		
M06-B	Front A/C control module (Manual)	M44	Ignition switch		
M08-A	PDM relay box	M45	Rheostat	M49	Cigarette lighter ILL.
M08-B	PDM relay box	M46	Steering tilt & Telescopic switch	M50	Ashtray ILL.
M09	Immobilizer module	M47	Trip switch	M51	Cigarette lighter
M10	Data link connector	M55	SRS control module	M52	Front power outlet
M11-A	Smart key control module	M56	Driver air bag	MM01	Connection with MAIN harness
M11-B	Smart key control module	M57	Passenger air bag		
M12	Audio jack(AUX & USB)	M58	Audio remocon switch(Left)		
M13	Smart key antenna (Interior 1)	M59	Cruise remocon switch(Right)		
M14	ESCL controller	JM01	Joint connector		
M15	Fob holder	JM02	Joint connector		
M16	Adjustable pedal relay	JM03	Joint connector		
M17	Center speaker (JBL)	JM04	Joint connector		
M18-A	Audio	BCM-IM	Connection with IPM harness		
M18-B	Audio	BEC-IM	Connection with IPM harness		
M18-C1	Audio	BEC-IA	Connection with IPM harness		
M18-C2	Audio	EM11	Connection with FRONT harness		
M18-C3	Audio	EM21	Connection with FRONT harness		
M19	Relay box	EM31	Connection with FRONT harness		
M21	RF receiver	MA01	Connection with A/C harness		
M22	Start stop button switch	MF21	Connection with FLOOR harness		
M23	Crash pad switch LH	MF31	Connection with FLOOR harness		
M25	Front blower motor	MF51	Connection with FLOOR harness		
M26	Rear parking assist buzzer	MF61	Connection with FLOOR harness		

POWER OUTLET HARNESS

M49	Cigarette lighter ILL.
M50	Ashtray ILL.
M51	Cigarette lighter
M52	Front power outlet
MM01	Connection with MAIN harness


GLOVE BOX HARNESS

M53	Glove box ILL.
M54	Glove box switch
MM11	Connection with MAIN harness

FRONT HARNESS EDC00458

Front Harness (1)

 HL-3

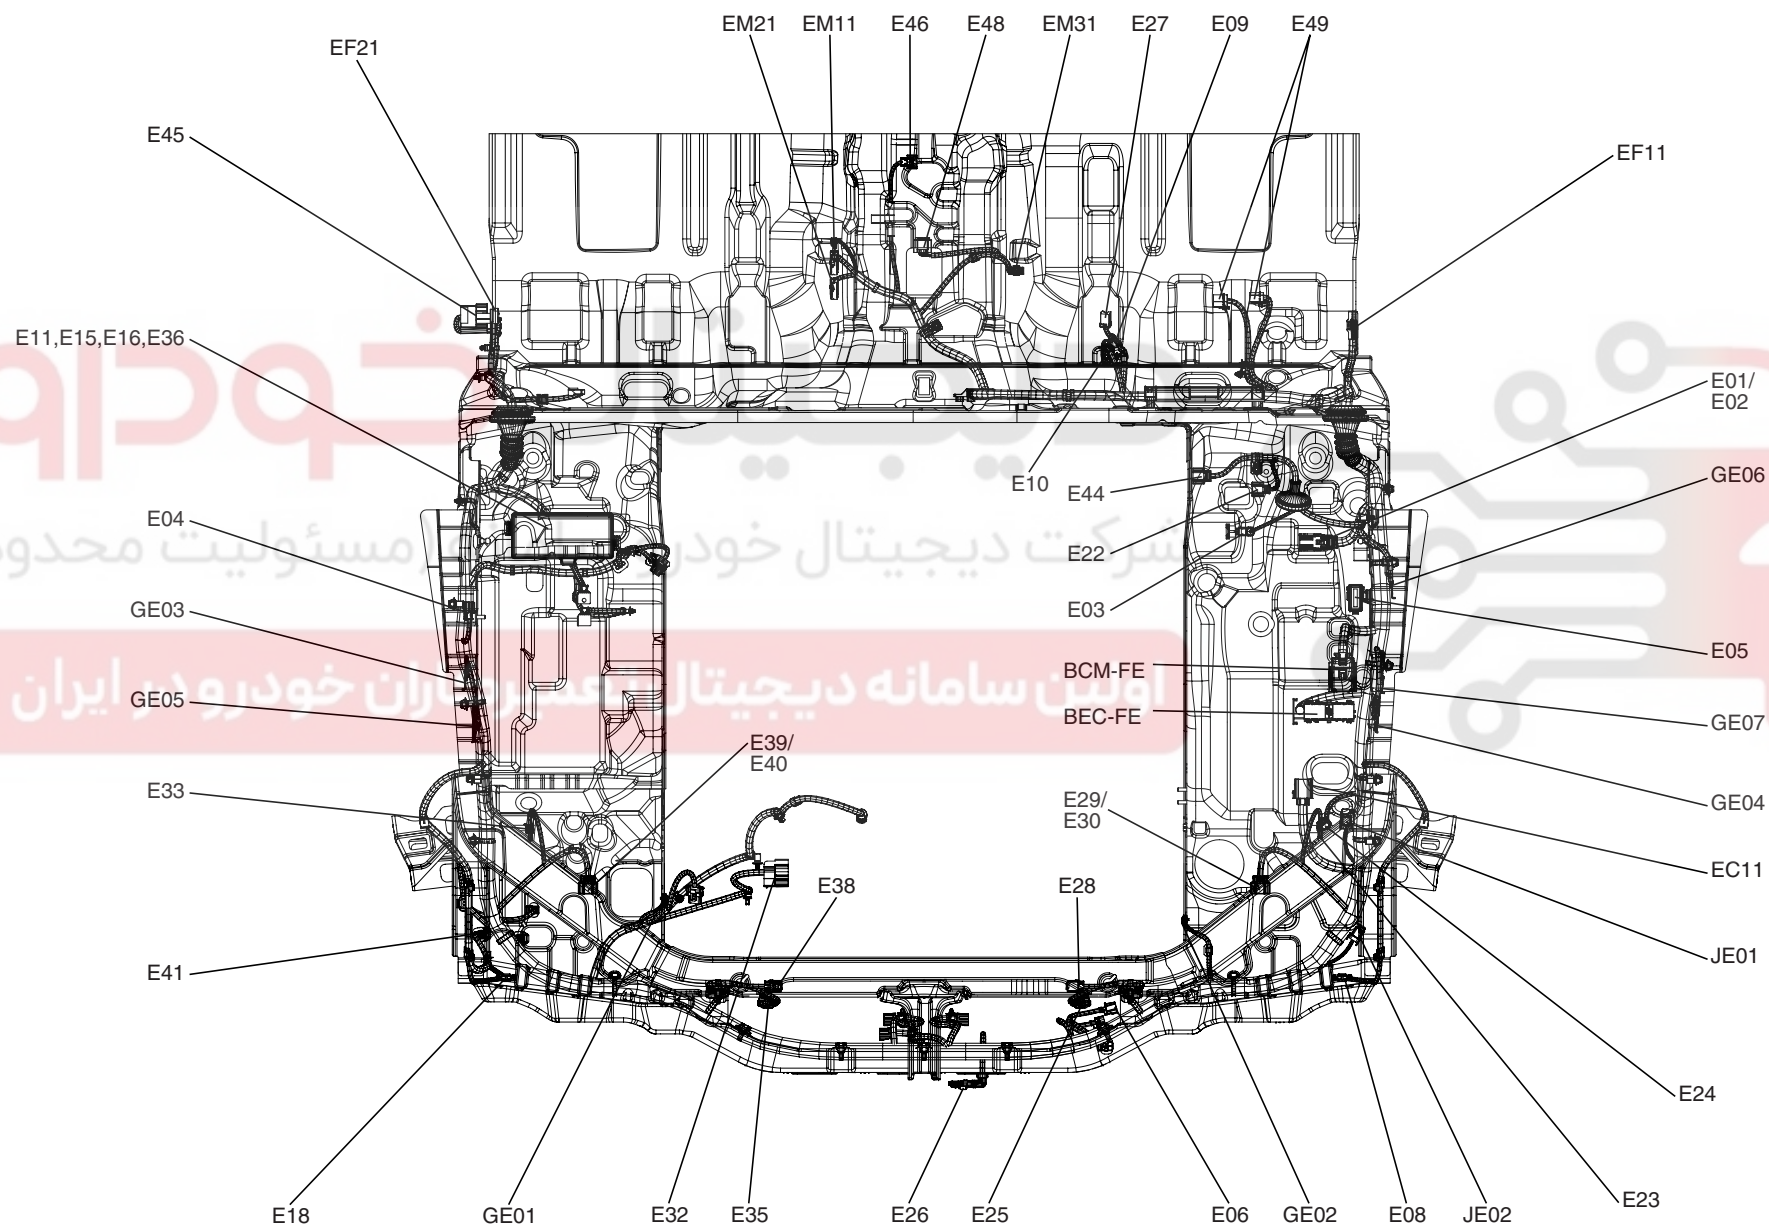

FRONT HARNESS

Front Harness (2)

HL-4

FRONT HARNESS


E01	ABS control module	JE01	Joint connector
E02	ESP control module	JE02	Joint connector
E03	Brake fluid sensor	BCM-FE	Connection with FAM harness
E04	Burglar horn	BEC-FE	Connection with FAM harness
E05	Multipurpose check connector	EC11	Connection with CONTROL harness
E06	A/C pressure transducer	EF11	Connection with FLOOR harness
E08	Front fog lamp LH	EF21	Connection with FLOOR harness
E09	Accel pedal position sensor(With adjustable pedal)	EM11	Connection with MAIN harness
E10	Accel pedal position sensor(W/O adjustable pedal)	EM21	Connection with MAIN harness
E11	Air suspension relay	EM31	Connection with MAIN harness
E15	C/fan low relay	GE01	Ground
E16	DBC relay	GE02	Ground
E18	Front fog lamp RH	GE03	Ground
E22	Windshield defogger	GE04	Ground
E23	Head lamp leveling actuator LH	GE05	Ground
E24	Hood switch	GE06	Ground
E25	Horn LH	GE07	Ground
E26	Ambient sensor		
E27	Adjustable pedal motor		
E28	Front impact sensor LH		
E29	Head lamp LH		
E30	Head lamp LH (HID)		
E32	Cooling fan		
E33	Head lamp leveling actuator RH		
E35	Horn RH		
E36	C/fan HI relay		
E38	Front impact sensor RH		
E39	Head lamp RH		
E40	Head lamp RH (HID)		
E41	Washer motor		
E44	Front wiper motor		
E45	Relay box		
E46	G-sensor		
E48	Yaw rate sensor		
E49	Stop lamp switch		
E53	Washer level sensor		

BATTERY HARNESS EBFCB3C7


Battery Harness (1)

HL-5


 
G6DA-GSL 3.8L

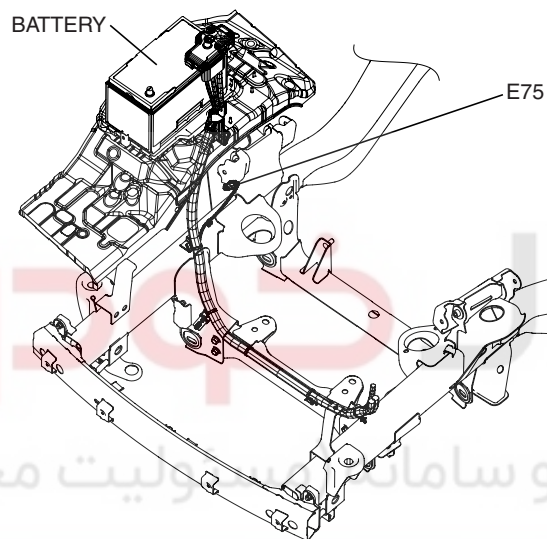

VIEW 'A'

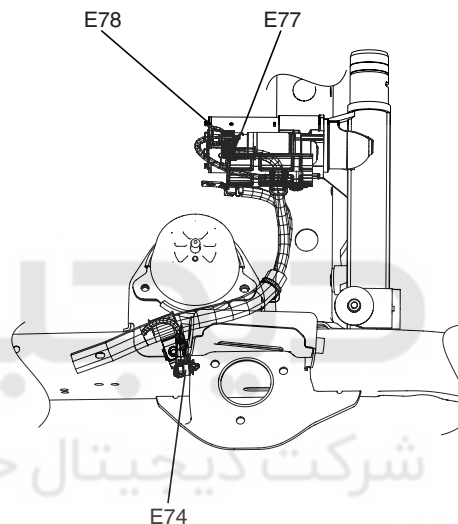 

VIEW 'B'

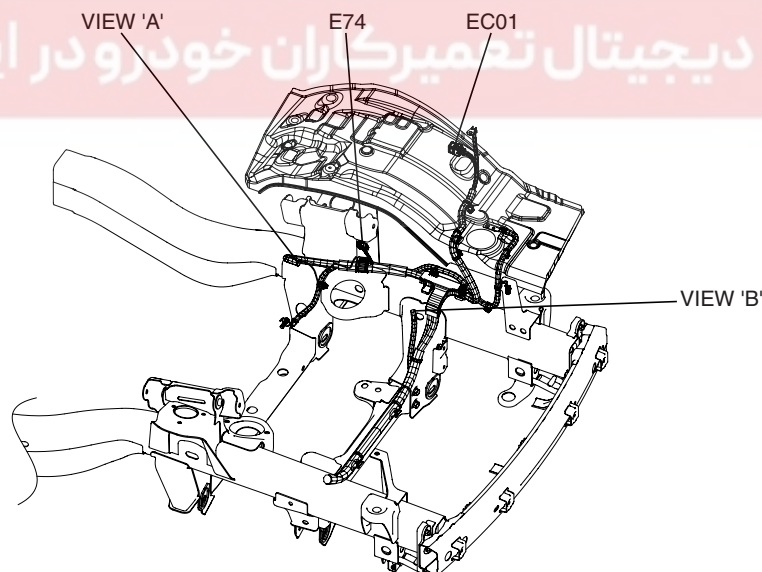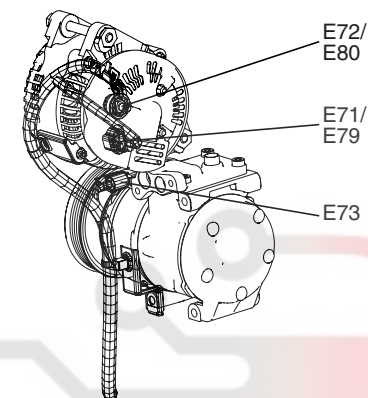  

BATTERY HARNESS

 
- E71 Generator(W/O Rear A/C)
- E72 Generator(W/O Rear A/C)
- E73 A/C compressor
- E74 Front wheel sensor LH
- E75 Front wheel sensor RH
- E77 Start motor
- E78 Start solenoid
- E79 Generator(With Rear A/C)
- E80 Generator(With Rear A/C)
- EC01 Connection with FRONT harness

FLOOR HARNESS EEEEC3F76


Floor Harness (1)

HL-6


VIEW 'A'

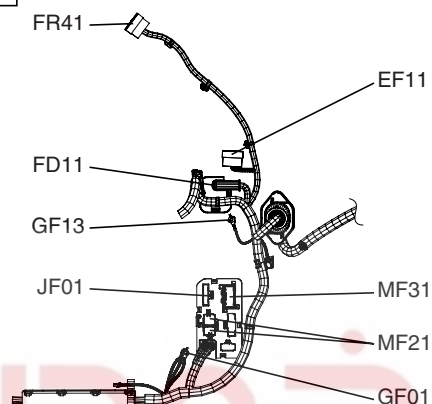


VIEW 'B'

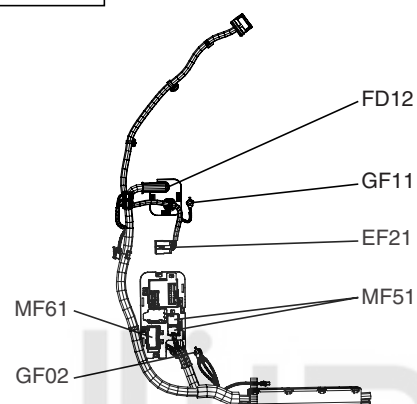 


VIEW 'C'

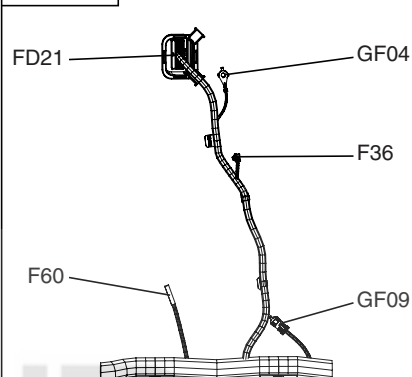 

VIEW 'D'

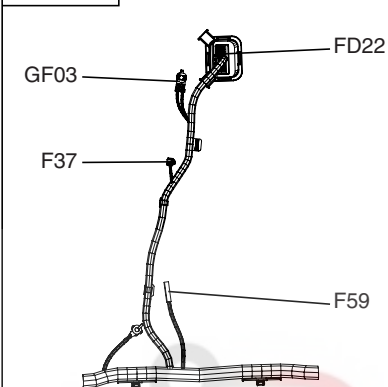 

VIEW 'E'

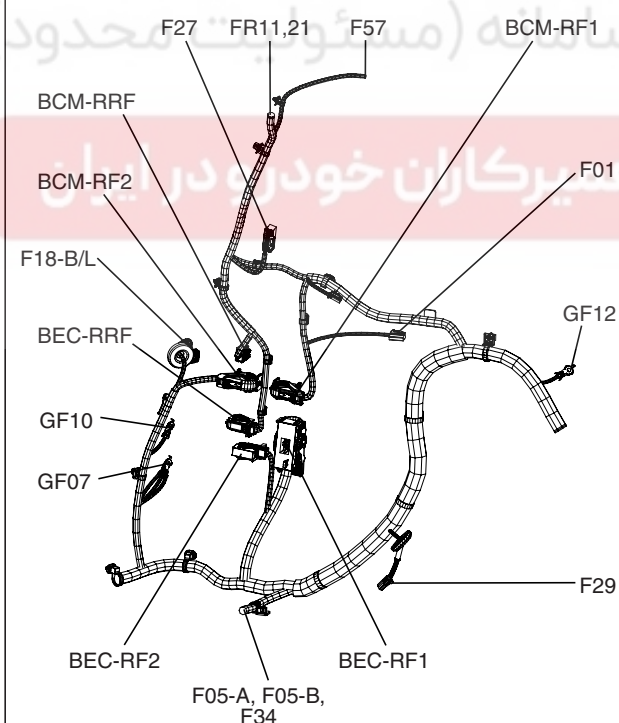 

FLOOR HARNESS


F01	Fuel filler door actuator
F05-A	AMP
F05-B	AMP
F18-B	Rear combination lamp LH (Out)(Bulb)
F18-L	Rear combination lamp LH (Out)(LED)
F27	Rear seat warmer relay
F29	Rear wheel sensor LH
F34	JBL woofer speaker
F36	Driver door switch
F37	Passenger door switch
F57	Curtain air bag LH
F59	Passenger seat belt pretensioner
F60	Driver seat belt pretensioner
JF01	Joint connector
BCM-RF1	Connection with RAM harness
BCM-RF2	Connection with RAM harness
BCM-RRF	Connection with RAM harness
BEC-RF1	Connection with RAM harness
BEC-RF2	Connection with RAM harness
BEC-RRF	Connection with RAM harness
EF21	Connection with FRONT harness
FD11	Connection with DRIVER DOOR harness

FD12	Connection with PASSENGER DOOR harness
FD21	Connection with REAR DOOR LH harness
FD22	Connection with REAR DOOR RH harness
FF11	Connection with CONSOLE harness
FR11	Connection with TAIL GATE harness
FR21	Connection with TAIL GATE harness
FR41	Connection with ROOF harness
MF21	Connection with MAIN harness
MF31	Connection with MAIN harness
MF51	Connection with MAIN harness
GF01	Ground
GF02	Ground
GF03	Ground
GF04	Ground
GF07	Ground
GF09	Ground
GF10	Ground
GF11	Ground
GF12	Ground
GF13	Ground

FLOOR HARNESS

Floor Harness (2)

 HL-7

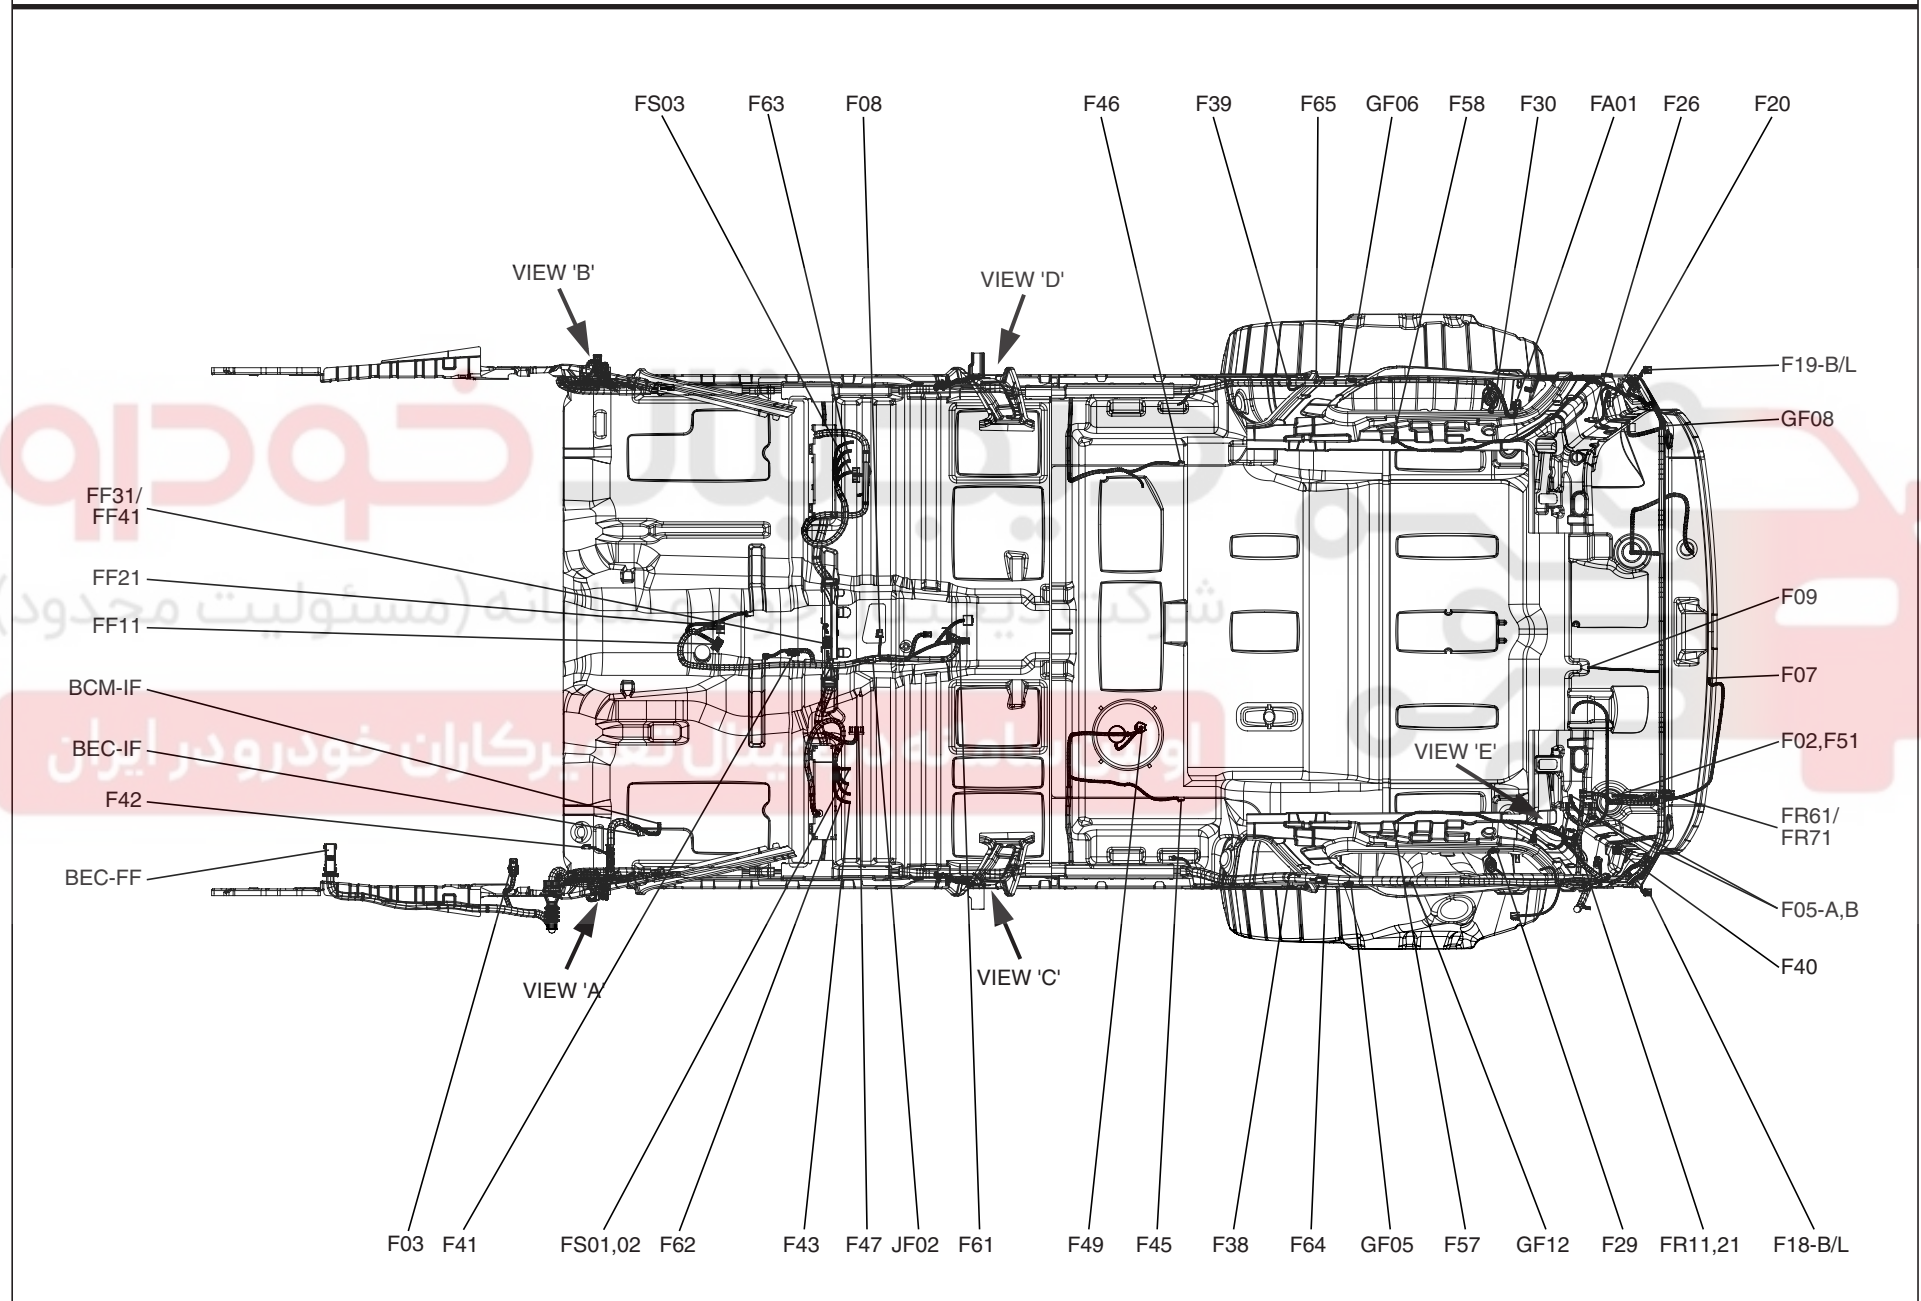

FLOOR HARNESS

Floor Harness (3)

HL-8

FLOOR HARNESS

F01	Fuel filler door actuator	F61	SRS control module	MF21	Connection with MAIN harness
F02	Exhaust valve & Temperature sensor	F62	Driver side air bag	MF31	Connection with MAIN harness
F03	External buzzer	F63	Passenger side air bag	MF51	Connection with MAIN harness
F05-A	AMP	F64	Rear side impact sensor LH	MF61	Connection with MAIN harness
F05-B	AMP	F65	Rear side impact sensor RH	GF01	Ground
F07	Smart key antenna (Bumper)	JF01	Joint connector	GF02	Ground
F08	Smart key antenna (Interior 2)	JF02	Joint connector	GF03	Ground
F09	Smart key antenna (Trunk)	JF03	Joint connector	GF04	Ground
F18-B	Rear combination lamp	BCM-IF	Connection with IPM harness	GF05	Ground
	LH (Out)(Bulb)	BCM-RF1	Connection with RAM harness	GF06	Ground
F18-L	Rear combination lamp	BCM-RF2	Connection with RAM harness	GF07	Ground
	LH (Out)(LED)	BCM-RRF	Connection with RAM harness	GF08	Ground
F19-B	Rear combination lamp	BEC-FF	Connection with FAM harness	GF09	Ground
	RH (Out)(Bulb)	BEC-IF	Connection with IPM harness	GF10	Ground
F19-L	Rear combination lamp	BEC-RF1	Connection with RAM harness	GF11	Ground
	RH (Out)(LED)	BEC-RF2	Connection with RAM harness	GF12	Ground
F20	Luggage lamp	BEC-RRF	Connection with RAM harness	GF13	Ground
F26	Rear power outlet	EF11	Connection with FRONT harness		
F27	Rear seat warmer relay	EF21	Connection with FRONT harness		
F29	Rear wheel sensor LH	FA01	Connection with REAR A/C harness		
F30	Rear wheel sensor RH	FD11	Connection with DRIVER DOOR harness	F75	Rear A/C control module
F34	JBL woofer speaker	FD12	Connection with PASSENGER DOOR harness	F76	Console power outlet
F36	Driver door switch	FD21	Connection with REAR DOOR LH harness	FF11	Connection with FLOOR harness
F37	Passenger door switch	FD22	Connection with REAR DOOR RH harness	FF21	Connection with FLOOR harness
F38	Rear door switch LH	FF02	Connection with AIR SUSPENSION harness		
F39	Rear door switch RH	FF11	Connection with CONSOLE harness		
F40	Rear parking assist control module	FF21	Connection with CONSOLE harness		
F42	Parking brake switch	FF31	Connection with CONSOLE COVER harness		
F43	Seat belt switch	FR11	Connection with TAIL GATE harness		
F44	Sport mode switch	FR21	Connection with TAIL GATE harness		
F45	Rear seat warmer LH	FR41	Connection with ROOF harness		
F46	Rear seat warmer RH	FR61	Connection with BUMPER EXT. harness		
F47	Air suspension control module	FR71	Connection with BUMPER EXT. harness		
F49	Fuel sender & Fuel pump motor	FS01	Connection with FRONT LH SEAT harness (With IMS)		
F51	Air suspension compressor	FS02	Connection with FRONT LH SEAT harness (W/O IMS)		
F57	Curtain air bag LH	FS03	Connection with FRONT RH SEAT harness (W/O IMS)		
F58	Curtain air bag RH				
F59	Passenger seat belt pretensioner				
F60	Driver seat belt pretensioner				

CONSOLE HARNESS

F75	Rear A/C control module
F76	Console power outlet
FF11	Connection with FLOOR harness
FF21	Connection with FLOOR harness

CONSOLE COVER HARNESS

F77	Sport mode switch ILL.
F78	Driver seat warmer switch
F79	Passenger seat warmer switch
FF31	Connection with FLOOR harness

AIR SUSPENSION HARNESS


F82	Rear height sensor LH
F83	Rear height sensor RH
F84	Air suspension solenoid valve
FF02	Connection with FLOOR harness

CONTROL HARNESS EBB8413

Control Harness (1)

HL-9

 G6DA-GSL 3.8L

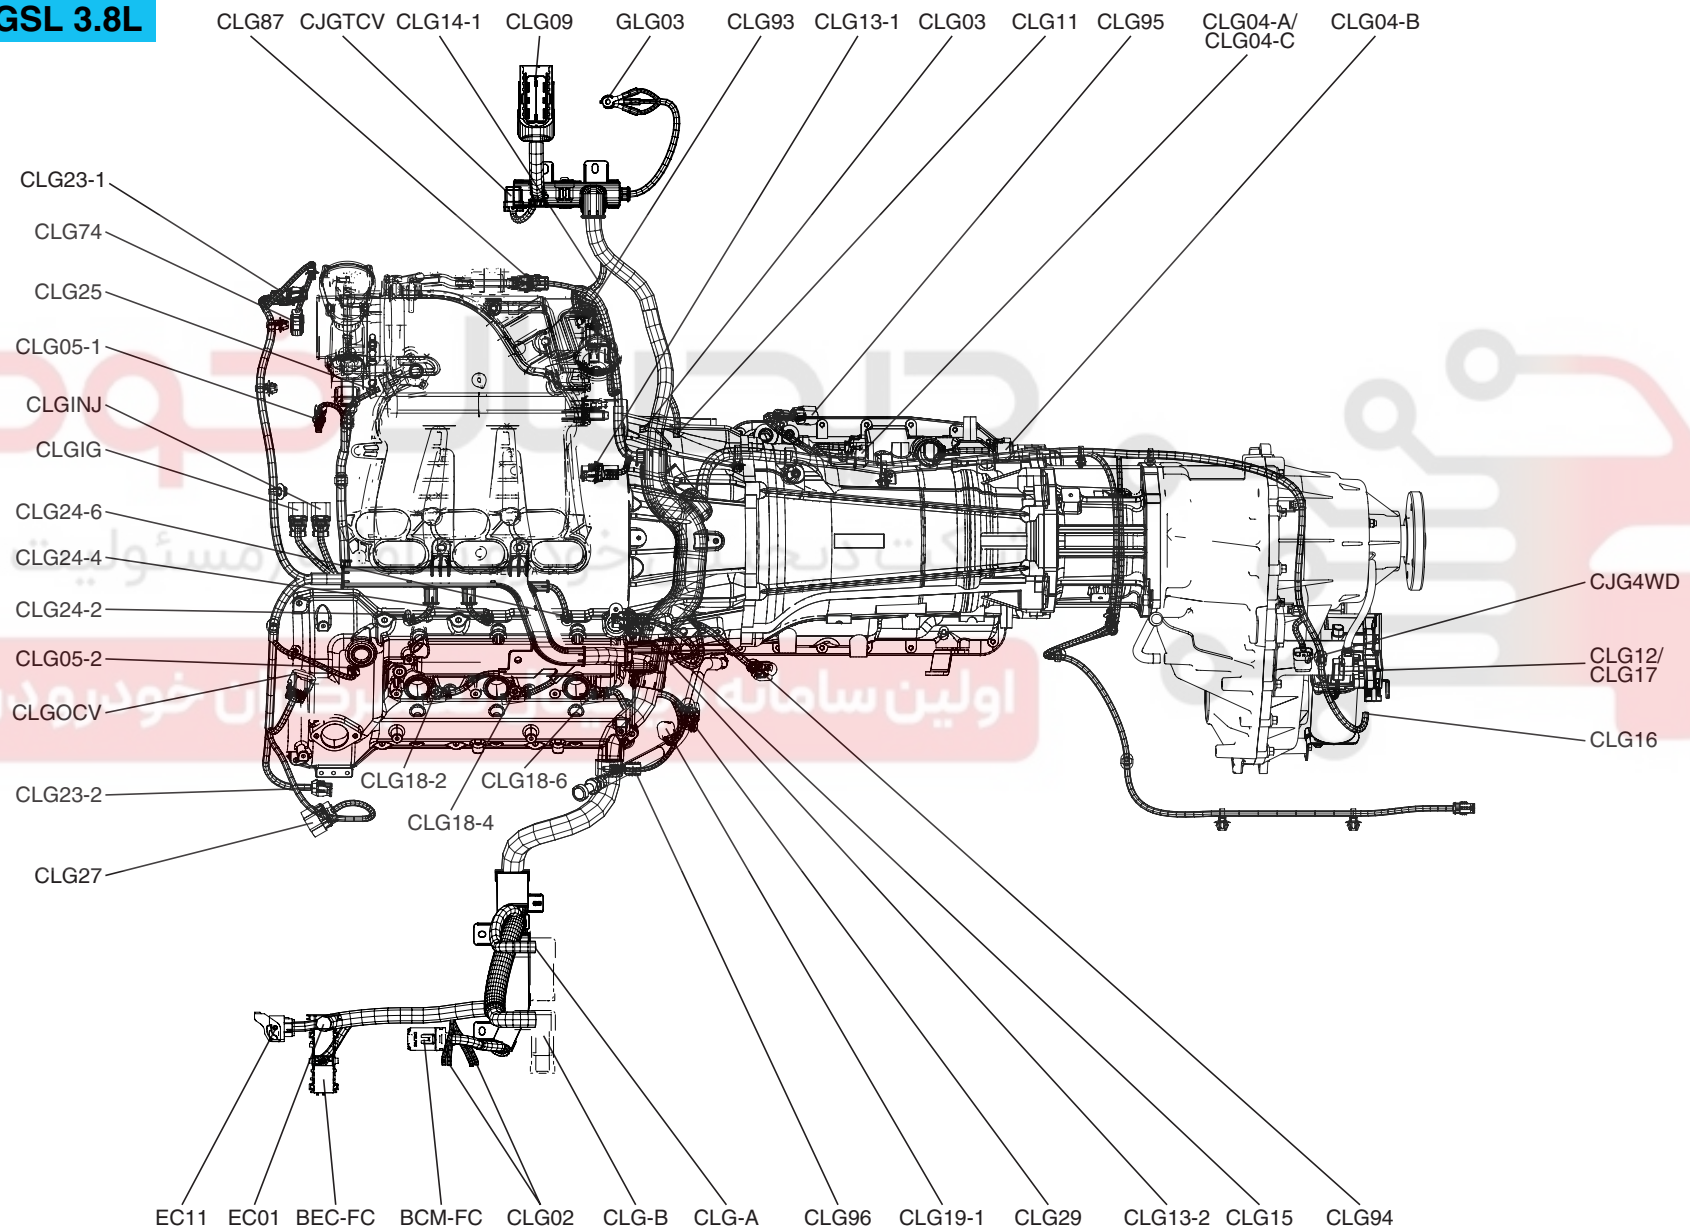

CONTROL HARNESS

Control Harness (2)

HL-10

G6DA-GSL 3.8L

CONTROL HARNESS

CLG01-A ATM control unit
 CLG01-B ATM control unit
 CLG01-C ATM control unit
 CLG03 Oil temperature sensor
 CLG05-1 Oil control valve #1 (EXH Valve)
 CLG05-2 Oil control valve #2 (EXH Valve)
 CLG09 TCM
 CLG11 Engine coolant temperature sensor & sender
 CLG12 TOD transfer case
 CLG13-1 Camshaft position sensor #1 (Intake)
 CLG13-2 Camshaft position sensor #2 (Intake)
 CLG14-1 Camshaft position sensor #1 (EXH Valve)
 CLG14-2 Camshaft position sensor #2 (EXH Valve)
 CLG15 Oil pressure switch
 CLG16 4WD ECM
 CLG17 EST transfer case
 CLG18-2 Ignition coil #2
 CLG18-4 Ignition coil #4
 CLG18-6 Ignition coil #6
 CLG19-1 Condenser #1
 CLG19-2 Condenser #2
 CLG21 Purge control solenoid valve
 CLG23-1 Knock sensor #1
 CLG23-2 Knock sensor #2
 CLG24-2 Injector #2
 CLG24-4 Injector #4
 CLG24-6 Injector #6
 CLG25 Map sensor
 CLG27 Mass air flow sensor
 CLG29 Crankshaft position sensor
 CLG65 ETC motor & Throttle position sensor
 CLG74 Power steering switch
 CLG87 Variable intake manifold valve
 CLG93 Oxygen sensor #1
 CLG94 Oxygen sensor #2
 CLG95 Oxygen sensor #3

CLG96 Oxygen sensor #4
 CLG-A ECM
 CLG-B ECM
 BCM-FC Connection with FAM harness
 BEC-FC Connection with FAM harness
 CLGIG Connection with IGNITION COIL harness
 CLGINJ Connection with INJECTOR harness
 CLGOCV Connection with OIL CONTROL VALVE harness
 EC01 Connection with BATTERY harness
 EC11 Connection with FRONT harness
 CJG4WD Joint connector
 CJGTCU Joint connector
 GLG01 Ground
 GLG02 Ground
 GLG03 Ground

INJECTOR HARNESS

CLG24-1 Injector #1
 CLG24-3 Injector #3
 CLG24-5 Injector #5
 CLGINJ Connection with CONTROL harness

IGNITION HARNESS

CLG18-1 Ignition coil #1
 CLG18-3 Ignition coil #3
 CLG18-5 Ignition coil #5
 CLGIG Connection with CONTROL harness


OIL CONTROL VALVE HARNESS

CLG98-1 Oil control valve #1 (Intake)
 CLG98-2 Oil control valve #2 (Intake)
 CLGOCV Connection with CONTROL harness

DOOR HARNESS EEFFB5CD

Door Harness (1)

 HL-11

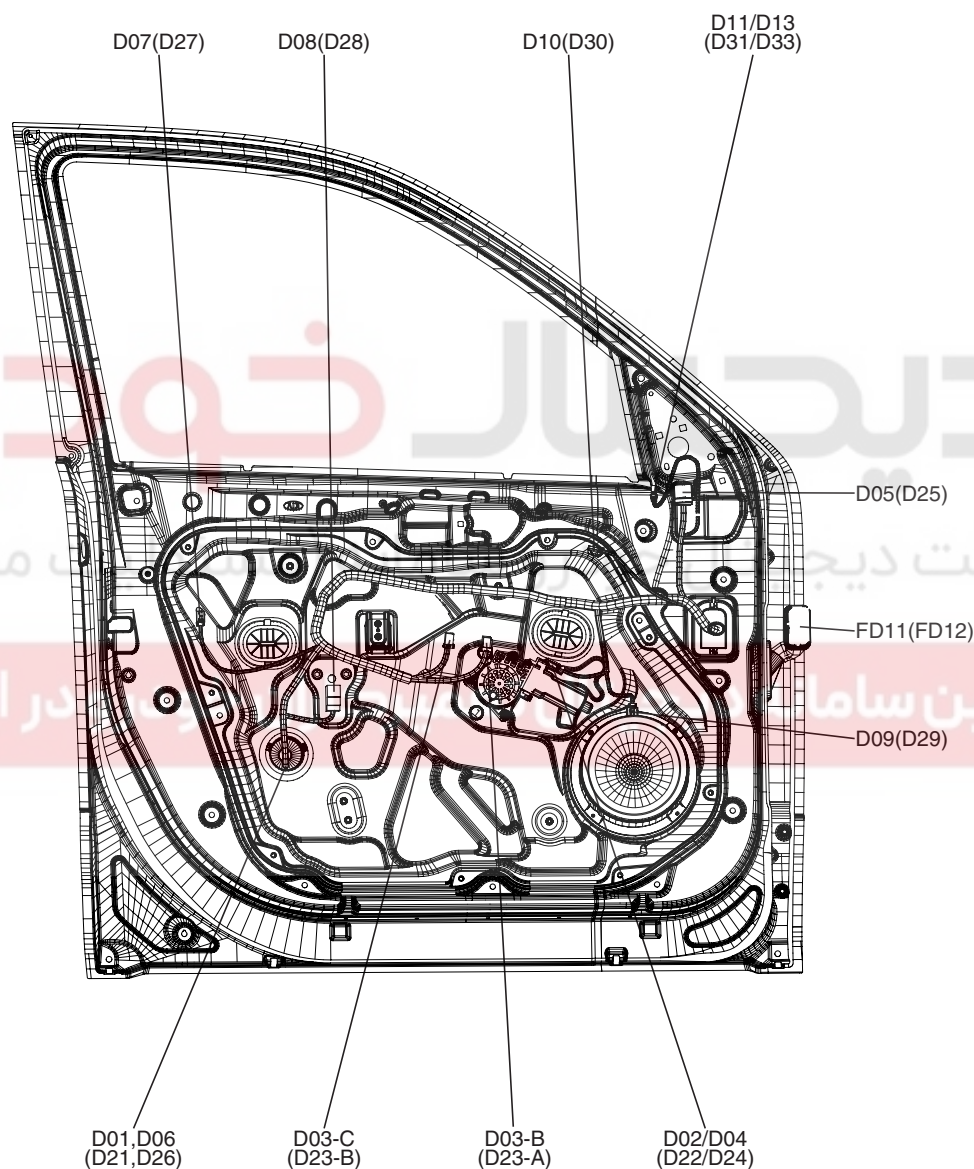

() : ASSIST

FRONT DRIVER DOOR NO.1 HARNESS

- D01 Driver door lock actuator
- D02 Driver power window motor
- D03-B Driver door module
- D03-C Driver door module
- D04 Driver safety power window motor
- D05 Driver power outside mirror & Mirror folding motor
- D06 Driver smart key handle
- D07 Driver front mood lamp
- D08 Driver side impact sensor
- D09 Driver door speaker
- D11 Driver tweeter speaker (JBL)
- D13 Driver tweeter speaker
- JD01 Joint connector
- FD11 Connection with FLOOR harness

FRONT DRIVER DOOR NO.2 HARNESS

- D03-A Driver door module
- D15 Driver door lamp
- D16 Fuel filler door switch
- D17 IMS switch

 
FRONT ASSIST DOOR NO.1 HARNESS

- D21 Passenger door lock actuator
- D22 Passenger power window motor
- D23-A Assistant door module
- D23-B Assistant door module
- D24 Passenger safety power window motor
- D25 Passenger power outside mirror & Mirror folding motor
- D26 Passenger smart key handle
- D27 Passenger mood lamp
- D28 Passenger side impact sensor
- D29 Passenger door speaker
- D31 Passenger tweeter speaker (JBL)
- D33 Passenger tweeter speaker
- D35 Passenger door lamp
- JD02 Joint connector
- FD12 Connection with FLOOR harness

DOOR HARNESS

Door Harness (2)

HL-12

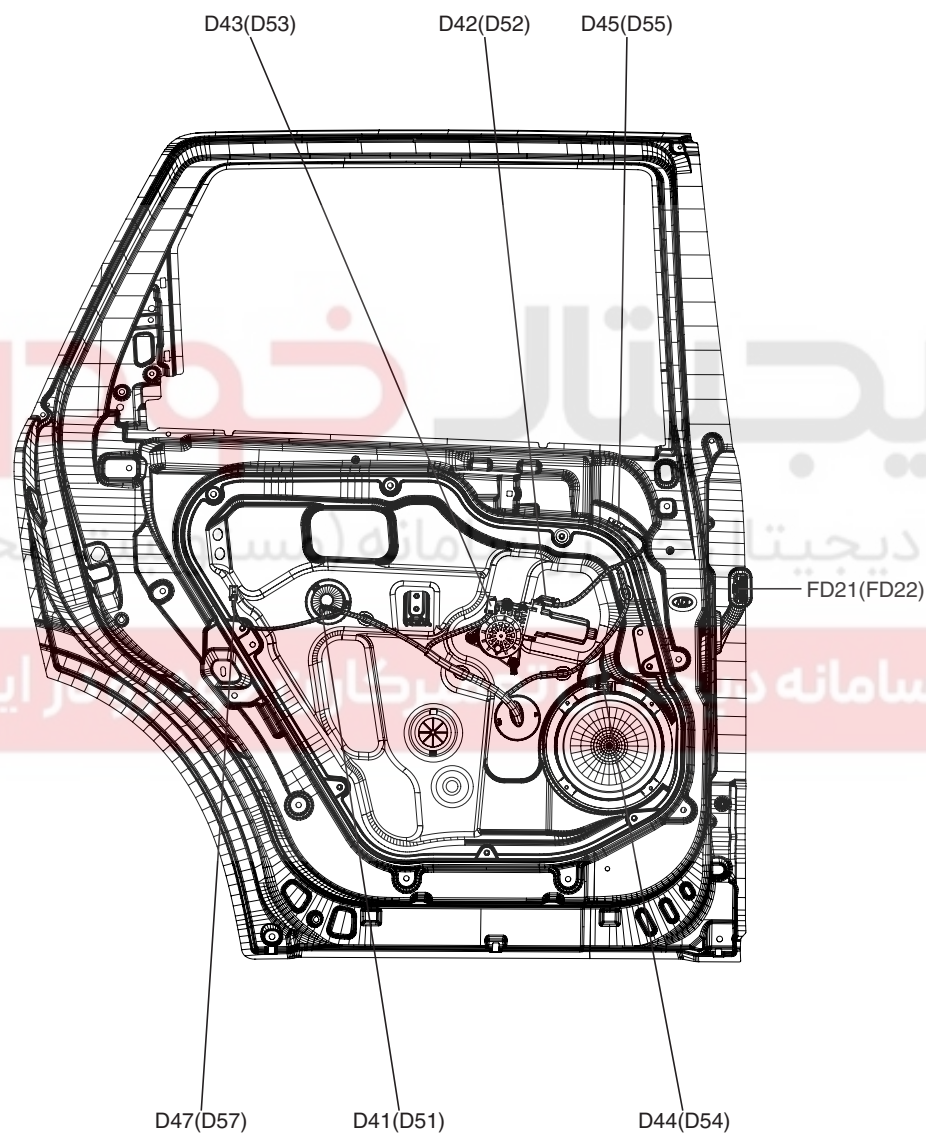

REAR DOOR LH

- D41 Rear door lock actuator LH
- D42 Rear power window motor LH
- D43 Rear power window switch LH
- D44 Rear door speaker LH
- D45 Rear tweeter speaker LH
- D47 Rear mood lamp LH
- FD21 Connection with FLOOR harness

REAR DOOR RH

 
- D51 Rear door lock actuator RH
- D52 Rear power window motor RH
- D53 Rear power window switch RH
- D54 Rear door speaker RH
- D55 Rear tweeter speaker RH
- D57 Rear mood lamp RH
- FD22 Connection with FLOOR harness

() : RH

TAIL GATE HARNESS EA91F3BA


Tail Gate Harness (1)

HL-13

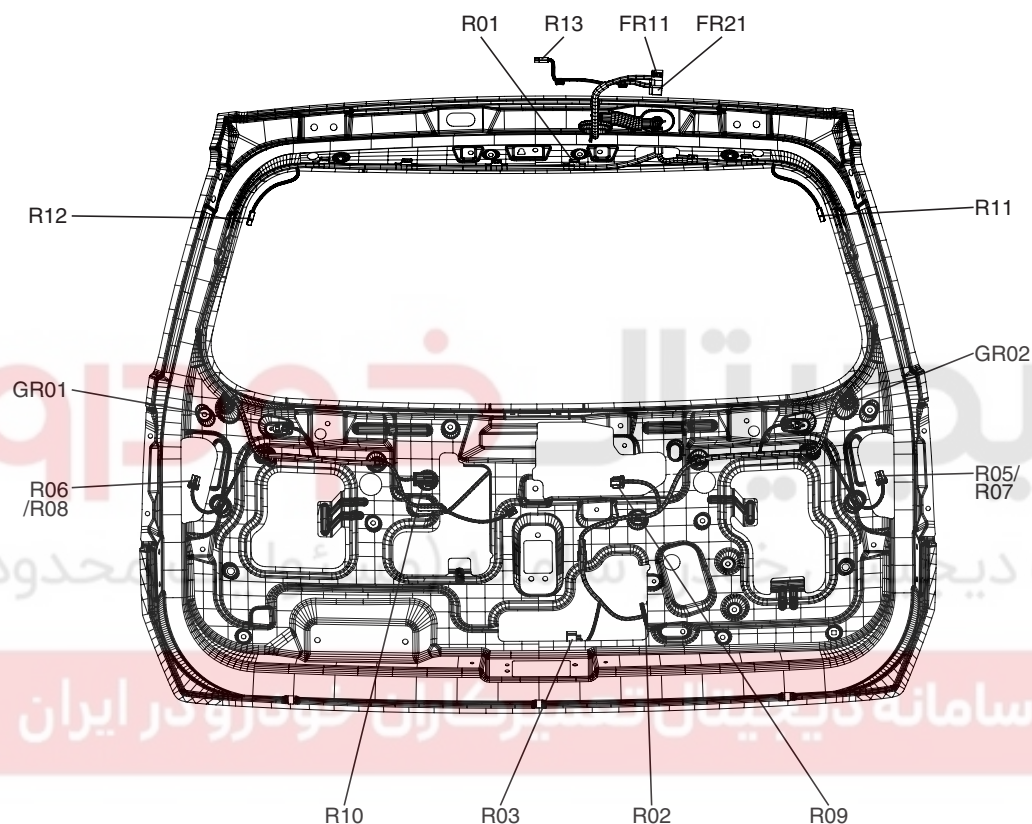

TAIL GATE HARNESS

R01	High-mounted stop lamp
R02	Tail gate control module
R03	Tail gate lock actuator
R05	Rear combination lamp LH (In)(Bulb)
R06	Rear combination lamp RH (In)(Bulb)
R07	Rear combination lamp LH (In)(LED)
R08	Rear combination lamp RH (In)(LED)
R09	Rear wiper motor
R10	Tail gate handle switch & License lamp
R11	Rear defogger (-)
R12	Rear defogger (+)
R13	Roof antenna
FR11	Connection with FLOOR harness
FR21	Connection with FLOOR harness
GR01	Ground
GR02	Ground

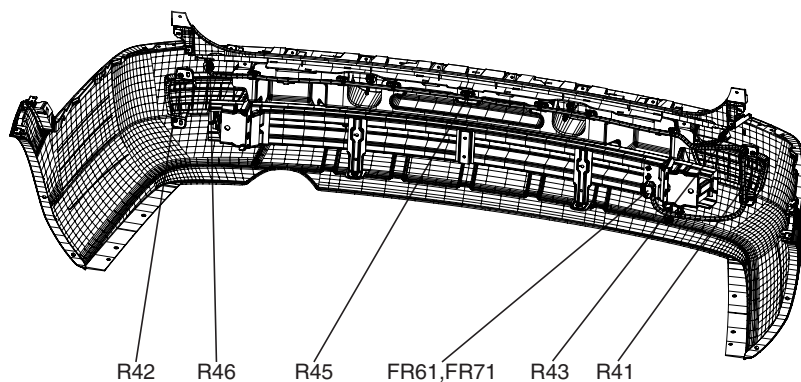 


BUMPER EXT. HARNESS

R41	Rear fog lamp LH
R42	Rear fog lamp RH
R43	Rear parking assist sensor LH
R45	Rear parking assist sensor Center
R46	Rear parking assist sensor RH
FR61	Connection with FLOOR harness
FR71	Connection with FLOOR harness

ROOF HARNESS EF2CA010


Roof Harness (1)

 HL-14

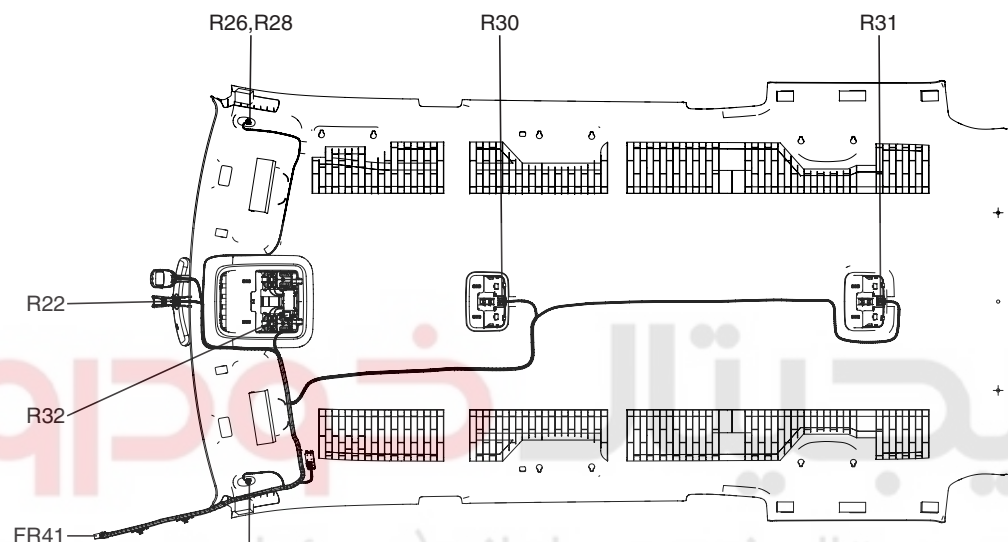

ROOF NO.1 HARNESS

 
- R21 Sunroof module
- R22 Electro chromic mirror
- R25 Vanity lamp LH
- R26 Vanity lamp RH
- R27 Vanity lamp switch LH
- R28 Vanity lamp switch RH
- R29 Overhead console
- R30 Center room lamp
- R31 Rear room lamp
- R32 Map lamp
- FR41 Connection with FLOOR harness

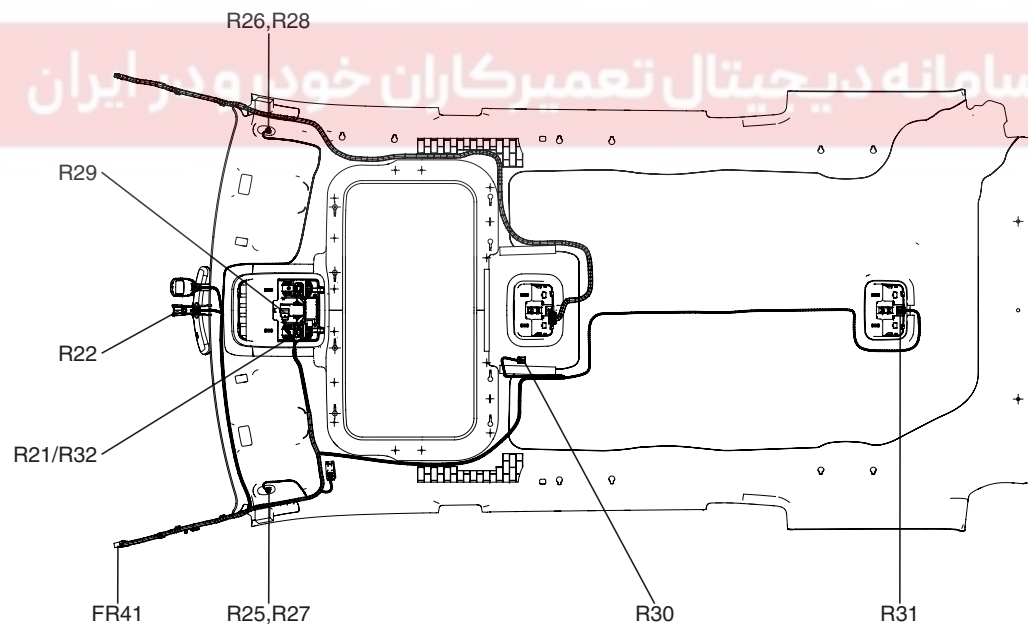

A/C HARNESS ED45CAFB

A/C Harness (1)

 HL-15

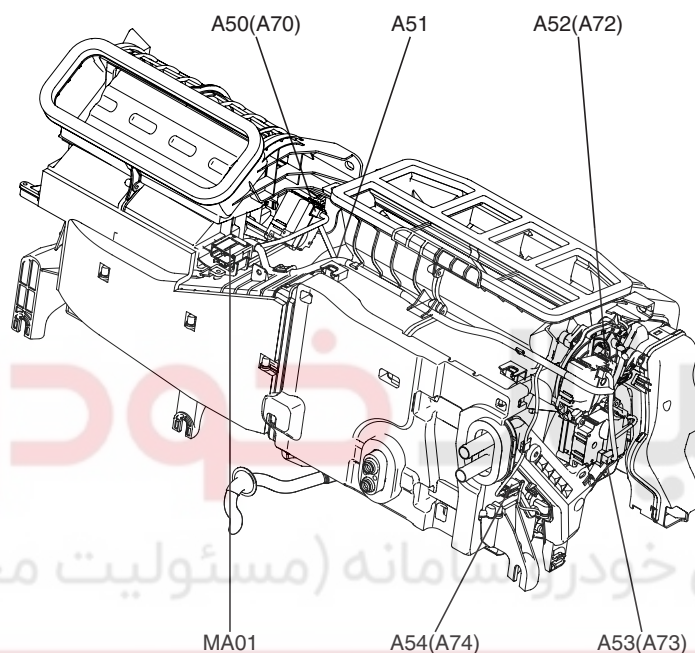


A/C HARNESS(AUTO)

A50	Intake actuator
A51	Passenger temperature actuator
A52	Mode actuator
A53	Driver temperature actuator
A54	Evaporator sensor
A55	Water temperature sensor
MA01	Connection with MAIN harness

A/C HARNESS(MANUAL)

A70	Intake actuator
A72	Mode actuator
A73	Temperature actuator
A74	Evaporator sensor
MA01	Connection with MAIN harness

 () : MANUAL

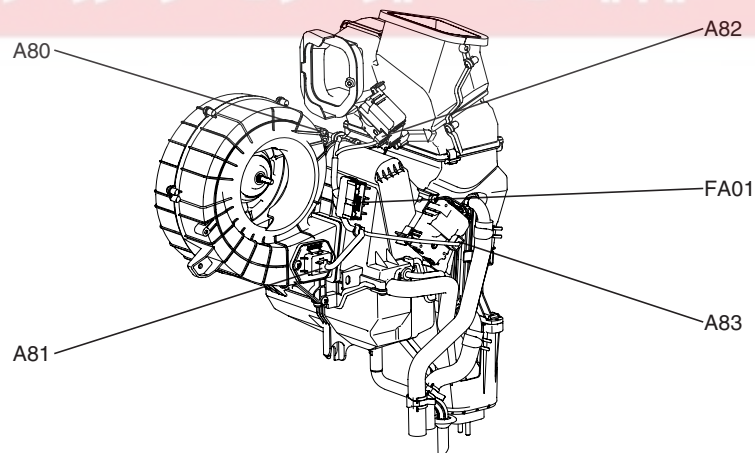


REAR A/C HARNESS

A80	Rear blower motor
A81	Rear FET(Field effect transistor)
A82	Rear mode actuator
A83	Rear temperature actuator
FA01	Connection with FLOOR harness

SEAT HARNESS EF342950

Seat Harness (1)

 HL-16

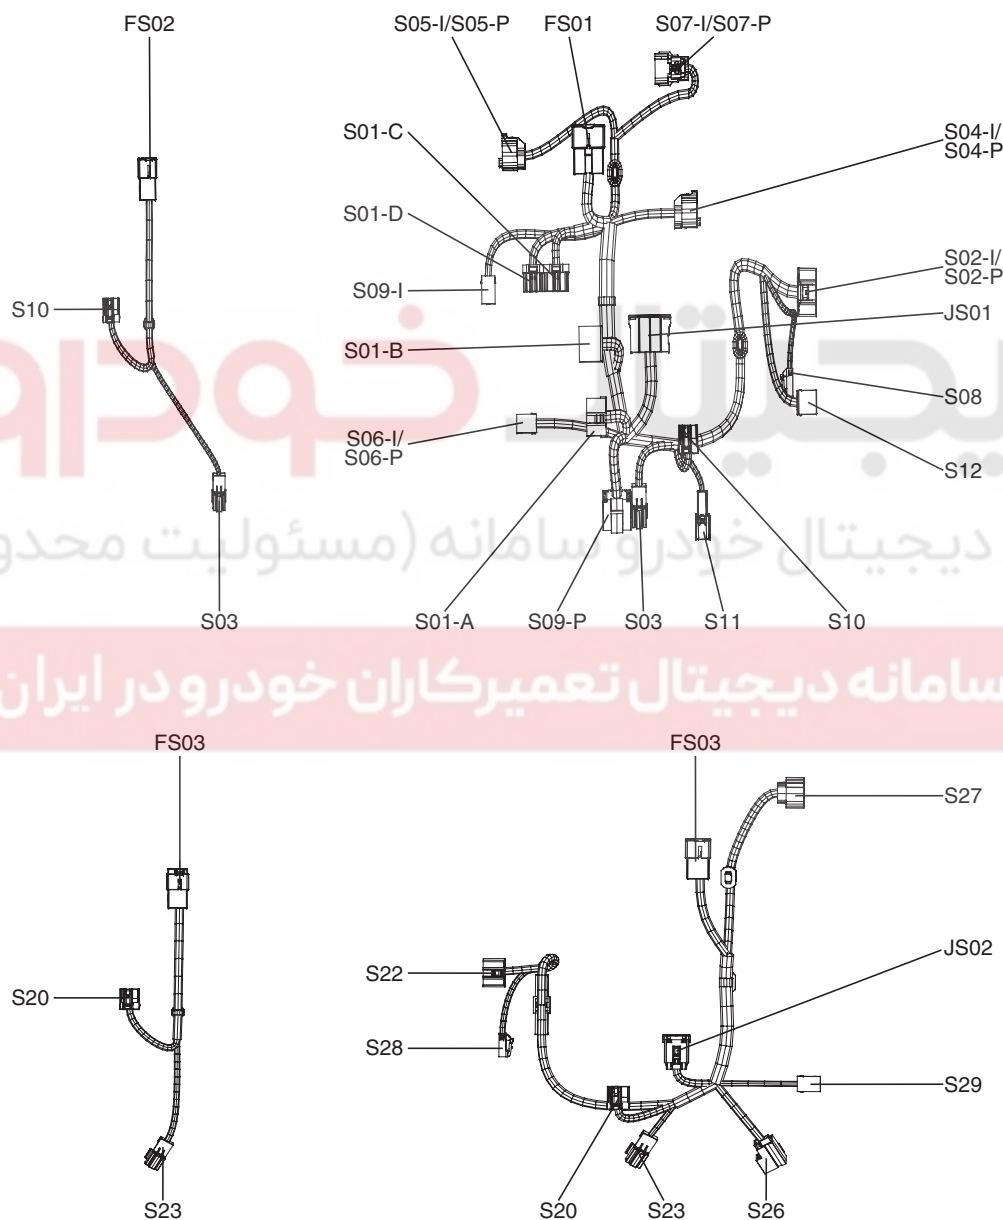

DRIVER SEAT HARNESS

S01-A	IMS control module
S01-B	IMS control module
S01-C	IMS control module
S01-D	IMS control module
S02-I	Driver power seat switch (With IMS)
S02-P	Driver power seat switch (W/O IMS)
S03	Driver seat warmer
S04-I	Front height motor (With IMS)
S04-P	Front height motor (W/O IMS)
S05-I	Rear height motor (With IMS)
S05-P	Rear height motor (W/O IMS)
S06-I	Driver reclining motor (With IMS)
S06-P	Driver reclining motor (W/O IMS)
S07-I	Driver slide motor (With IMS)
S07-P	Driver slide motor (W/O IMS)
S08-I	Driver reclining limit switch (With IMS)
S08-P	Driver reclining limit switch (W/O IMS)
S09-I	Driver slide limit switch (With IMS)
S09-P	Driver slide limit switch (W/O IMS)
S10	Driver seat warmer module
S11	Lumbar support motor
S12	Lumbar support switch
JS01	Joint connector
FS01	Connection with FLOOR harness (With IMS)
FS02	Connection with FLOOR harness (W/O IMS)

PASSENGER SEAT HARNESS

S20	Passenger seat warmer module
S22	Passenger power seat switch
S23	Passenger seat warmer
S26	Passenger reclining motor
S27	Passenger slide motor
S28	Passenger reclining limit switch
S29	Passenger slide limit switch
JS02	Joint connector
FS03	Connection with FLOOR harness