


HARNESS LAYOUTS

Main Harness.....	HL-1
Front Harness.....	HL-3
Control Harness.....	HL-5
Floor Harness.....	HL-11
Door Harness.....	HL-13
Seat Harness.....	HL-16
Battery Harness.....	HL-18
Front End Module Harness.....	HL-20
Roof Harness.....	HL-21
Bumper Harness.....	HL-22

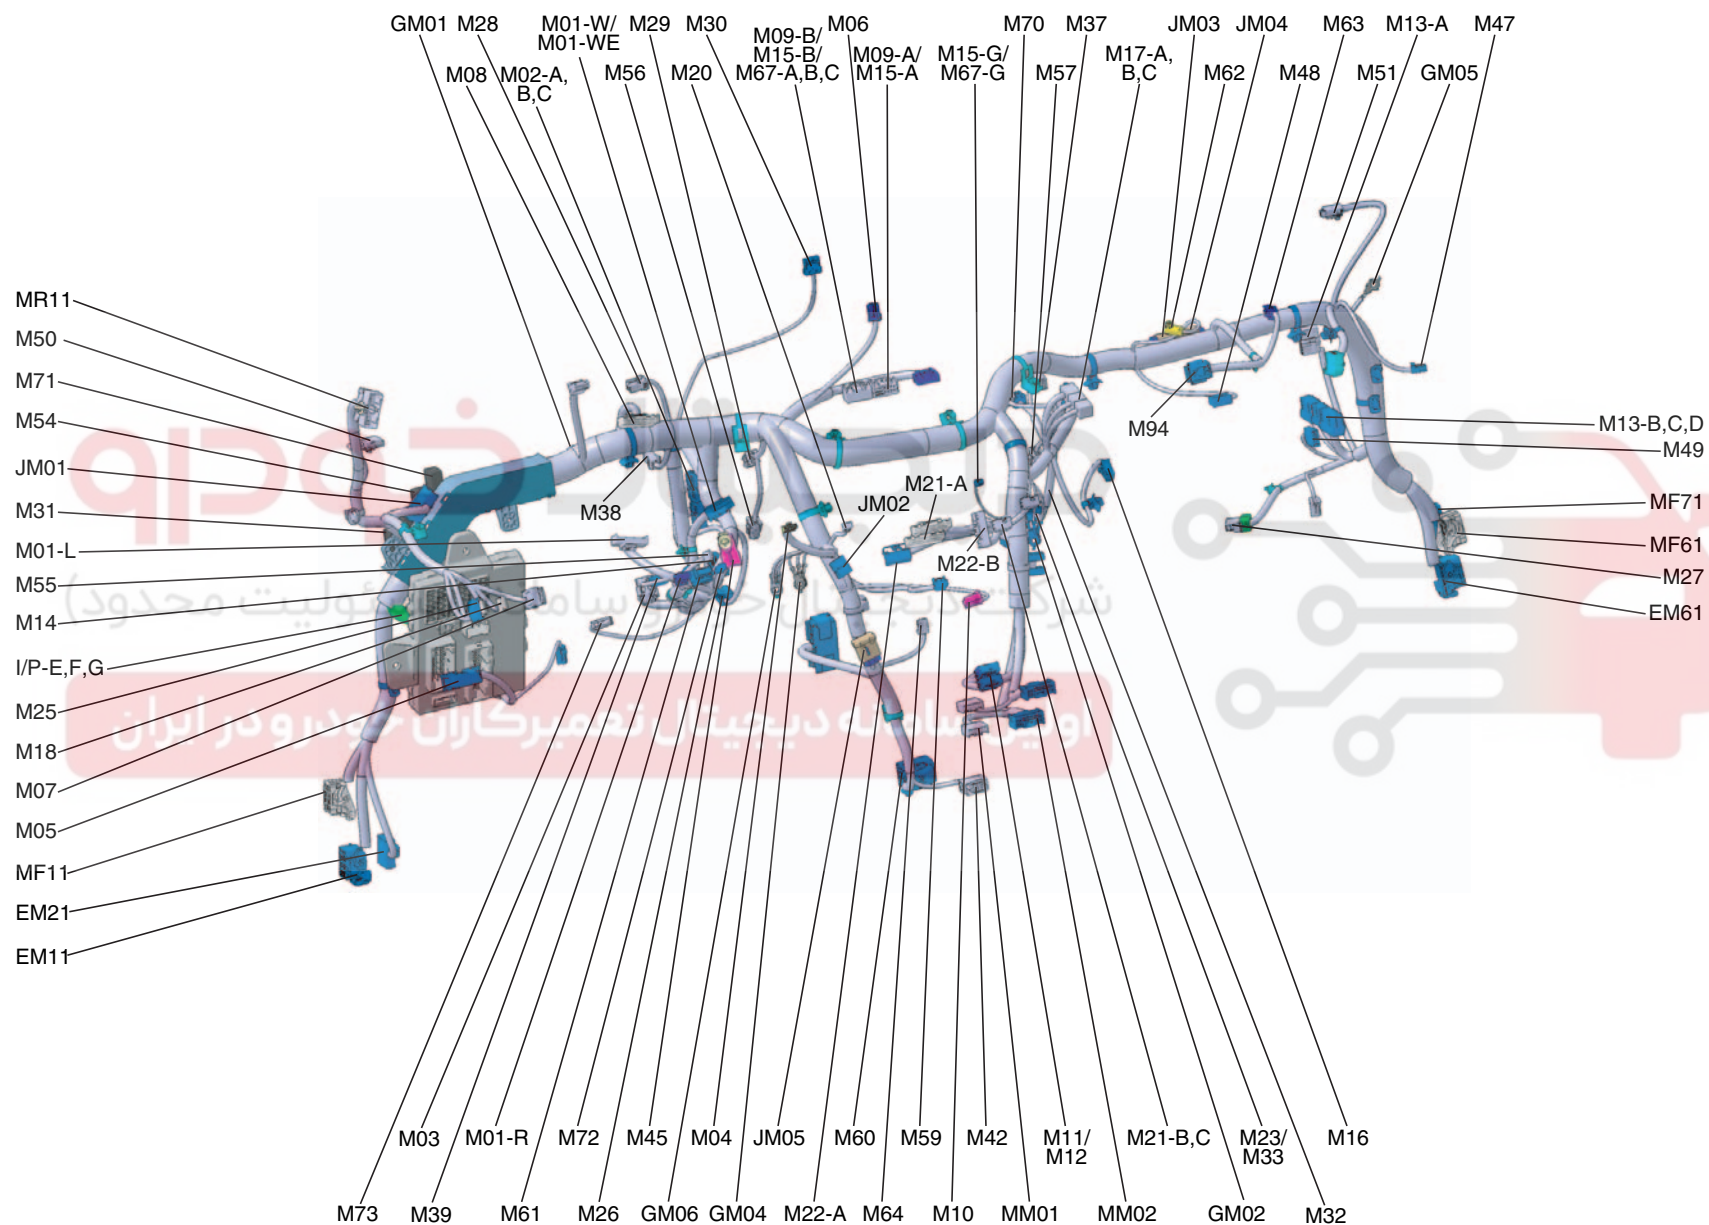



Main Harness (2)

MAIN HARNESS

M01-L	Multifunction Switch (Europe & RHD / LHD)
M01-LR	Multifunction Switch (Except Europe & RHD)
M01-R	Multifunction Switch (Remote Control)
M01-W	Multifunction Switch (Except Europe & LHD)
M01-WE	Multifunction Switch (Europe)
M01-WR	Multifunction Switch (Except Europe & RHD)
M02-A	BCM
M02-B	BCM
M02-C	BCM
M03	Ignition Switch (W/O Smart Key)
M04	Start Stop Button Switch (With Smart Key)
M05	Data Link Connector
M06	Center Speaker
M07	Crash Pad Switch
M08	Instrument Cluster
M09-A	Audio
M09-B	Audio
M10	Crash Pad Mood Lamp
M11	AUX & USB Jack (Audio)
M12	AUX & USB Jack (Navigation)
M13-A	Smart Key Control Module (With Smart Key)
M13-B	Smart Key Control Module (With Smart Key)
M13-C	Smart Key Control Module (With Smart Key)
M13-D	Smart Key Control Module (With Smart Key)
M14	Electronic Steering Column Lock (With Smart Key)
M15-A	A/V & Navigation Head Unit (Except Europe)
M15-B	A/V & Navigation Head Unit (Except Europe)
M15-G	A/V & Navigation Head Unit (Except Europe)
M16	FOB Holder (With Smart Key)
M17-A	Smart Parking Assist Control Module
M17-B	Smart Parking Assist Control Module
M17-C	Smart Parking Assist Control Module
M18	Rheostat
M19	PTC Heater
M20	Incar Sensor
M21-A	A/C Control Module (Auto A/C)
M21-B	A/C Control Module (Auto A/C) (W/O Auto Defogger)
M21-C	A/C Control Module (Auto A/C) (With Auto Defogger)
M22-A	A/C Control Module (Manual A/C)
M22-B	A/C Control Module (Manual A/C)
M23	Blower Resistor (Manual A/C)
M25	Head Lamp Leveling Device Switch (Manual HLLD) (LHD)
M26	MDPS Unit
M27	Blower Motor
M28	Rear Parking Assist Buzzer
M29	Mode Actuator
M30	Auto Light & Photo Sensor
M31	Burglar Alarm Relay (W/O Smart Key)
M32	Evaporator Sensor

M33	FET (Field Effect Transistor) (Auto A/C)
M37	Intake Actuator
M38	Immobilizer Module
M39	Key Solenoid (W/O Smart Key)
M41	Tire Pressure Monitoring Module
M42	Yaw Rate Sensor
M45	Ignition Key III. & Door Warning Switch (W/O Smart Key)
M47	Passenger Air Bag Switch
M48	Glove Box Lamp
M49	Glove Box Lamp Switch
M50	Midrange Speaker LH
M51	Midrange Speaker RH
M52	Midrange Twitter Speaker LH
M53	Midrange Twitter Speaker RH
M54	Rear Fog Lamp Relay
M55	Steering Angle Sensor (W/O MDPS)
M56	Driver Temperature Actuator
M57	Passenger Temperature Actuator
M58	Dead Lock Relay (RHD)
M59	Telltale Lamp (Europe)
M60	SRS Control Module
M61	Driver Air Bag
M62	Passenger Air Bag
M63	RF Receiver
M64	Smart Key Antenna (Interior #1)
M66	Seat Belt Reminder Indicator (Australia)
M67-A	A/V & Navigation Head Unit (Europe)
M67-B	A/V & Navigation Head Unit (Europe)
M67-C	A/V & Navigation Head Unit (Europe)
M67-G	A/V & Navigation Head Unit (Europe)
M69	Head Lamp Leveling Device Switch (Manual HLLD) (RHD)
M70	Auto Defogger Actuator
M71	Lamp Auto Cut Relay
M72	Steering Wheel Heater
M73	Steering Wheel Heater Switch
M94	Stop Lamp Relay
JM01	Joint Connector
JM02	Joint Connector
JM03	Joint Connector
JM04	Joint Connector
JM05	Joint Connector
I/P-E	I/P Junction Box
I/P-F	I/P Junction Box
I/P-G	I/P Junction Box
EM11	Connection With Front Harness
EM21	Connection With Front Harness
EM61	Connection With Front Harness
MF11	Connection With Floor Harness

MF61	Connection With Floor Harness
MF71	Connection With Floor Harness
MM01	Connection With Console EXT. Harness
MM02	Connection With Console EXT. Harness
MR11	Connection With Roof Harness
GM01	Ground
GM02	Ground
GM03	Ground
GM04	Ground
GM05	Ground
GM06	Ground

CONSOLE-1 EXT. HARNESS

M81	Cigarette Lighter
M82	Cigarette Lighter ILL.
M83	Front Power Outlet
MM01	Connection With Main Harness

CONSOLE-2 EXT. HARNESS


M84	ATM Lever Indicator
M85	Front Seat Warmer & CCS Switch (A/T)
M86	Front Seat Warmer & CCS Switch (LHD & M/T)
M87	Front Seat Warmer & CCS Switch (RHD & M/T)
M95	Console Switch
MM02	Connection With Main Harness

A/V & NAVIGATION USB HARNESS

M12-USB	AUX & USB Jack
M15-USB	A/V & Navigation Head Unit (Except Europe)
M67-USB	A/V & Navigation Head Unit (Europe)

A/V & NAVIGATION KEYBOARD HARNESS

M15-KB	A/V & Navigation Head Unit (Except Europe)
M67-KB	A/V & Navigation Head Unit (Europe)
M92	A/V & Navigation Keyboard

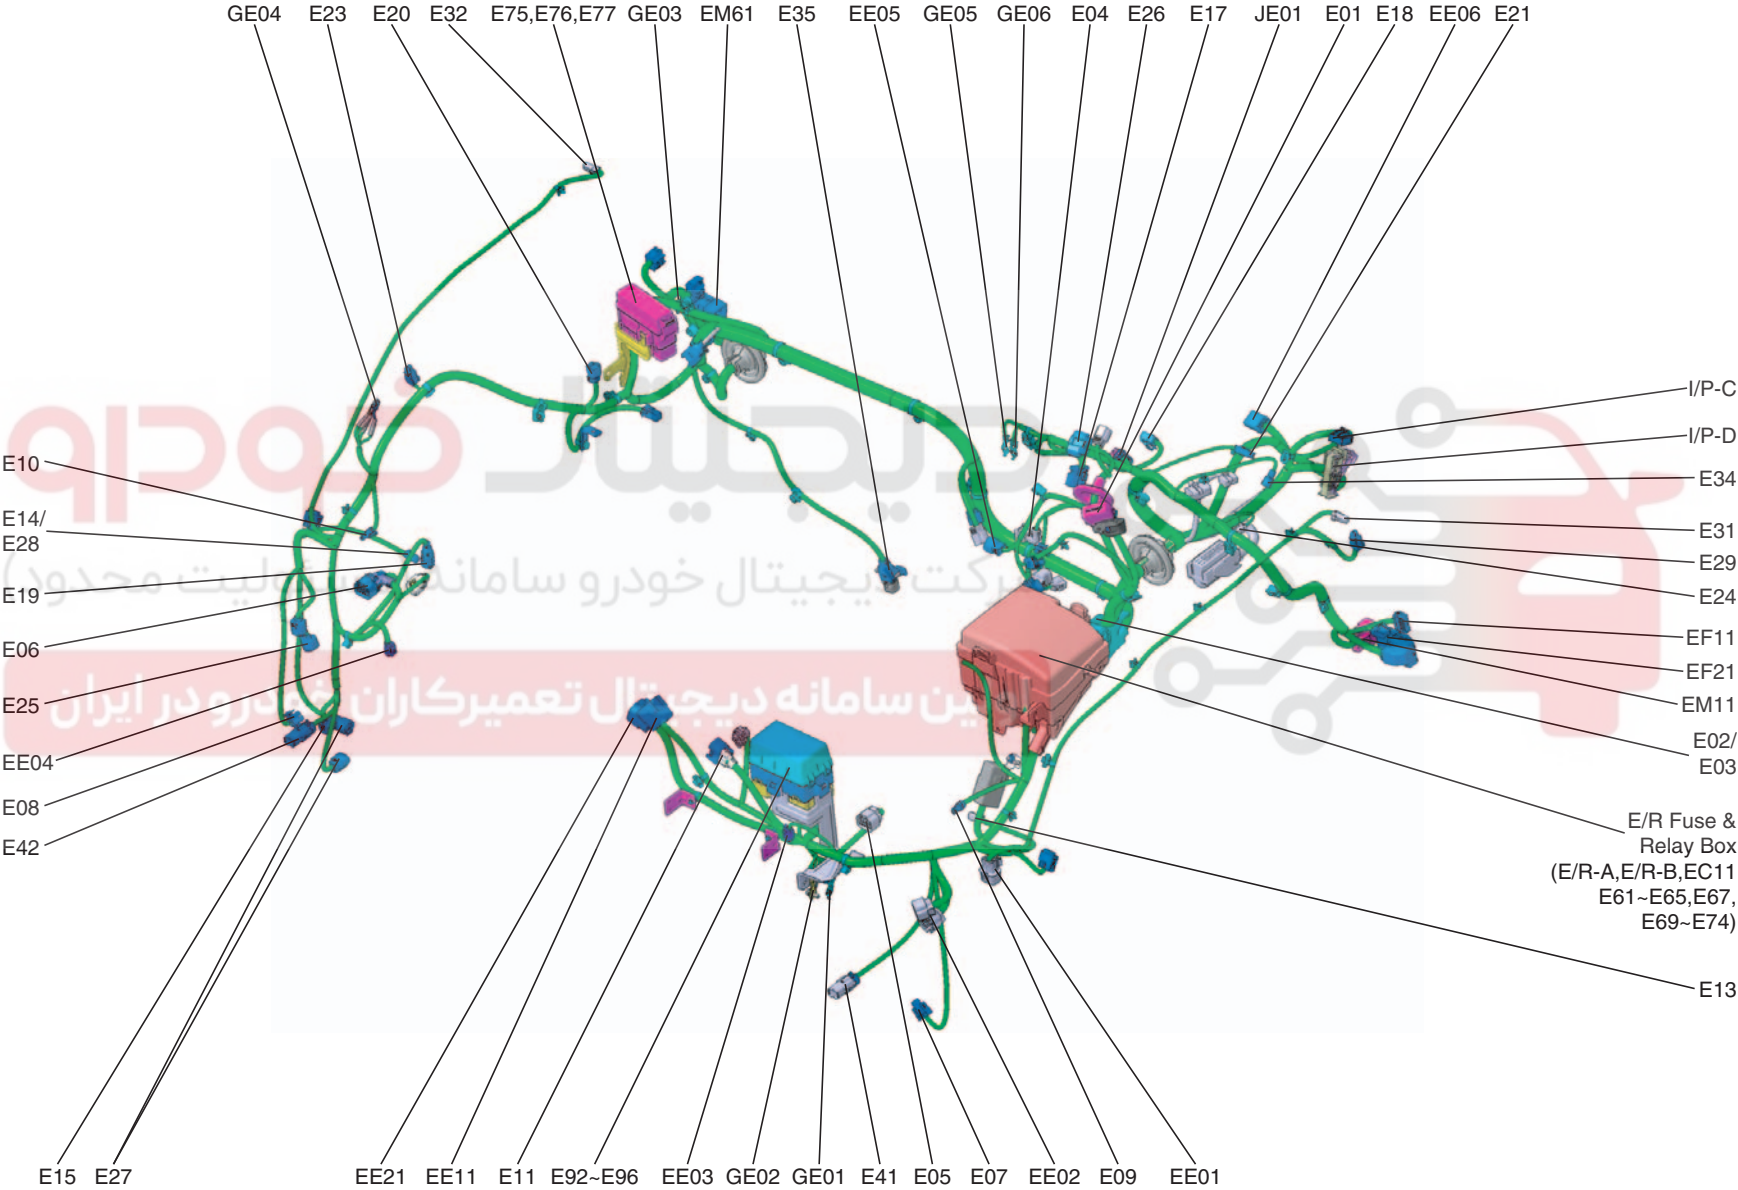

Front Harness (2)

FRONT HARNESS

E01 Multipurpose Check Connector
 E02 ABS Control Module
 E03 ESP Control Module
 E04 Brake Fluid Level Sensor (LHD)
 E05 Head Lamp LH
 E06 Head Lamp RH
 E07 Front Fog Lamp LH (W/O DRL)
 E08 Front Fog Lamp RH (W/O DRL)
 E09 Head Lamp Leveling Device Actuator LH
 E10 Head Lamp Leveling Device Actuator RH
 E11 Cooling Fan Motor
 E13 Front Wheel Sensor LH
 E14 Front Wheel Sensor RH
 E15 Head Lamp Washer Motor
 E16 ISG Low DC-DC Converter (Audio)
 E17 Accel Pedal Position Sensor
 E18 Stop Lamp Switch
 E19 A/C Pressure Transducer
 E20 Burglar Alarm Horn
 E21 Clutch Switch (M/T)
 E22 Front Wiper Deicer
 E23 Hood Switch
 E24 Ignition Lock Switch (M/T)
 E25 Washer Motor
 E26 Front Wiper Motor
 E27 Washer Level Sensor
 E28 Front Wheel Sensor RH (W/O ABS & ESP)
 E29 External Buzzer (With Smart Key)
 E31 Side Repeater Lamp LH
 E32 Side Repeater Lamp RH
 E33 Battery Sensor (With AMS)
 E34 Foot Parking Brake Switch
 E35 Oxygen Sensor (Down)
 E36 Brake Booster Vacuum Pressure Sensor
 E38 Boost Pressure Sensor
 E41 DRL Lamp LH
 E42 DRL Lamp RH
 E43 Fuel Filter Heater
 E44 Fuel Filter Warning Sensor
 E45 Glow Plug
 E61 RLY.1 (RR HTD Relay)
 E62 RLY.2 (Head Lamp Washer Relay)
 E63 RLY.3 (C/FAN (HI) Relay)
 E64 RLY.4 (C/FAN (LO) Relay)
 E65 RLY.5 (Start Relay)

E67 RLY.7 (Deicer Relay)
 E69 RLY.9 (ESS Relay)
 E70 RLY.10 (HAC Relay)
 E71 RLY.11 (Wiper Relay)
 E72 RLY.12 (Rain Sensor Relay)
 E73 RLY.13 (B/Horn Relay)
 E74 RLY.14 (Blower Relay)
 E75 RLY.1 (PDM1 (ACC) Relay)
 E76 RLY.2 (PDM2 (IG1) Relay)
 E77 RLY.3 (PDM3 (IG2) Relay)
 E78 Front Initiator LH
 E79 Front Initiator RH
 E92 Glow Plug Relay
 E93 PTC Heater Relay #1
 E94 PTC Heater Relay #2
 E95 PTC Heater Relay #3
 E96 Fuel Filter Relay
 EUD-T TCM (D4FD)
 JE01 Joint Connector
 JE02 Joint Connector
 JE03 Joint Connector
 I/P-C I/P Junction Box
 I/P-D I/P Junction Box
 E/R-A EMS Box
 E/R-B EMS Box
 EC11 Connection With Control Harness
 EE01 Connection With FEM Harness
 EE02 Connection With Front Bumper Harness
 EE03 Connection With Driver Air Bag Harness
 EE04 Connection With Passenger Air Bag Harness
 EE05 Connection With Brake Fluid Level Sensor Harness (RHD)
 EE06 Connection With MDPS EXT. Harness
 EE11 Connection With Battery Harness
 EE21 Connection With Battery Harness
 EF11 Connection With Floor Harness
 EF21 Connection With Floor Harness
 EF61 Connection With Floor Harness
 EM11 Connection With Main Harness
 EM21 Connection With Main Harness
 EM61 Connection With Main Harness
 GE01 Ground
 GE02 Ground
 GE03 Ground
 GE04 Ground

GE05 Ground
 GE06 Ground

DRIVER AIR BAG HARNESS

E50 Driver Front Impact Sensor
 EE03 Connection With Front Harness

PASSENGER AIR BAG HARNESS

E51 Passenger Front Impact Sensor
 EE04 Connection With Front Harness


BRAKE FLUID LEVEL SENSOR EXT. HARNESS (RHD)

E37 Brake Fluid Level Sensor
 EE05 Connection With Front Harness

MDPS EXT. HARNESS

E12 MDPS Unit
 EE06 Connection With Front Harness

G4KD/G4KE : THETA II 2.0L/2.4L MPI

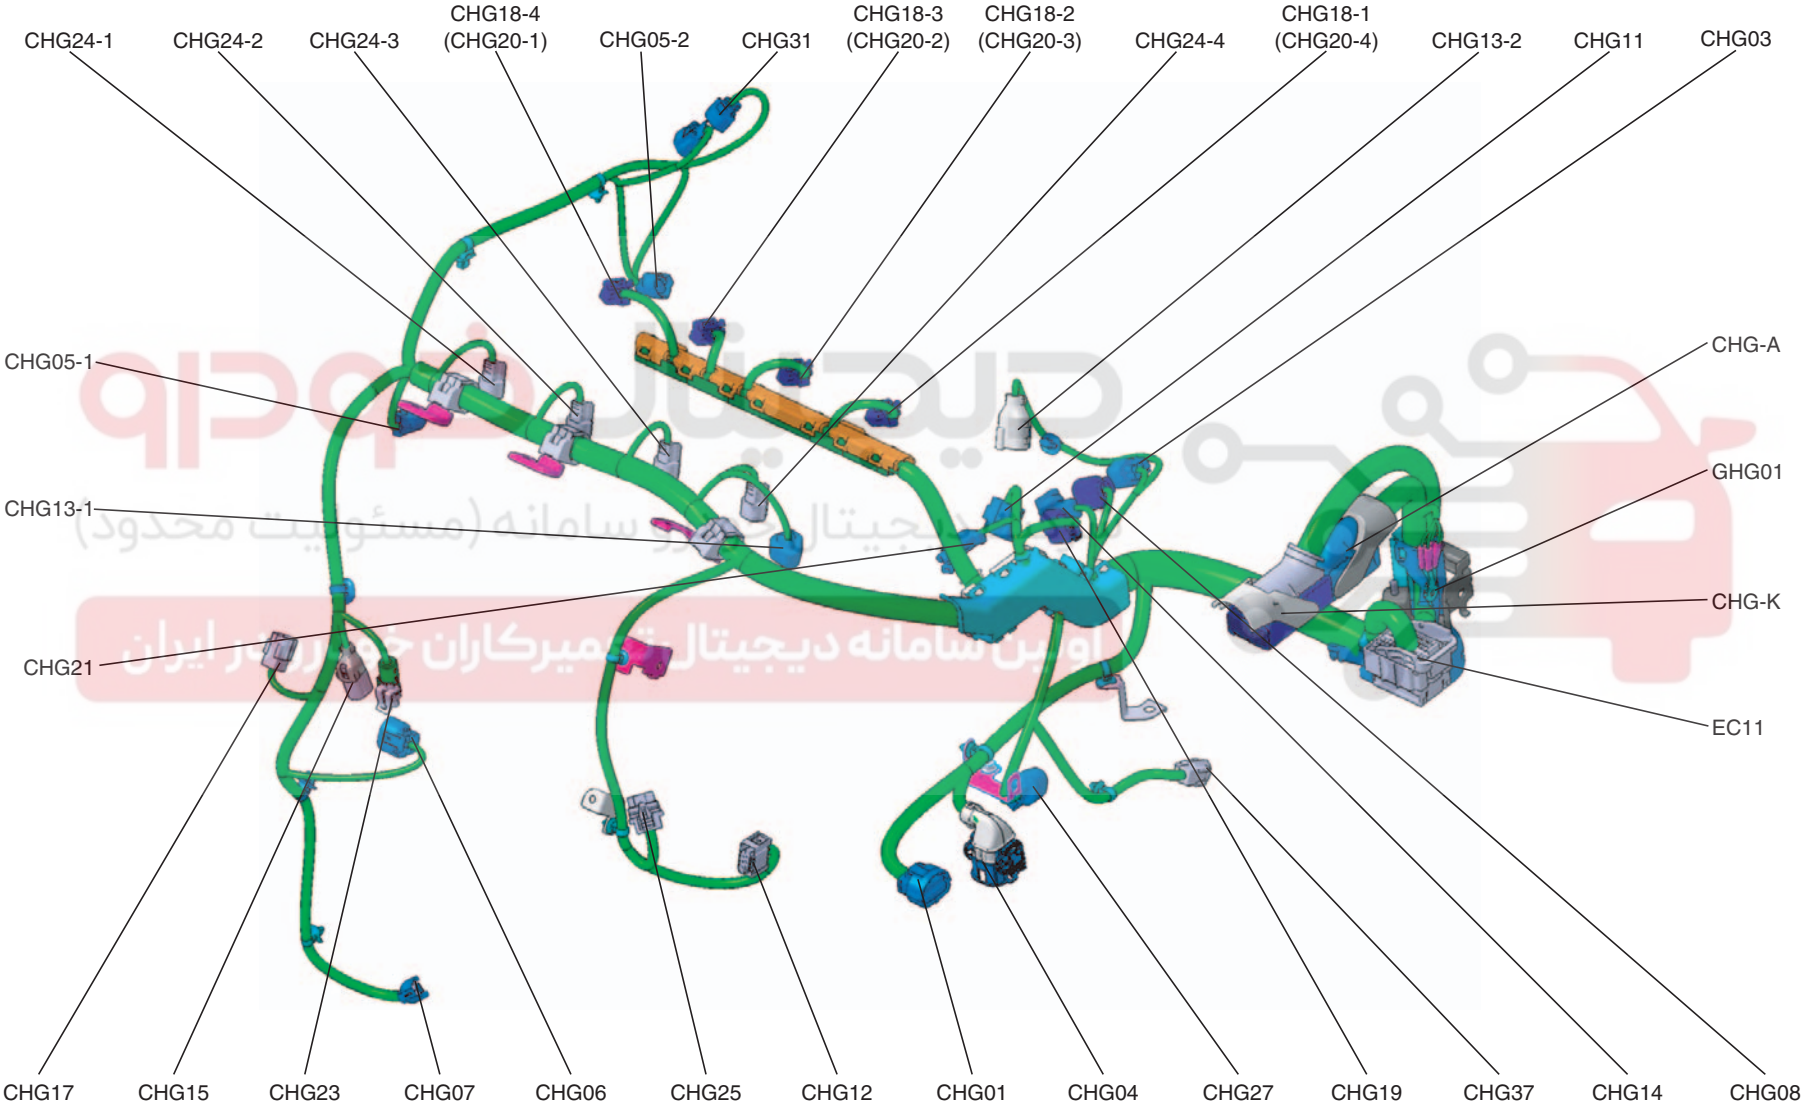


() : W/O IMMO. & Smart Key

CONTROL HARNESS (G4KD/G4KE)

CHG01	Transaxle Range Switch
CHG03	Oxygen Sensor (Up) (W/O Euro V)
CHG04	ATM Solenoid
CHG05-1	Oil Control Valve #1
CHG05-2	Oil Control Valve #2
CHG06	Alternator
CHG07	Electronic A/C Compressor
CHG08	Oxygen Sensor (Up) (With Euro V)
CHG11	Engine Coolant Temperature Sensor
CHG12	ETC Motor & Throttle Position Sensor
CHG13-1	Camshaft Position Sensor #1
CHG13-2	Camshaft Position Sensor #2
CHG14	Crankshaft Position Sensor
CHG15	Oil Pressure Switch
CHG17	Variable Intake Solenoid Valve
CHG18-1	Ignition Coil #1 (With SMK)
CHG18-2	Ignition Coil #2 (With SMK)
CHG18-3	Ignition Coil #3 (With SMK)
CHG18-4	Ignition Coil #4 (With SMK)
CHG19	Condenser
CHG20-1	Ignition Coil #1 (W/O SMK)
CHG20-2	Ignition Coil #2 (W/O SMK)
CHG20-3	Ignition Coil #3 (W/O SMK)
CHG20-4	Ignition Coil #4 (W/O SMK)
CHG21	Purge Control Solenoid Valve
CHG23	Knock Sensor
CHG24-1	Injector #1
CHG24-2	Injector #2
CHG24-3	Injector #3
CHG24-4	Injector #4
CHG25	MAP Sensor
CHG27	Vehicle Speed Sensor (M/T)
CHG31	Power Steering Pressure Sensor
CHG37	Back-Up Lamp Switch (M/T)
CHG-A	PCM
CHG-K	PCM
EC11	Connection With Front Harness
GHG01	Ground



G4KJ : THETA II 2.4L GDI

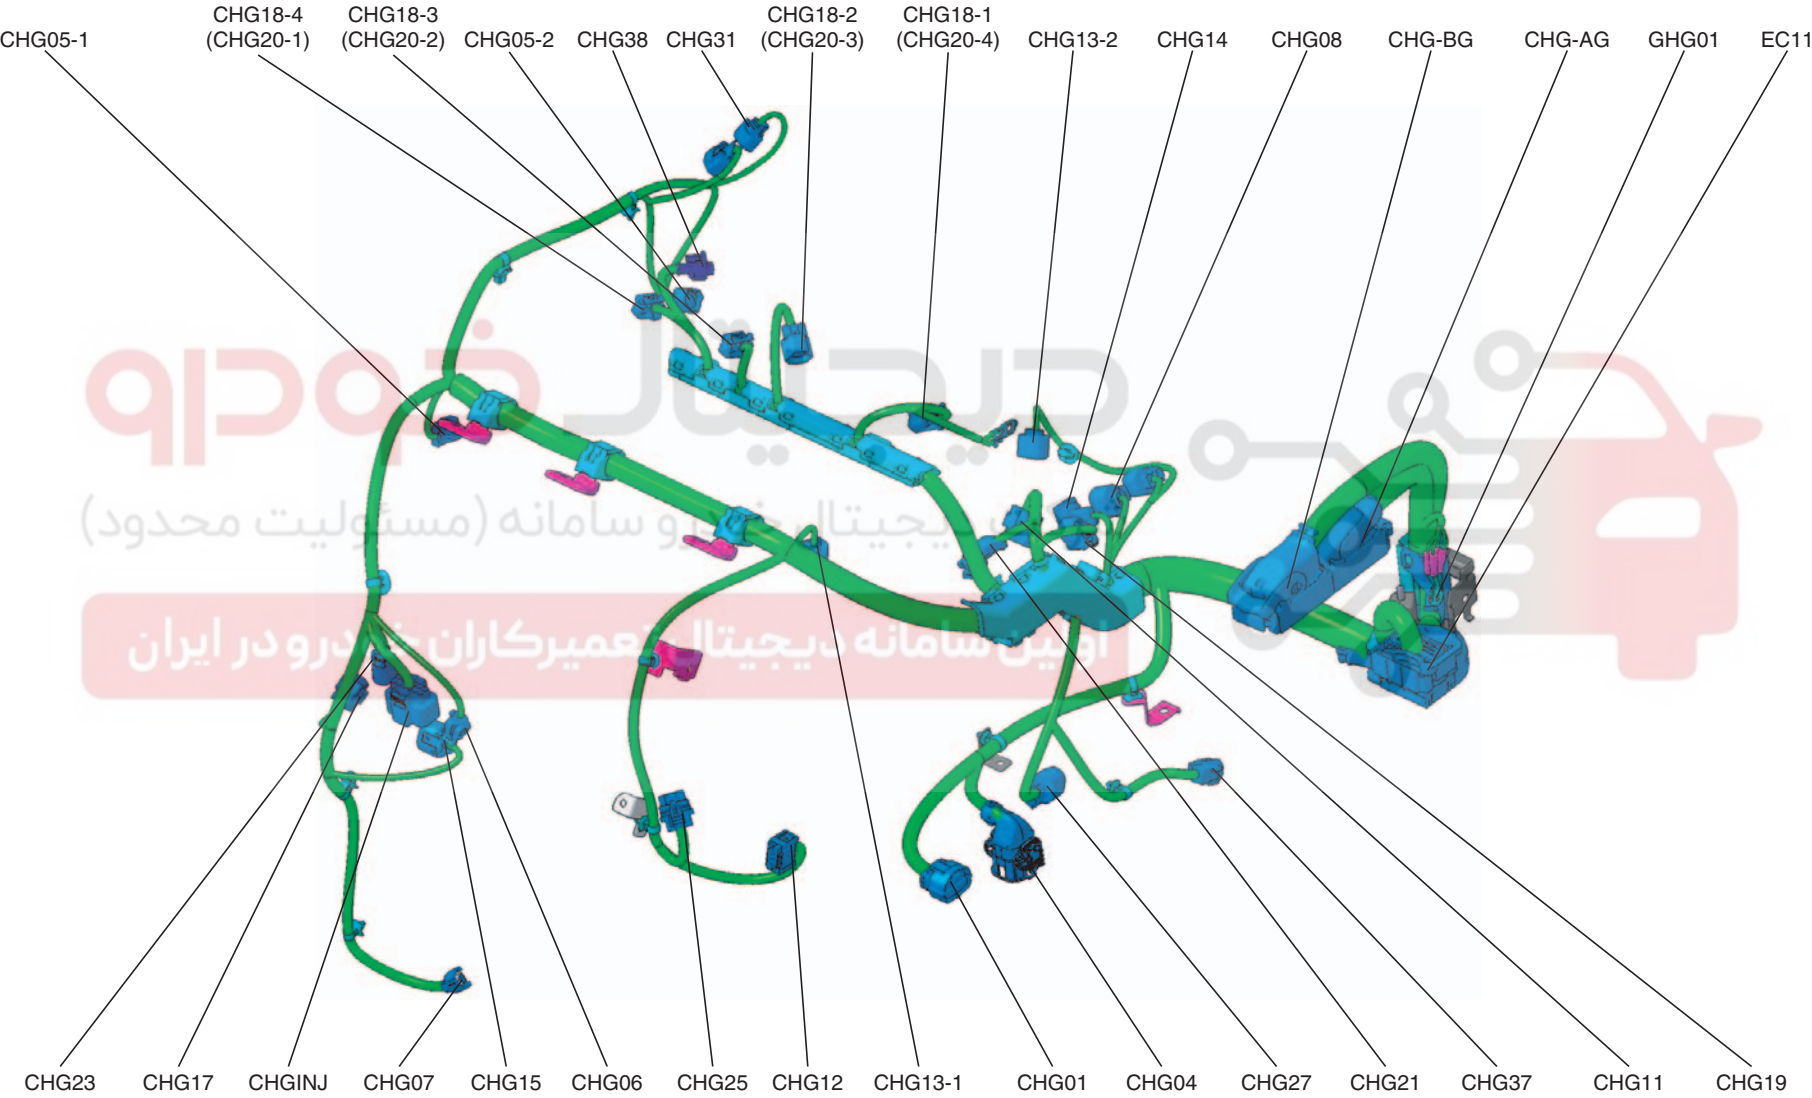

() : W/O IMMO. & Smart Key

Control Harness (4)

CONTROL HARNESS (G4KJ)


CHG01	Transaxle Range Switch
CHG04	ATM Solenoid
CHG05-1	Oil Control Valve #1
CHG05-2	Oil Control Valve #2
CHG06	Alternator
CHG07	Electronic A/C Compressor
CHG08	Oxygen Sensor (Up)
CHG11	Engine Coolant Temperature Sensor
CHG12	ETC Motor & Throttle Position Sensor
CHG13-1	Camshaft Position Sensor #1
CHG13-2	Camshaft Position Sensor #2
CHG14	Crankshaft Position Sensor
CHG15	Oil Pressure Switch
CHG17	Variable Intake Solenoid Valve
CHG18-1	Ignition Coil #1 (With SMK)
CHG18-2	Ignition Coil #2 (With SMK)
CHG18-3	Ignition Coil #3 (With SMK)
CHG18-4	Ignition Coil #4 (With SMK)
CHG19	Condenser
CHG20-1	Ignition Coil #1 (W/O SMK)
CHG20-2	Ignition Coil #2 (W/O SMK)
CHG20-3	Ignition Coil #3 (W/O SMK)
CHG20-4	Ignition Coil #4 (W/O SMK)
CHG21	Purge Control Solenoid Valve
CHG23	Knock Sensor
CHG25	MAP Sensor
CHG27	Vehicle Speed Sensor (M/T)
CHG31	Power Steering Pressure Sensor
CHG37	Back-Up Lamp Switch (M/T)
CHG38	Fuel Pressure Regulator Valve
CHG-AG	PCM
CHG-BG	PCM
CHGINJ	Connection With Injector Harness
EC11	Connection With Front Harness
GHG01	Ground

INJECTOR HARNESS (G4KJ)

CHG26-1	Injector #1
CHG26-2	Injector #2
CHG26-3	Injector #3
CHG26-4	Injector #4
CHG40	Rail Pressure Sensor
CHGINJ	Connection With Control Harness




D4FD : U II 1.7L

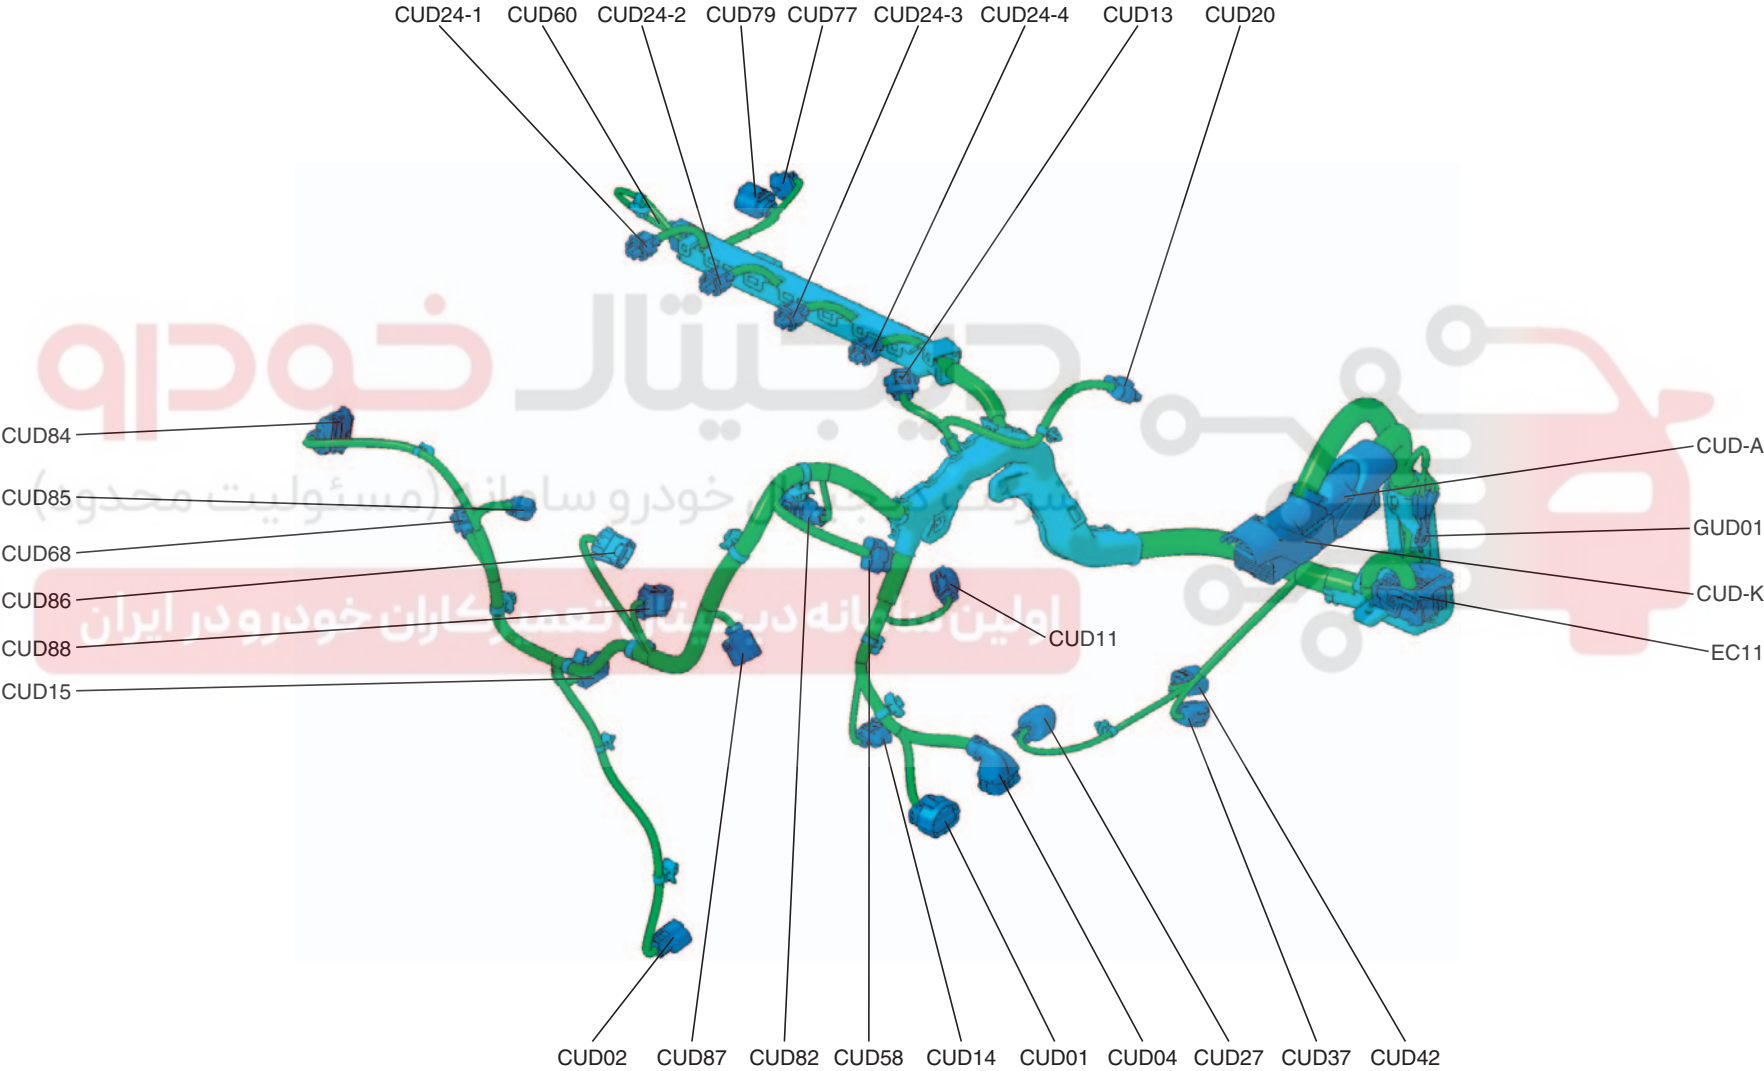

CONTROL HARNESS (D4FD)

CUD01	Transaxle Range Switch
CUD02	Oil Level Sensor
CUD04	ATM Solenoid
CUD11	Engine Coolant Temperature Sensor
CUD13	Camshaft Position Sensor
CUD14	Crankshaft Position Sensor
CUD15	Oil Pressure Switch
CUD20	Air Flow Sensor
CUD24-1	Injector #1
CUD24-2	Injector #2
CUD24-3	Injector #3
CUD24-4	Injector #4
CUD27	Vehicle Speed Sensor (M/T)
CUD37	Back-Up Lamp Switch (M/T)
CUD42	Neutral Switch (M/T)
CUD58	Air Control Valve
CUD60	Differential Pressure Sensor
CUD68	Fuel Pressure Regulating Valve
CUD77	Exhaust Gas Temperature Sensor
CUD79	Lambda Sensor
CUD82	Rail Pressure Sensor
CUD84	Variable Swirl Control Actuator
CUD85	Fuel Temperature Sensor
CUD86	EGR Cooling Bypass Solenoid Valve
CUD87	EGR Actuator
CUD88	VGT Control Solenoid Valve
CUD-A	ECM
CUD-K	ECM
EC11	Connection With Front Harness
GUD01	Ground




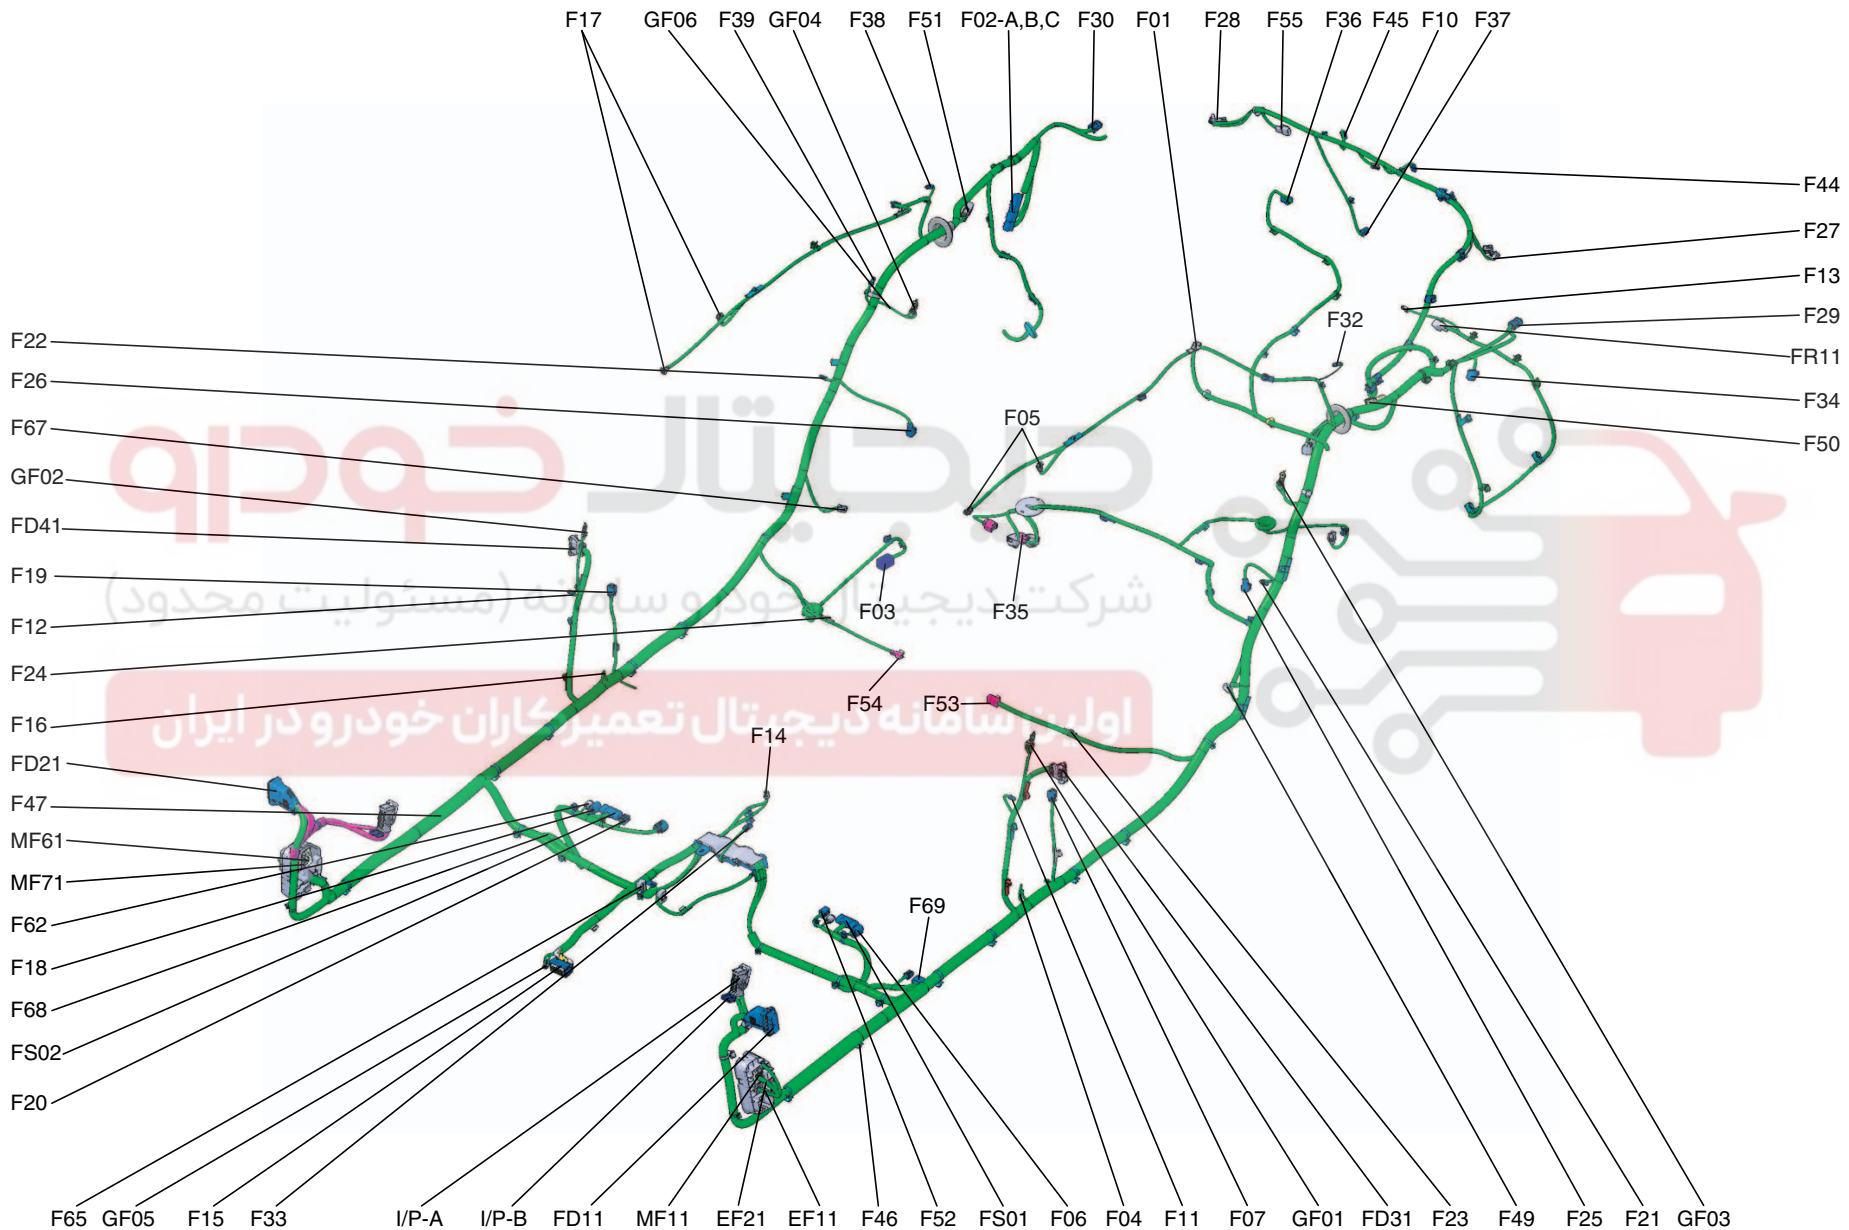

FLOOR HARNESS

F01	Woofers Speaker	F52	Driver Seat Belt Buckle Switch
F02-A	AMP	F53	Rear Seat Belt Buckle Switch LH
F02-B	AMP	F54	Rear Seat Belt Buckle Switch RH
F02-C	AMP	F55	Trunk Lid Handle Switch
F03	Auto Head Lamp Leveling Device Module	F62	Passenger Seat belt Reminder Mat
F04	Driver Seat Belt Pretensioner	F65	Sport Mode Switch
F05	Driver Curtain Air Bag	F66	Rear Initiator
F06	Driver Side Air Bag	F67	Electric Parking Brake Actuator RH
F07	Driver Side Impact Sensor	F68	Electric Parking Brake Module
F10	Rear View Camera	F69	ISG Low DC-DC Converter (AMP)
F11	Driver Door Switch	JF01	Joint Connector
F12	Passenger Door Switch	I/P-A	I/P Junction Box
F13	Smart Key Trunk Antenna	I/P-B	I/P Junction Box
F14	Smart Key Antenna (Interior #2)	EF11	Connection With Front Harness
F15	SRS Control Module	EF21	Connection With Front Harness
F16	Passenger Seat Belt Pretensioner	EF61	Connection With Front Harness
F17	Passenger Curtain Air Bag	FD11	Connection With Driver Door Harness
F18	Passenger Side Air Bag	FD21	Connection With Passenger Door Harness
F19	Passenger Side Impact Sensor	FD31	Connection With Rear Door LH Harness
F20	Passenger Seat Belt Buckle Switch	FD41	Connection With Rear Door RH Harness
F21	Rear Door Switch LH	FR11	Connection With Rear Bumper Harness
F22	Rear Door Switch RH	FS01	Connection With Driver Seat Harness
F23	Rear Seat Warmer LH	FS02	Connection With Passenger Seat Harness
F24	Rear Seat Warmer RH	MF11	Connection With Main Harness
F25	Rear Wheel Sensor LH	MF61	Connection With Main Harness
F26	Rear Wheel Sensor RH	MF71	Connection With Main Harness
F27	Rear Combination Lamp (IN) LH	GF01	Ground
F28	Rear Combination Lamp (IN) RH	GF02	Ground
F29	Rear Combination Lamp (OUT) LH	GF03	Ground
F30	Rear Combination Lamp (OUT) RH	GF04	Ground
F32	Rear Defogger (+)	GF05	Ground
F33	Hand Parking Brake Switch (M/T)	GF06	Ground
F34	Fuel Filler Actuator		
F35	Fuel Sender & Fuel Pump Motor		
F36	Trunk Room Lamp		
F37	Trunk Lid Motor		
F38	Glass Antenna Module		
F39	High-Mounted Stop Lamp		
F44	License Lamp LH		
F45	License Lamp RH		
F46	Driver Door Scuff Lamp		
F47	Passenger Door Scuff Lamp		
F49	Electric Parking Brake Actuator LH		
F50	Rear Seat Warmer Relay LH		
F51	Rear Seat Warmer Relay RH		

DRIVER DOOR

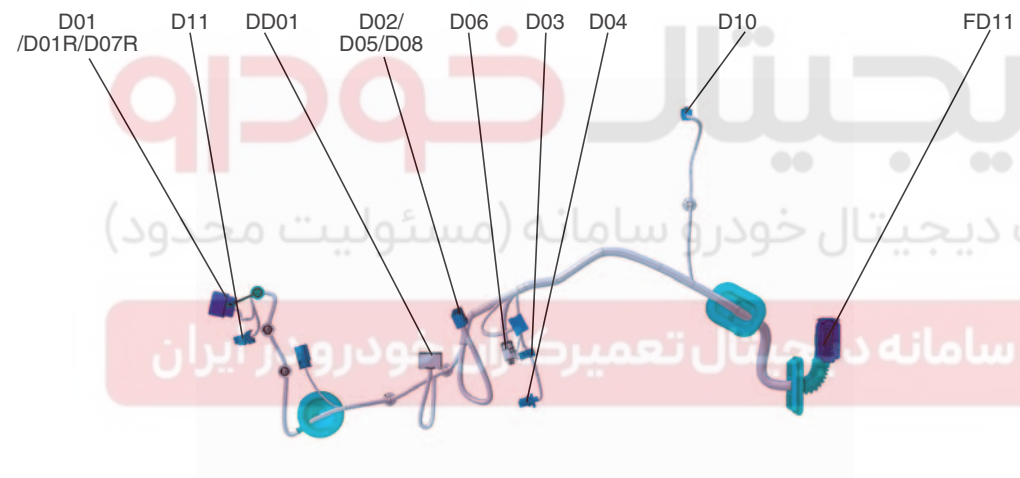


DRIVER DOOR HARNESS

- D01 Driver Door Lock Actuator (LHD & W/O Dead Lock)
- D01R Driver Door Lock Actuator (RHD & W/O Dead Lock)
- D02 Power Window Main Switch
- D03 Driver Door Speaker
- D04 Driver Power Window Motor (W/O Safety Power Window)
- D05 Power Window Main Switch (With Front & Rear Safety Power Window)
- D06 Driver Safety Power Window Module
- D07R Driver Door Lock Actuator (RHD & With Dead Lock)
- D08 Power Window Main Switch (With Front & W/O Rear Safety Power Window)
- D10 Driver Power Outside Mirror
- D11 Driver Smart Key Outside Handle (With Smart Key)
- DD01 Connector With Driver Door EXT. Harness
- FD11 Connector With Floor Harness

DRIVER DOOR EXT. HARNESS

- D09 Driver Door Lamp
- D12 Power Outside Mirror Switch
- D13 Fuel Filler Door & Trunk Lid Switch
- D14 Driver Door Mood Lamp
- D16 Driver IMS Switch
- DD01 Connection With Driver Door Harness


PASSENGER DOOR

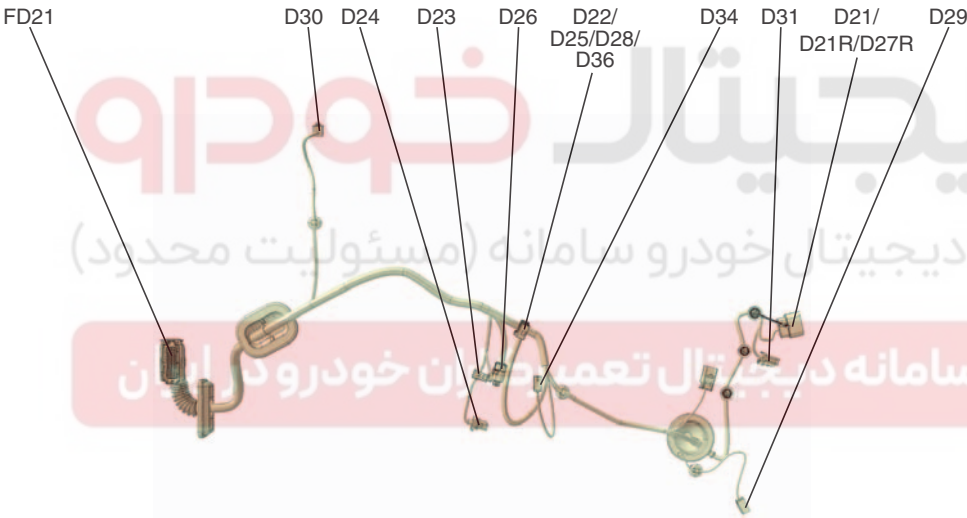

PASSENGER DOOR HARNESS

- D21 Passenger Door Lock Actuator (LHD & W/O Dead Lock)
- D21R Passenger Door Lock Actuator (RHD & W/O Dead Lock)
- D22 Passenger Power Window Switch (W/O Passenger & Rear Safety Power Window & Central Door Lock)
- D23 Passenger Door Speaker
- D24 Passenger Power Window Motor
- D25 Passenger Power Window Switch (With Passenger/Rear Safety Power Window & Central Door Lock)
- D26 Passenger Safety Power Window Module
- D27R Passenger Door Lock Actuator (RHD & With Dead Lock)
- D28 Passenger Power Window Switch (With Passenger & W/O Rear Safety Power Window & W/O Central Door Lock)
- D29 Passenger Door Lamp
- D30 Passenger Power Outside Mirror
- D31 Passenger Smart Key Outside Handle (With Smart Key)
- D34 Passenger Door Mood Lamp
- D36 Passenger Power Window Switch (W/O Passenger & Rear Safety Power Window & With Central Door Lock)
- FD21 Connector With Floor Harness


REAR DOOR (LH)

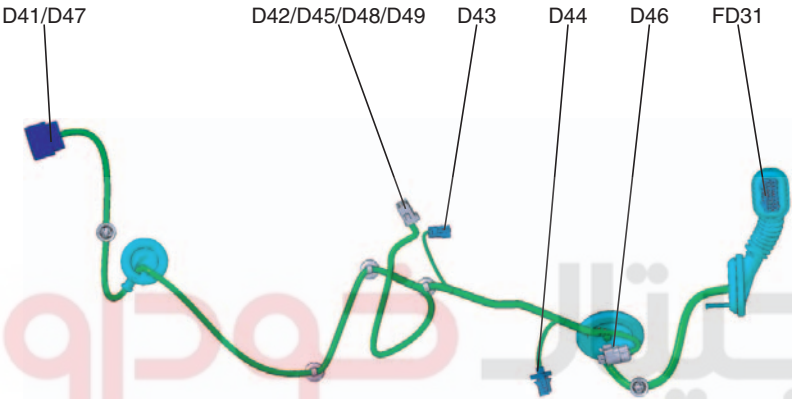

REAR DOOR HARNESS (LH)

- D41 Rear Door Lock Actuator LH (W/O Dead Lock)
- D42 Rear Power Window Switch LH (W/O Rear Safety Power Window & Rear Seat Warmer)
- D43 Rear Door Speaker LH
- D44 Rear Power Window Motor LH (W/O Rear Safety Power Window)
- D45 Rear Power Window Switch LH (With Rear Safety Power Window & W/O Rear Seat Warmer)
- D46 Rear Safety Power Window Module LH (With Rear Safety Power Window)
- D47 Rear Door Lock Actuator LH (With Dead Lock)
- D48 Rear Power Window Switch LH (W/O Rear Safety Power Window & With Rear Seat Warmer)
- D49 Rear Power Window Switch LH (With Rear Safety Power Window & With Rear Seat Warmer)
- FD31 Connector With Floor Harness

REAR DOOR (RH)

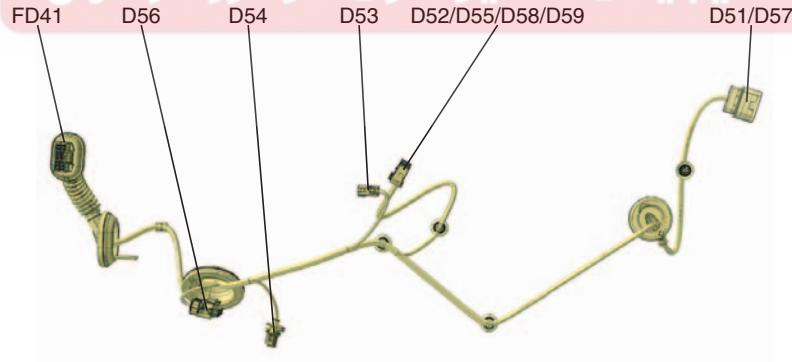

REAR DOOR HARNESS (RH)

- D51 Rear Door Lock Actuator RH (W/O Dead Lock)
- D52 Rear Power Window Switch RH (W/O Rear Safety Power Window & Rear Seat Warmer)
- D53 Rear Door Speaker RH
- D54 Rear Power Window Motor RH (W/O Rear Safety Power Window)
- D55 Rear Power Window Switch RH (With Rear Safety Power Window & W/O Rear Seat Warmer)
- D56 Rear Safety Power Window Module RH (With Rear Safety Power Window)
- D57 Rear Door Lock Actuator RH (With Dead Lock)
- D58 Rear Power Window Switch RH (W/O Rear Safety Power Window & With Rear Seat Warmer)
- D59 Rear Power Window Switch RH (With Rear Safety Power Window & With Rear Seat Warmer)
- FD41 Connector With Floor Harness

DRIVER POWER SEAT




DRIVER POWER SEAT HARNESS

- S01 Driver Seat Manual Switch (LHD & W/O IMS)
- S01R Driver Seat Manual Switch (RHD & W/O IMS)
- S02 Driver Seat Manual Switch (With IMS)
- S03-A Driver IMS Module (LHD & With IMS)
- S03-AR Driver IMS Module (RHD & With IMS)
- S03-B Driver IMS Module (With IMS)
- S03-C Driver IMS Module (With IMS)
- S03-D Driver IMS Module (With IMS)
- S04 Driver Reclining Limit Switch (LHD & W/O IMS)
- S04R Driver Reclining Limit Switch (RHD & W/O IMS)
- S05 Driver Front Height Adjuster Motor
- S06 Driver Rear Height Adjuster Motor
- S07 Driver Slide Motor
- S08 Driver Seat Warmer Module (W/O CCS)
- S09 Driver Cushion Warmer (W/O CCS)
- S11 Driver CCS Control Module (With CCS)
- S12 Driver CCS Cushion Warmer (With CCS)
- S13 Driver CCS Blower Motor (With CCS)
- S14 Driver Lumbar Support Switch (2WAY)
- JS01 Joint Connector (W/O IMS)
- JS02 Joint Connector (With IMS)
- FS01 Connection With Floor Harness
- SS01 Connection With Driver Seat EXT. Harness

DRIVER SEAT EXT. HARNESS

- S31 Driver Reclining Motor
- S32 Driver Lumbar Support Motor
- SS01 Connection With Driver Seat Harness

PASSENGER POWER SEAT

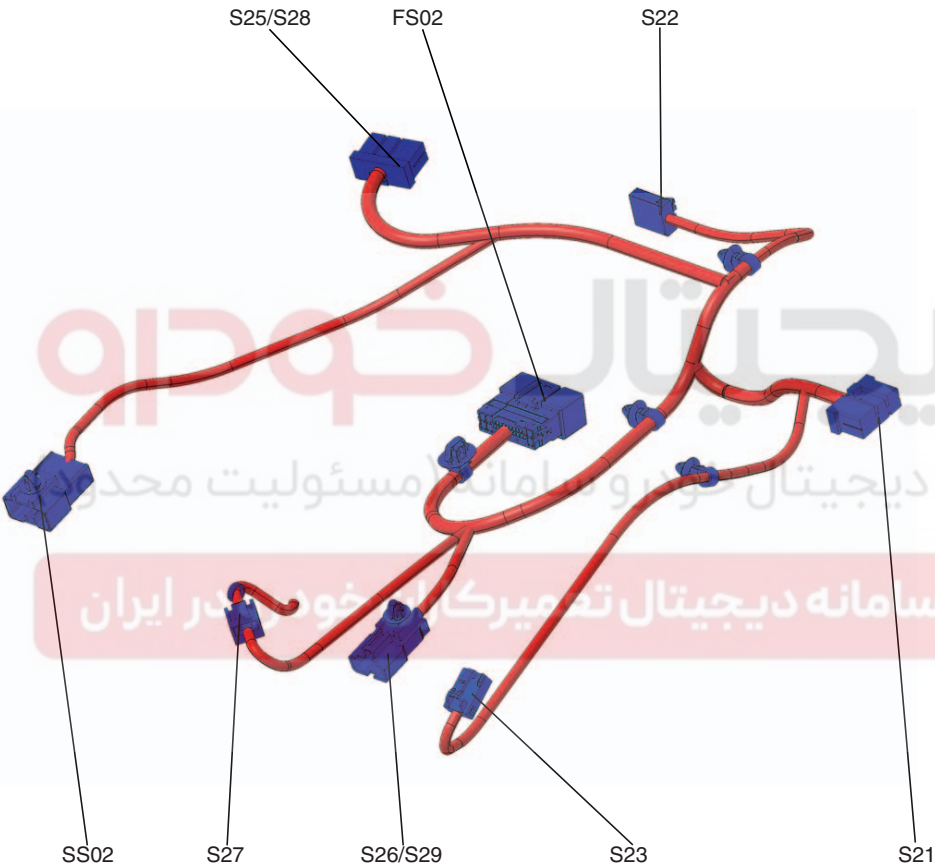


PASSENGER POWER SEAT HARNESS

- S21 Passenger Seat Manual Switch
- S22 Passenger Slide Motor
- S23 Passenger Reclining Limit Switch (LHD)
- S23R Passenger Reclining Limit Switch (RHD)
- S25 Passenger CCS Control Module (With CCS)
- S26 Passenger CCS Cushion Warmer (With CCS)
- S27 Passenger CCS Blower Motor (With CCS)
- S28 Passenger Seat Warmer Module (W/O CCS)
- S29 Passenger Cushion Warmer (W/O CCS)
- FS02 Connection With Floor Harness
- SS02 Connection With Passenger Seat EXT. Harness

PASSENGER SEAT EXT. HARNESS

- S33 Passenger Reclining Motor
- SS02 Connection With Passenger Seat Harness


G4KD/G4KE : THETA II 2.0L/2.4L MPI

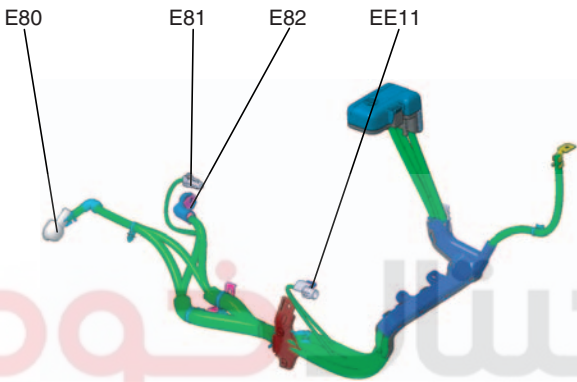

BATTERY HARNESS (G4KD/G4KE)

- E80 Alternator
- E81 Start Solenoid
- E82 Start Motor
- EE11 Connection With Front Harness

G4KJ : THETA II 2.4L GDI

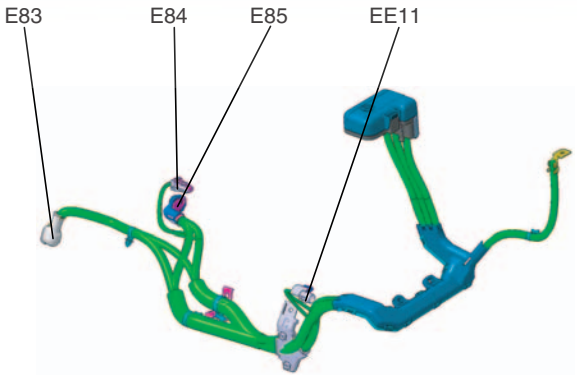

BATTERY HARNESS (G4KJ)


- E83 Alternator
- E84 Start Solenoid
- E85 Start Motor
- EE11 Connection With Front Harness



دیجیتال خودرو
شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

D4FD : U II 1.7L

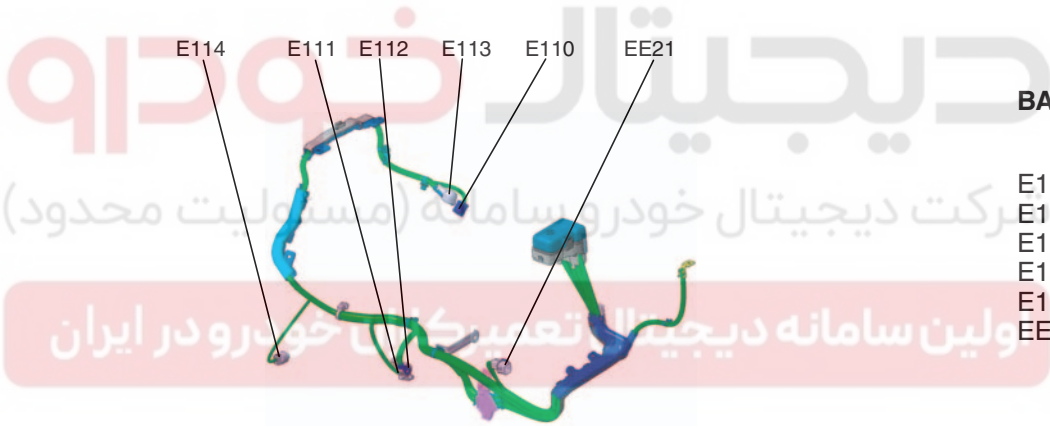



BATTERY HARNESS (D4FD)

- E110 Alternator
- E111 Start Solenoid
- E112 Start Motor
- E113 Alternator
- E114 Electronic A/C Compressor
- EE21 Connection With Front Harness

FRONT END MODULE HARNESS

- E53 Ambient Temperature Sensor
- E54-L Horn LH
- E54-R Horn RH (G4KD/G4KE/G4KJ)
- EE01 Connection With Front Harness

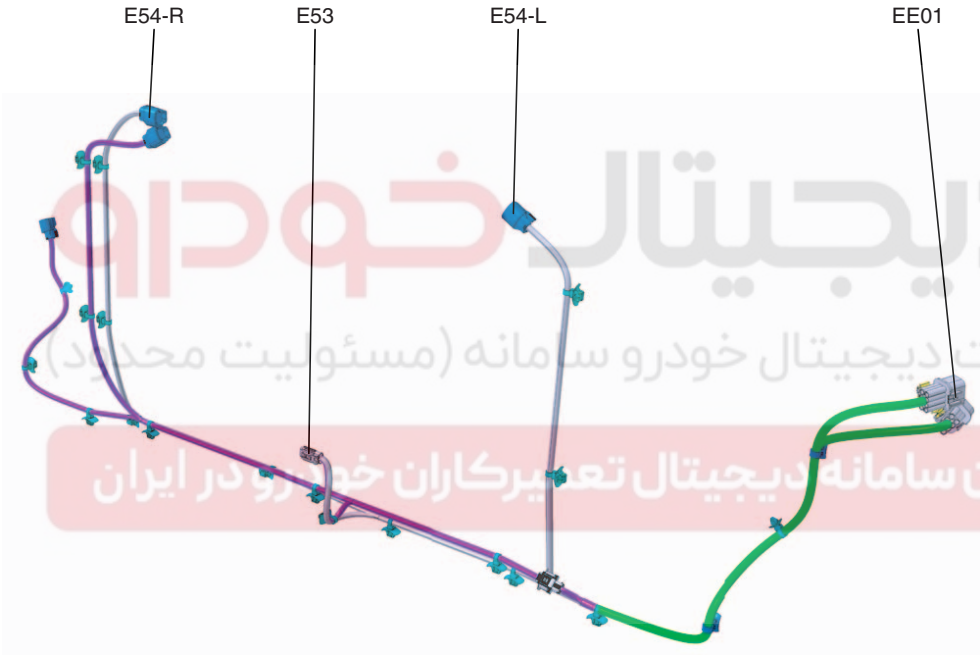


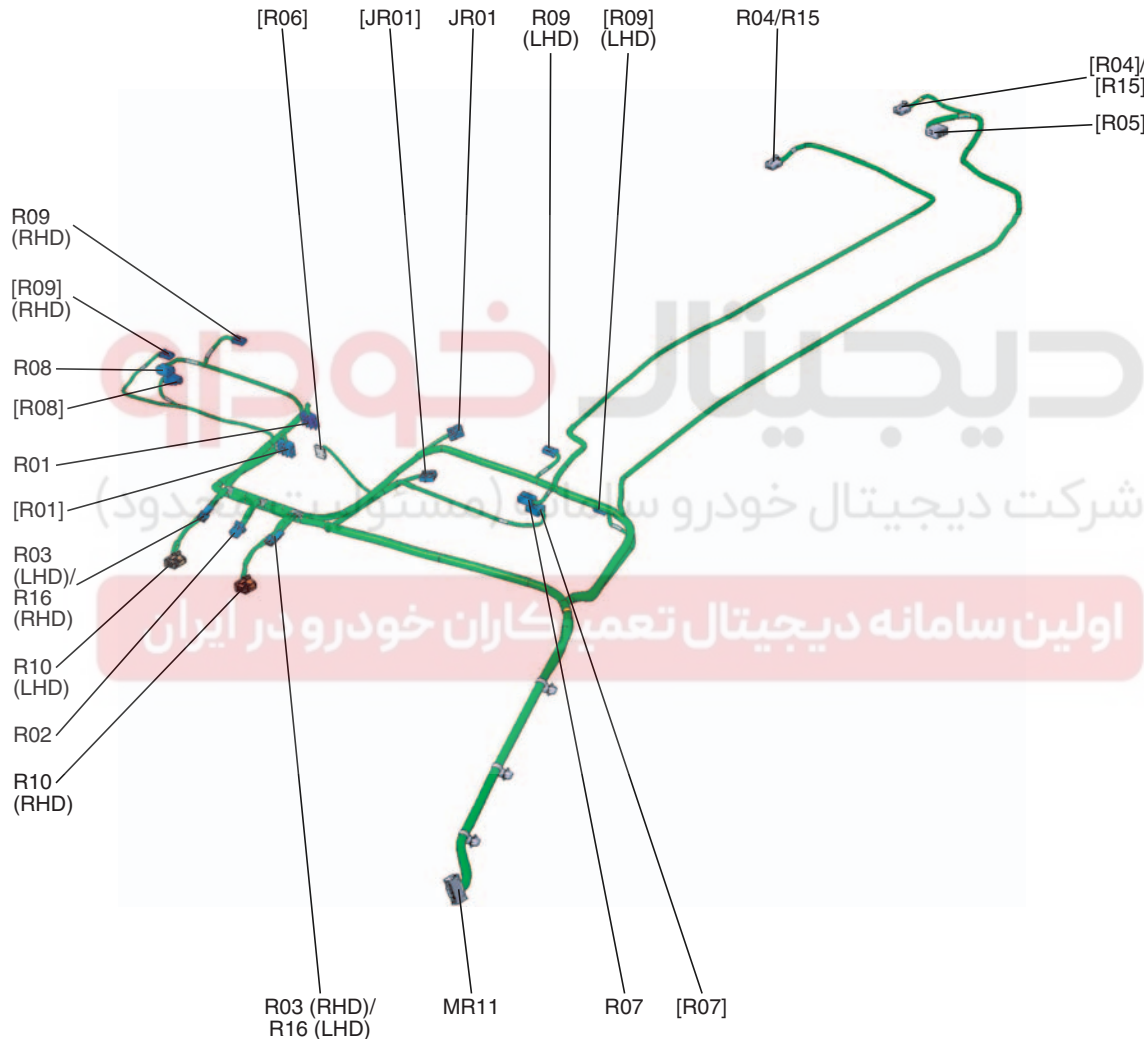

ROOF HARNESS

- R01 Overhead Console Lamp
- R02 Electro Chromic Mirror
- R03 Rain Sensor
- R04 Room Lamp (W/O Rear Personal Lamp)
- R05 Panorama Sunroof
- R06 Panorama Sunroof Switch
- R07 Vanity Lamp LH
- R08 Vanity Lamp RH
- R09 MIC
- R10 Lane Keeping Assist Module
- R15 Rear Personal Lamp (With Rear Personal Lamp)
- R16 Auto Defogger Sensor
- JR01 Joint Connector
- MR11 Connector With Floor Harness


[] : With Panorama Sunroof

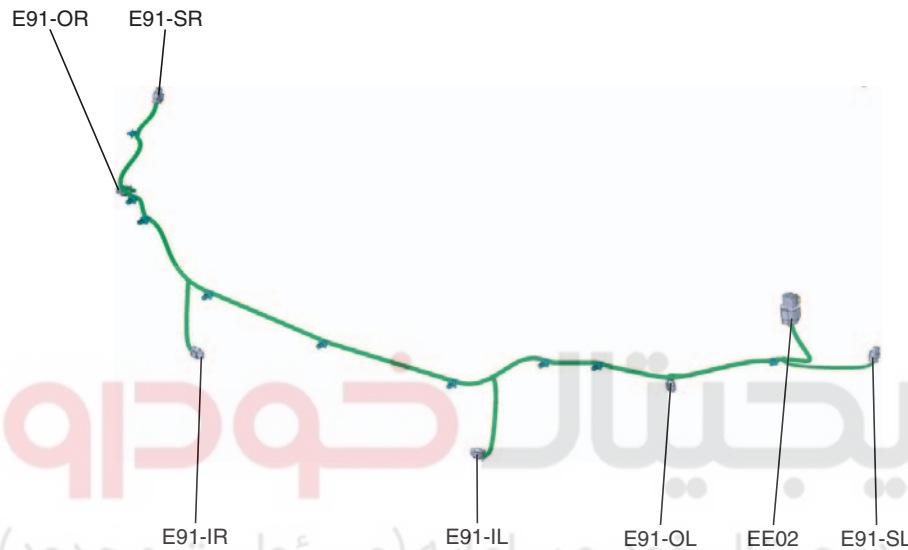

FRONT BUMPER HARNESS

E91-IL	Front Smart Parking Assist Sensor LH (IN)
E91-IR	Front Smart Parking Assist Sensor RH (IN)
E91-OL	Front Smart Parking Assist Sensor LH (OUT)
E91-OR	Front Smart Parking Assist Sensor RH (OUT)
E91-SL	Front Smart Parking Assist Sensor LH (SIDE)
E91-SR	Front Smart Parking Assist Sensor RH (SIDE)
EE02	Connection With Front Harness

REAR BUMPER HARNESS

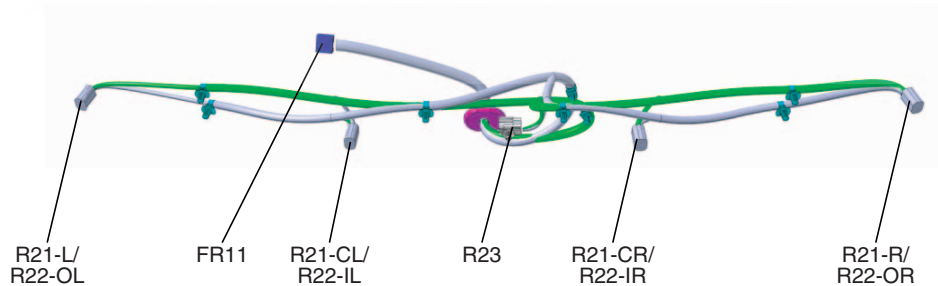

R21-CL	Rear Parking Assist Sensor LH (Center)
R21-CR	Rear Parking Assist Sensor RH (Center)
R21-L	Rear Parking Assist Sensor LH
R21-R	Rear Parking Assist Sensor RH
R22-IL	Rear Smart Parking Assist Sensor LH (IN)
R22-IR	Rear Smart Parking Assist Sensor RH (IN)
R22-OL	Rear Smart Parking Assist Sensor LH (OUT)
R22-OR	Rear Smart Parking Assist Sensor RH (OUT)
R23	Smart Key Bumper Antenna
FR11	Connector With Floor Harness