



Combination instrument lighting indicator

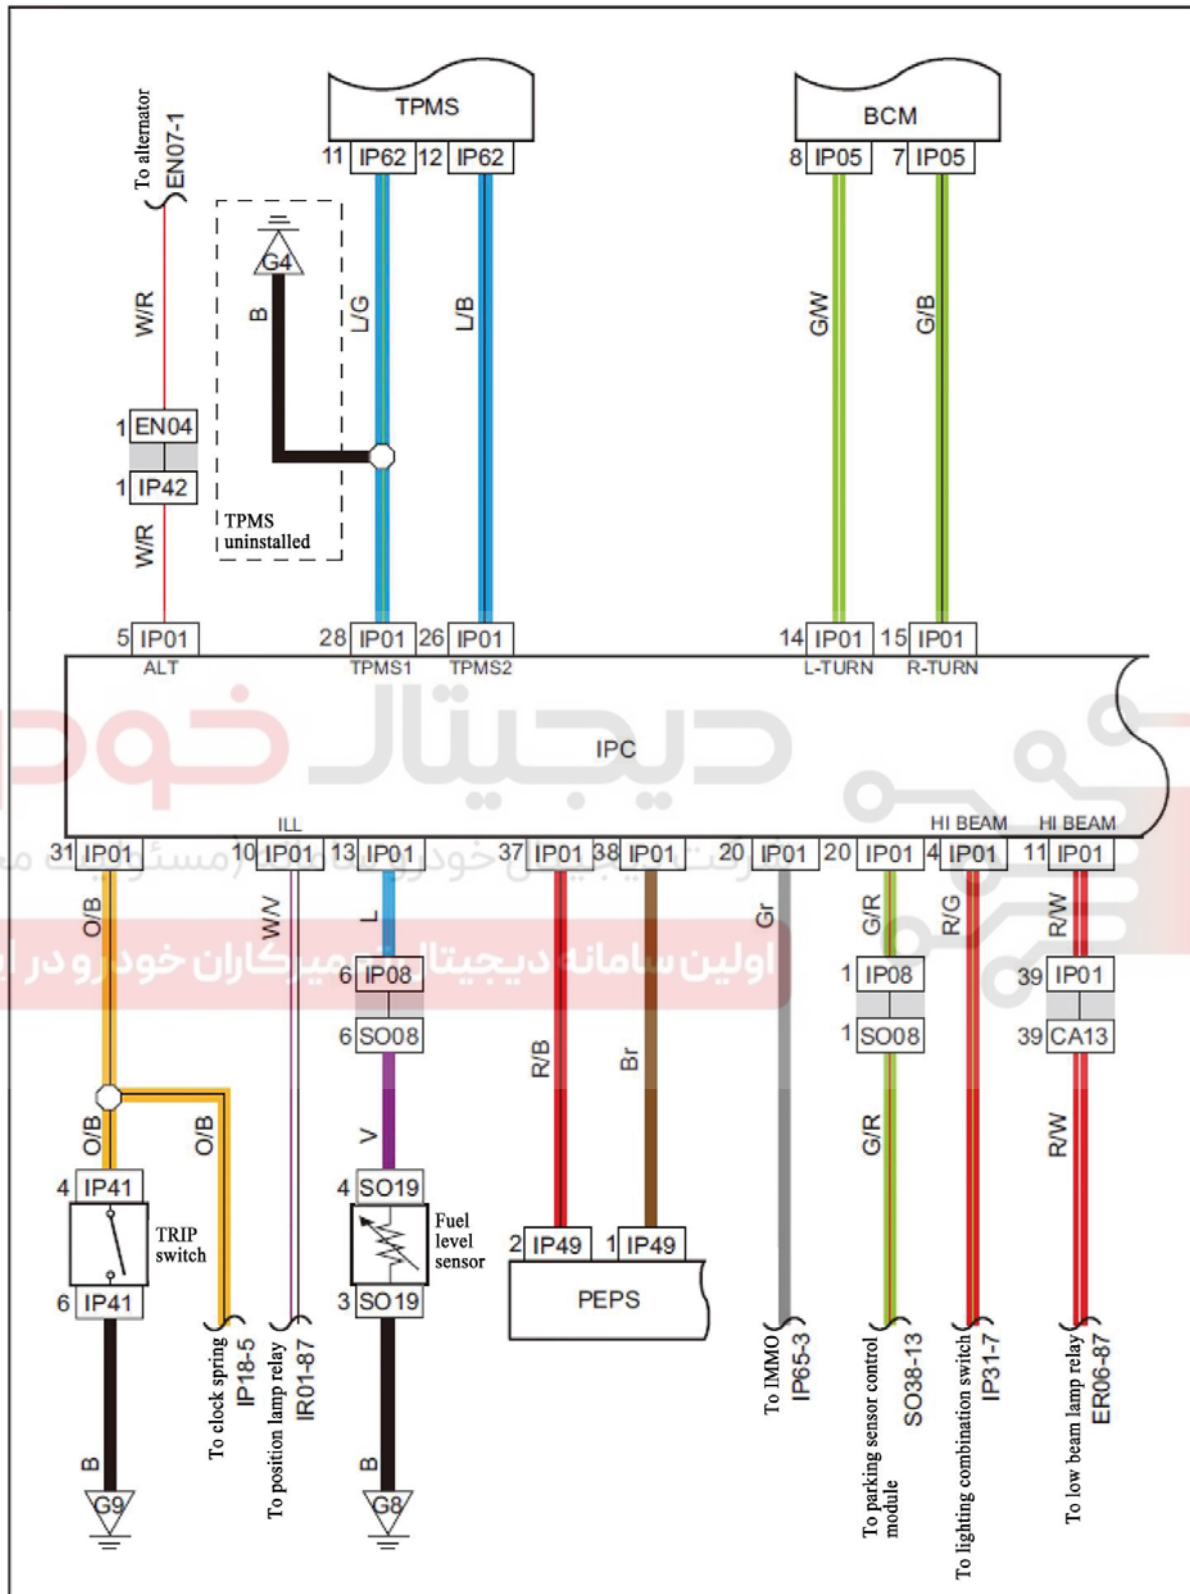

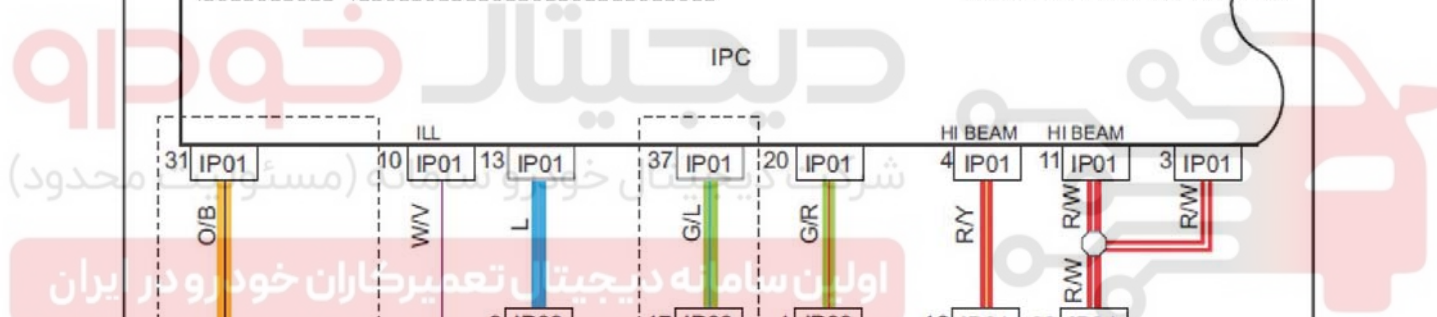

Harness connector	Name	Page
IP01	Combination instrument harness connector	54
IP05	BCM harness connector B	46
IP08	To floor harness connector B	46
IP41	Middle switch harness connector	46
IP42	To engine harness connector	54
IP52	BMCS module harness connector	46
IP62	TPMS control module harness connector	54
IP83	TPMS control module harness connector (GC6)	54
EN04	To instrument harness connector	36
EO02	To instrument harness connector A	49
SO08	To instrument panel harness connector B	65
SO19	Fuel pump and fuel level sensor harness connector	56
CA13	Horn 2 harness connector (right)	32
G4	Instrument grounding	84
G6	Instrument grounding	84
G8	Floor grounding	85

Connection point	Description	Page
IP01-5	To alternator EO34-1	102
IP01-31	To clock spring IP18-5	284
IP01-10	To position lamp relay IR01-87	234
IP01-20	To parking sensor control module SO38-13	297
IP01-37	To parking sensor control module SO38-8	243
IP01-4	To low beam lamp relay ER07-87	210
IP01-11	To low beam lamp relay ER07-86	210
IP01-16	To anti-theft key IP61-2	159
IP01-7	To IMMO IP65-3	174
IP01-38	To BCM IP03-17	190
	To luggage compartment lamp switch SO20-1	196
	To high mounted brake lamp SO25-1	222