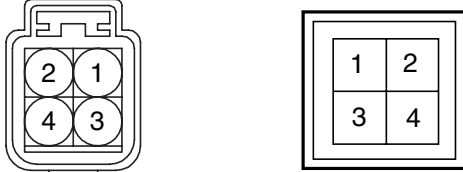 
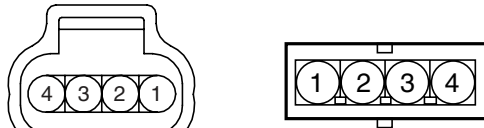 
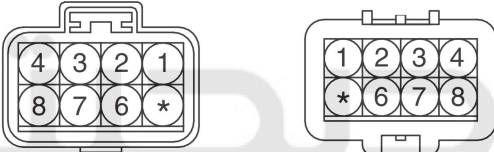 
 
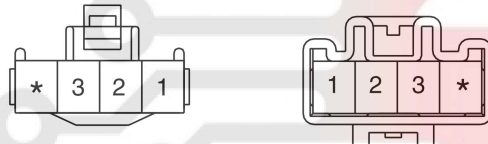 
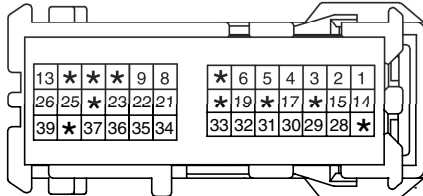 
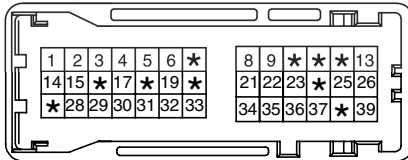 
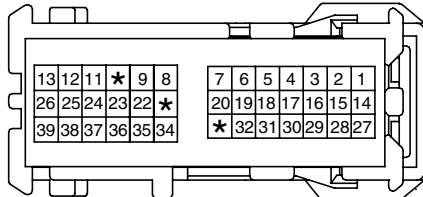 
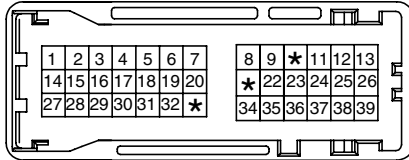 



HARNESS CONNECTOR EC81986B

HARNESS CONNECTOR (1)		CC-1
CC101  KUM_KNMWP_04F_Gr CR04M045	CC102  KUM_NMWP_04F_B CR04M046	CC103  PKD_GT150_04F_Gr CR04M047
EC11  KET_312IWP_01F_B KET_312IWP_01M_B	EE01  KUM_NMWP_08F_B KUM_NMWP_08M_B	EE02  KUM_NMWP_01F_B CR01M002
EE03  CR01F020 KUM_NMWP_01M_B	EF11  KET_58L_01F_W KET_58L_01M_W	EM03  KET_312II_04F_B KET_312II_04M_B
EM01  KET_LIF0409_39F_L		 KET_LIF0409_39M_L
EM02  KET_LIF0409_39F_Gr		 KET_LIF0409_39M_Gr

HARNESS CONNECTOR


HARNESS CONNECTOR (2)

 CC-2

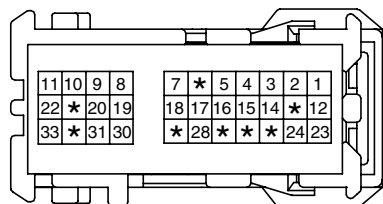


KET_LIF0409_33F_B

 EM11

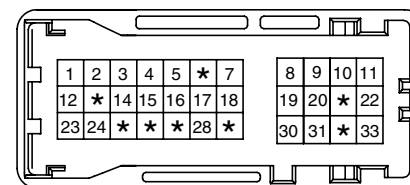


KET_LIF0409_33M_B

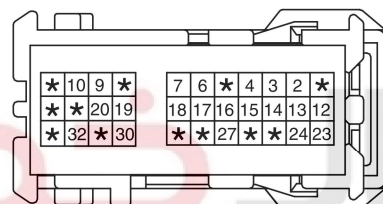 


KET_LIF0409_33F_W

 EM21

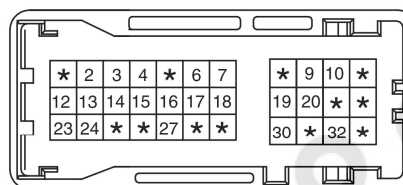


KET_LIF0409_33M_W

 EM31




KET_250DL_08F_W

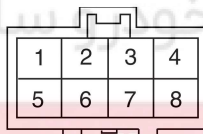 


KET_250DL_08M_W

 EM41

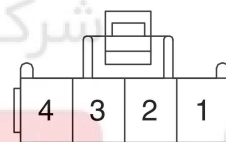


KET_312II_04F_W

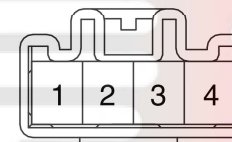 


KET_312II_04M_W

 FD01

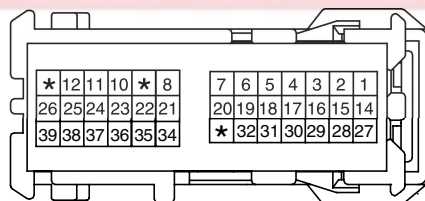


KET_LIF0409_39F_W

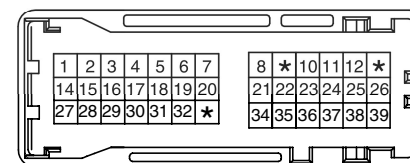 


KET_LIF0409_39M_W

 FD02

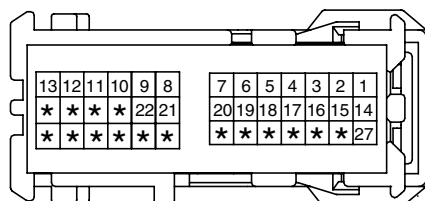

KET_LIF0409_39F_W

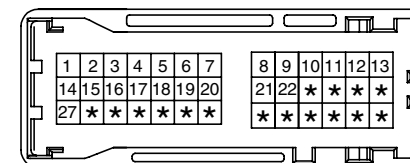 


KET_LIF0409_39M_W

HARNESS CONNECTOR


HARNESS CONNECTOR (3)

CC-3

 FD11

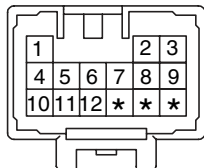


KET_090III_15M_W

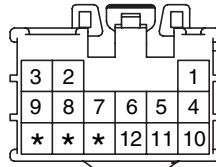 


KET_090III_15F_W

 FD12

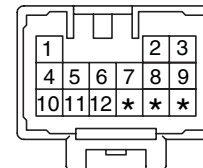

KET_090III_15M_W

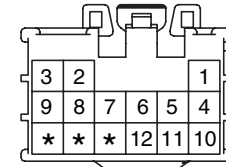 


KET_090III_15F_W

FR11




 AMP_090III_16M_W

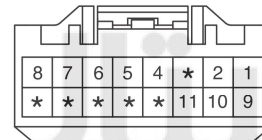


AMP_090III_16F_W

 FR12

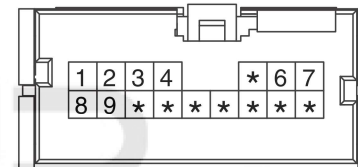


AMP_040III_16M_W

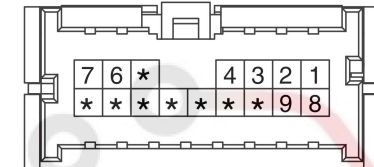 


AMP_040III_16F_W

 FS01

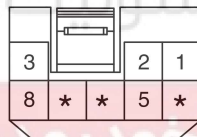


AMP_090III_08F_W

 

CR08M007

 FS02

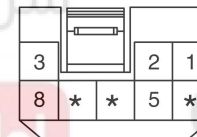


AMP_090III_08F_W




CR08M007

 MA11

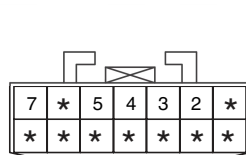


AMP_MQS_14F_Y

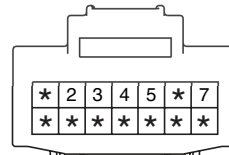 


AMP_MQS_14M_Y

 MF01

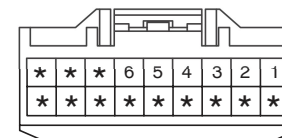


AMP_090III_18F_W

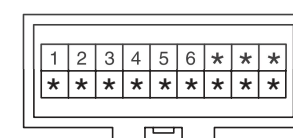 


AMP_090III_18M_W

 MF11

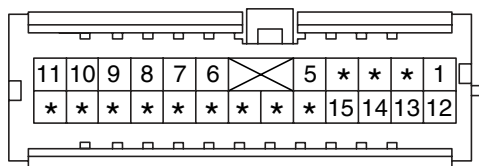

AMP_040III_24F_GR

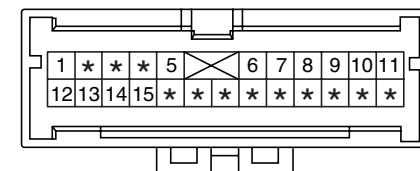 


AMP_040III_24M_GR

HARNESS CONNECTOR


HARNESS CONNECTOR (4)

CC-4

 MF21




KET_250DL_01F_W

 


KET_250DL_01M_W

 MF41

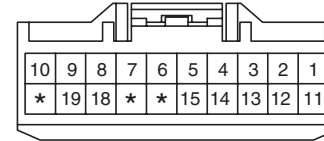


AMP_090III_20F_R

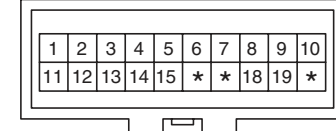 


AMP_090III_20M_R

 MF51

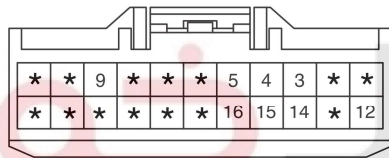


AMP_090III_22F_W

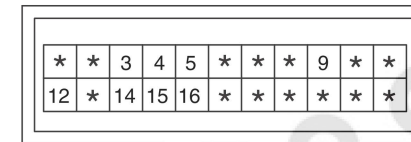 


AMP_090III_22M_W

 MF61

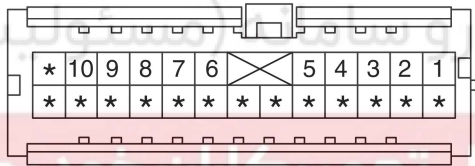


AMP_040III_24F_GR

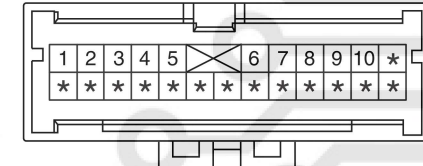 


AMP_040III_24M_GR

 MF71

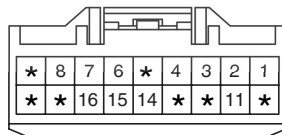


AMP_090III_18F_BR

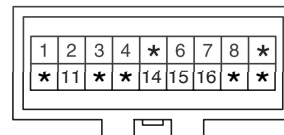 


AMP_090III_18M_BR

 MF81

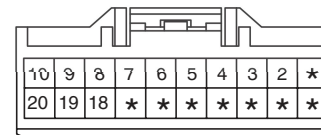


AMP_090III_20F_R

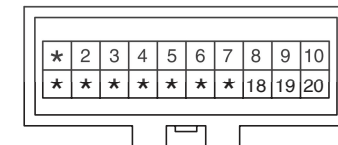 


AMP_090III_20M_R

 MF91

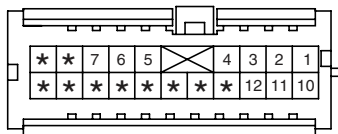


AMP_040III_20F_BR

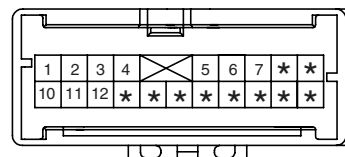 


AMP_040III_20M_BR

 RR11

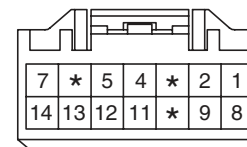

AMP_090III_14F_W

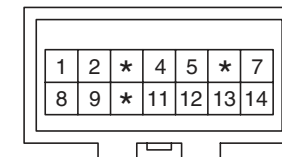 


AMP_090III_14M_W


ENGINE COMPARTMENT JUNCTION BLOCK

ENGINE COMPARTMENT JUNCTION BLOCK (1)

 CC-5

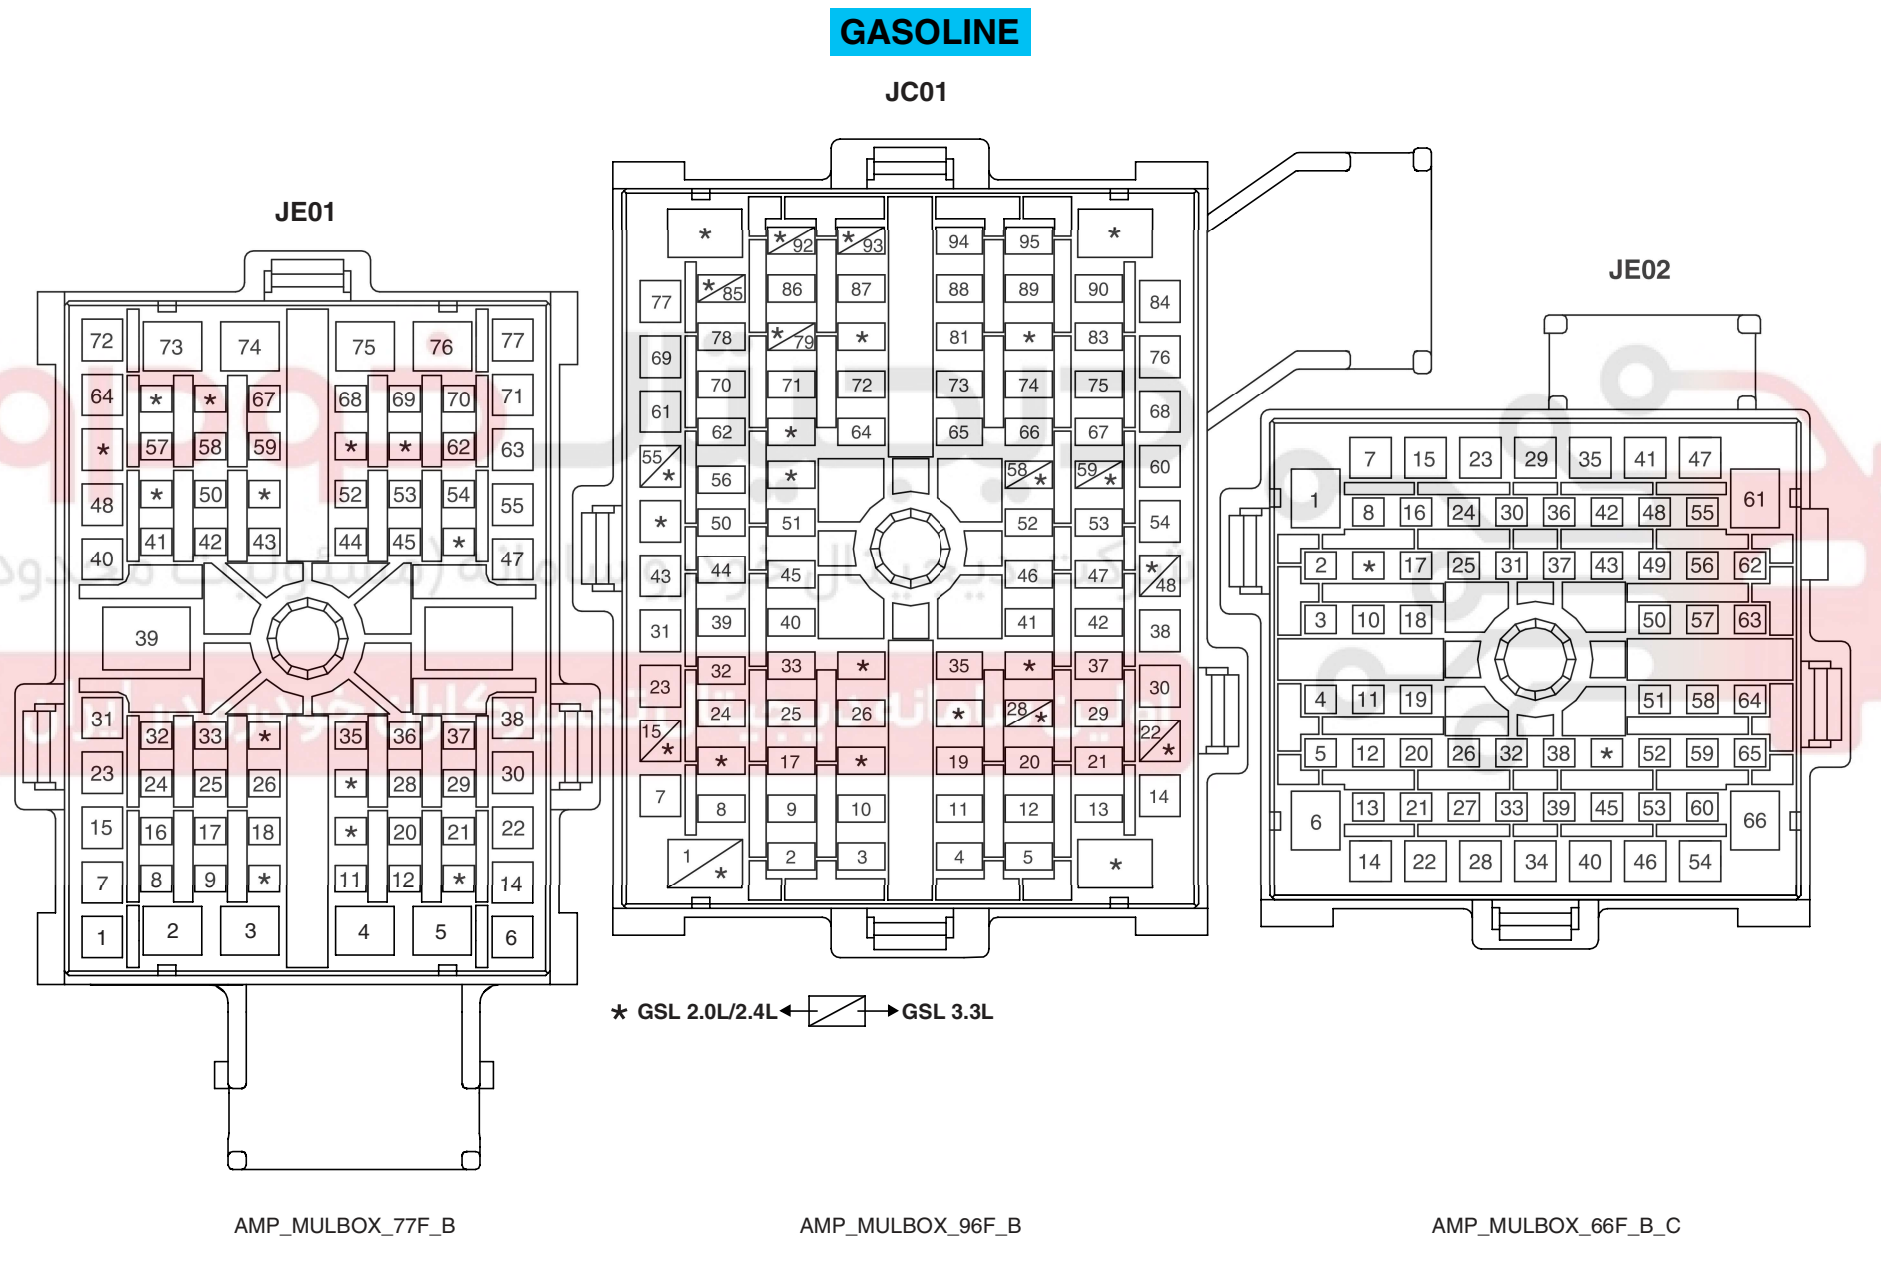

ENGINE COMPARTMENT JUNCTION BLOCK

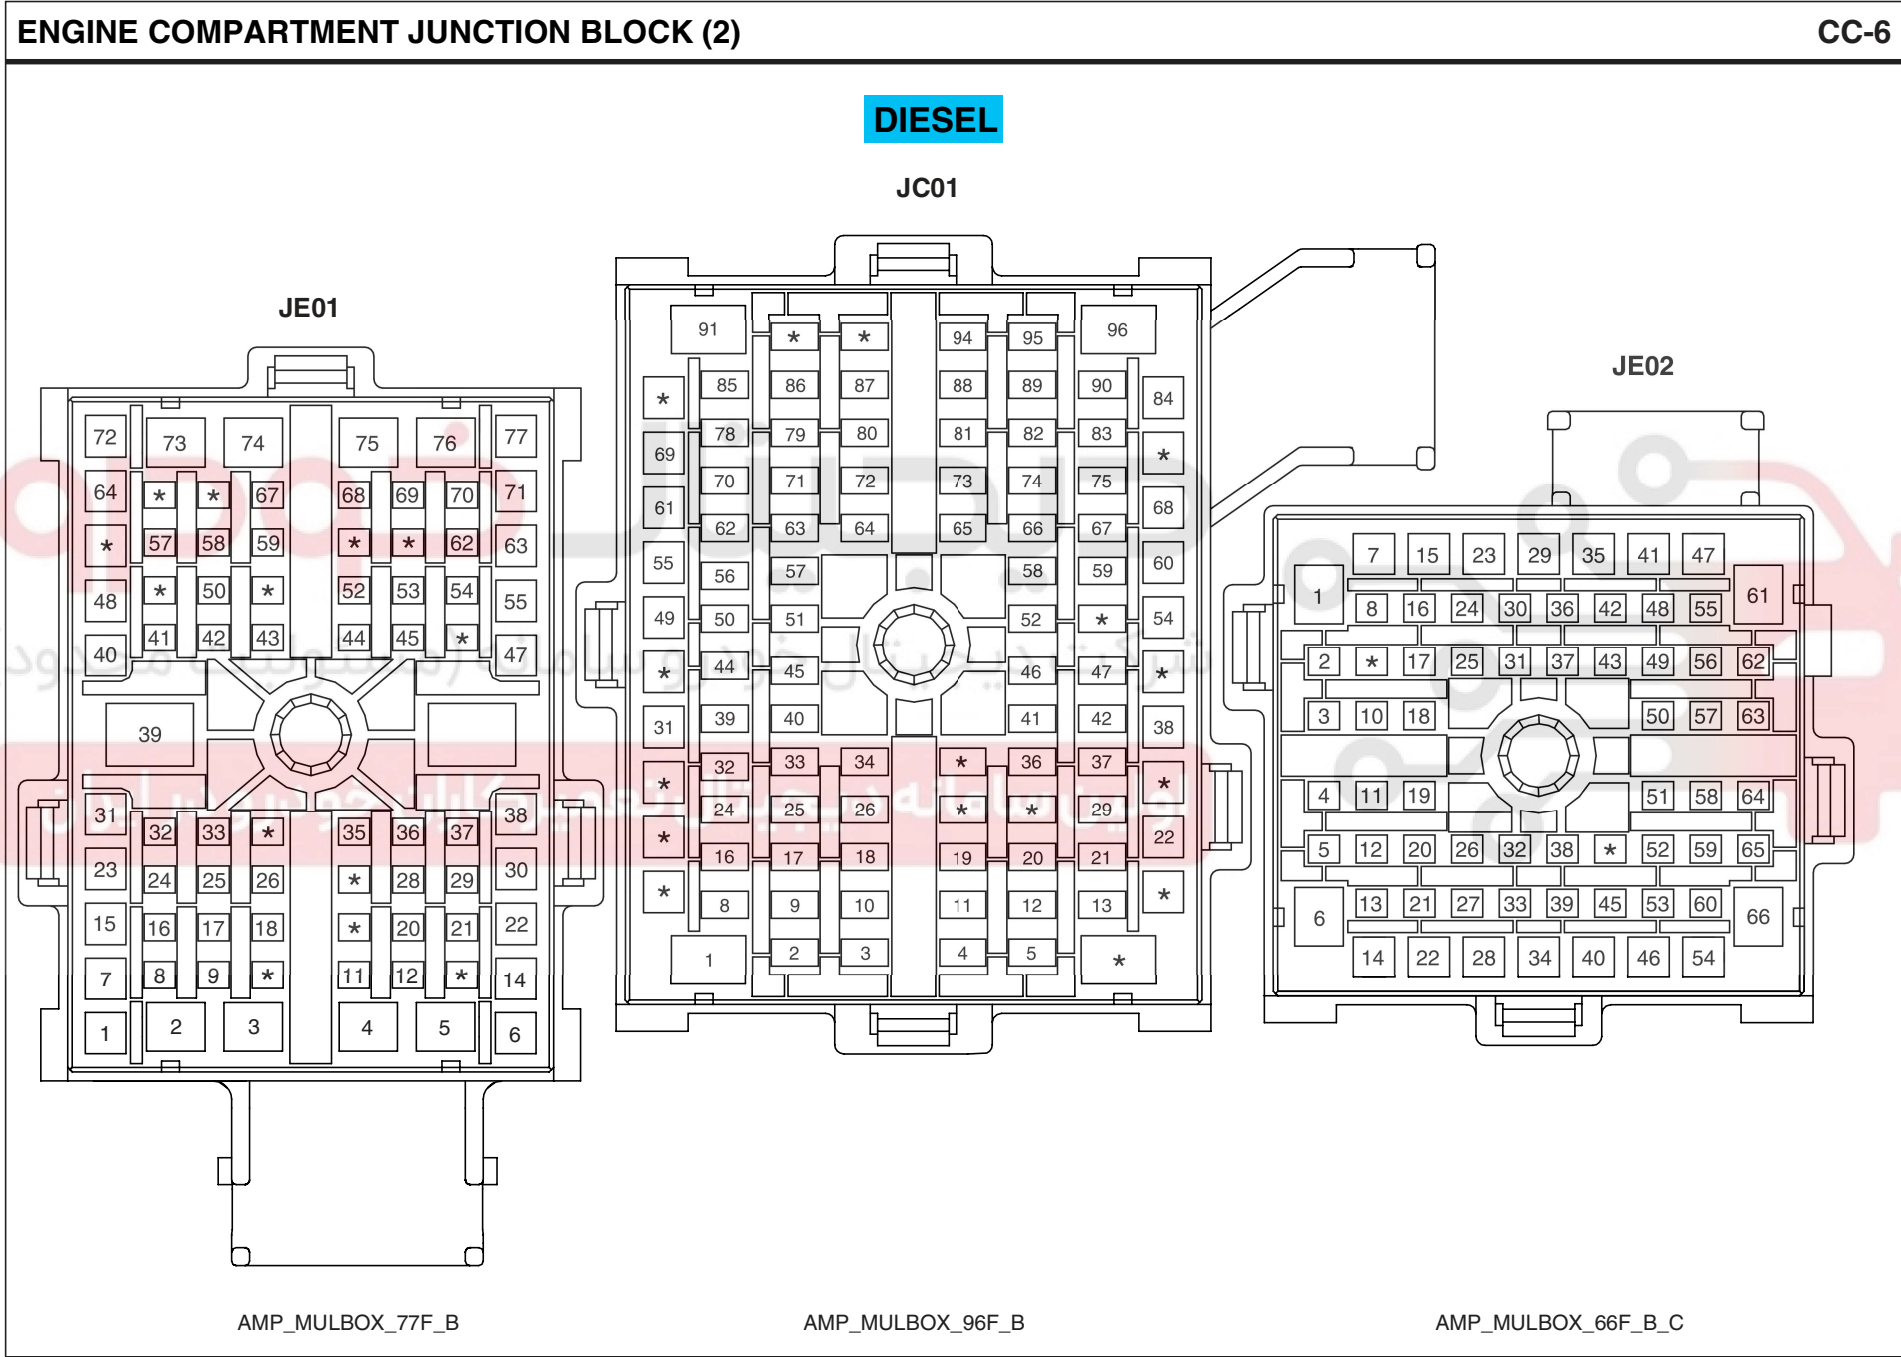 

PASSENGER COMPARTMENT JUNCTION BLOCK E18F365B


PASSENGER COMPARTMENT JUNCTION BLOCK (1)										CC-7																																																																																										
I/P-A <table><tr><td>7</td><td>6</td><td>5</td><td colspan="3"></td><td>4</td><td>*</td><td>2</td><td>1</td></tr><tr><td>18</td><td>17</td><td>16</td><td>15</td><td>14</td><td>13</td><td>12</td><td>*</td><td>10</td><td>9</td><td>8</td></tr></table> AMP_0925_18F_W										7	6	5				4	*	2	1	18	17	16	15	14	13	12	*	10	9	8	I/P-B <table><tr><td colspan="10"></td></tr><tr><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>*</td><td>1</td><td></td></tr><tr><td>18</td><td>17</td><td>16</td><td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td></td></tr></table> AMP_090III_18F_W																				9	8	7	6	5	4	3	*	1		18	17	16	15	14	13	12	11	10		I/P-C <table><tr><td>6</td><td>5</td><td>*</td><td colspan="3"></td><td>3</td><td>2</td><td>1</td><td></td></tr><tr><td>16</td><td>*</td><td>*</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td></tr></table> AMP_0925_16F_W										6	5	*				3	2	1		16	*	*	13	12	11	10	9	8	7
7	6	5				4	*	2	1																																																																																											
18	17	16	15	14	13	12	*	10	9	8																																																																																										
9	8	7	6	5	4	3	*	1																																																																																												
18	17	16	15	14	13	12	11	10																																																																																												
6	5	*				3	2	1																																																																																												
16	*	*	13	12	11	10	9	8	7																																																																																											
I/P-D <table><tr><td>8</td><td>*</td><td>6</td><td>*</td><td colspan="3"></td><td>4</td><td>3</td><td>2</td><td>1</td></tr><tr><td>20</td><td>19</td><td>18</td><td>17</td><td>16</td><td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td></tr></table> AMP_0925_20F_W										8	*	6	*				4	3	2	1	20	19	18	17	16	15	14	13	12	11	10	9	I/P-E <table><tr><td>10</td><td>9</td><td>8</td><td>7</td><td>*</td><td>5</td><td>4</td><td>3</td><td>2</td><td>*</td><td></td></tr><tr><td>*</td><td>*</td><td>18</td><td>*</td><td>16</td><td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td></td></tr></table> AMP_090III_20F_W										10	9	8	7	*	5	4	3	2	*		*	*	18	*	16	15	14	13	12	11		I/P-F <table><tr><td colspan="10"></td></tr><tr><td colspan="10">1</td></tr></table> KET_58L_01F_W																				1															
8	*	6	*				4	3	2	1																																																																																										
20	19	18	17	16	15	14	13	12	11	10	9																																																																																									
10	9	8	7	*	5	4	3	2	*																																																																																											
*	*	18	*	16	15	14	13	12	11																																																																																											
1																																																																																																				
I/P-G <table><tr><td colspan="10"></td></tr><tr><td colspan="10">* 3 2 1</td></tr></table> AMP_250_04F_W_SPT																				* 3 2 1										I/P-J <table><tr><td>5</td><td>4</td><td colspan="3"></td><td>3</td><td>2</td><td>1</td><td colspan="3"></td></tr><tr><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td colspan="3"></td></tr></table> AMP_0925_14F_W										5	4				3	2	1				14	13	12	11	10	9	8	7	6				I/P-K(LHD) <table><tr><td>4</td><td>3</td><td colspan="3"></td><td>2</td><td>1</td><td colspan="3"></td></tr><tr><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>*</td><td>6</td><td>5</td><td colspan="3"></td></tr></table> AMP_0925_12F_W										4	3				2	1				12	11	10	9	8	*	6	5										
* 3 2 1																																																																																																				
5	4				3	2	1																																																																																													
14	13	12	11	10	9	8	7	6																																																																																												
4	3				2	1																																																																																														
12	11	10	9	8	*	6	5																																																																																													
I/P-K(RHD) <table><tr><td>4</td><td>3</td><td colspan="3"></td><td>2</td><td>1</td><td colspan="3"></td></tr><tr><td>12</td><td>*</td><td>10</td><td>9</td><td>8</td><td>*</td><td>6</td><td>5</td><td colspan="3"></td></tr></table> AMP_0925_12F_W										4	3				2	1				12	*	10	9	8	*	6	5				I/P-L <table><tr><td>5</td><td>*</td><td colspan="3"></td><td>3</td><td>2</td><td>1</td><td colspan="3"></td></tr><tr><td>*</td><td>11</td><td>10</td><td>9</td><td>*</td><td>7</td><td>6</td><td colspan="3"></td></tr></table> AMP_090III_12F_W										5	*				3	2	1				*	11	10	9	*	7	6				BLANK																																						
4	3				2	1																																																																																														
12	*	10	9	8	*	6	5																																																																																													
5	*				3	2	1																																																																																													
*	11	10	9	*	7	6																																																																																														

JOINT CONNECTOR E81B19DC


JOINT CONNECTOR (1)

CC-8

 D11

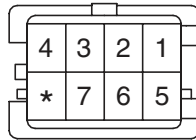


KET_070_08F_W_JCH

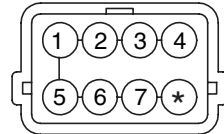 


KET_070_8P_CAP

 D12

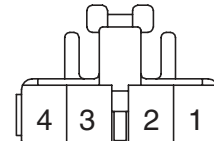


KET_090II_04F_W

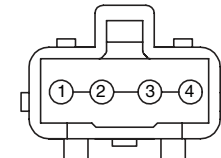 


KET_090II_4P_CAP

 E55

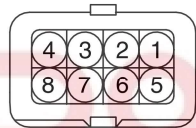


KET_090IWP_08F_B_JCH

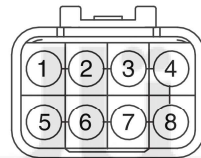 


KET_090IWP_08M_B_JCH

BLANK

 E57

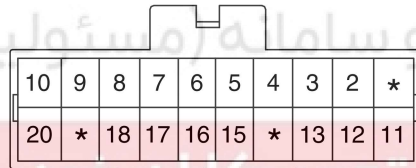


KET_090II_20F_B_JCH

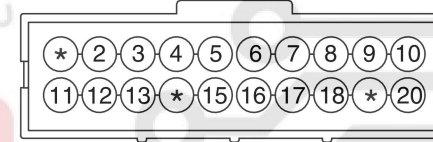 


KET_090II_20P_CAP_Gr

 F16

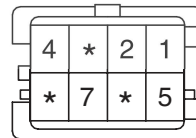


KET_070_08F_W_JCH

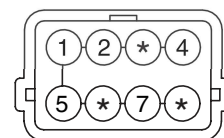 


KET_070_8P_CAP

 M81

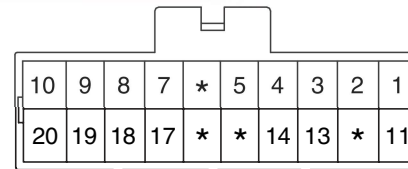


KET_090II_20F_B_JCH

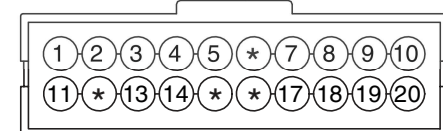 


KET_090II_20P_CAP_GR

 M82

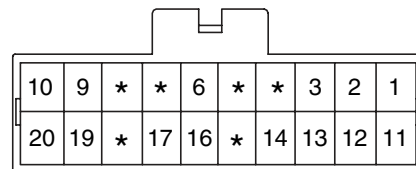

KET_090II_20F_B_JCH

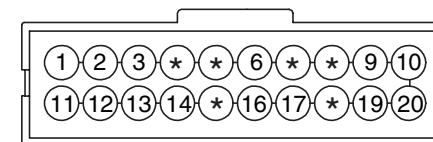 


KET_090II_20P_CAP_G

JOINT CONNECTOR


JOINT CONNECTOR (2)

CC-9

 M83

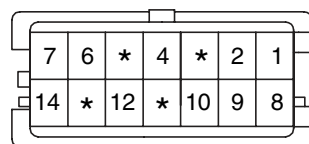


KET_070_14F_W_JCH

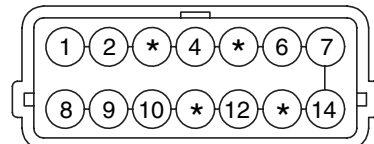 


KET_070_14P_CAP

 M84

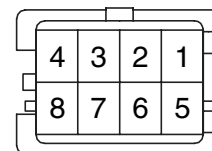


KET_070_08F_B_JCH

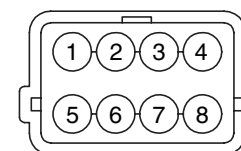 


KET_070_08P_CAP

 M86

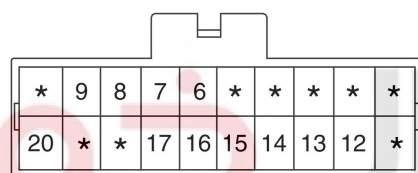


KET_090II_20F_Y_JCH

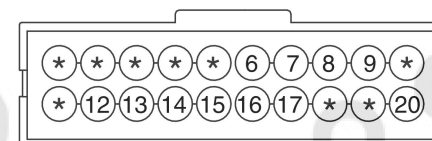 


KET_090II_20P_CAP_Gr

 M87

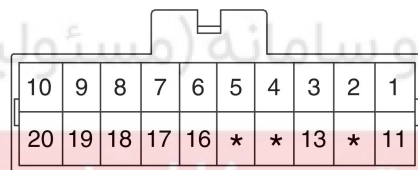


KET_090II_20F_B_JCH

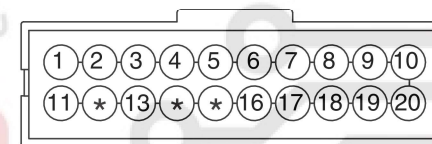 


KET_090II_20P_CAP_G

 M102

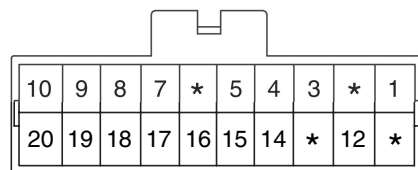

KET_090II_20F_B_JCH

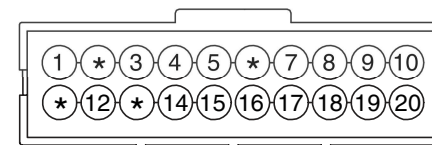 


KET_090II_20P_CAP_Or




MAIN HARNESS E7DF8C1F

MAIN HARNESS (1)

 HL-1

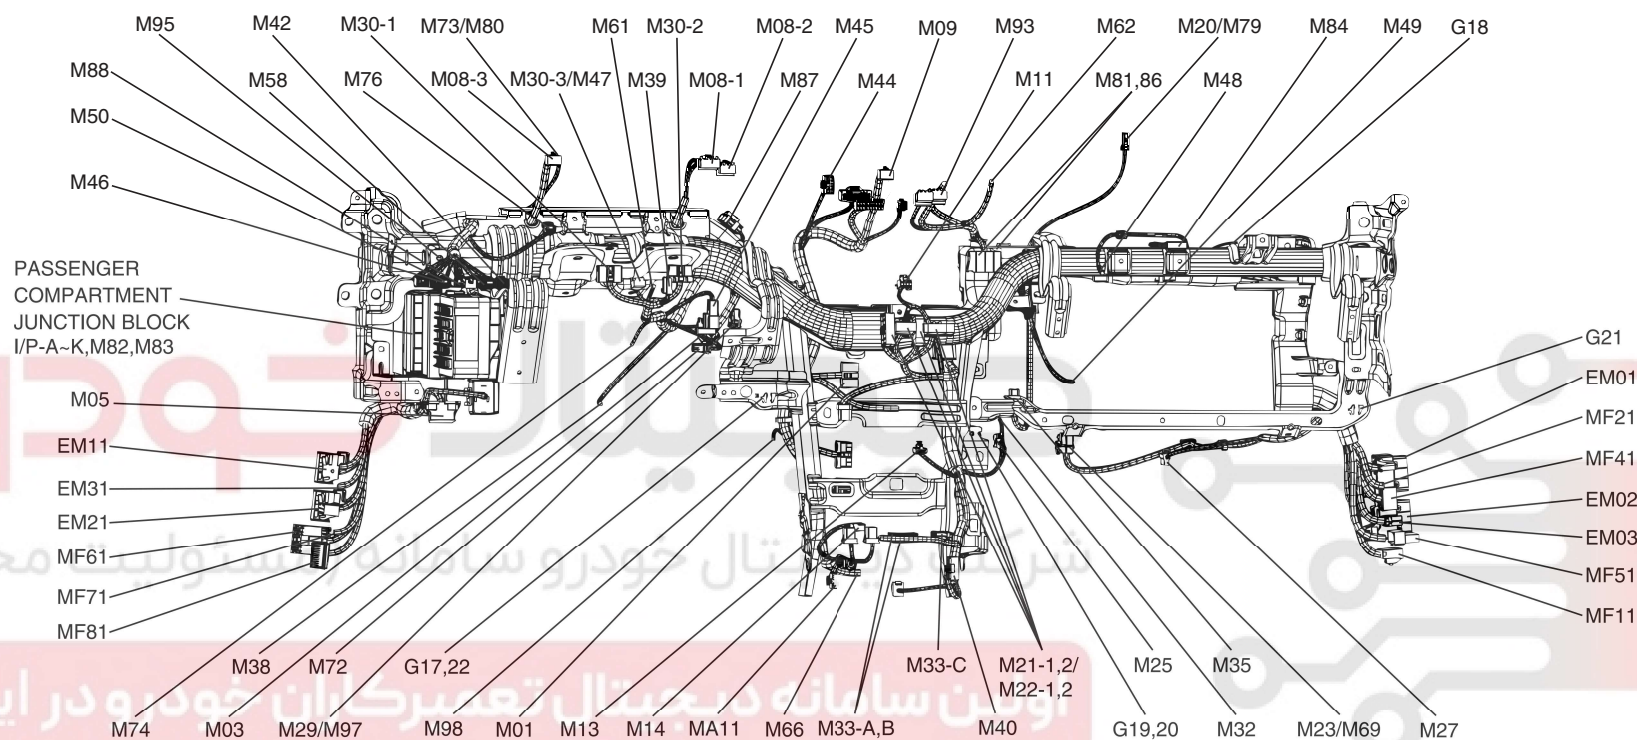

CONNECTOR BOX

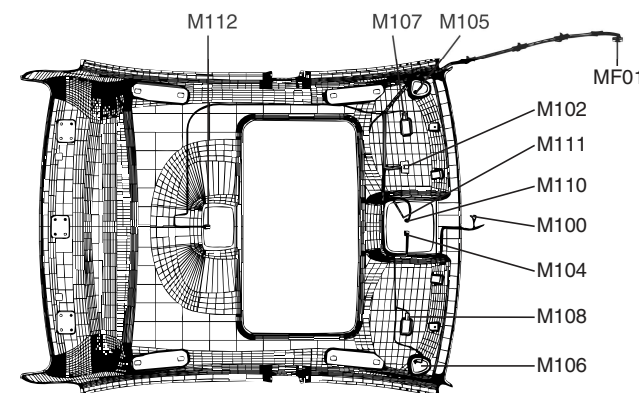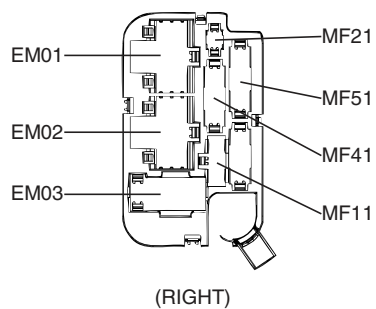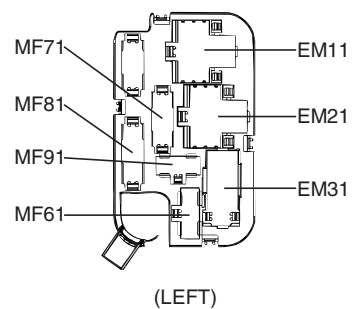   


MAIN HARNESS

MAIN HARNESS (2)				HL-2	
M01	ATM Key lock control module	M49	Glove box lamp switch	MA11	Connection with AIR BAG harness
M03	Ignition switch	M50	Rear fog lamp switch	MF11	Connection with FLOOR harness
M05	Data link connector	M54	Back warning buzzer	MF21	Connection with FLOOR harness
M08-1	Instrument cluster	M58	ESP switch	MF41	Connection with FLOOR harness
M08-2	Instrument cluster	M61	Driver air bag	MF51	Connection with FLOOR harness
M08-3	Instrument cluster	M62	Passenger air bag	MF61	Connection with FLOOR harness
M09	Audio	M64	PAB switch	MF71	Connection with FLOOR harness
M11	Digital clock	M66	SRS control module	MF81	Connection with FLOOR harness
M13	Cigarette lighter	M69	FE(Field-Effect) transistor	MF91	Connection with FLOOR harness
M14	Front accessory socket	M72	SMATRA (Immobilizer)	G17	Ground
M20	Auto light & Photo sensor (W/O ATM Shift Lock)	M73	Security indicator (W/O ATM Shift Lock)	G18	Ground
		M74	Steering angle sensor (ESP)	G19	Ground
M21-1	A/C control module (Auto)	M76	Trip mode reset	G20	Ground
M21-2	A/C control module (Auto)	M78	Steering angle sensor (AGCS)	G21	Ground
M22-1	A/C control module (Manual)	M79	Dual Auto light & Photo sensor (With ATM Shift Lock)	G22	Ground
M22-2	A/C control module (Manual)			Z01	Diode (Fog lamp)
M23	Blower resister	M80	Dual security indicator (With ATM Shift Lock)		
M25	Water temperature sensor	M81	Joint connector	ROOF HARNESS	
M27	Blower motor	M82	Joint connector	M100	Electronic chrome mirror
M28	Mode actuator (RHD)	M83	Joint connector	M102	Joint connector
M29	Mode actuator (LHD)	M84	Joint connector	M104	Sunroof switch
M30-1	Multifunction switch (LHD)	M86	Joint connector	M105	Left vanity lamp switch
M30-2	Multifunction switch (LHD)	M87	Joint connector	M106	Right vanity lamp switch
M30-3	Multifunction switch	M88	Head lamp washer switch	M107	Left vanity lamp
M31-1	Multifunction switch (RHD)	M91-1	Passenger compartment relay box	M108	Right vanity lamp
M31-2	Multifunction switch (RHD)	M91-2	Passenger compartment relay box	M110	Sunroof control module
M32	Evaporator sensor	M93	Seat belt reminder indicator	M111	Map lamp
M33-A	BCM	M95	Pre-Excitation resister (DSL)	M112	Room lamp
M33-B	BCM	M97	Driver temperature actuator (Dual FATC, LHD)	MF01	Connection with FLOOR harness
M33-C	BCM	M98	PTC heater (DSL)		
M34	Temperature actuator (Full Auto, RHD)	M99	Driver temperature actuator (Dual FATC, RHD)		
M35	Temperature actuator (Full Auto, LHD)	EM01	Connection with ENGINE ROOM harness		
		EM02	Connection with ENGINE ROOM harness		
M37	Intake actuator (LHD)	EM03	Connection with ENGINE ROOM harness		
M38	Active incar & humidity sensor	EM11	Connection with ENGINE FRONT harness		
M39	Key solenoid	EM21	Connection with ENGINE FRONT harness		
M40	Sport mode switch	EM31	Connection with ENGINE FRONT harness		
M41	Intake actuator (RHD)	EM41	Connection with ENGINE FRONT harness (RHD)		
M42	Rheostat	I/P-A	Connection with PASSENGER COMPARTMENT JUNCTION BLOCK		
M43	Flasher unit	I/P-B	Connection with PASSENGER COMPARTMENT JUNCTION BLOCK		
M44	Hazard switch	I/P-C	Connection with PASSENGER COMPARTMENT JUNCTION BLOCK		
M45	Door warning switch	I/P-D	Connection with PASSENGER COMPARTMENT JUNCTION BLOCK		
M46	Head lamp leveling switch	I/P-E	Connection with PASSENGER COMPARTMENT JUNCTION BLOCK		
M47	Horn switch	I/P-F	Connection with PASSENGER COMPARTMENT JUNCTION BLOCK (RHD)		
M48	Glove box lamp	I/P-G	Connection with PASSENGER COMPARTMENT JUNCTION BLOCK (RHD)		
		I/P-K	Connection with PASSENGER COMPARTMENT JUNCTION BLOCK (RHD)		

FLOOR HARNESS E2DA5FD7

FLOOR HARNESS (1)

 HL-3

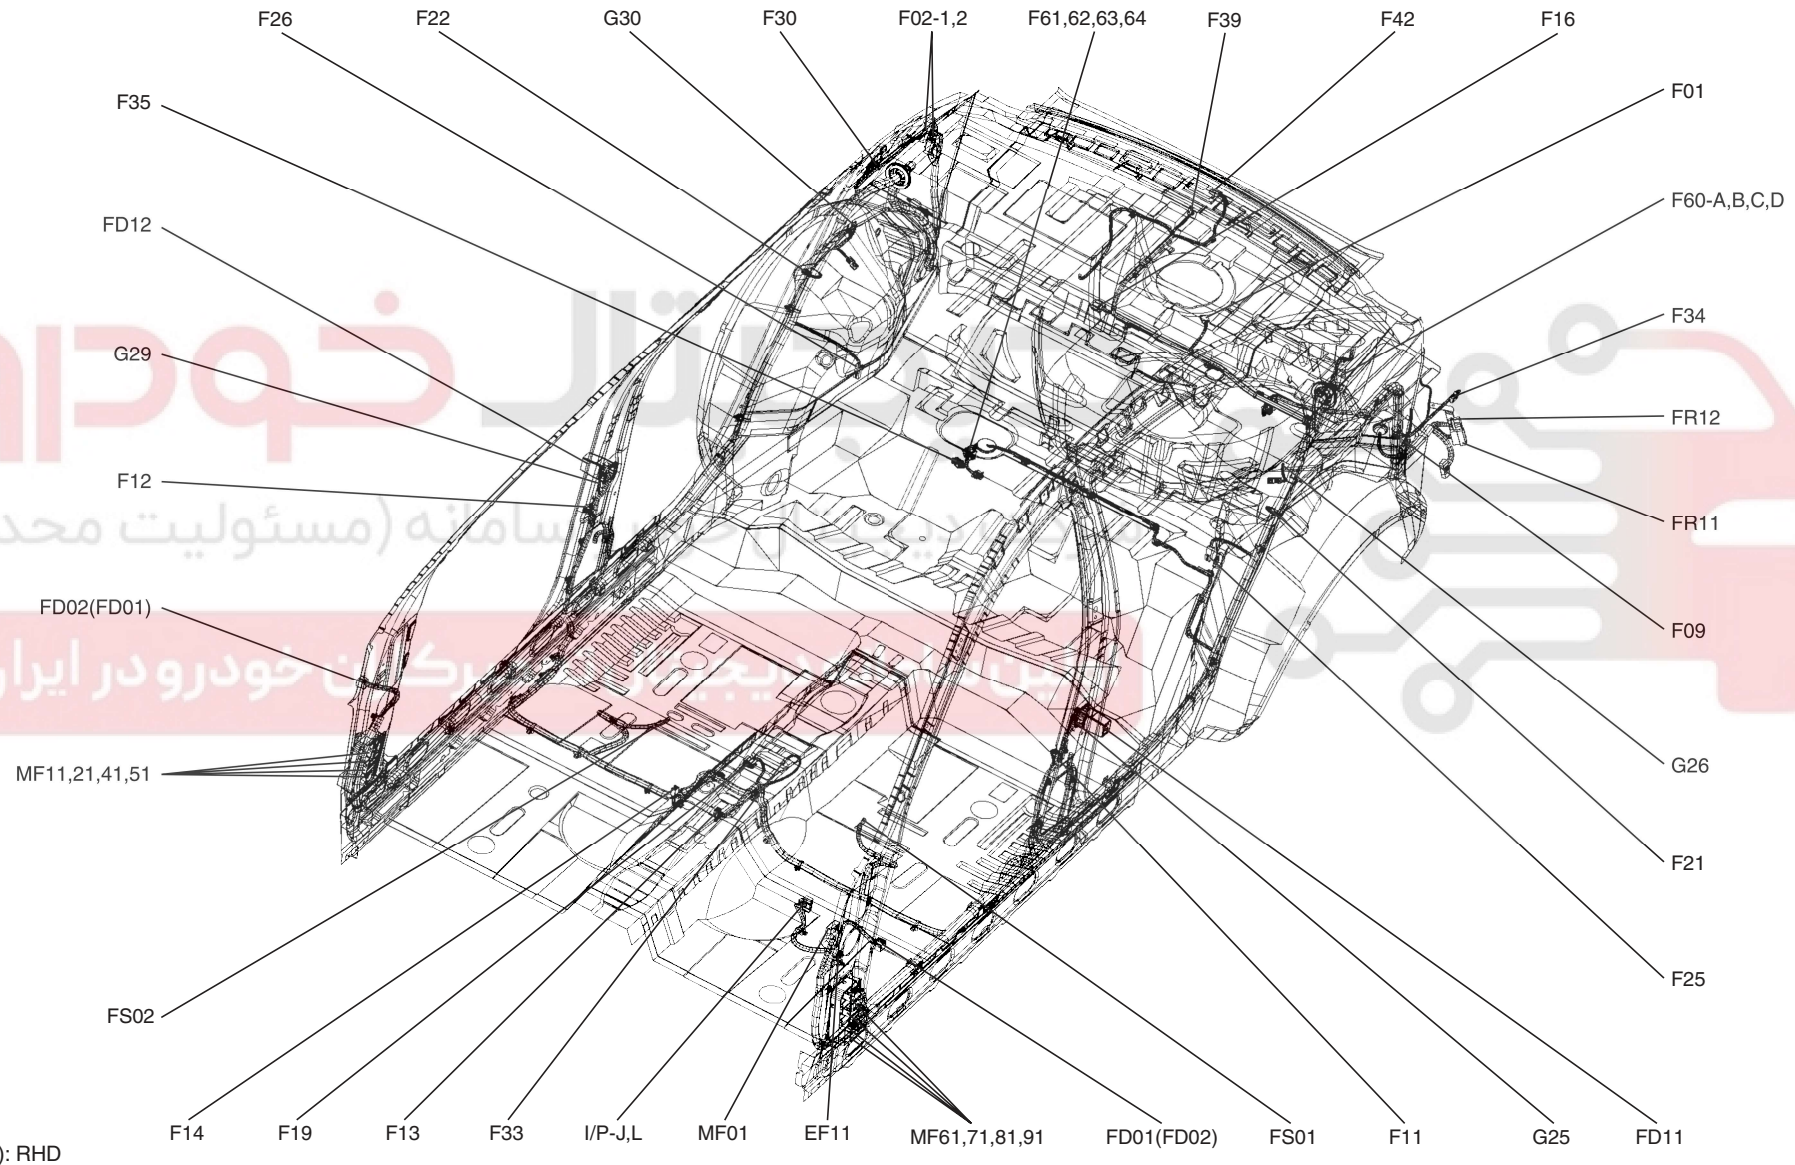

FLOOR HARNESS

FLOOR HARNESS (2)


HL-4

F01	Woofer speaker	MF51	Connection with MAIN harness
F02-1	Audio amp	MF61	Connection with MAIN harness
F02-2	Audio amp	MF71	Connection with MAIN harness
F09	Back warning control module	MF81	Connection with MAIN harness
F11	Left front door switch	MF91	Connection with MAIN harness
F12	Right front door switch	G25	Ground
F13	Left front seat warmer switch	G26	Ground
F14	Right front seat warmer switch	G27	Ground
F16	Joint connector	G29	Ground
F19	Yaw rate sensor	G30	Ground
F21	Left rear door switch		
F22	Right rear door switch		
F25	Left rear wheel sensor		
F26	Right rear wheel sensor		
F30	Glass antenna module		
F33	Parking brake switch		
F34	Fuel filler actuator		
F35	Fuel sender & Fuel pump motor		
F39	High mounted stop lamp		
F40	Rear power outlet		
F42	Trunk room lamp		
F60-A	Active geometry control suspension (AGCS) module		
F60-B	Active geometry control suspension (AGCS) module		
F60-C	Active geometry control suspension (AGCS) module		
F60-D	Active geometry control suspension (AGCS) module		
F61	Right encoder/Limit switch		
F62	Left encoder/Limit switch		
F63	Right active geometry control suspension (AGCS) motor		
F64	Left active geometry control suspension (AGCS) motor		
EF11	Connection with FRONT harness		
FD01	Connection with DRIVER DOOR harness		
FD02	Connection with PASSENGER DOOR harness		
FD11	Connection with LH REAR DOOR harness		
FD12	Connection with RH REAR DOOR harness		
FR11	Connection with TRUNK ROOM harness		
FR12	Connection with BACK WARNING EXT. harness		
FS01	Connection with FRONT POWER SEAT harness (Driver)		
FS02	Connection with FRONT POWER SEAT harness (Passenger)		
I/P-J	Connection with PASSENGER COMPARTMENT JUNCTION BLOCK		
I/P-L	Connection with PASSENGER COMPARTMENT JUNCTION BLOCK		
MF01	Connection with ROOF harness		
MF11	Connection with MAIN harness		
MF21	Connection with MAIN harness		
MF41	Connection with MAIN harness		

ENGINE HARNESS EAEBBA0F

ENGINE HARNESS (1)

 HL-5

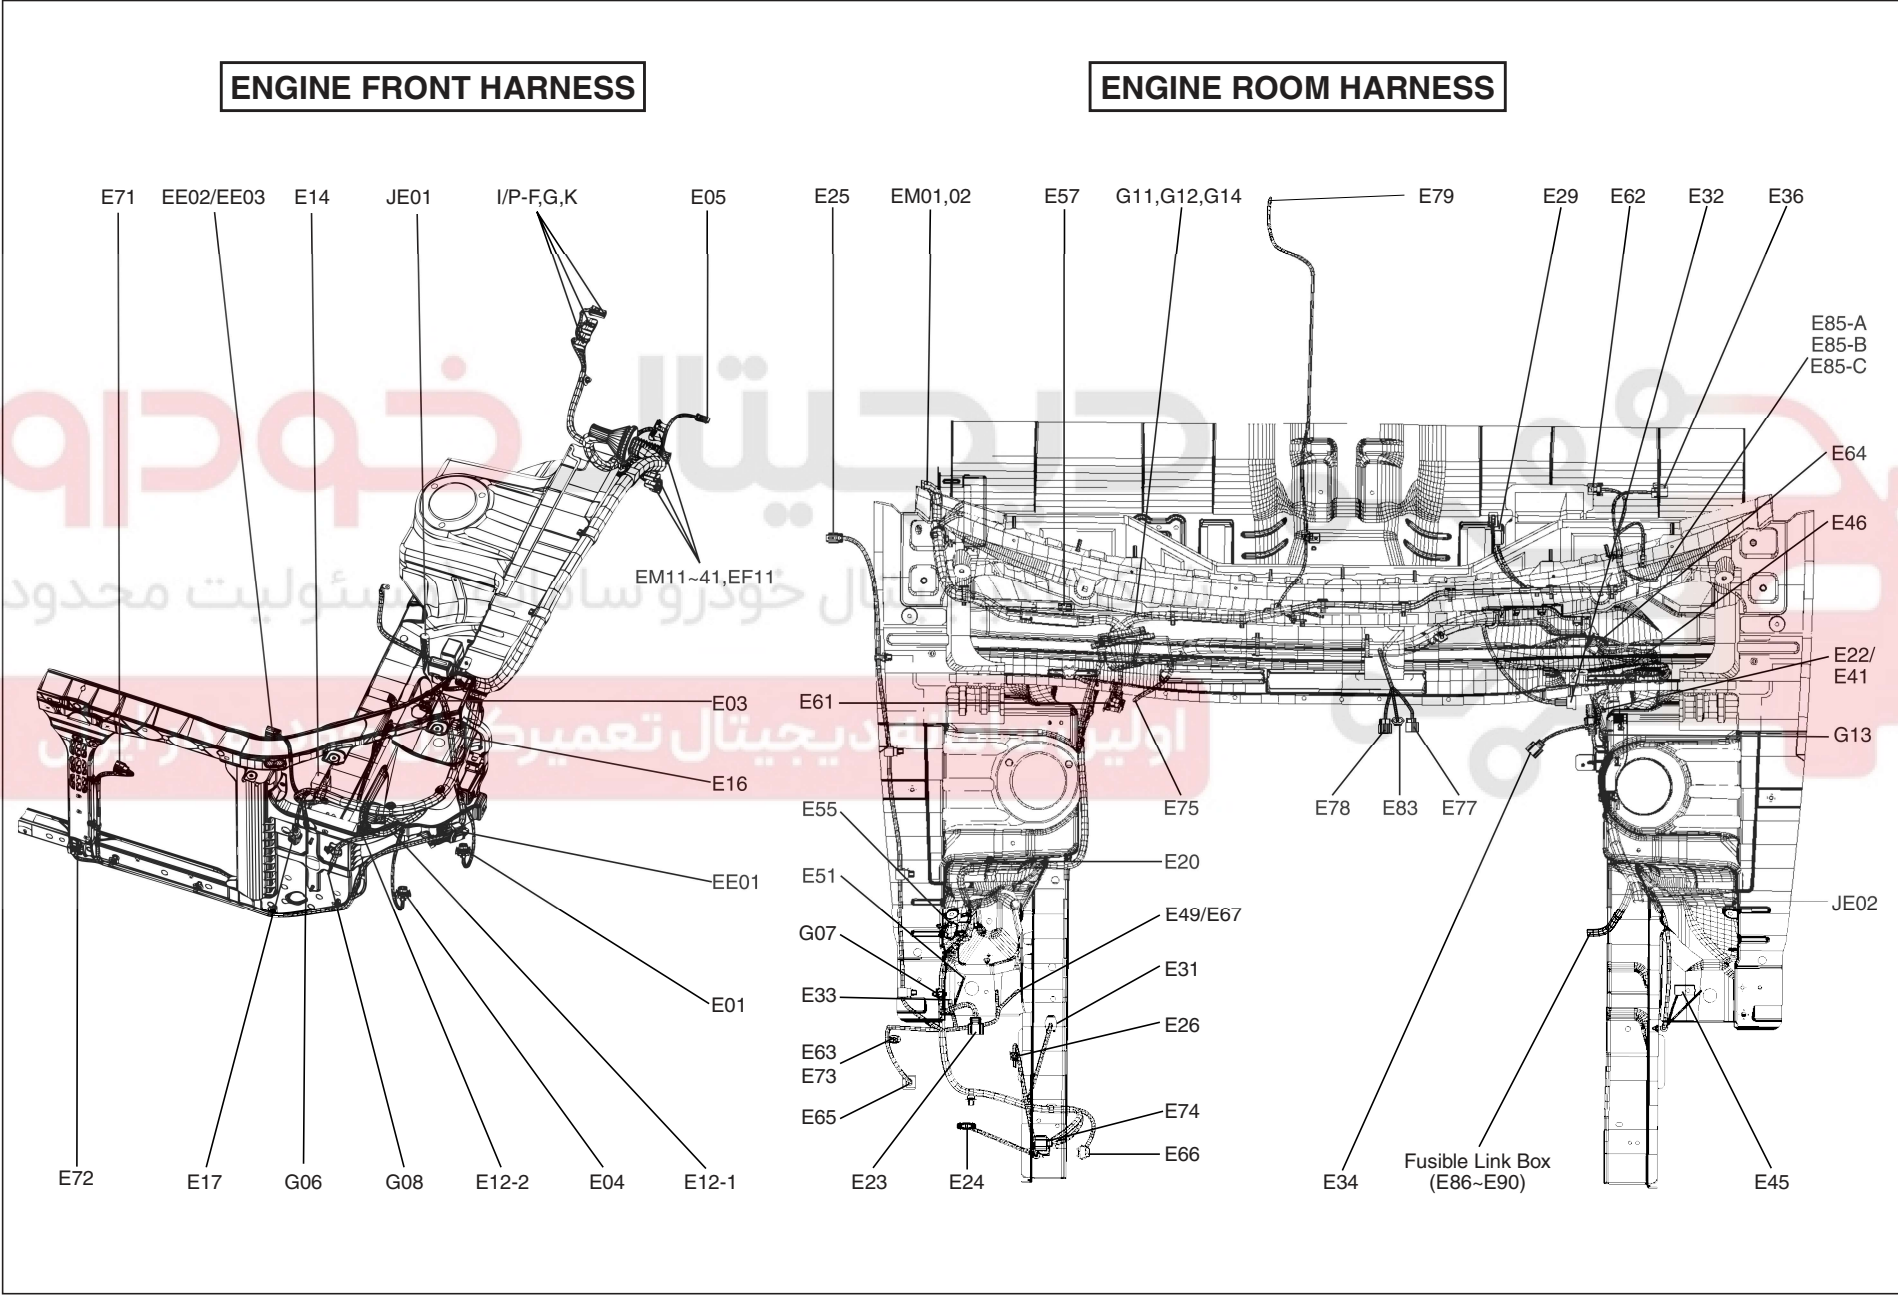

ENGINE HARNESS

ENGINE HARNESS (2)

HL-6

ENGINE FRONT HARNESS

E01	Left horn
E03	Left head lamp
E04	Left front fog lamp
E05	Left side repeater lamp
E12-1	Cooling fan assey #1
E12-2	Cooling fan assey #2
E14	Cooling fan relay
E16	Left head lamp leveling actuator
E17	Driver front impact sensor
EE01	Connection with ENGINE FRONT END MODULE harness
EE02	Connection with BATTERY harness (GSL)
EE03	Connection with BATTERY harness (DSL)
EF11	Connection with FLOOR harness
EM11	Connection with MAIN harness
EM21	Connection with MAIN harness
EM31	Connection with MAIN harness
EM41	Connection with MAIN harness (RHD)
I/P-F	Connection with PASSENGER COMPARTMENT JUNCTION BLOCK (LHD)
I/P-G	Connection with PASSENGER COMPARTMENT JUNCTION BLOCK (LHD)
I/P-K	Connection with PASSENGER COMPARTMENT JUNCTION BLOCK (LHD)
JE01	Connection with ENGINE COMPARTMENT JUNCTION BLOCK
G06	Ground
G08	Ground

ENGINE FRONT END MODULE HARNESS

E71	Right horn
E72	AQS & Ambient sensor
EE01	Connection with ENGINE FRONT harness

BATTERY HARNESS

E10	Start solenoid (GSL)
E11	Start solenoid (DSL)
EE02	Connection with ENGINE FRONT harness (GSL)
EE03	Connection with ENGINE FRONT harness (DSL)


ENGINE ROOM HARNESS

E20	Multipurpose check connector	EM01	Connection with MAIN harness
E22	ABS control module	EM02	Connection with MAIN harness
E23	Right head lamp	EM03	Connection with MAIN harness
E24	Right front fog lamp	JE02	Connection with ENGINE COMPARTMENT JUNCTION BLOCK
E25	Right side repeater lamp	G07	Ground
E26	Right head lamp leveling actuator	G11	Ground
E29	Accel position sensor	G12	Ground
E31	A/C pressure transducer	G13	Ground
E32	Brake oil level sensor	G14	Ground
E33	Burglar horn		
E34	Back-up lamp switch		
E36	Cruise clutch pedal position switch		
E41	ESP control module		
E45	Left front wheel sensor		
E46	Windshield defogger		
E49	Right front wheel sensor		
E51	Hood switch		
E55	Joint connector		
E57	Joint connector		
E61	Power steering pressure sensor (LHD)		
E62	Stop lamp switch		
E63	Washer motor		
E64	Wiper motor		
E65	Washer level sensor		
E66	Passenger front impact sensor		
E67	Front wheel sensor		
E73	Head lamp washer motor		
E74	Head lamp washer relay		
E75	VGT actuator (DSL)		
E77	Fuel filter heater (DSL)		
E78	Fuel filter heater switch (DSL)		
E79	Exhaust gas temperature sensor #2 (DSL)		
E82	Differential pressure sensor (DSL)		
E83	Fuel filter warning switch (DSL)		
E85-A	TCM (DSL)		
E85-B	TCM (DSL)		
E85-C	TCM (DSL)		
E86	PTC heater relay #1 (DSL)		
E87	PTC heater relay #2 (DSL)		
E88	PTC heater relay #3 (DSL)		
E89	Fuel filter heater relay (DSL)		
E90	Glow plug relay (DSL)		
EC11	Connection with CONTROL harness (DSL)		

AIR BAG HARNESS E86A5F15

AIR BAG HARNESS (1)

 HL-7

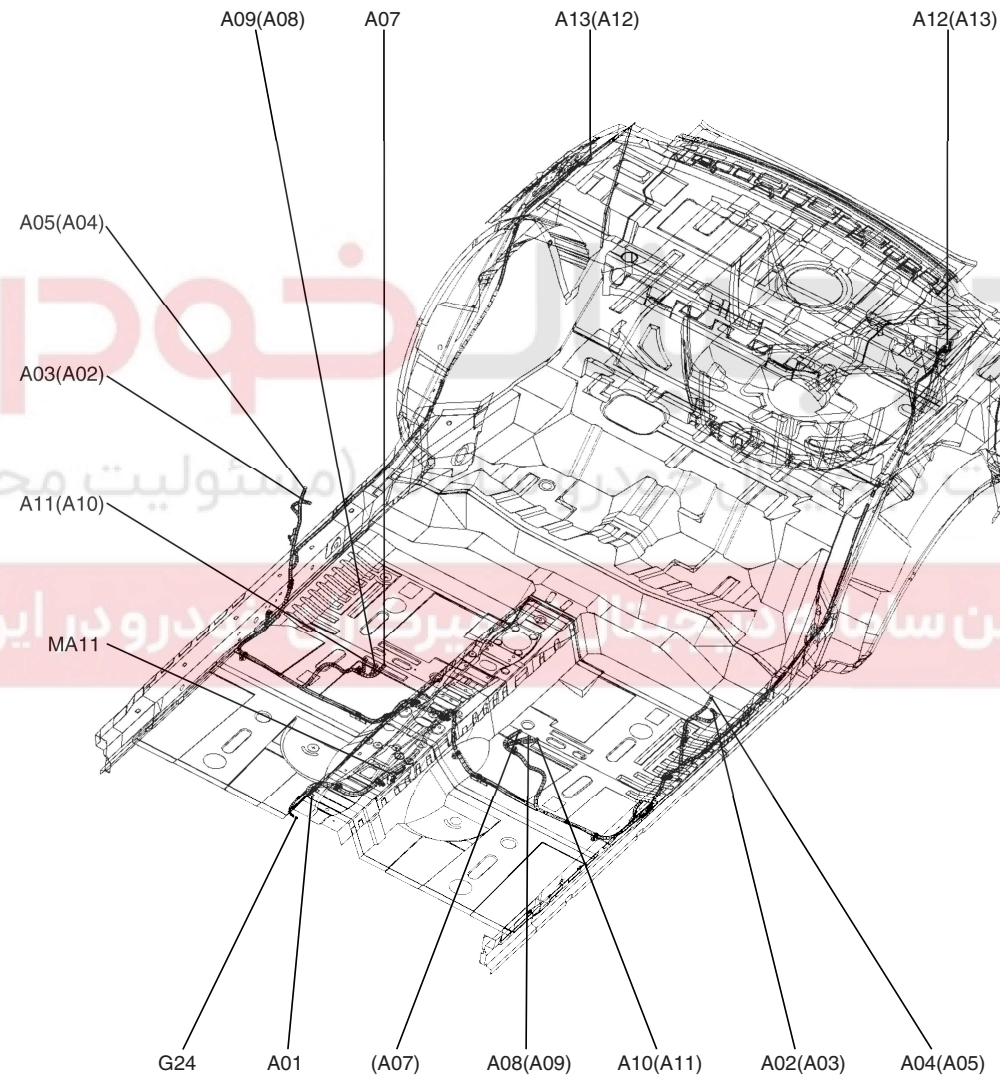

AIR BAG HARNESS

A01	SRS control module
A02	Driver seat belt pretensioner
A03	Passenger seat belt pretensioner
A04	Driver side impact sensor
A05	Passenger side impact sensor
A07	Seat belt reminder mat
A08	Driver side air bag
A09	Passenger side air bag
A10	Driver seat buckle switch
A11	Passenger seat buckle switch
A12	Driver curtain air bag
A13	Passenger curtain air bag
MA11	Connection with MAIN harness
G24	Ground

(): RHD


CONTROL HARNESS EB42652D

CONTROL HARNESS (1)

HL-8

GSL 2.0L/2.4L

 CONTROL HARNESS (GSL 2.0L/2.4L)

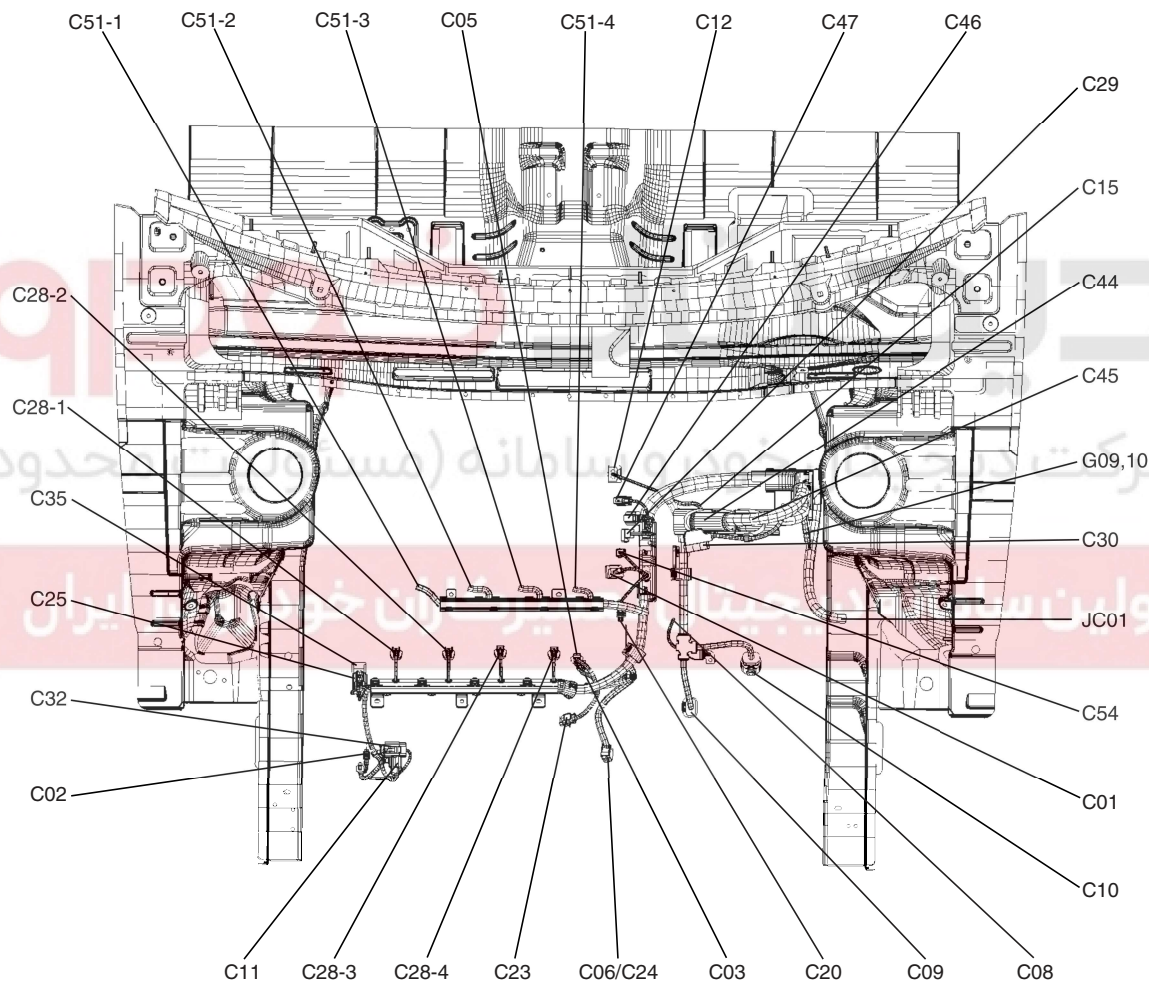


- C01 Engine coolant temperature sensor & Sender
- C02 A/C compressor
- C03 Knock sensor
- C05 Camshaft position sensor
- C06 ETC (Electronic throttle control) (2.4L)
- C08 Pulse generator 'A'
- C09 Transaxle range switch
- C10 ATM solenoid
- C11 Oil pressure switch
- C12 Vehicle speed sensor
- C15 Pulse generator 'B'
- C20 Canister purge solenoid valve
- C23 Idle speed control actuator (2.0L)
- C24 Throttle position sensor (2.0L)
- C25 Oil control valve
- C28-1 Injector #1
- C28-2 Injector #2
- C28-3 Injector #3
- C28-4 injector #4
- C29 Crankshaft position sensor
- C30 Mass air flow sensor
- C32 Generator
- C35 Oil temperature sensor
- C44 PCM
- C45 TCM
- C46 Oxygen sensor (UP)
- C47 Oxygen sensor (DOWN)
- C51-1 Ignition coil #1
- C51-2 Ignition coil #2
- C51-3 Ignition coil #3
- C51-4 Ignition coil #4
- C54 Condenser
- JC01 Connection with ENGINE COMPARTMENT JUNCTION BLOCK
- G09 Ground
- G10 Ground

CONTROL HARNESS

CONTROL HARNESS (2)

HL-9

 GSL 3.3L

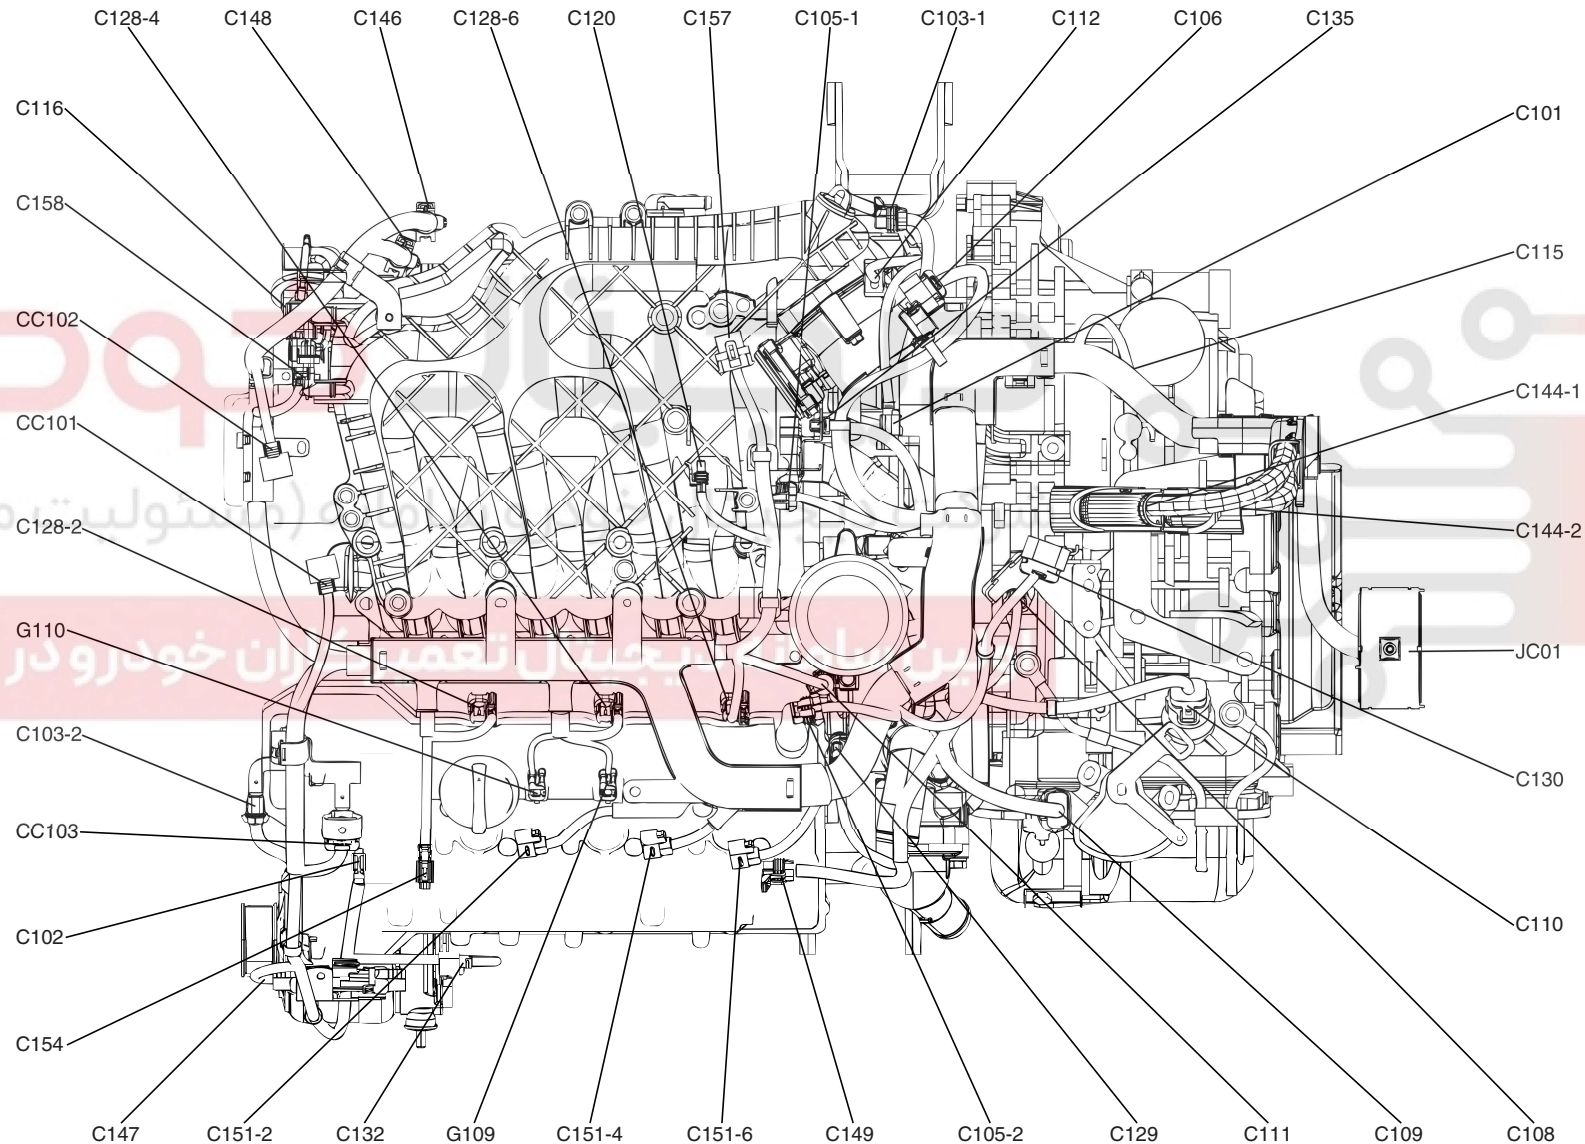

CONTROL HARNESS

CONTROL HARNESS (3)

HL-10

CONTROL HARNESS (GSL 3.3L)

C101	Engine coolant temperature sensor & Sender
C102	A/C compressor
C103-1	Knock sensor #1
C103-2	Knock sensor #2
C105-1	Camshaft position sensor #1
C105-2	Camshaft position sensor #2
C106	ETS motor & Throttle position sensor
C108	Pulse generator 'A'
C109	Transaxle range switch
C110	ATM solenoid
C111	Oil pressure switch
C112	Vehicle speed sensor
C115	Pulse generator 'B'
C116	Power steering pressure sensor (RHD)
C120	Canister purge solenoid valve
C128-2	Injector #2
C128-4	Injector #4
C128-6	Injector #6
C129	Crankshaft position sensor
C130	Mass air flow sensor
C132	Generator
C135	Oil temperature sensor
C144-1	PCM
C144-2	PCM
C146	Oxygen sensor (B1/S1)
C147	Oxygen sensor (B2/S1)
C148	Oxygen sensor (B1/S2)
C149	Oxygen sensor (B2/S2)
C151-2	Ignition coil #2
C151-4	Ignition coil #4
C151-6	Ignition coil #6
C154	Condenser
C157	Manifold absolute pressure sensor
C158	Variable intake manifold valve
CC101	Connection with IGNITION COIL harness
CC102	Connection with INJECTOR harness
CC103	Connection with OIL CONTROL VALVE harness
JC01	Connection with ENGINE COMPARTMENT JUNCTION BLOCK
G109	Ground
G110	Ground

INJECTOR HARNESS

C128-1	Injector #1
C128-3	Injector #3
C128-5	Injector #5
CC102	Connection with CONTROL harness

IGNITION COIL HARNESS

C151-1	Ignition coil #1
C151-3	Ignition coil #3
C151-5	Ignition coil #5
C153	Condenser
CC101	Connection with CONTROL harness

OIL CONTROL VALVE HARNESS

C161-1	Oil control valve #1
C161-2	Oil control valve #2
CC103	Connection with CONTROL harness

 
CONTROL HARNESS

CONTROL HARNESS (4)

HL-11

DIESEL

CONTROL HARNESS (DIESEL)

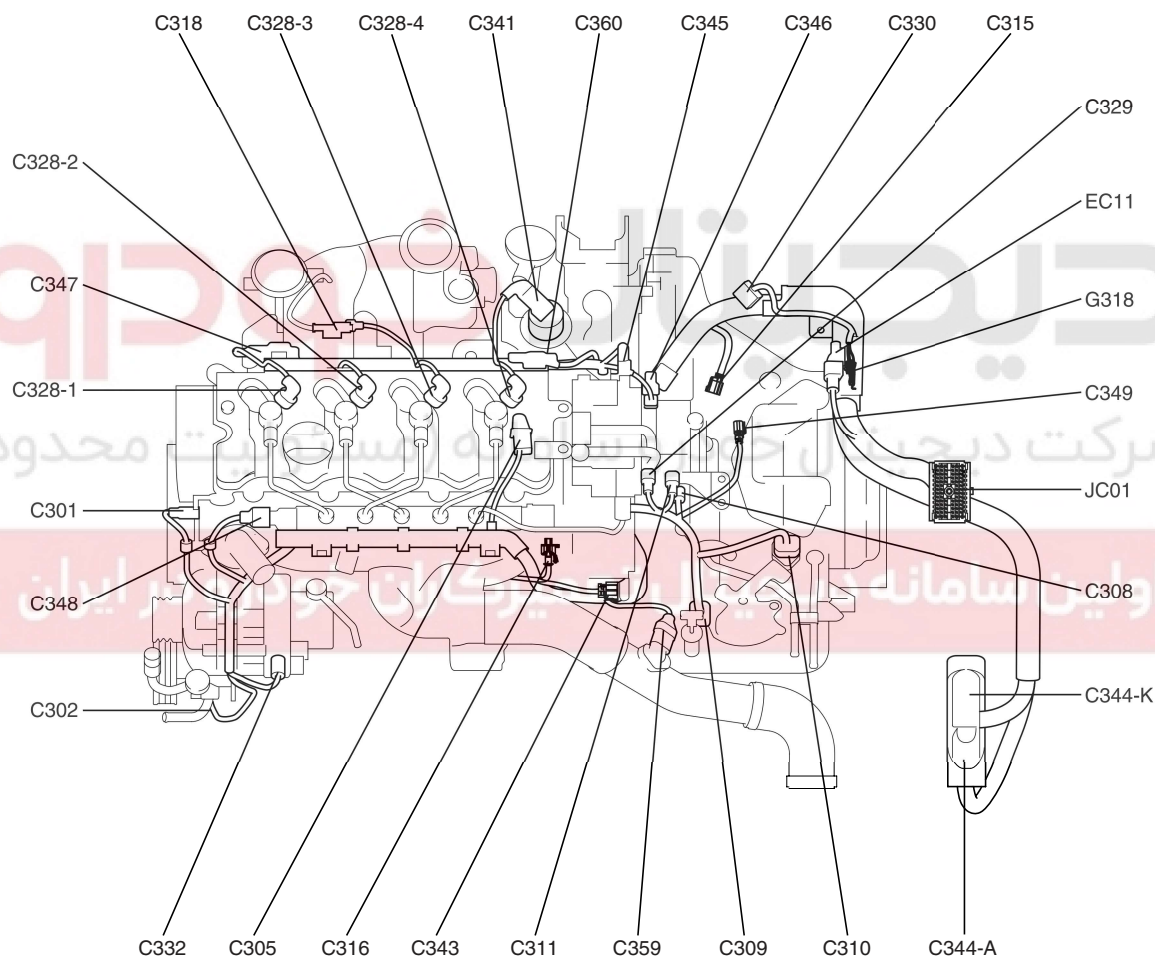


C301	Engine coolant temperature sensor & Sender
C302	A/C compressor
C305	Camshaft position sensor
C308	Pulse generator 'A'
C309	Transaxle range switch
C310	ATM solenoid
C311	Oil pressure switch
C312	Vehicle speed sensor
C315	Pulse generator 'B'
C316	Fuel pressure regulating valve
C318	Exhaust gas temperature sensor #1
C328-1	Injector #1
C328-2	Injector #2
C328-3	Injector #3
C328-4	Injector #4
C329	Crankshaft position sensor
C330	Air flow sensor
C332	Generator
C341	EGR actuator
C342	Electrical throttle control actuator
C343	Variable swirl control actuator
C344-A	ECM
C344-K	ECM
C345	Fuel metering unit
C346	Fuel temperature sensor
C347	Lambda sensor
C348	Rail pressure sensor
C349	Neutral switch
C359	Boost pressure sensor
C360	Glow plug
EC11	Connection with ENGINE ROOM harness
JC01	Connection with ENGINE COMPARTMENT JUNCTION BLOCK
G318	Ground

DOOR HARENSS E4A2F9CA


DOOR HARNESS (1)

HL-12

 FRONT DOOR

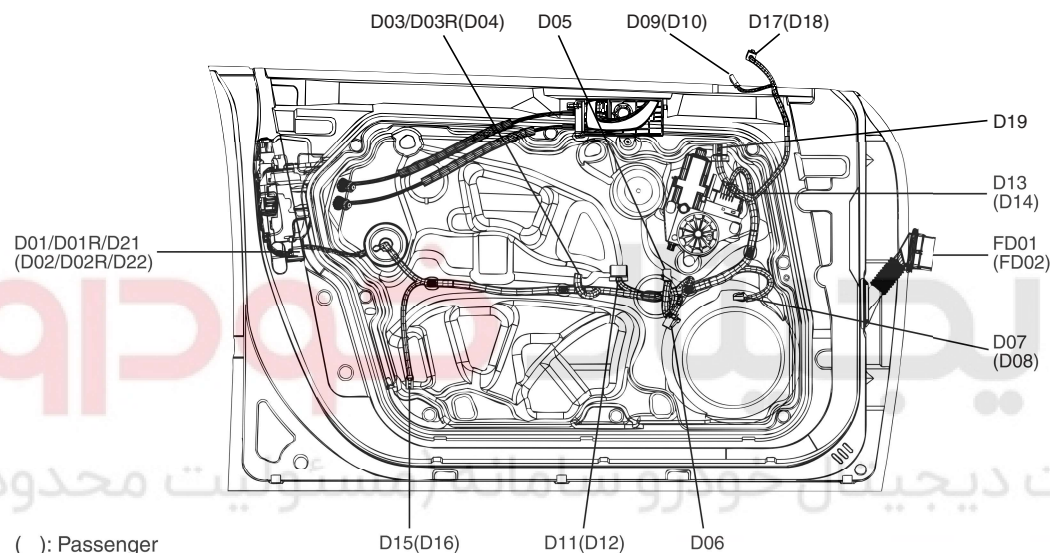

REAR DOOR

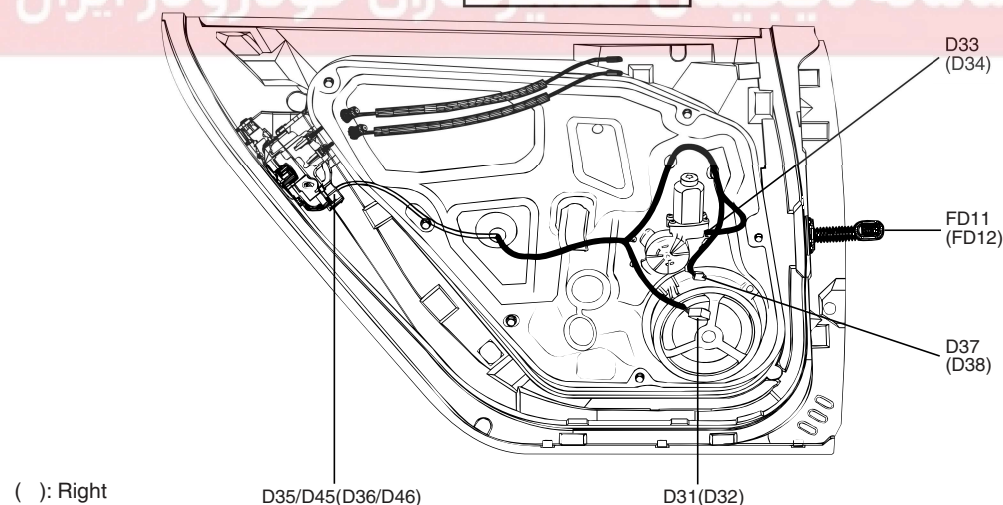 

DRIVER DOOR HARNESS

- D01 Driver door lock actuator
- D01R Driver door lock actuator (RHD)
- D03 Power window main switch
- D03R Power window main switch (RHD)
- D05 Power outside mirror & mirror folding switch
- D06 Fuel filler door & Trunk lid switch
- D07 Driver door speaker
- D09 Driver tweeter speaker
- D11 Joint connector
- D13 Safty window module
- D15 Driver door lamp
- D17 Driver outside mirror & mirror folding motor
- D19 Power outside mirror folding module
- D21 Driver door lock actuator (Dead Lock, RHD)
- FD01 Connection with FLOOR harness

PASSENGER DOOR HARNESS

- D02 Passenger door lock actuator
- D02R Passenger door lock actuator (RHD)
- D04 Passenger power window switch
- D08 Passenger door speaker
- D10 Passenger tweeter speaker
- D12 Joint connector
- D14 Passenger power window motor
- D16 Passenger door lamp
- D18 Passenger outside mirror & mirror folding motor
- D22 Passenger door lock actuator (Dead Lock, RHD)
- FD02 Connection with FLOOR harness

LH REAR DOOR HARNESS

- D31 Left rear power window switch
- D33 Left rear power window motor
- D35 Left rear door lock actuator
- D37 Left rear door speaker
- D45 Left rear door lock actuator (Dead Lock, RHD)
- FD11 Connection with FLOOR harness

RH REAR DOOR HARNESS

 
- D32 Right rear power window switch
- D34 Right rear power window motor
- D36 Right rear door lock actuator
- D38 Right rear door speaker
- D46 Right rear door lock actuator (Dead Lock, RHD)
- FD12 Connection with FLOOR harness

REAR HARNESS EABC57DA

REAR HARNESS (1)

HL-13

TRUNK LID

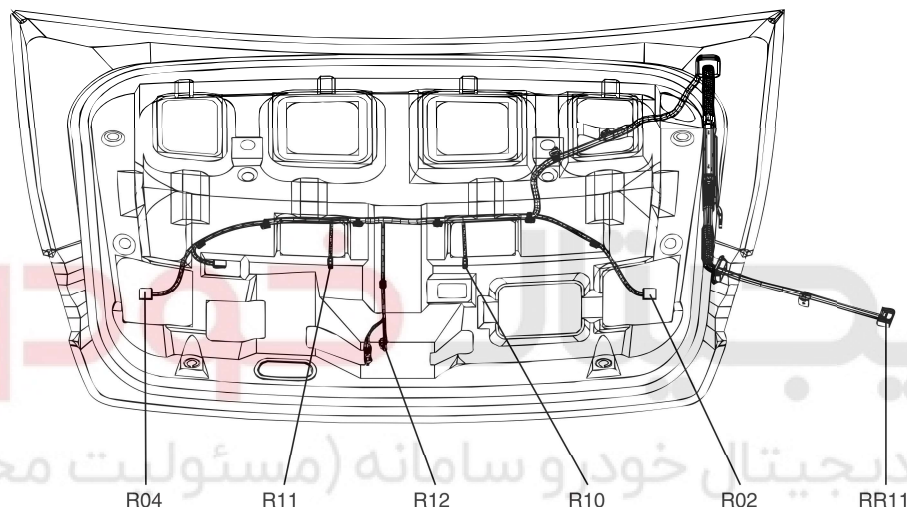


TRUNK LID HARNESS

- R02 Left rear combination lamp (IN)
- R04 Right rear combination lamp (IN)
- R10 Left license lamp
- R11 Right license lamp
- R12 Trunk lid motor
- RR11 Connection with TRUNK ROOM harness

BACK WARNING EXT. HARNESS

- R15 Left back warning sensor
- R16 Center back warning sensor
- R17 Right back warning sensor
- FR12 Connection with FLOOR harness

 TRUNK ROOM

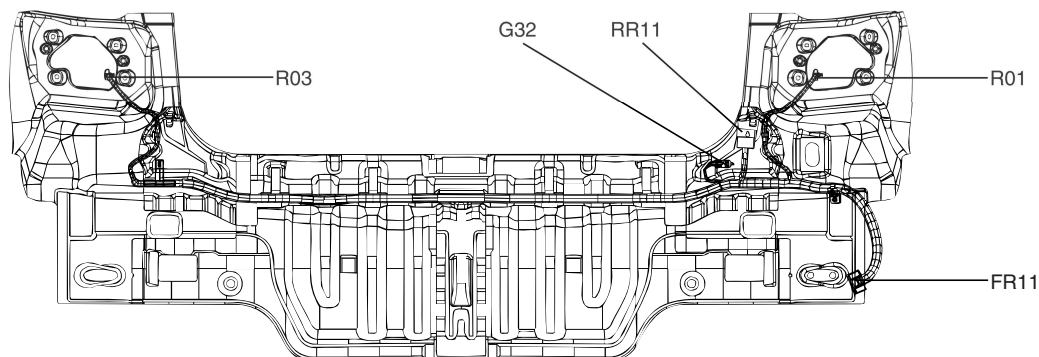

TRUNK ROOM HARNESS

 
- R01 Left rear combination lamp (OUT)
- R03 Right rear combination lamp (OUT)
- RR11 Connection with TRUNK LID harness
- FR11 Connection with FLOOR harness
- G32 Ground

SEAT HARNESS E4FF326B

SEAT HARNESS (1)

HL-14

DRIVER

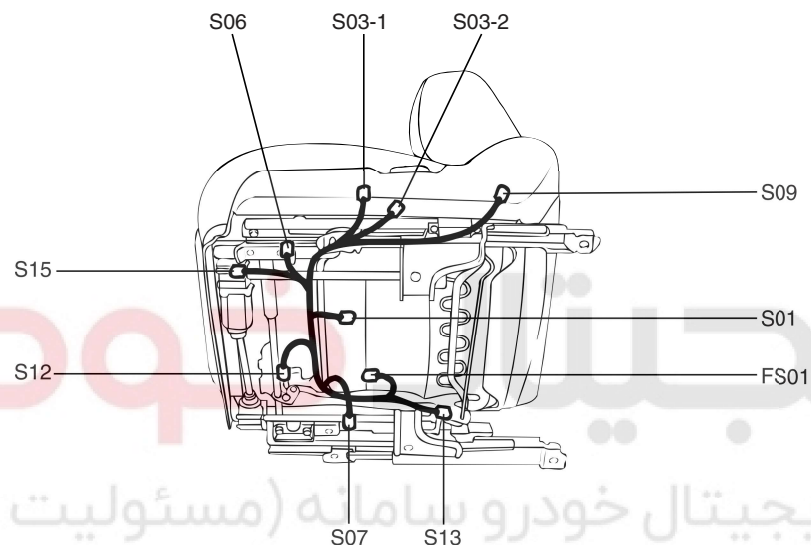

FRONT POWER SEAT HARNESS

- S01 Left front seat warmer
- S02 Right front seat warmer
- S03-1 Driver power seat manual switch
- S03-2 Driver power seat manual switch
- S04 Passenger power seat manual switch
- S06 Front height adjuster motor
- S07 Driver slide limit switch
- S08 Passenger slide limit switch
- S09 Driver reclining limit switch
- S10 Passenger reclining limit switch
- S12 Rear height adjuster motor
- S13 Driver reclining adjuster motor
- S14 Passenger reclining adjuster motor
- S15 Driver slide motor
- S16 Passenger slide motor
- FS01 Connection with FLOOR harness (Driver)
- FS02 Connection with FLOOR harness (Passenger)

PASSENGER

