


Charging system

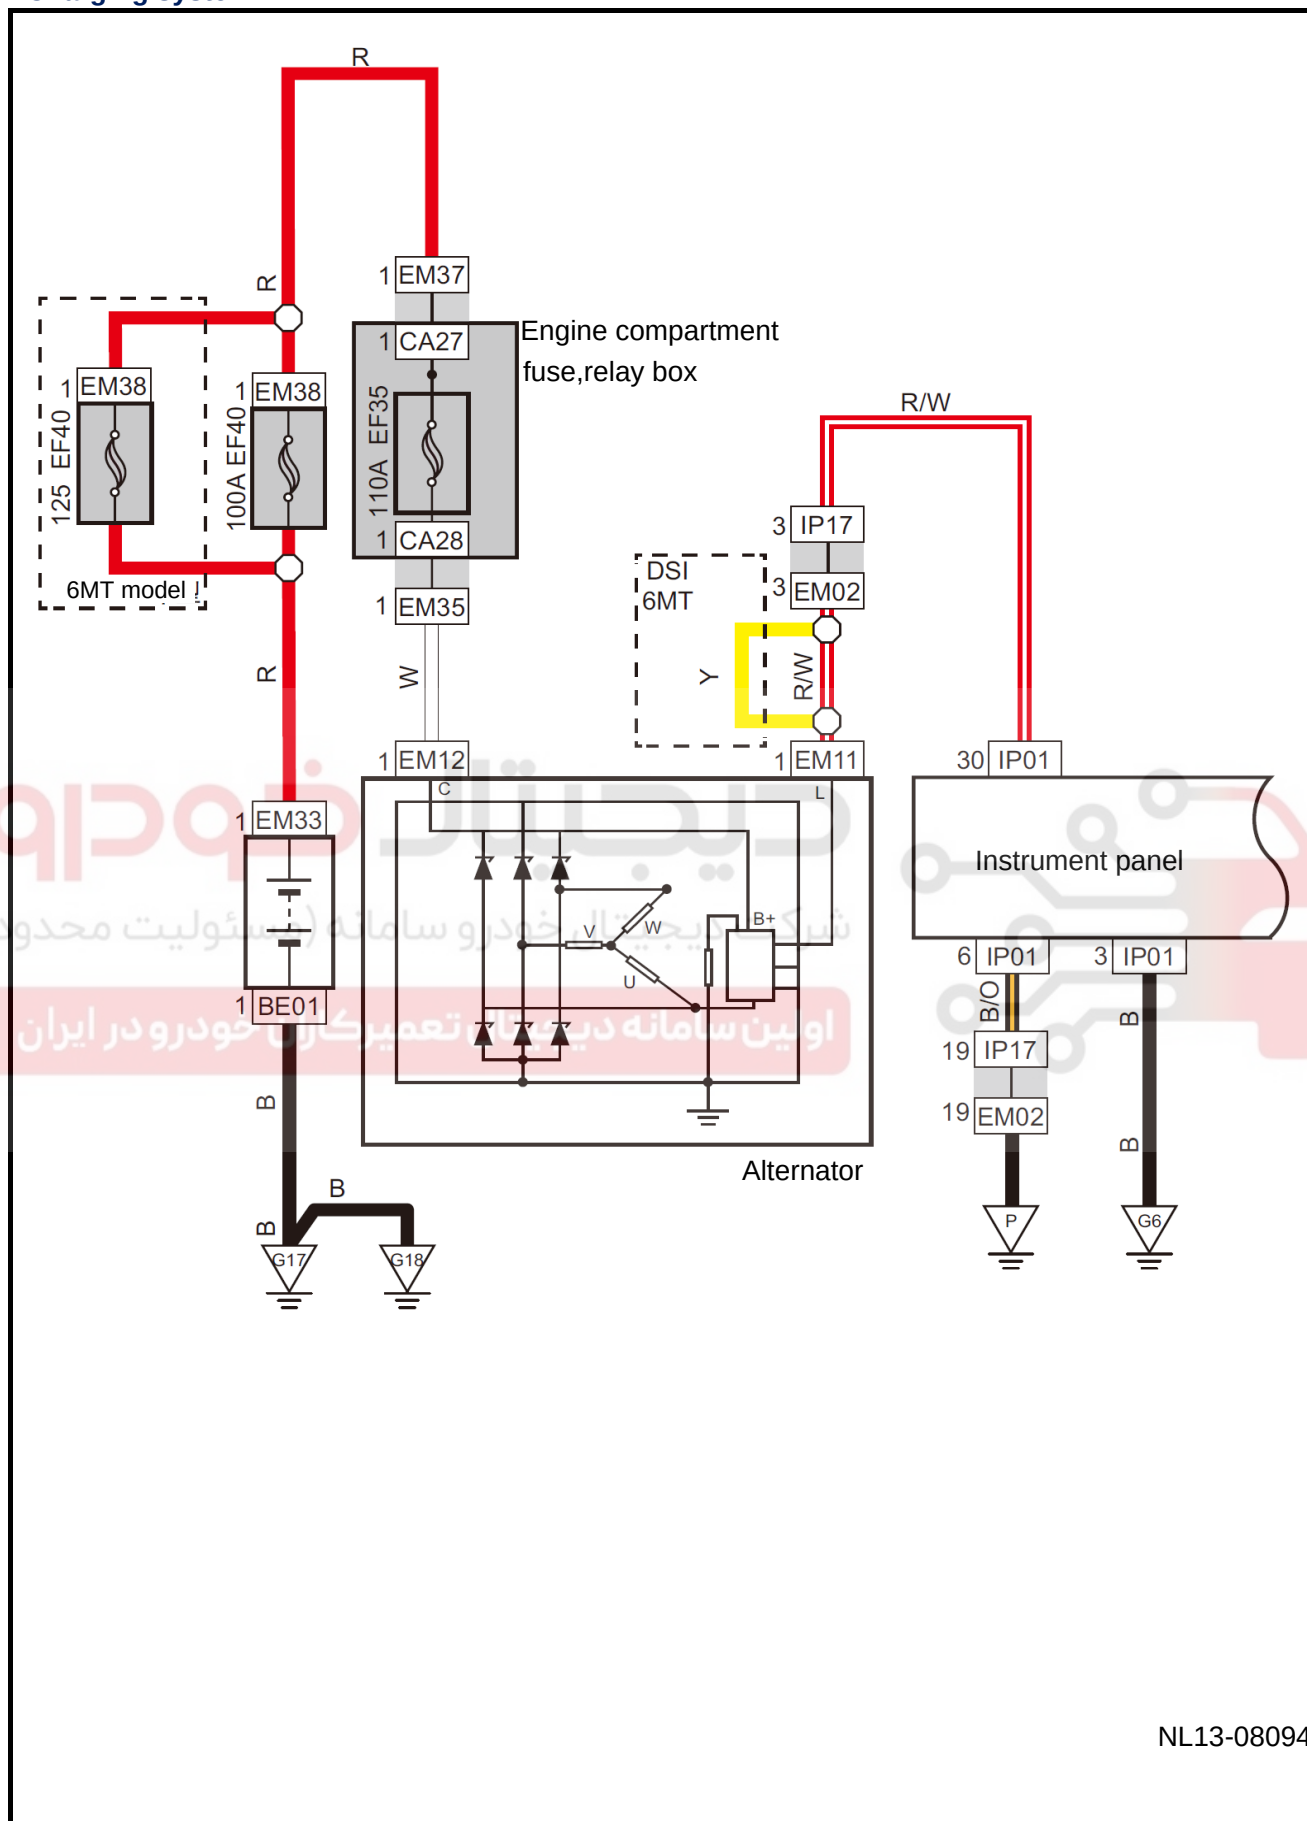

Harness connector	Description	Pages
BE01	To battery negative	27
CA27	To engine harness connector (connecting wire plate1)	31
CA28	To engine harness connector (connecting wire plate2)	31
EM02	To instrument harness connector	37
EM11	Alternator harness connector	37
EM12	To alternator (connecting wire plate) harness connector	37
EM35	To engine compartment distribution box (connecting wire plate2)	37
EM38	Battery fuse box	37
EM33	Battery (connecting wire plate1)harness connector	37
IP01	Harness connector 1 of combination instrument	43
IP17	To engine harness connector	43
G6	Instrument panel grounding	72
G17	Battery grounding	71
G18	Battery grounding	71

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

