


HARNESS CONNECTORS

EE4190C8


Harness Connector (1)

CC-1

 CF11

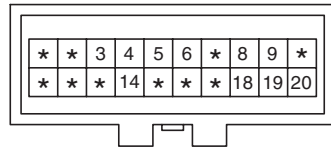


AMP_090III_20M_R

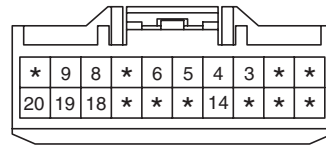 


AMP_090III_20F_R

 EC01(G4KE)

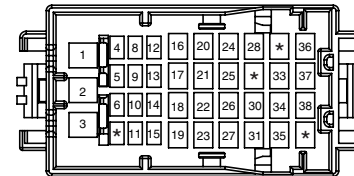


KET_0409LIF_39M_W

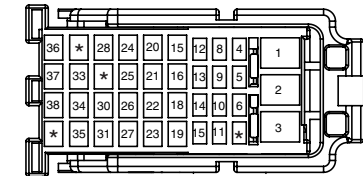 


KET_0409LIF_39F_W

 EC01(D4HB)

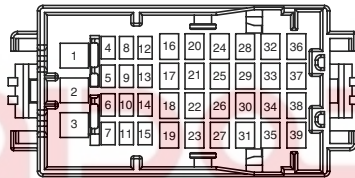


KET_0409LIF_39M_W

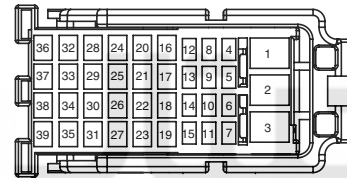 

KET_0409LIF_39F_W

 EC02

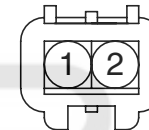


KUM_NMWP_02M_B



KUM_NMWP_02F_B

 EE01(D4HB)

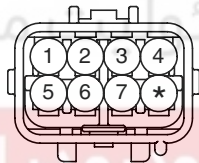


KET_090IWP_08M_B




KET_090IWP_08F_B

 EE11

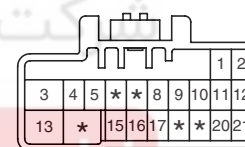


KET_1809_21M_B_W

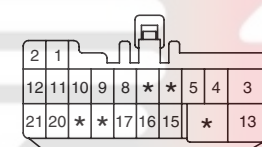 

KET_1809_21F_B_W

 EEA1(G4KE)

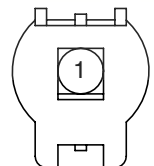


KUM_NMWP_01M_B




KUM_NMWP_01F_B

 EM11

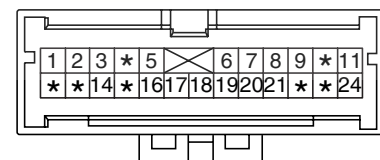


AMP_040III_24M_G

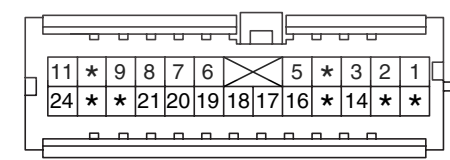 


AMP_040III_24F_G

 EM21

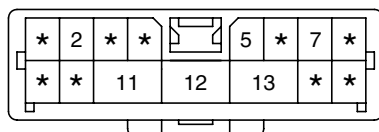


AMP_0725_15M_W

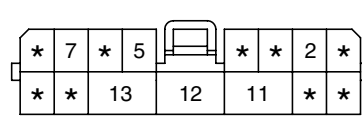 


AMP_0725_15F_W

 FD11

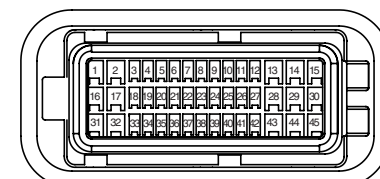

AMP_HBDDOOR_45M_B

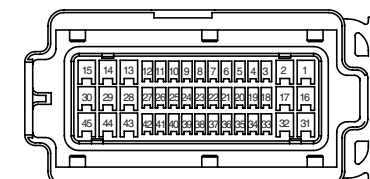 

AMP_HBDDOOR_45F_B


EXMCC10001AI

HARNESS CONNECTORS


Harness Connector (2)

CC-2

 FD21

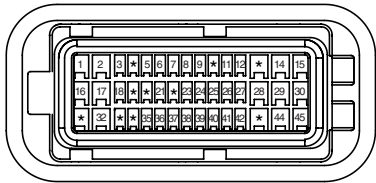


AMP_HBDDOOR_45M_B

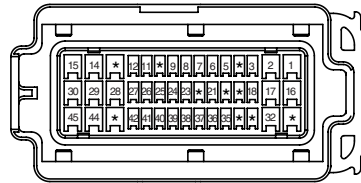 


AMP_HBDDOOR_45F_B

 FD31

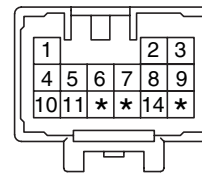


KET_090III_15M_W

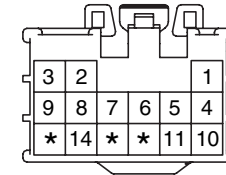 


KET_090III_15F_W

 FD41

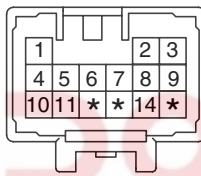


KET_090III_15M_W

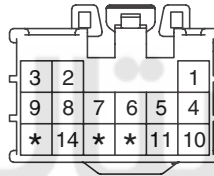 


KET_090III_15F_W

 FF01

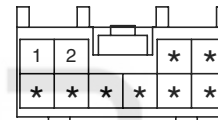


AMP_090III_10M_W

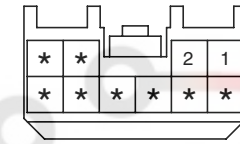 


AMP_090III_10F_W

 FR11

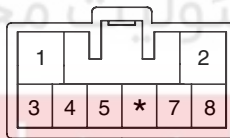

KET_2507_08M_W

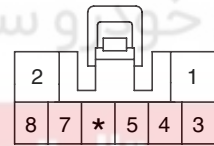 


KET_2507_08F_W

FR21




 AMP_090III_20M_W

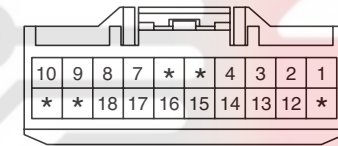


AMP_090III_20F_W

 FR31

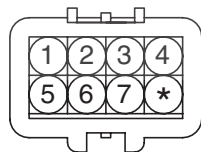


KUM_NMWP_08M_B

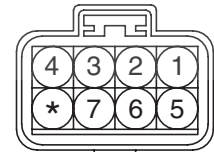 


KUM_NMWP_08F_B

 FR41

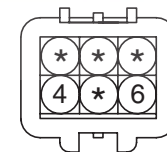


KUM_NMWP_06M_B

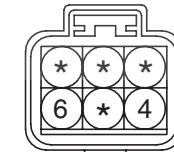 


KUM_NMWP_06F_B

 FS11

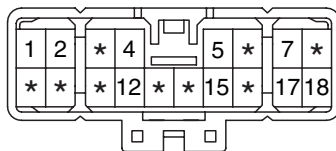


KET_090II_18M_W

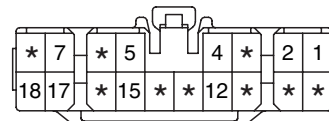 


KET_090II_18F_W

 MC11(G4KE)

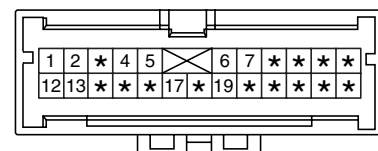

AMP_040III_24M_L

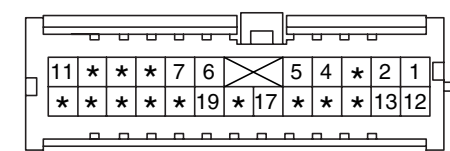 


AMP_040III_24F_L

HARNESS CONNECTORS


Harness Connector (3)

CC-3

 MC11(D4HB)

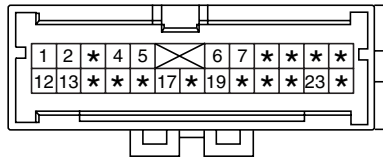


AMP_040III_24M_L

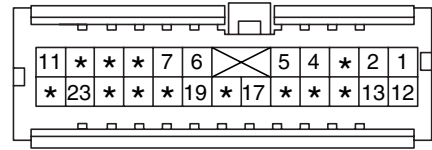 


AMP_040III_24F_L

 MC21(G4KE)

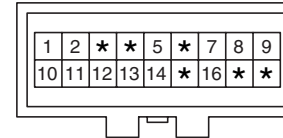

AMP_090III_18M_G

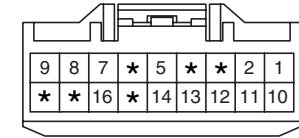 


AMP_090III_18F_G

MC21(D4HB)




 AMP_090III_18M_G

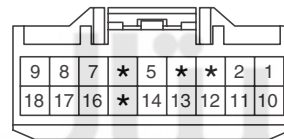


AMP_090III_18F_G

 MC31(G4KE)

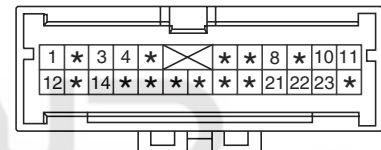


AMP_040III_24M_Br

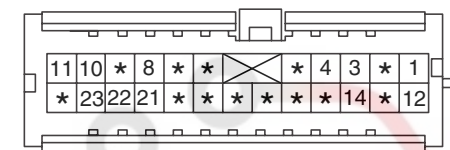 


AMP_040III_24F_Br

 MC31(D4HB)

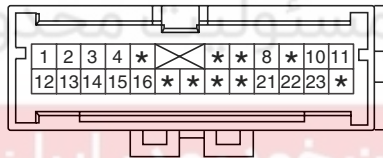


AMP_040III_24M_Br

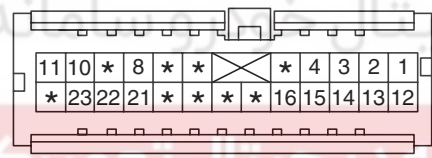 


AMP_040III_24F_Br

 MF11

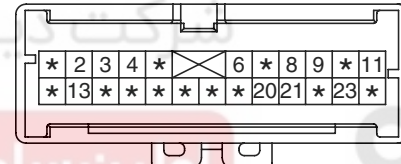


AMP_040III_24M_Br

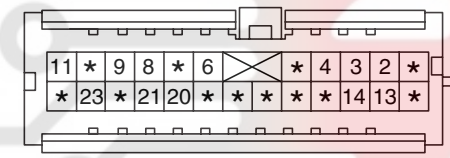 


AMP_040III_24F_Br

 MF31

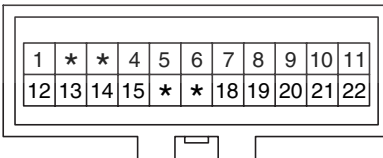


AMP_090III_22M_L

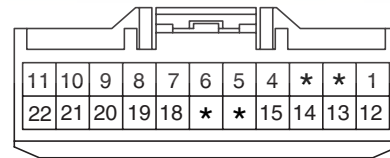 


AMP_090III_22F_L

 MF41

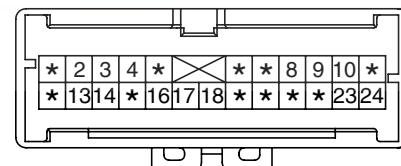


AMP_040III_24M_Gr

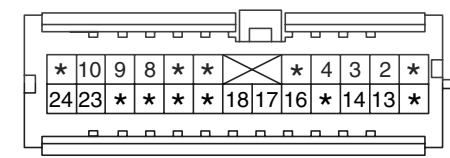 


AMP_040III_24F_Gr

 MF51

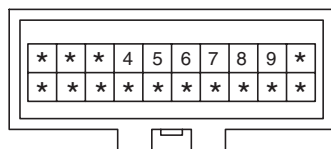


AMP_090III_20M_Y

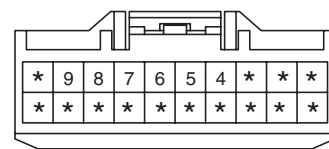 


AMP_090III_20F_Y

 MF61

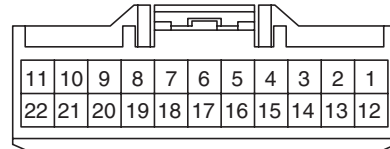

AMP_090III_22F_Y

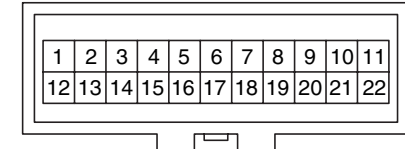 


AMP_090III_22M_Y

HARNESS CONNECTORS


Harness Connector (4)

CC-4

 MR11

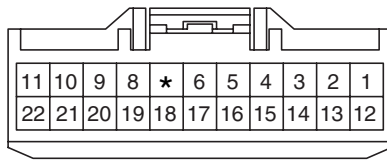

AMP_090III_22F_W

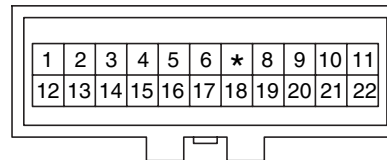 

AMP_090III_22M_W

BLANK

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

 


INSTRUMENT PANEL MODULE (IPM) E93C6C6F

EMS (Engine Management System) Box Connector (1)


CC-5

E/R-CHGA(G4KE)

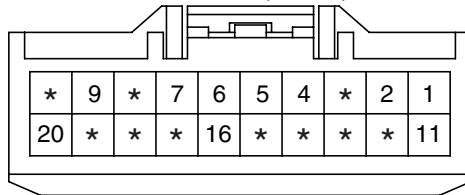


KET_090III_20F_Y

 E/R-CHGK(G4KE)

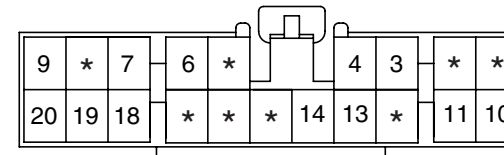


KET_090III_20F_W

 E/R-CRDA(D4HB)

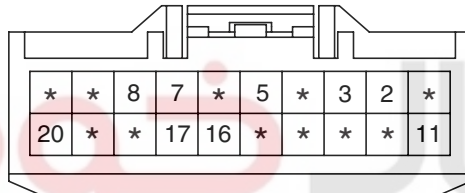

KET_090III_20F_Y

 E/R-CRDK(D4HB)

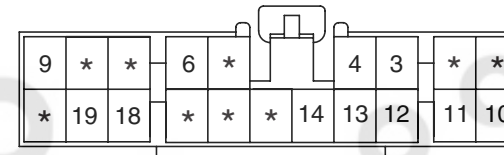

KET_090III_20F_W

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

 
EMS (ENGINE MANAGEMENT SYSTEM) BOX CONNECTOR

EA8A6E89

Instrument Panel Module (IPM) (1)


CC-6

BCM-FK

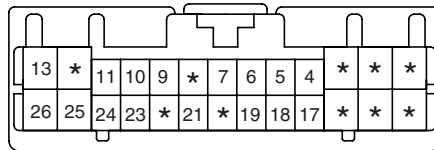


KET_0407_26F_W

 BCM-ML

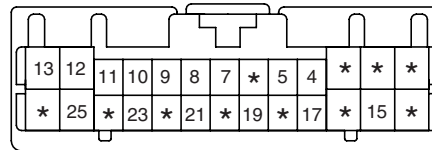


KET_0407_26F_W

 BCM-MM

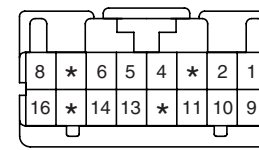

KET_0407(ECU)_16F_W

 BCM-MN

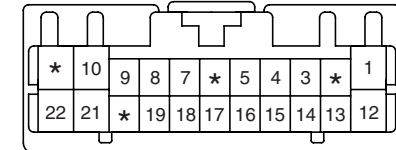


KET_0407_22F_W

I/P-A




KET_0409LIF_39F_W

 I/P-B

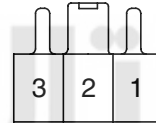


KET_312_03F_B

 I/P-C

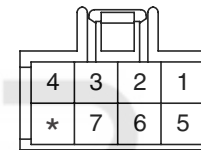


KET_187II_08F_W

 I/P-D

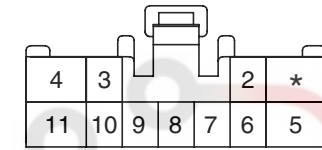


KET_1809_11F_W

 I/P-E

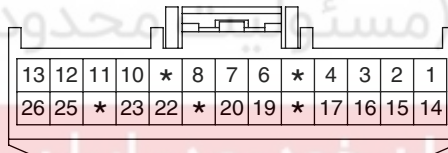


AMP_090III_26F_W

 I/P-F

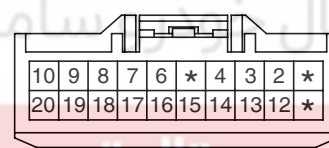

AMP_090III_20F_R

 I/P-G

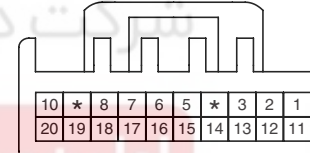

SUM_025_20F_W

BLANK

 
JOINT CONNECTORS

EF4E70A9

Joint Connector (1)


CC-7

JC01(G4KE)

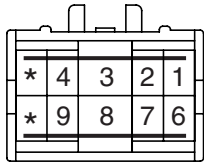


KET_1809_10F_B_JCH

 JC01(D4HB)

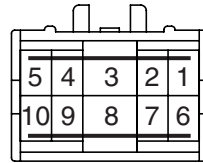


KET_1809_10F_B_JCH

 JF01

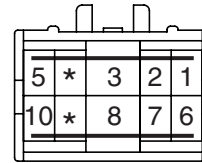

KET_1809_10F_B_JCH

 JM01

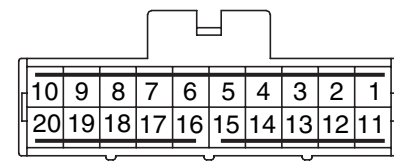


KET_090II_20F_B_JCH

JM03




KET_070_14F_B_JCH

 JM04

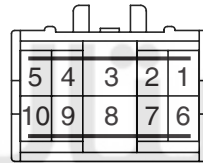

KET_1809_10F_B_JCH

 JS01

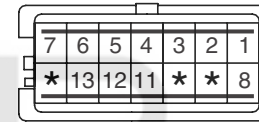

KET_070_14F_W

BLANK

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

 
اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

MAIN HARNESS E8E63DDB

Main Harness (1)

HL-1

LHD

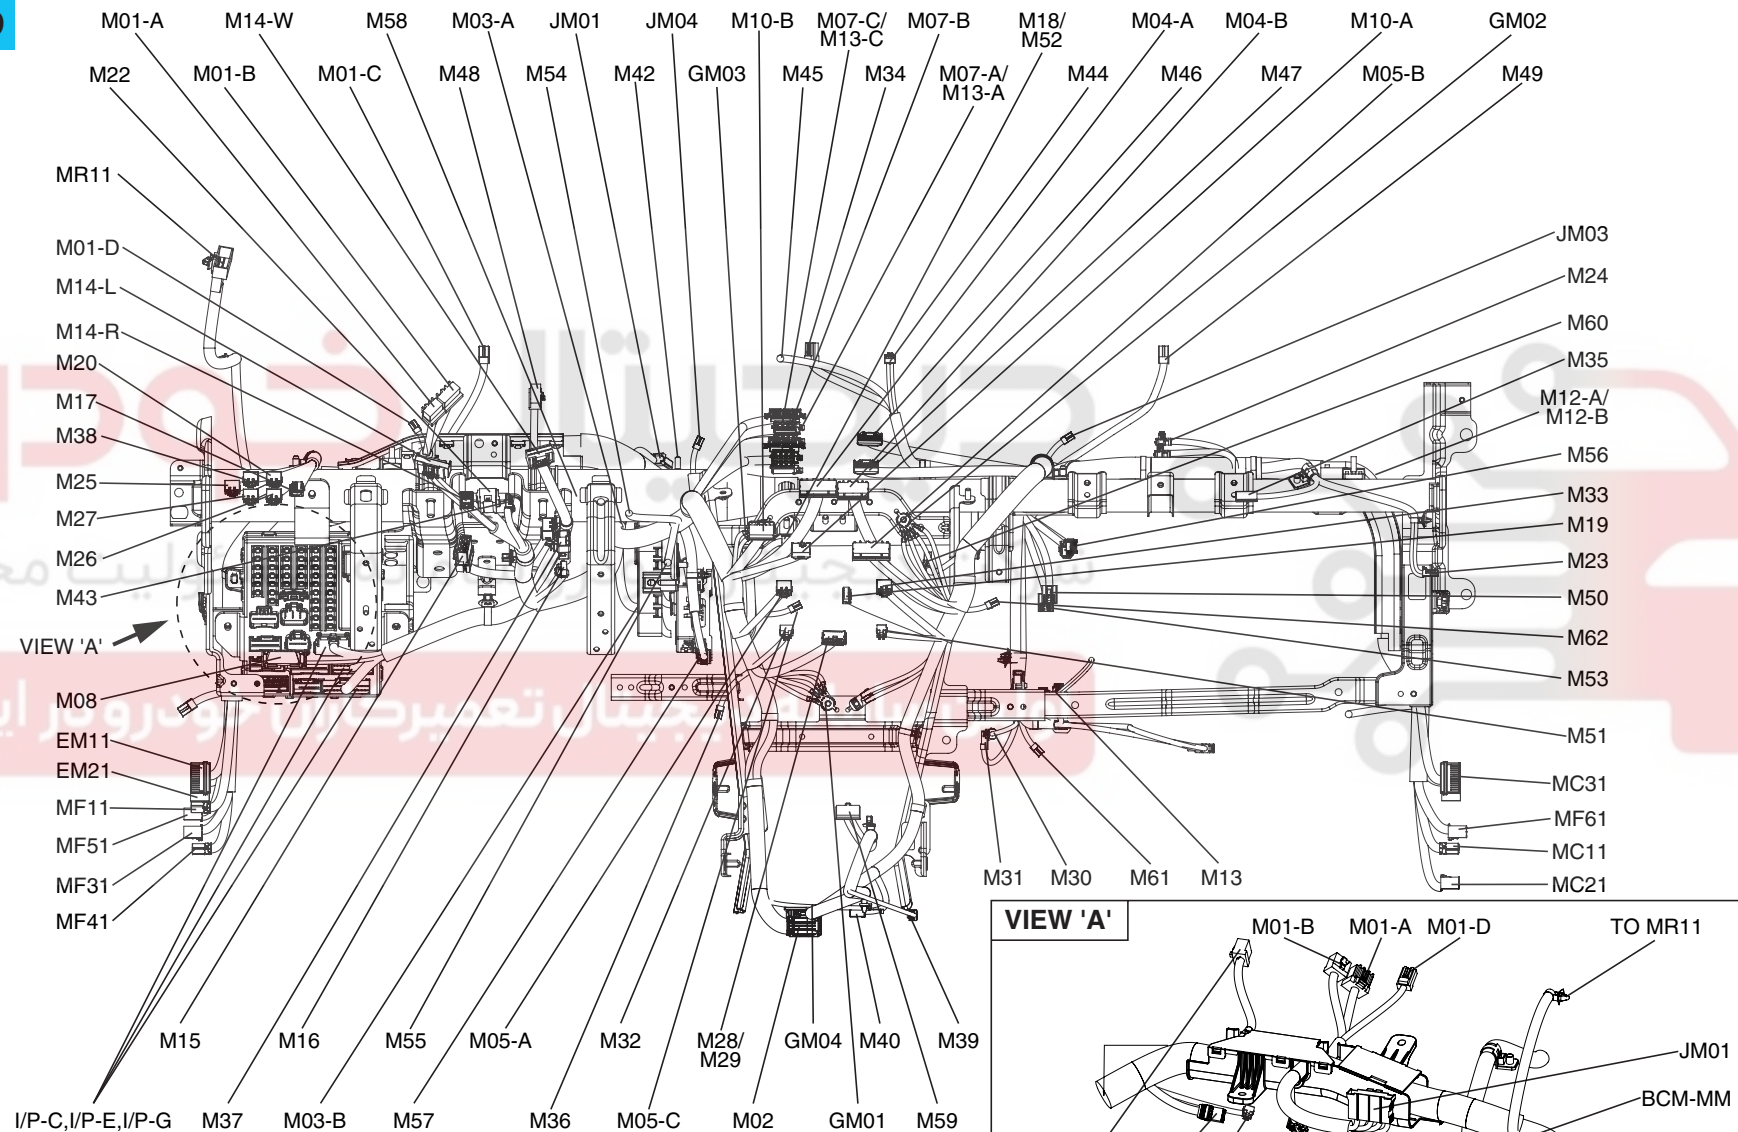

MAIN HARNESS

Main Harness (2)

HL-2

LHD


MAIN HARNESS

BCM-ML	IPM	M17	Rheostat	M53	Intake Actuator
BCM-MM	IPM	M18	Driver Seat Warmer Switch (W/O CCS)	M54	Mode Actuator
BCM-MN	IPM	M19	Passenger Seat Warmer Switch (W/O CCS)	M55	Driver Temperature Actuator
M01-A	Instrument Cluster	M20	ESP Off Switch	M56	Passenger Temperature Actuator
M01-B	Instrument Cluster	M22	Driver Air Bag	M57	Start Stop Button Switch (With Smart Key)
M01-C	Instrument Cluster	M23	PAB ON/OFF Switch	M58	Electronic Steering Column Lock (With Smart Key)
M01-D	Instrument Cluster	M24	Passenger Air Bag	M59	FOB Holder (With Smart Key)
M02	SRS Control Module	M25	Head Lamp Leveling Device Switch (HLLD)	M60	RF Receiver (With Smart Key)
M03-A	ICM Relay Box	M26	DBC Switch	M61	Passenger Air Bag SBR
M03-B	ICM Relay Box	M27	Head Lamp Washer Switch	M62	Tire Pressure Monitoring Module
M04-A	Front A/C Control Module (Auto A/C)	M28	AUX & USB Jack (W/O AV)	M63	Room Lamp Auto Cut Relay
M04-B	Front A/C Control Module (Auto A/C)	M29	AUX Jack (With AV)	I/P-C	Connection With IPM
M05-A	Front A/C Control Module (Manual A/C)	M30	Front Center Speaker	I/P-E	Connection With IPM
M05-B	Front A/C Control Module (Manual A/C)	M31	Digital Clock	I/P-G	Connection With IPM
M05-C	Front A/C Control Module (Manual A/C)	M32	Front Cigarette Lighter	JM01	Joint Connector
M07-A	Audio (W/O AV)	M33	Front Power Outlet	JM03	Joint Connector
M07-B	Audio (W/O AV)	M34	Glove Box Lamp Switch	JM04	Joint Connector
M07-C	Audio (W/O AV)	M35	Glove Box Lamp	EM11	Connection With FRONT Harness
M08	Data Link Connector	M36	Center Mood Lamp	EM21	Connection With FRONT Harness
M09	Immobilizer Module (W/O Smart Key)	M37	Door Warning Switch	MC11	Connection With CONTROL Harness
M10-A	Smart Key Control Module	M38	4WD Lock Switch	MC21	Connection With CONTROL Harness
M10-B	Smart Key Control Module	M39	Smart Key Antenna (Interior #1)	MC31	Connection With CONTROL Harness
M11-A	PDM (With Smart Key)	M40	Smart Key Antenna (Interior #2)	MF11	Connection With FLOOR Harness
M11-B	PDM (With Smart Key)	M41	Rear Parking Assist Buzzer	MF31	Connection With FLOOR Harness
M12-A	PDM Relay Box (With Smart Key)	M42	Auto Head Lamp Leveling Device Control Module (AHLs)	MF41	Connection With FLOOR Harness
M12-B	PDM Relay Box (With Smart Key)	M43	Steering Angle Sensor	MF51	Connection With FLOOR Harness
M13-A	AV Head Module (With AV)	M44	Evaporator Sensor	MF61	Connection With FLOOR Harness
M13-C	AV Head Module (With AV)	M45	Front Blower Motor	MR11	Connection With ROOF Harness
M13	AV Head Module (With AV)	M46	FET (Field Effect Transistor)	GM01	Ground
M14-L	Multifunction Switch (Light) (LHD or Europe)	M47	Front Blower Resistor	GM02	Ground
M14-W	Multifunction Switch (Wiper) (LHD & Except Europe)	M48	Auto Light Sensor	GM03	Ground
M14-R	Multifunction Switch (Remocon)	M49	Photo Sensor	GM04	Ground
M15	Ignition Switch	M50	Cluster Ionizer (Auto A/C)		
M16	Key Solenoid (W/O Smart Key)	M51	Active Incar Sensor		
		M52	Front CCS Switch		

MAIN HARNESS

Main Harness (3)

 HL-3

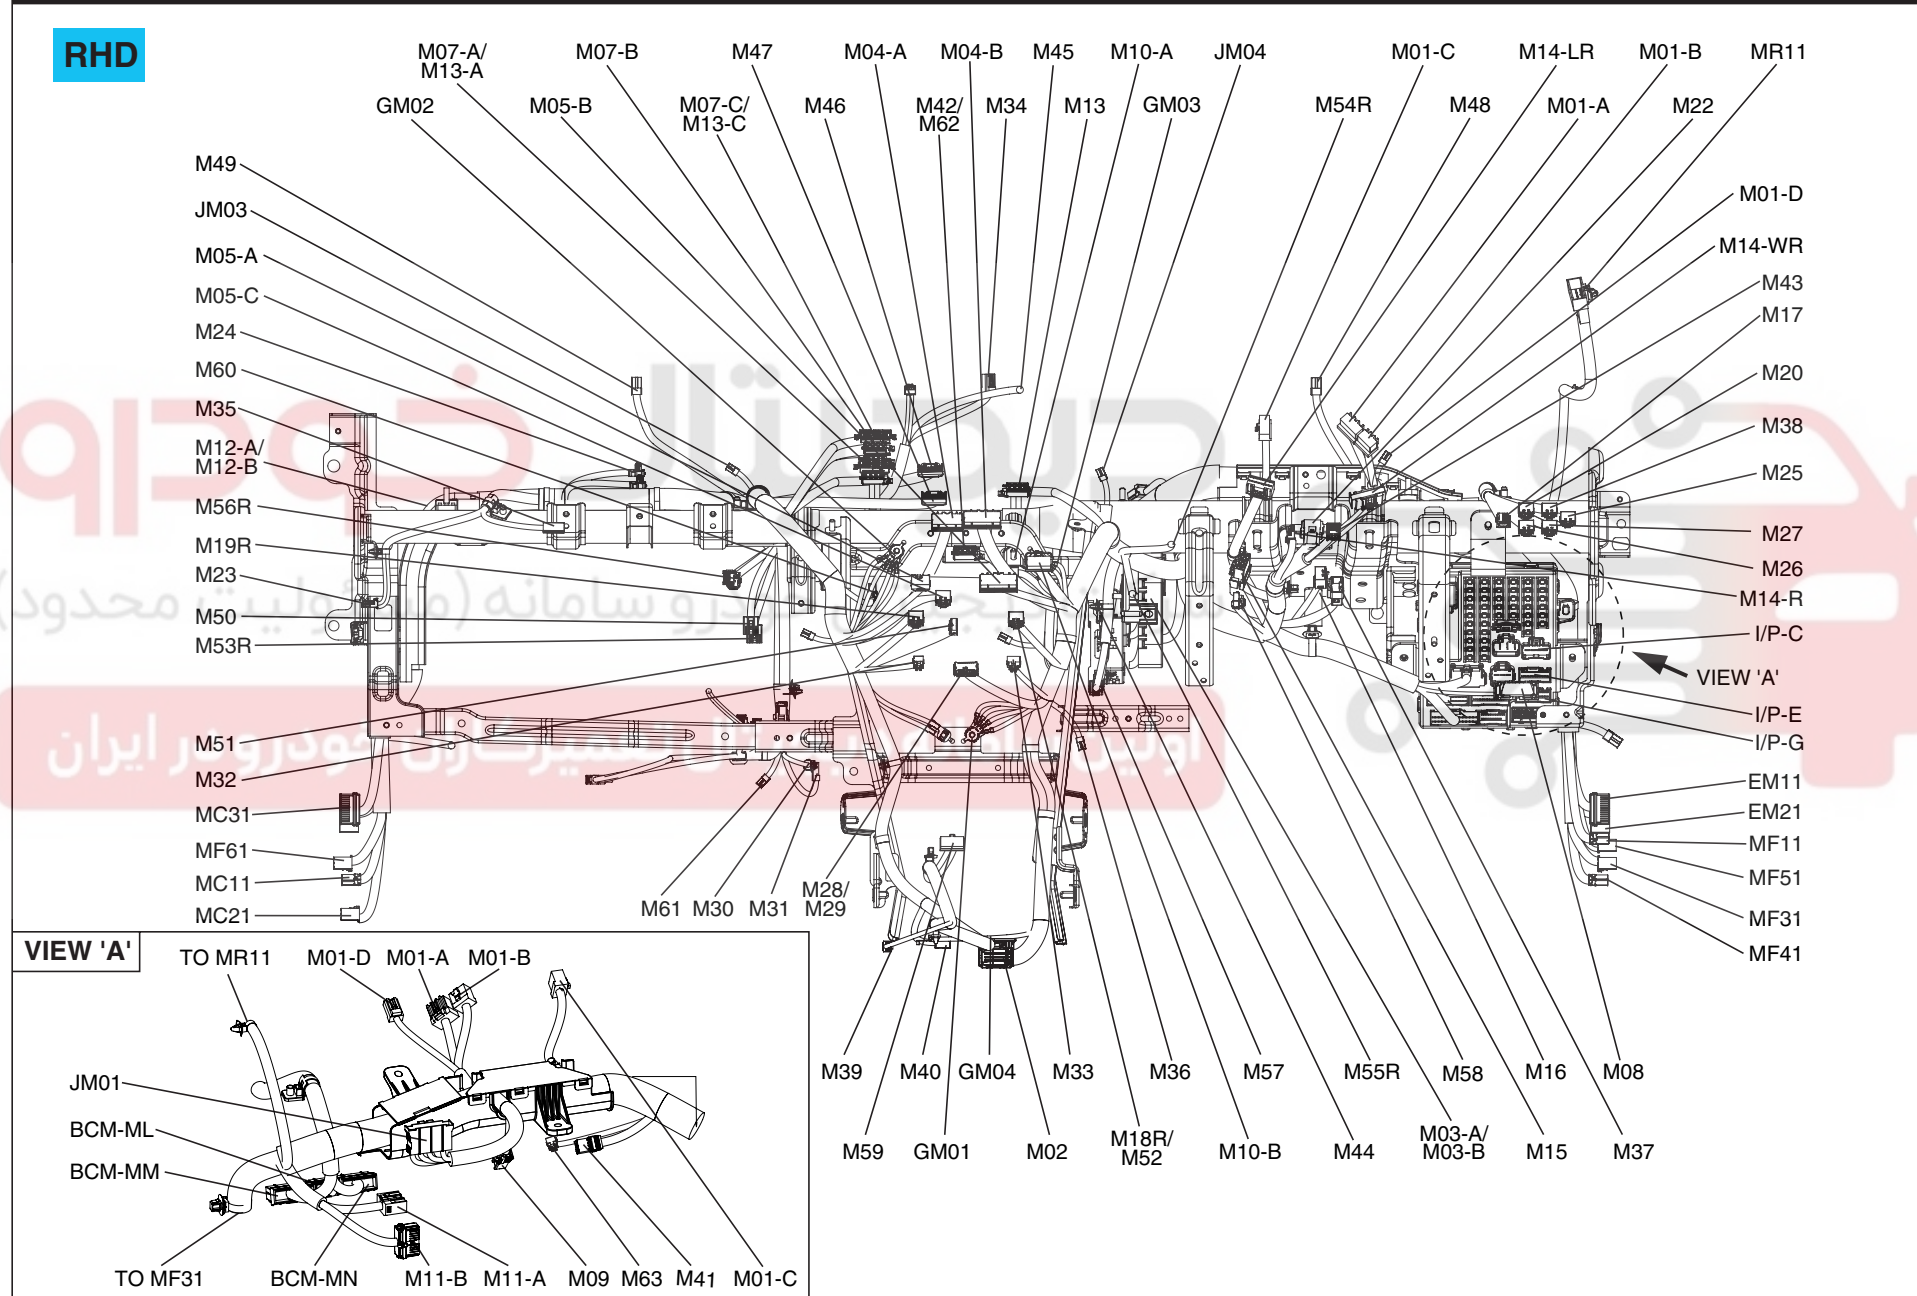

MAIN HARNESS

Main Harness (4)

HL-4

RHD

MAIN HARNESS


BCM-ML	IPM	M17	Rheostat	M53R	Intake Actuator
BCM-MM	IPM	M18R	Driver Seat Warmer Switch (W/O CCS)	M54R	Mode Actuator
BCM-MN	IPM	M19R	Passenger Seat Warmer Switch (W/O CCS)	M55R	Driver Temperature Actuator
M01-A	Instrument Cluster	M20	ESP Off Switch	M56R	Passenger Temperature Actuator
M01-B	Instrument Cluster	M22	Driver Air Bag	M57	Start Stop Button Switch (With Smart Key)
M01-C	Instrument Cluster	M23	PAB ON/OFF Switch	M58	Electronic Steering Column Lock (With Smart Key)
M01-D	Instrument Cluster	M24	Passenger Air Bag	M59	FOB Holder (With Smart Key)
M02	SRS Control Module	M25	Head Lamp Leveling Device Switch (HLLD)	M60	RF Receiver (With Smart Key)
M03-A	ICM Relay Box	M26	DBC Switch	M61	Passenger Air Bag SBR
M03-B	ICM Relay Box	M27	Head Lamp Washer Switch	M62	Tire Pressure Monitoring Module
M04-A	Front A/C Control Module (Auto A/C)	M28	AUX & USB Jack (W/O AV)	M63	Room Lamp Auto Cut Relay
M04-B	Front A/C Control Module (Auto A/C)	M29	AUX Jack (With AV)	I/P-C	Connection With IPM
M05-A	Front A/C Control Module (Manual A/C)	M30	Front Center Speaker	I/P-E	Connection With IPM
M05-B	Front A/C Control Module (Manual A/C)	M31	Digital Clock	I/P-G	Connection With IPM
M05-C	Front A/C Control Module (Manual A/C)	M32	Front Cigarette Lighter	JM01	Joint Connector
M07-A	Audio (W/O AV)	M33	Front Power Outlet	JM03	Joint Connector
M07-B	Audio (W/O AV)	M34	Glove Box Lamp Switch	JM04	Joint Connector
M07-C	Audio (W/O AV)	M35	Glove Box Lamp	EM11	Connection With FRONT Harness
M08	Data Link Connector	M36	Center Mood Lamp	EM21	Connection With FRONT Harness
M09	Immobilizer Module (W/O Smart Key)	M37	Door Warning Switch	MC11	Connection With CONTROL Harness
M10-A	Smart Key Control Module	M38	4WD Lock Switch	MC21	Connection With CONTROL Harness
M10-B	Smart Key Control Module	M39	Smart Key Antenna (Interior #1)	MC31	Connection With CONTROL Harness
M11-A	PDM (With Smart Key)	M40	Smart Key Antenna (Interior #2)	MF11	Connection With FLOOR Harness
M11-B	PDM (With Smart Key)	M41	Rear Parking Assist Buzzer	MF31	Connection With FLOOR Harness
M12-A	PDM Relay Box (With Smart Key)	M42	Auto Head Lamp Leveling Device Control Module (AHLs)	MF41	Connection With FLOOR Harness
M12-B	PDM Relay Box (With Smart Key)	M43	Steering Angle Sensor	MF51	Connection With FLOOR Harness
M13-A	AV Head Module (With AV)	M44	Evaporator Sensor	MF61	Connection With FLOOR Harness
M13-C	AV Head Module (With AV)	M45	Front Blower Motor	MR11	Connection With ROOF Harness
M13	AV Head Module (With AV)	M46	FET (Field Effect Transistor)	GM01	Ground
M14-LR	Multifunction Switch (Light) (RHD & Except Europe)	M47	Front Blower Resistor	GM02	Ground
M14-WR	Multifunction Switch (Wiper) (RHD or Europe)	M48	Auto Light Sensor	GM03	Ground
M14-R	Multifunction Switch (Remocon)	M49	Photo Sensor	GM04	Ground
M15	Ignition Switch	M50	Cluster Ionizer (Auto A/C)		
M16	Key Solenoid (W/O Smart Key)	M51	Active Incar Sensor		
		M52	Front CCS Switch		

FRONT & FRONT END MODULE HARNESS

EEC883F1

Front & Front End Module Harness (1)

 HL-5

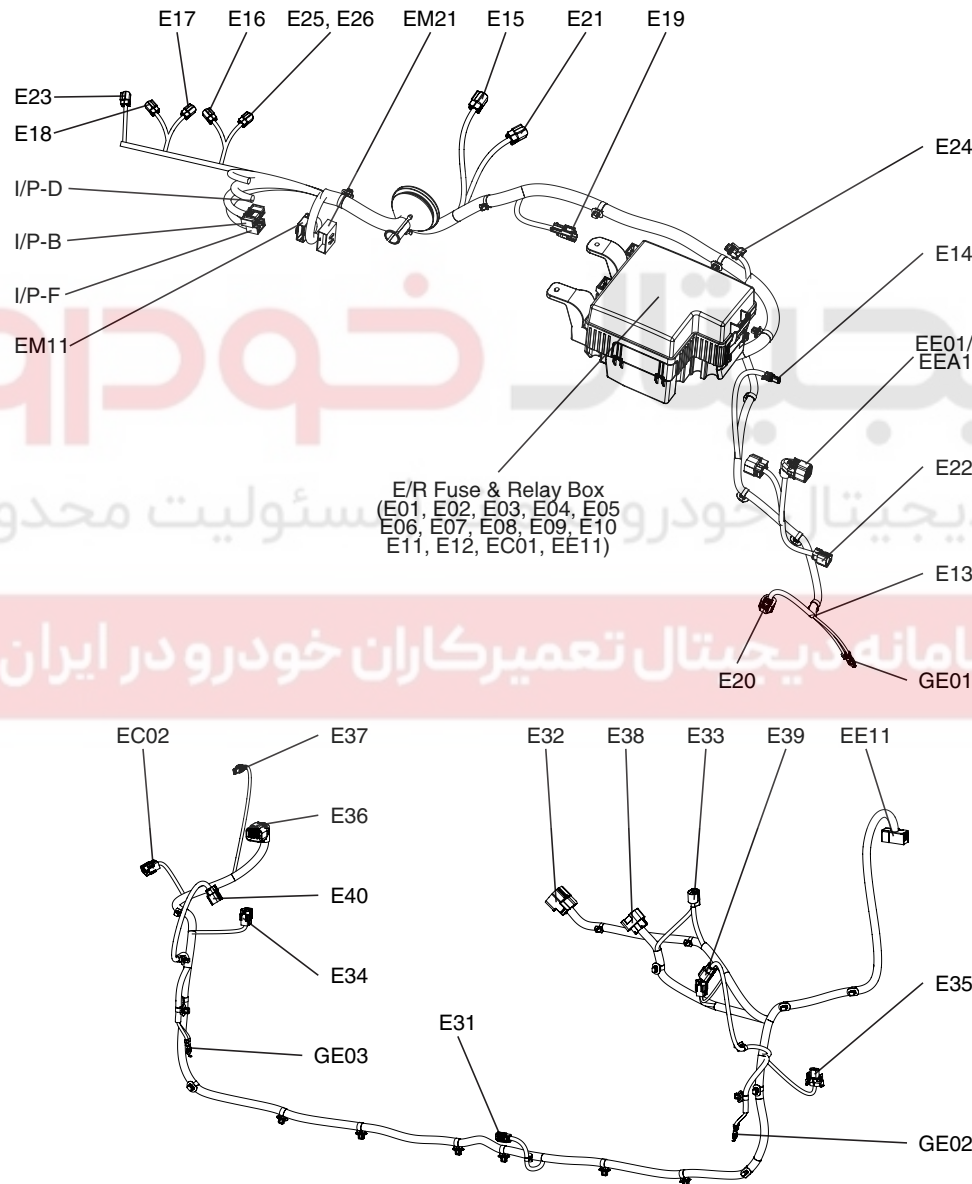

FRONT HARNESS

E01	Start Relay
E02	Burglar Alarm Relay
E03	Sub Start Relay
E04	Blower Relay
E05	Cooling Fan Relay (Low)
E06	Cooling Fan Relay (High)
E07	Back-Up Lamp Relay
E08	Wiper Relay (Low)
E09	Wiper Relay (High)
E10	Horn Relay
E11	HTD Glass (RR) Relay
E12	HTD Glass (FR) Relay
E13	Head Lamp LH
E14	Head Lamp Leveling Device Actuator LH
E15	Side Repeater Lamp LH
E16	Stop Lamp Switch (RHD)
E17	Clutch Switch (M/T, RHD)
E18	Ignition Lock Switch
E19	External Buzzer
E20	Burglar Alarm Horn
E21	Front Wheel Sensor LH
E22	Battery Sensor
E23	Foot Brake (RHD)
E24	Front Initiator LH
E25	Accel Pedal Position Sensor (D4HB RHD)
E26	Accel Pedal Position Sensor (G4KE RHD)
I/P-B	Connection With IPM
I/P-D	Connection With IPM
I/P-F	Connection With IPM
EEA1	Connection With BATTERY Harness (G4KE)
EE01	Connection With BATTERY Harness (D4HB)
EE11	Connection With FRONT END MODULE Harness
EC01	Connection With CONTROL Harness
EM11	Connection With MAIN Harness
EM21	Connection With MAIN Harness
GE01	Ground

FRONT END MODULE HARNESS


E31	Ambient Sensor
E32	Cooling Fan Motor
E33	Front Impact Sensor LH
E34	Front Impact Sensor RH
E35	Front Fog Lamp LH
E36	Head Lamp RH
E37	Head Lamp Leveling Device Actuator RH
E38	Hood Switch
E39	Horn LH
E40	Horn RH
EC02	Connection With CONTROL Harness
EE11	Connection With FRONT Harness
GE02	Ground
GE03	Ground

BATTERY HARNESS E9B75E54

Battery Harness (1)

HL-6

 
G4KE : THETA II 2.4L

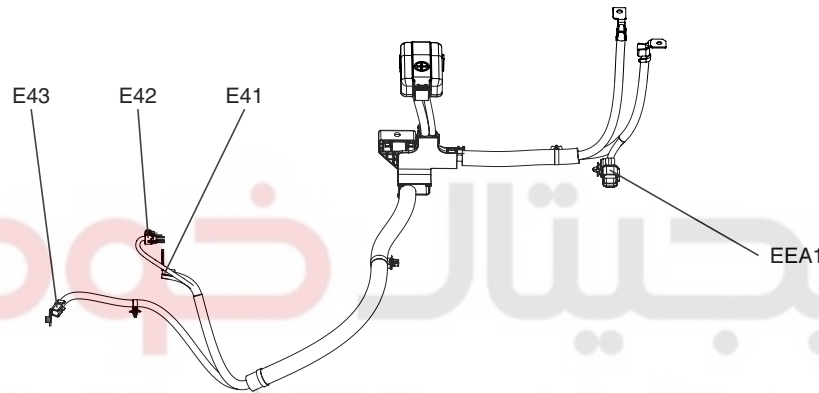

BATTERY HARNESS (G4KE : THETA II 2.4L)

E41	Start Motor
E42	Start Solenoid
E43	Alternator
EEA1	Connection With FRONT Harness

 D4HB : R 2.2L

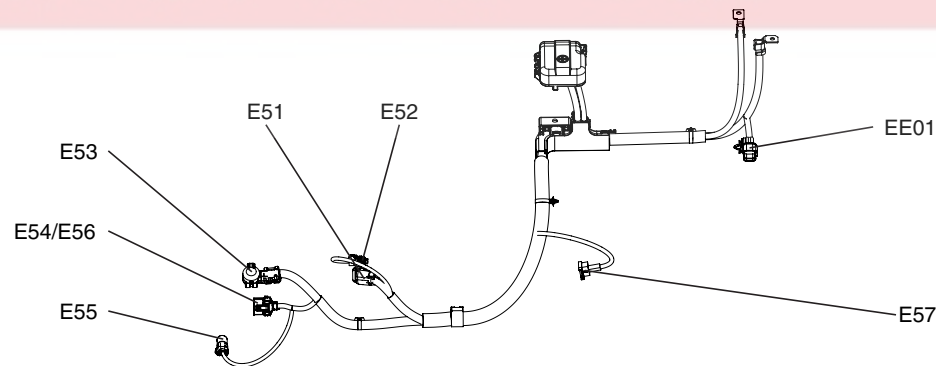

BATTERY HARNESS (D4HB : R 2.2L)


E51	Start Motor
E52	Start Solenoid
E53	Alternator
E54	Alternator (W/O AMS)
E55	A/C Compressor
E56	Alternator (With AMS)
E57	Intake Temperature Sensor
EE01	Connection With FRONT Harness

CONTROL HARNESS E20026DA

Control Harness (1)

HL-7

 G4KE : THETA II 2.4L (LHD)

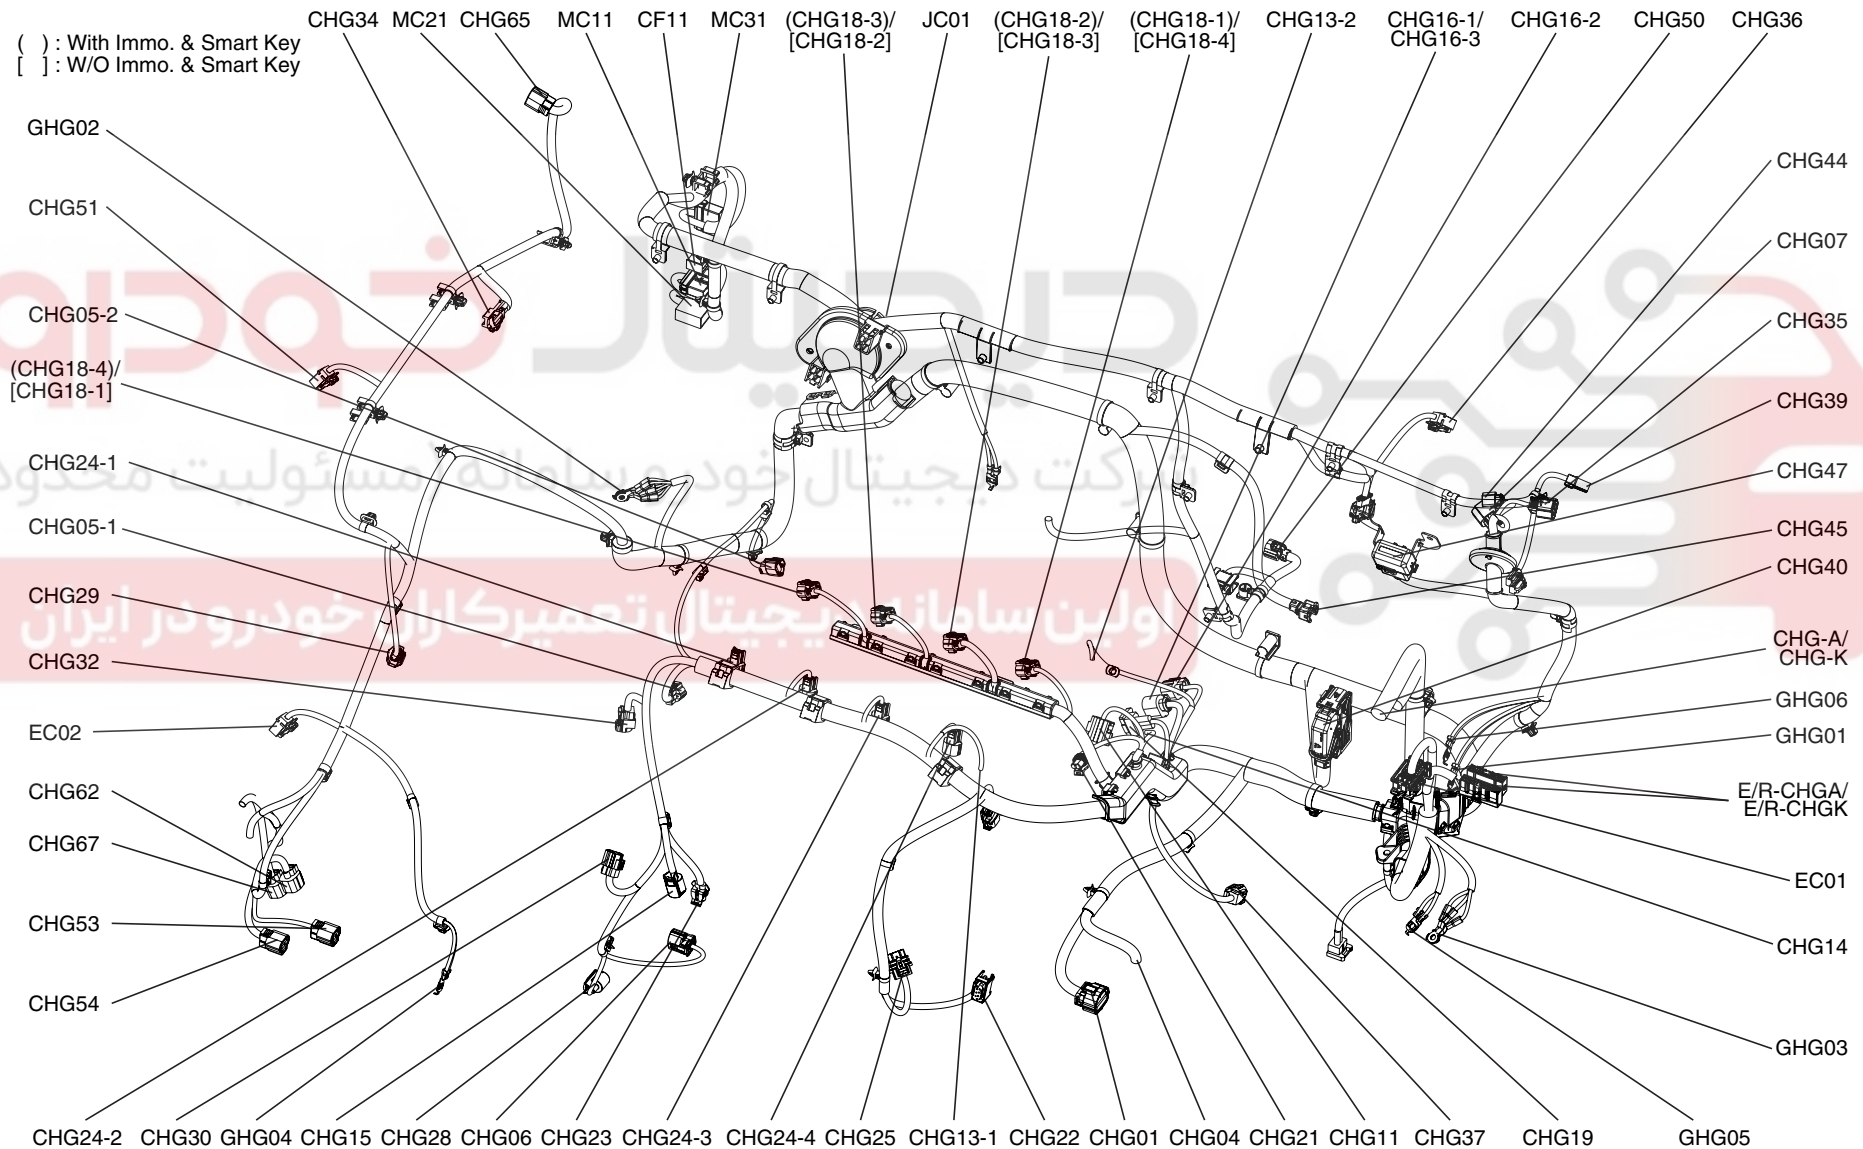


CONTROL HARNESS

Control Harness (2)

HL-8

 G4KE : THETA II 2.4L (RHD)

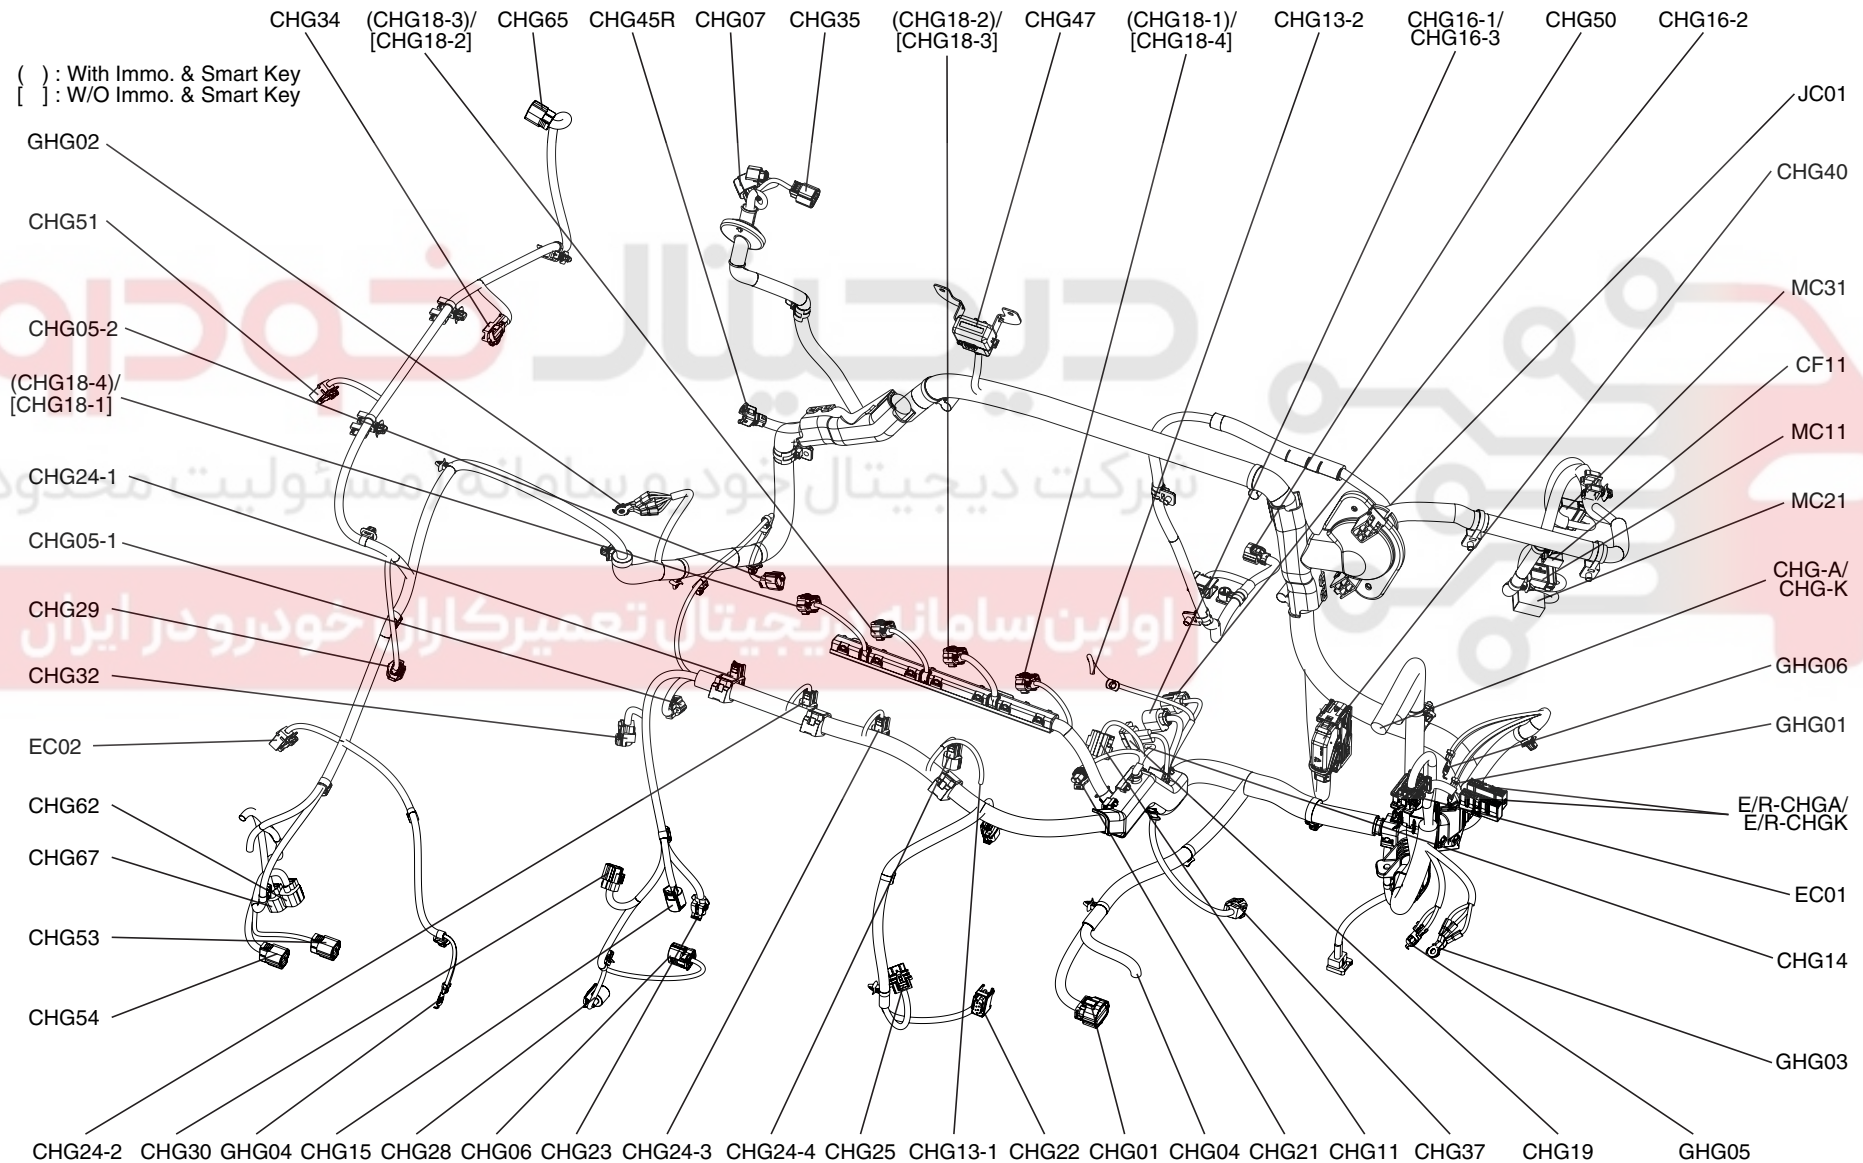

CONTROL HARNESS

Control Harness (3)

HL-9

CONTROL HARNESS (G4KE : THETA II 2.4L)


CHG-A	PCM	CHG34	Front Wheel Sensor RH
CHG-K	PCM	CHG35	Windshield Defogger
CHG01	Transmission Range Switch	CHG36	Clutch Switch (M/T, LHD)
CHG04	ATM Solenoid Valve	CHG37	Back-up Lamp Switch
CHG05-1	Oil Control Valve #1	CHG39	Stop Lamp Switch (LHD)
CHG05-2	Oil Control Valve#2	CHG40	ESP control module
CHG06	Alternator	CHG44	Accel Pedal Position Sensor (LHD)
CHG07	Front Wiper Motor	CHG45	Brake Fluid Level Sensor
CHG11	Engine Coolant Temperature Sensor	CHG45R	Brake Fluid Level Sensor (RHD)
CHG13-1	Camshaft Position Sensor #1	CHG47	Multipurpose Check Connector
CHG13-2	Camshaft Position Sensor #2	CHG50	Yaw Rate Sensor
CHG14	Crankshaft Position Sensor	CHG51	Front Initiator RH
CHG15	Oil Pressure Switch	CHG53	Front Fog Lamp RH
CHG16-3	Oxygen Sensor (Up) (W/O Euro V)	CHG54	Head Lamp Washer Motor
CHG16-1	Oxygen Sensor (Up) (With Euro V)	CHG62	Washer Level Sensor
CHG16-2	Oxygen Sensor (Down)	CHG65	Side Repeater Lamp RH
CHG18-1	Ignition Coil #1	CHG67	Washer Motor
CHG18-2	Ignition Coil #2	E/R-CHGA	EMS Box
CHG18-3	Ignition Coil #3	E/R-CHGK	EMS Box
CHG18-4	Ignition Coil #4	JC01	Joint Connector
CHG19	Condenser	CF11	Connection With FLOOR Harness
CHG21	Canister Purge Control Solenoid Valve	EC01	Connection With FRONT Harness
CHG22	ETC Motor & Throttle Position Sensor	EC02	Connection With FRONT END MODULE Harness
CHG23	Knock Sensor	MC11	Connection With MAIN Harness
CHG24-1	Injector #1	MC21	Connection With MAIN Harness
CHG24-2	Injector #2	MC31	Connection With MAIN Harness
CHG24-3	Injector #3	GHG01	Ground
CHG24-4	Injector #4	GHG02	Ground
CHG25	MAP Sensor	GHG03	Ground
CHG28	A/C Compressor	GHG04	Ground
CHG29	A/C Pressure Transducer	GHG05	Ground
CHG30	Variable Intake Manifold Valve	GHG06	Ground
CHG32	Power Steering Switch		

CONTROL HARNESS

Control Harness (4)

HL-10

 D4HB : R 2.2L (LHD)

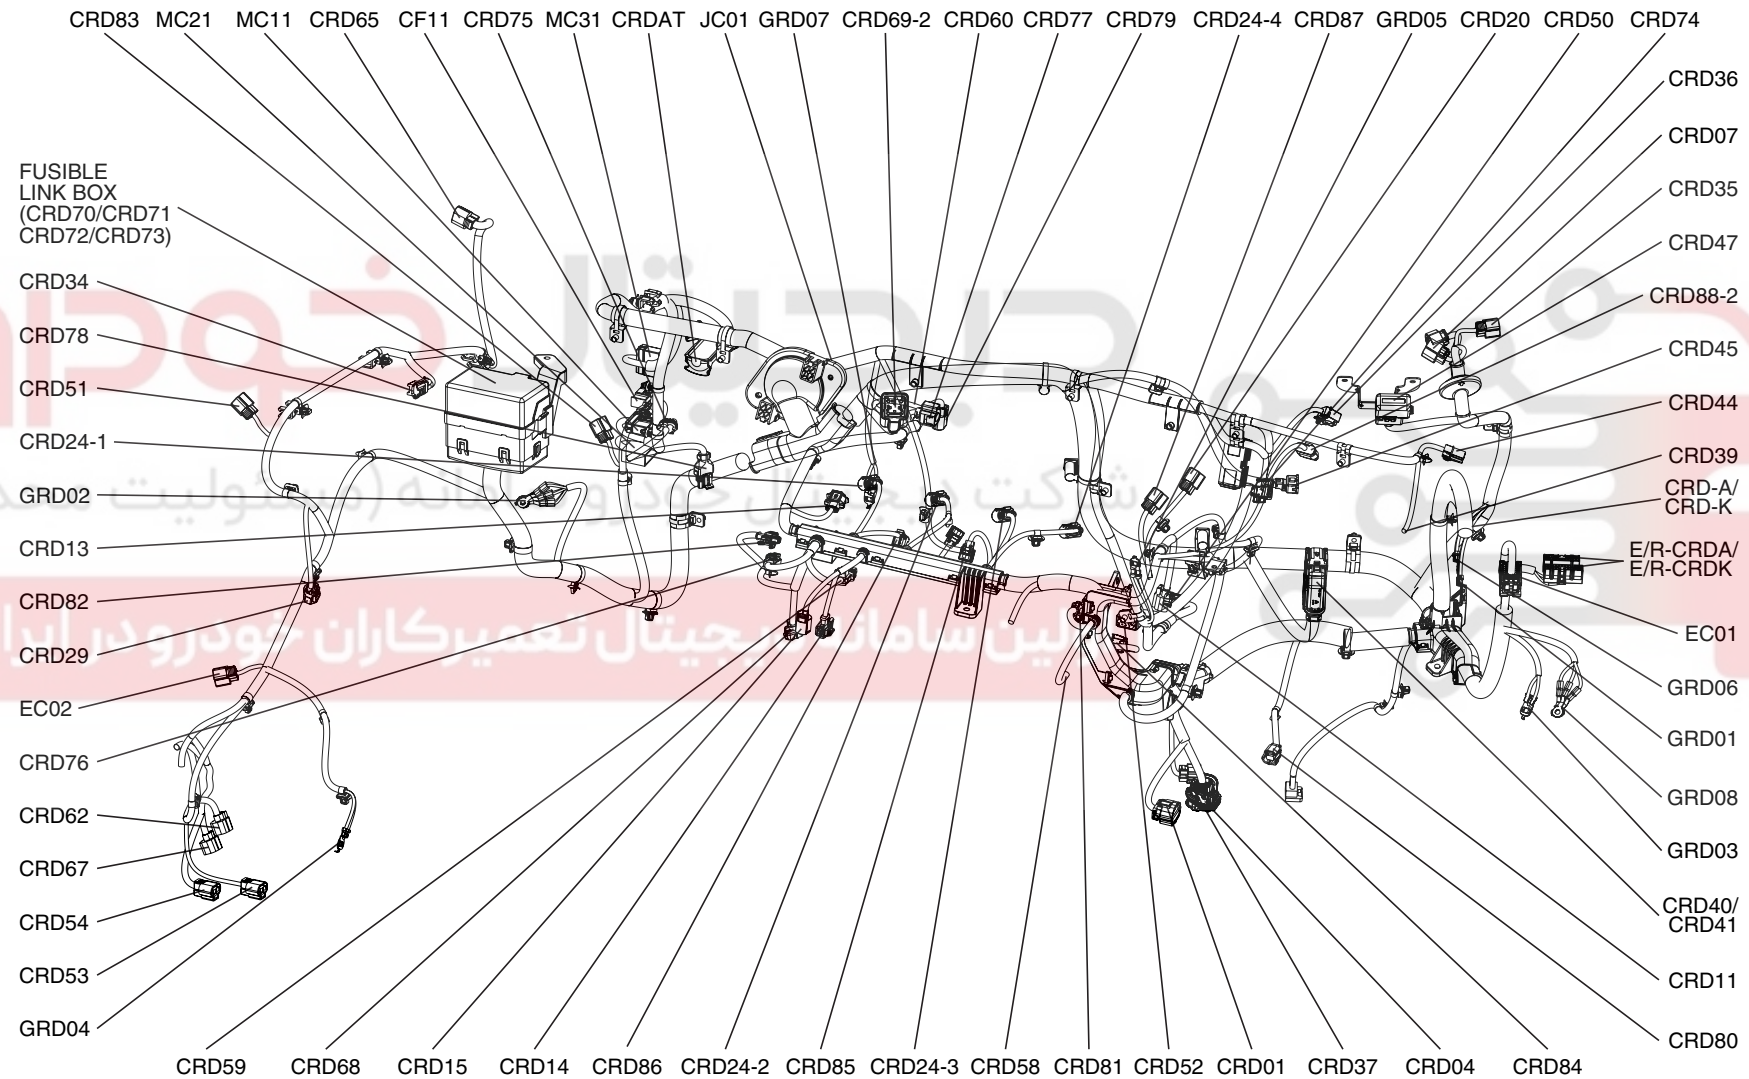


CONTROL HARNESS

Control Harness (5)

HL-11

 D4HB : R 2.2L (RHD)

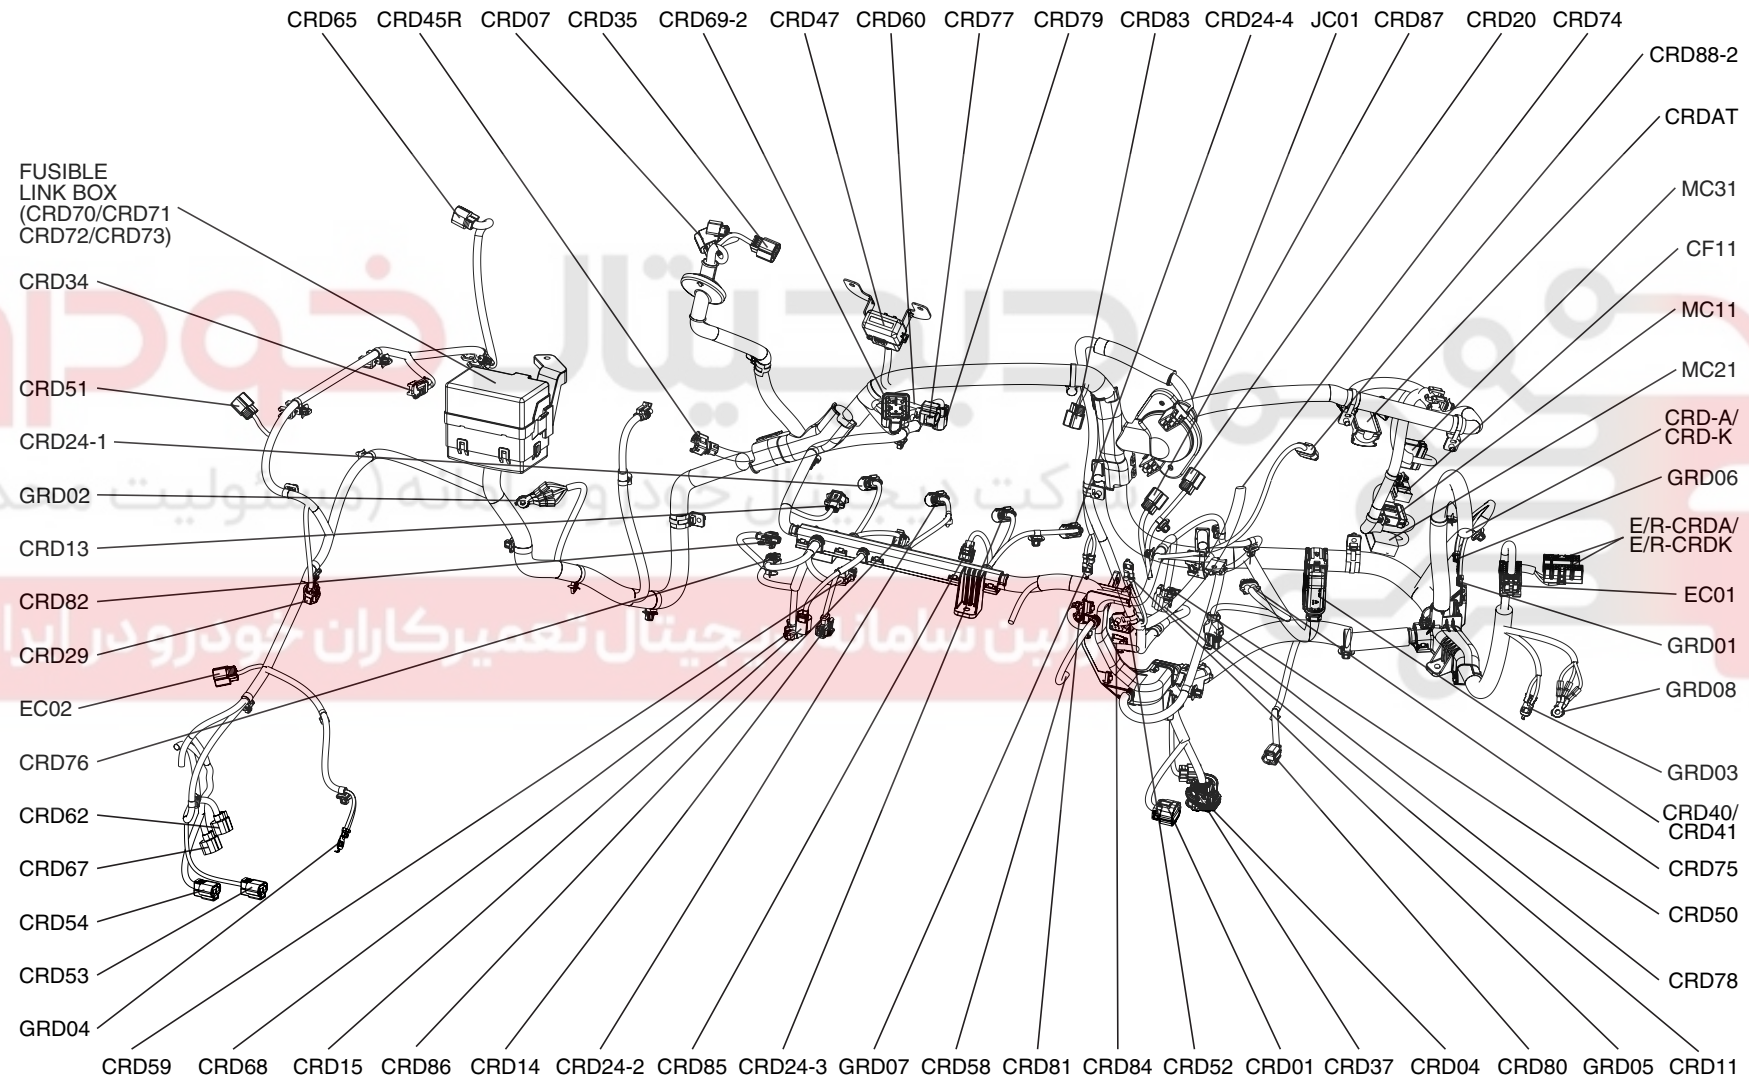

CONTROL HARNESS

Control Harness (6)

HL-12

CONTROL HARNESS (D4HB : R 2.2L)


CRD-A	ECM	CRD68	Fuel Pressure Regulator Valve
CRD-K	ECM	CRD69-2	Glow Relay Module
CRDAT	TCM	CRD70	Fuel Filter Heater Relay
CRD01	Transmission Range Switch	CRD71	PTC Heater Relay #1
CRD04	ATM Solenoid Valve	CRD72	PTC Heater Relay #2
CRD07	Front Wiper Motor	CRD73	PTC Heater Relay #3
CRD11	Engine Coolant Temperature Sensor	CRD74	PTC Heater
CRD13	Camshaft Position Sensor	CRD75	Fuel Filter Heater
CRD14	Crankshaft Position Sensor	CRD76	Glow Plug
CRD15	Oil Pressure Switch	CRD77	Exhaust Gas Temperature Sensor
CRD20	Mass Air Flow Sensor	CRD78	Fuel Filter Warning Sensor
CRD24-1	Injector #1	CRD79	Lambda Sensor
CRD24-2	Injector #2	CRD80	Neutral Switch (M/T)
CRD24-3	Injector #3	CRD81	Rail Pressure Regulator Valve
CRD24-4	Injector #4	CRD82	Rail Pressure Sensor
CRD29	A/C Pressure Transducer	CRD83	Thermo Switch
CRD34	Front Wheel Sensor RH	CRD84	Variable Swirl Control Actuator
CRD35	Windshield Defogger	CRD85	Fuel Temperature Sensor
CRD36	Clutch Switch (M/T, LHD)	CRD86	EGR Cooling Bypass Solenoid Valve
CRD37	Back-Up Lamp Switch (M/T)	CRD87	EGR Actuator
CRD39	Stop Lamp Switch (LHD)	CRD88-2	Electrical VGT Actuator
CRD40	ESP Control Module	E/R-CRDA	EMS Box
CRD41	ABS Control Module	E/R-CRDK	EMS Box
CRD44	Accel Pedal Position Sensor (LHD)	JC01	Joint connector
CRD45	Brake Fluid Level Sensor	CF11	Connection With FLOOR Harness
CRD45R	Brake Fluid Level Sensor (RHD)	EC01	Connection With FRONT Harness
CRD47	Multipurpose Check Connector	EC02	Connection With FRONT END MODULE Harness
CRD50	Yaw Rate Sensor	MC11	Connection With MAIN Harness
CRD51	Front Initiator RH	MC21	Connection With MAIN Harness
CRD52	G-Sensor	MC31	Connection With MAIN Harness
CRD53	Front Fog Lamp RH	GRD01	Ground
CRD54	Head Lamp Washer Motor	GRD02	Ground
CRD58	Air Control Valve	GRD03	Ground
CRD59	Booster Pressure Sensor	GRD04	Ground
CRD60	Differential Pressure Sensor	GRD05	Ground
CRD62	Washer Level Sensor	GRD06	Ground
CRD65	Side Repeater Lamp RH	GRD07	Ground
CRD67	Washer Motor	GRD08	Ground

FLOOR HARNESS E977B20C

Floor Harness (1)

HL-13

 LHD

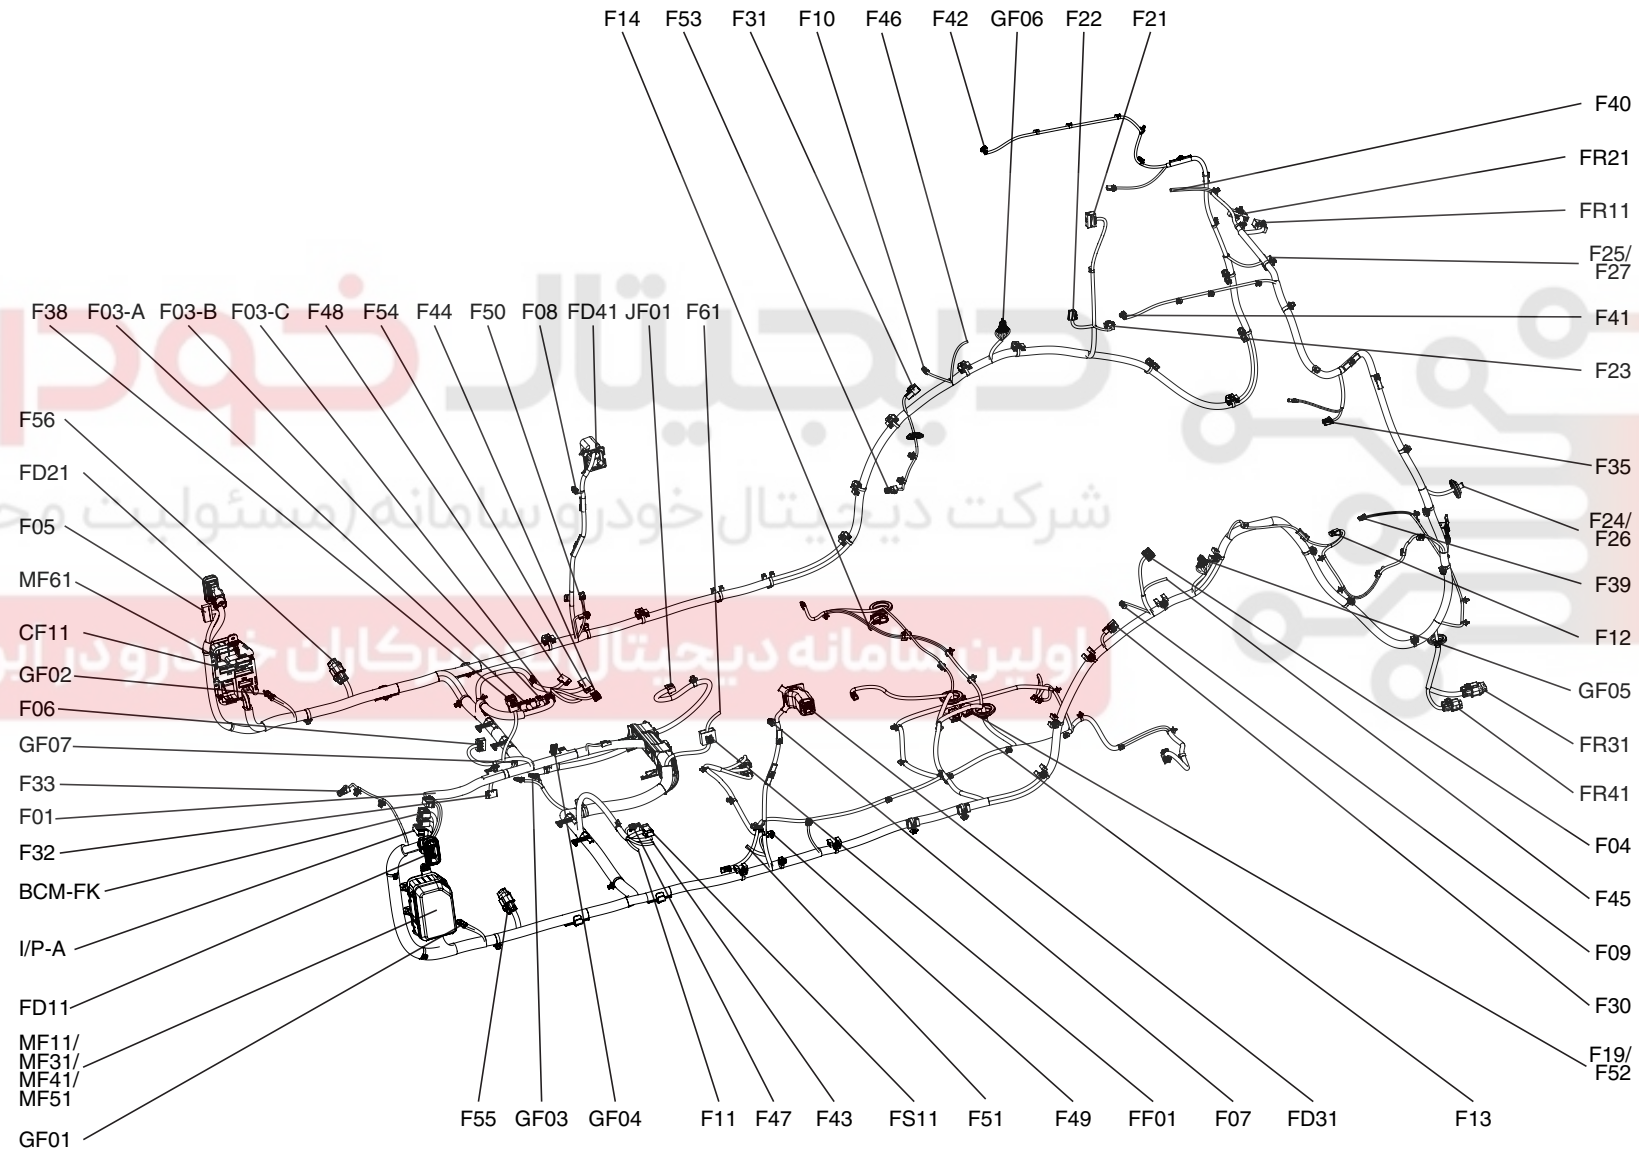


FLOOR HARNESS

Floor Harness (2)

HL-14

 RHD

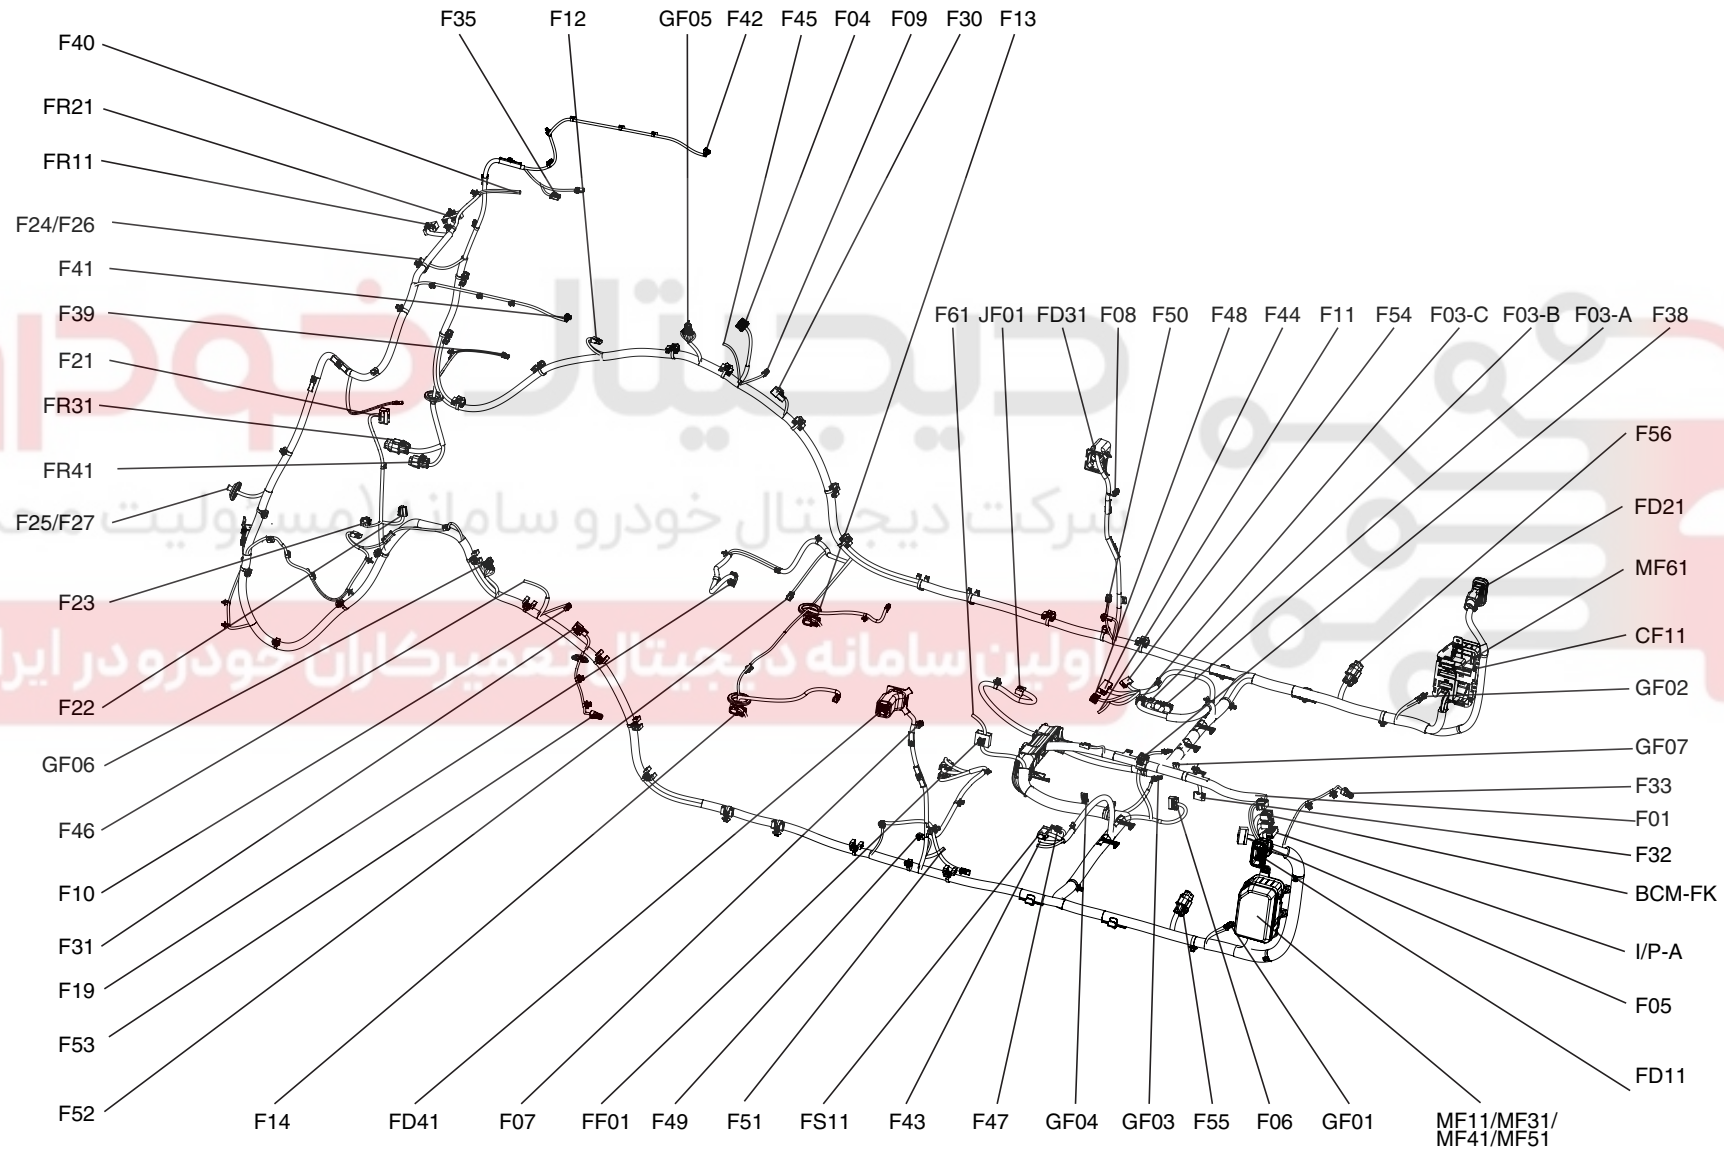

FLOOR HARNESS

Floor Harness (3)

HL-15

FLOOR HARNESS

BCM-FK IPM
 F01 SRS Control Module
 F03-A AMP
 F03-B AMP
 F03-C AMP
 F04 Rear Parking Assist Control Module
 F05 4WD ECM
 F06 Sport Mode Switch
 F07 Driver Door Switch
 F08 Passenger Door Switch
 F09 Rear Door Switch LH
 F10 Rear Door Switch RH
 F11 SBR Sensor
 F12 Fuel Filler Door Motor
 F13 Fuel Sender & Fuel Pump Motor
 F14 Fuel Sender
 F19 Rear Height Sensor
 F21 Rear Blower Switch
 F22 Rear Blower Motor
 F23 Rear Blower Resistor
 F24 Rear Combination Lamp (Out) LH (With LED)
 F25 Rear Combination Lamp (Out) RH (W/O LED)
 F26 Rear Combination Lamp (Out) LH (With LED)
 F27 Rear Combination Lamp (Out) RH (W/O LED)
 F30 Rear Wheel Sensor LH
 F31 Rear Wheel Sensor RH
 F32 Parking Brake Switch
 F33 Foot Brake (LHD)
 F35 Sub Woofer Speaker
 F38 ATM Shift Lever ILL.
 F39 Smart Key Antenna (Interior #3)
 F40 Roof Antenna
 F41 Driver Curtain Air Bag
 F42 Passenger Curtain Air Bag
 F43 Driver Side Air Bag
 F44 Passenger Side Air Bag
 F45 Rear Side Impact Sensor LH

F46 Rear Side Impact Sensor RH
 F47 Driver Seat Belt Buckle Switch
 F48 Passenger Seat Belt Buckle Switch
 F49 Driver Seat Belt Pretensioner
 F50 Passenger Seat Belt Pretensioner
 F51 Driver Seat Belt Pretensioner Anchor (Europe)
 F52 Electronic Magnetic Valve Clutch
 F53 Rear Initiator
 F54 Passenger Cushion Warmer
 F55 Driver Door Scuff Lamp
 F56 Passenger Door Scuff Lamp
 I/P-A Connection With I/P Junction Box
 JF01 Joint Connector
 CF11 Connection With CONTROL Harness
 FD11 Connection With DRIVER DOOR Harness
 FD21 Connection With PASSENGER DOOR Harness
 FD31 Connection With REAR DOOR LH Harness
 FD41 Connection With REAR DOOR RH Harness
 FF01 Connection With CONSOLE EXT. Harness
 FR11 Connection With TAIL GATE Harness
 FR21 Connection With TAIL GATE Harness
 FR31 Connection With BUMPER Harness
 FR41 Connection With BUMPER Harness
 FS11 Connection With DRIVER SEAT Harness
 MF11 Connection With FLOOR Harness
 MF31 Connection With FLOOR Harness
 MF41 Connection With FLOOR Harness
 MF51 Connection With FLOOR Harness
 MF61 Connection With FLOOR Harness
 GF01 Ground
 GF02 Ground
 GF03 Ground
 GF04 Ground
 GF05 Ground
 GF06 Ground
 GF07 Ground

 
CONSOLE EXT. HARNESS

F61 Rear Power Outlet
 FF01 Connection With FLOOR Harness

DOOR HARNESS E2E5ECCC

Door Harness (1)

HL-16

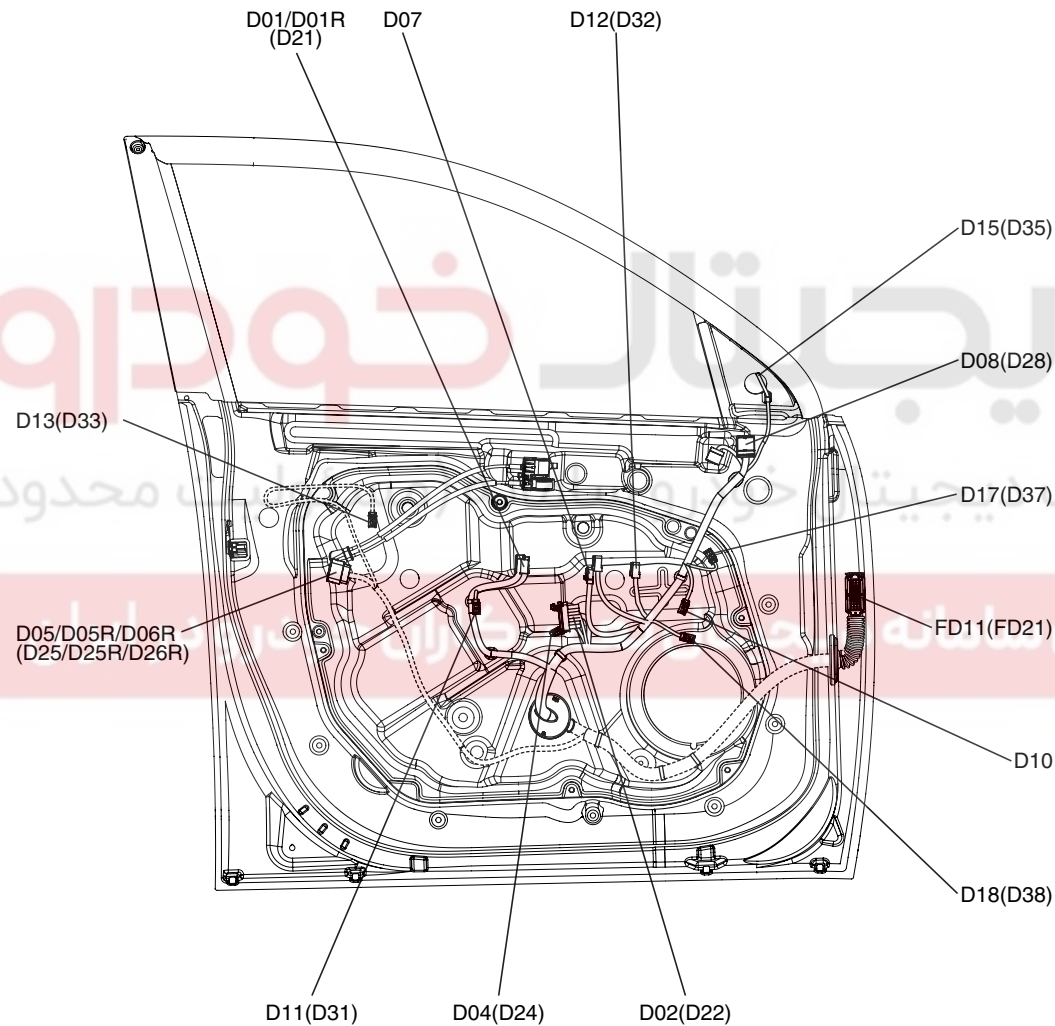

DRIVER DOOR HARNESS

D01	Power Window Main Switch (LHD)
D01R	Power Window Main Switch (RHD)
D02	Driver Safety Power Window Module
D04	Driver Power Window Motor
D05	Driver Door Lock Actuator (LHD)
D05R	Driver Door Lock Actuator (RHD, W/O Dead Lock)
D06R	Driver Door Lock Actuator (RHD, With Dead Lock)
D07	Power Outside Mirror Switch
D08	Driver Power Outside Mirror
D10	Fuel Filler Door Switch
D11	Driver Door Lamp
D12	Driver Pressure Side Impact Sensor
D13	Driver Smart Key Outside Handle
D15	Driver Tweeter Speaker
D17	Driver Door Mood Lamp
D18	Driver Door Speaker
FD11	Connection With FLOOR Harness

PASSENGER DOOR HARNESS


D21	Passenger Power Window Switch
D22	Passenger Safety Power Window Module
D24	Passenger Power Window Motor
D25	Passenger Door Lock Actuator (LHD)
D25R	Passenger Door Lock Actuator (RHD, W/O Dead Lock)
D26R	Passenger Door Lock Actuator (RHD, With Dead Lock)
D28	Passenger Power Outside Mirror
D31	Passenger Door Lamp
D32	Passenger Pressure Side Impact Sensor
D33	Passenger Smart Key Outside Handle
D35	Passenger Tweeter Speaker
D37	Passenger Door Mood Lamp
D38	Passenger Door Speaker
FD21	Connection With FLOOR Harness

() : Passenger

DOOR HARNESS

Door Harness (2)

 HL-17

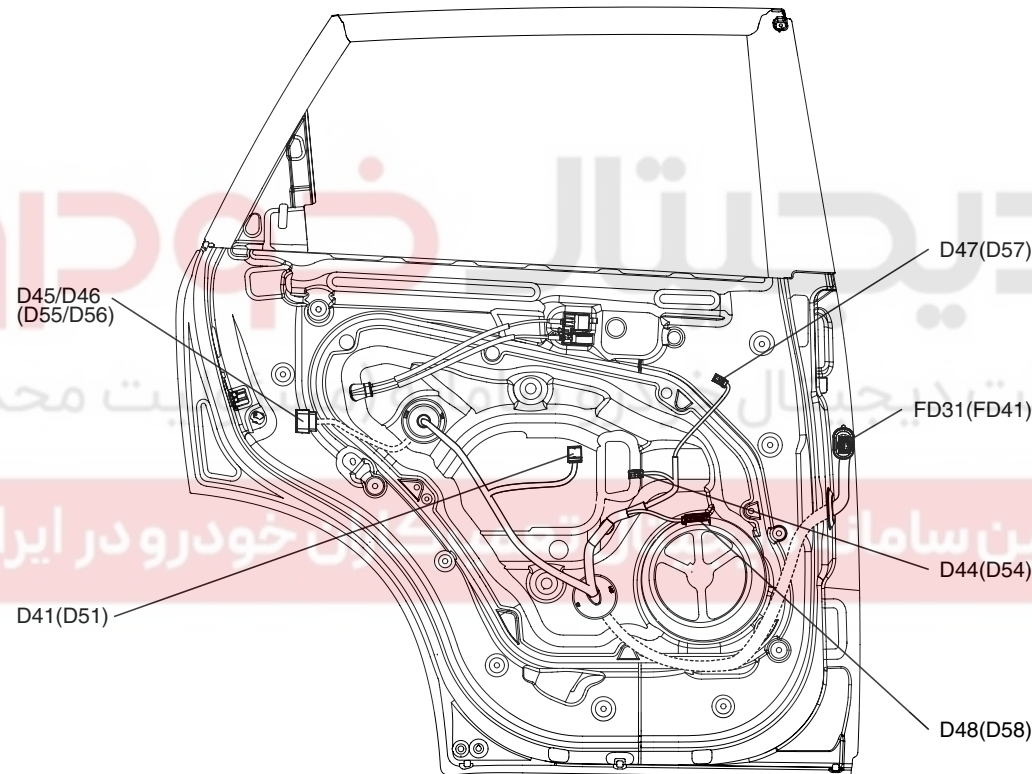

REAR DOOR LH HARNESS

D41	Rear Power Window Switch LH
D44	Rear Power Window Motor LH
D45	Rear Door Lock Actuator LH (W/O Dead Lock)
D46	Rear Door Lock Actuator LH (With Dead Lock)
D47	Rear Door Mood Lamp LH
D48	Rear Door Speaker LH
FD31	Connection With FLOOR Harness

REAR DOOR RH HARNESS


D51	Rear Power Window Switch RH
D54	Rear Power Window Motor RH
D55	Rear Door Lock Actuator RH (W/O Dead Lock)
D56	Rear Door Lock Actuator RH (With Dead Lock)
D57	Rear Door Mood Lamp RH
D58	Rear Door Speaker RH
FD41	Connection With FLOOR Harness

() : RH

TAIL GATE HARNESS EFE4B870

Tail Gate Harness (1)

 
HL-18

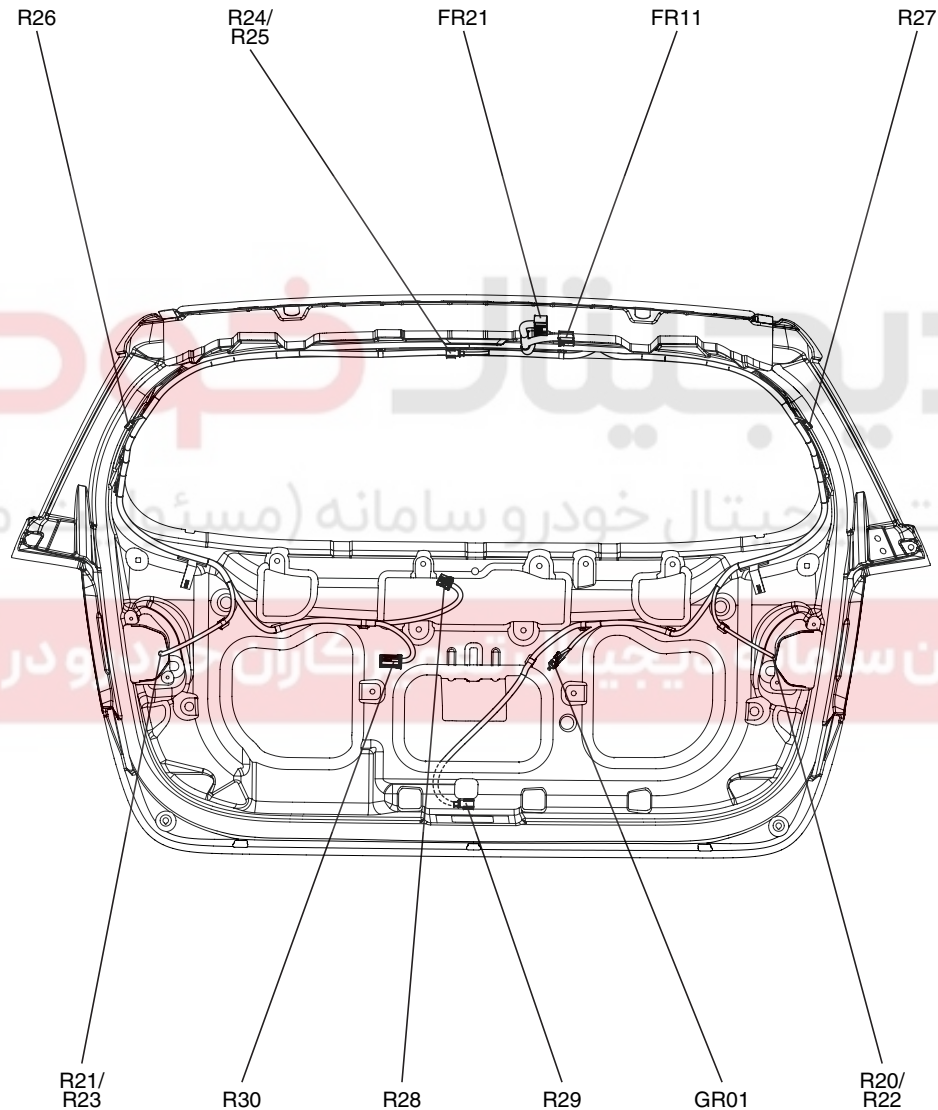


TAIL GATE HARNESS

R20	Rear Combination Lamp (IN) LH (W/O LED)
R21	Rear Combination Lamp (IN) RH (W/O LED)
R22	Rear Combination Lamp (IN) LH (With LED)
R23	Rear Combination Lamp (IN) RH (With LED)
R24	High-Mounted Stop Lamp (W/O Spoiler)
R25	High-Mounted Stop Lamp (With Spoiler)
R26	Rear Defogger (+)
R27	Rear Defogger (-)
R28	Rear Wiper Motor
R29	Tail Gate Actuator
R30	Tail Gate Handle Switch & License Lamp
GR01	Ground
FR11	Connection With FLOOR Harness
FR21	Connection With FLOOR Harness

 ROOF HARNESS EFBA4B67

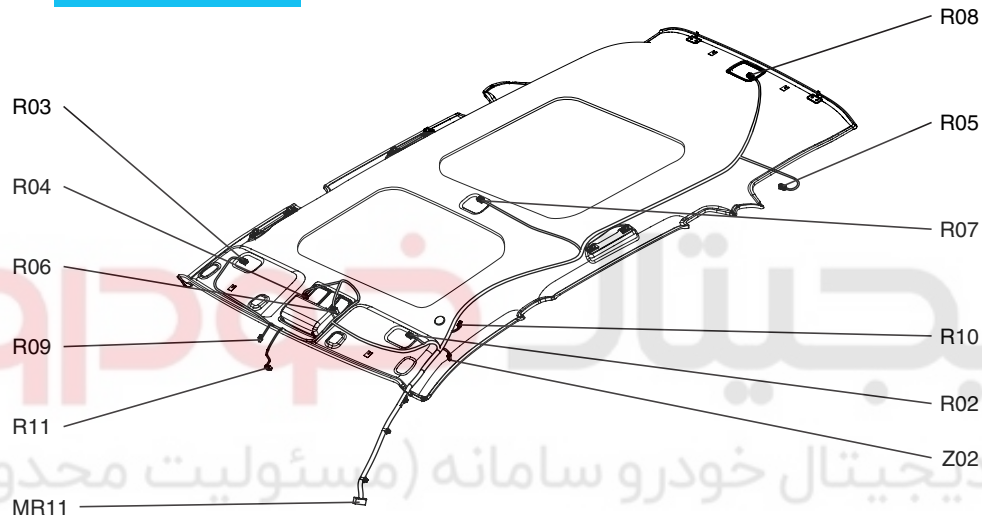Roof Harness (1)
HL-19
With Sunroof

 ROOF HARNESS

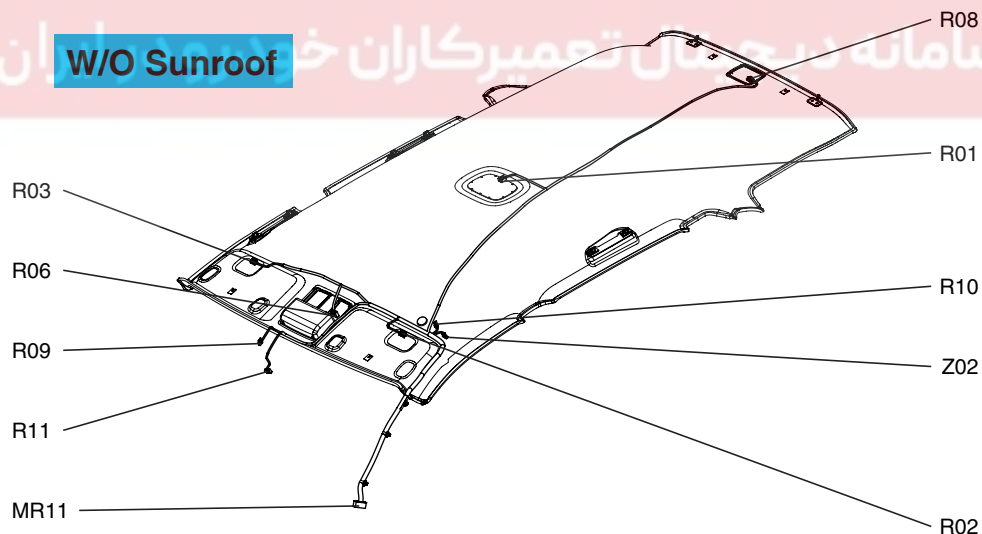
R01	Room Lamp (W/O Sunroof)
R02	Driver Vanity Lamp
R03	Passenger Vanity Lamp
R04	Overhead Console (Sunroof Switch)
R05	Sunroof Motor
R06	Overhead Console (Map Lamp)
R07	Personal Room Lamp (With Sunroof)
R08	Cargo Lamp
R09	Rain Sensor
R10	MIC
R11	Electro Chromic Mirror
MR11	Connection With MAIN Harness
Z02	Cargo Lamp Diode

W/O Sunroof


BUMPER HARNESS E9BA7BE2

Bumper Harness (1)

 HL-20

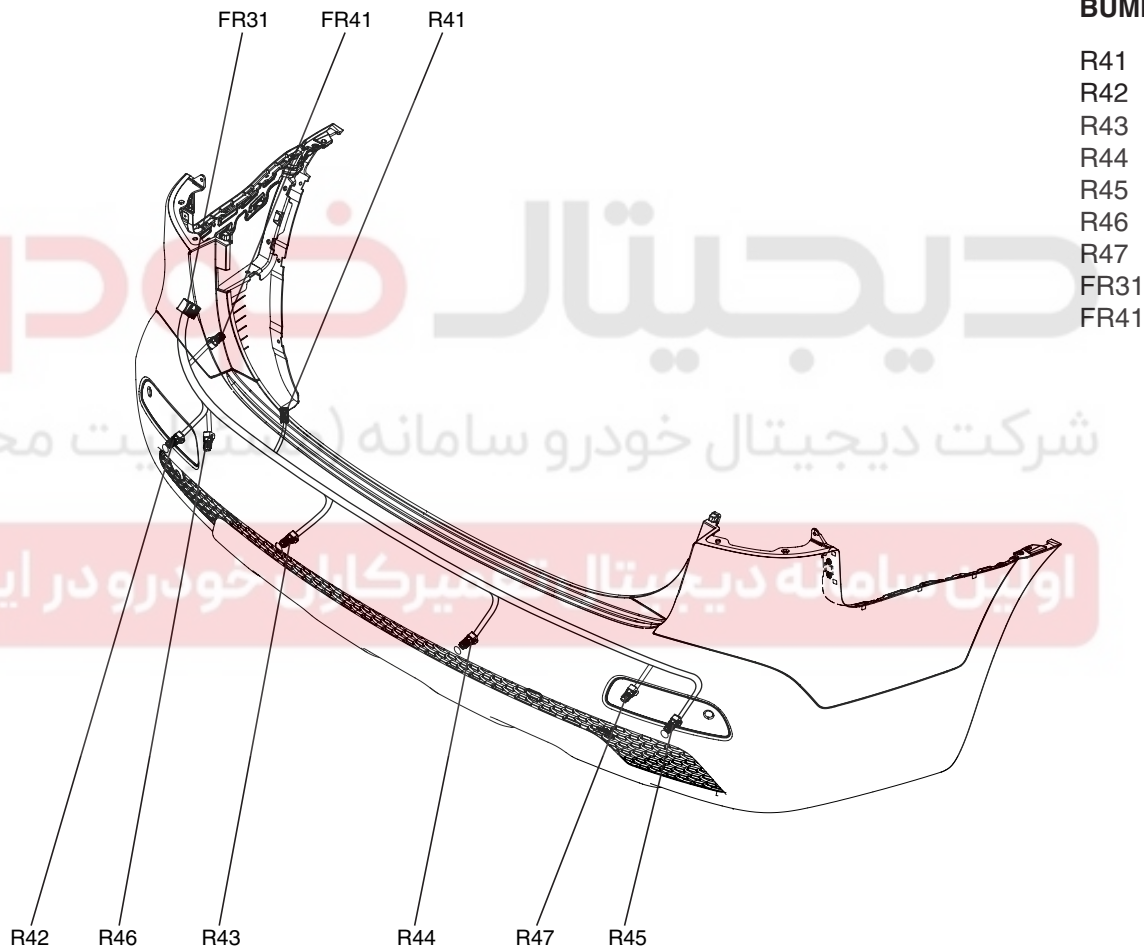


BUMPER HARNESS

R41	Smart Key Bumper Antenna
R42	Rear Parking Assist Sensor Side LH
R43	Rear Parking Assist Sensor LH
R44	Rear Parking Assist Sensor Side RH
R45	Rear Parking Assist Sensor RH
R46	Rear Fog Lamp LH
R47	Rear Fog Lamp RH
FR31	Connection With FLOOR Harness
FR41	Connection With FLOOR Harness

SEAT HARNESS E4F299F9

Seat Harness (1)

 HL-21

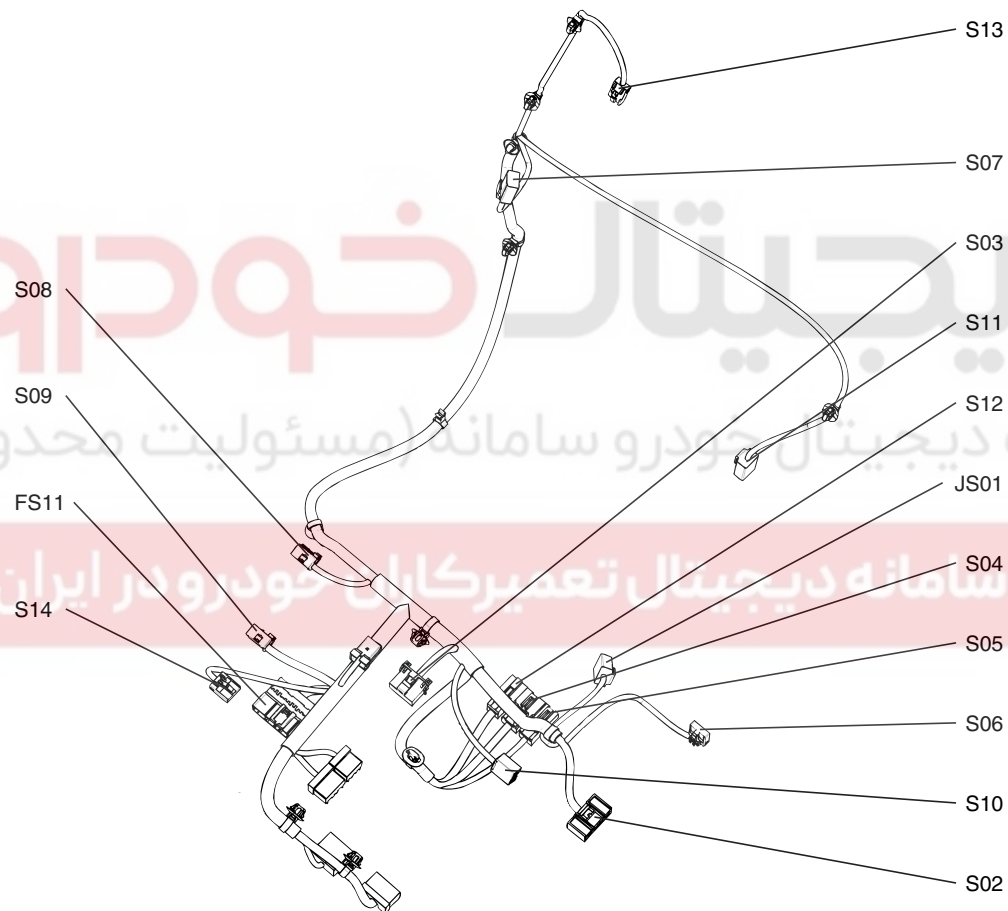

SEAT HARNESS

S02	Driver Power Seat Switch
S03	Driver CCS Control Module
S04	Driver CCS Cushion Warmer
S05	Driver CCS Back Warmer
S06	Driver Lumbar Support Switch
S07	Driver Lumbar Support Motor
S08	Driver Slide Motor
S09	Front Height Motor
S10	Rear Height Motor
S11	Driver Reclining Motor
S12	Driver Cushion Warmer
S13	Driver Back Blower Fan
S14	Driver Cushion Blower Fan
JS01	Joint Connector
FS11	Connection With FLOOR Harness