 


HARNESS CONNECTOR E7C9FFA7

 
HARNESS CONNECTOR (1)

CC-1

AA01/AA02

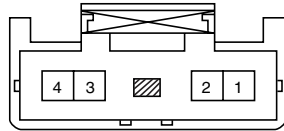


AMP_025_04F_Y_ABAG

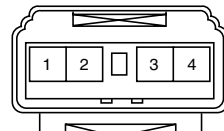


AMP_025_04M_Y_ABAG

 AA03

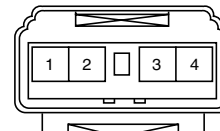


AMP_025_04M_Y_ABAG

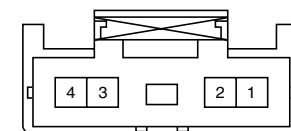 


AMP_025_04F_Y_ABAG

 CC101

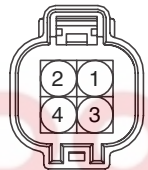


KUM_KNMWP_04F_GR

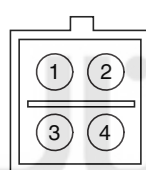 


CR04M045

 CC102

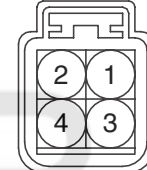


KUM_NMWP_04F_B

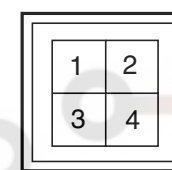 


CR04M046

 CC103

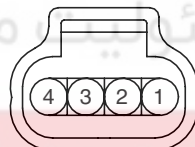

PKD_GT150_04F_Gr

 


CR04M047


BLANK

CI11

 (): M/T

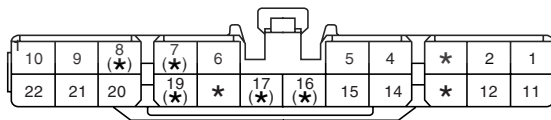


KET_ASC_22F_L

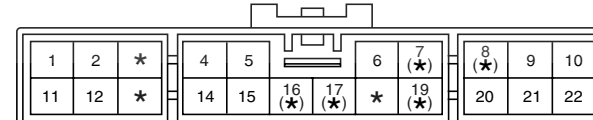 


KET_ASC_22M_L

 EC01

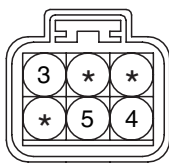


KUM_NMWP_06F_B

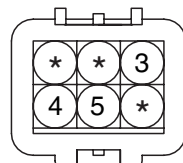 


KUM_NMWP_06M_B

 EC02

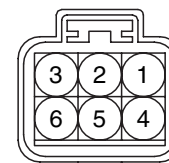

KUM_NMWP_06F_B

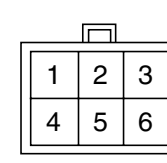 


KUM_NMWP_06M_B

HARNESS CONNECTOR


HARNESS CONNECTOR (2)

CC-2

 EC11(WGT, LHD)

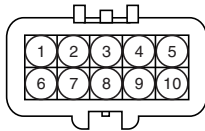


KUM_NMWP_10M_B

 


KUM_NMWP_10F_B

 EC11(WGT, RHD)




KUM_NMWP_12F_B

 


KUM_NMWP_12M_B

 EC11(VGT)

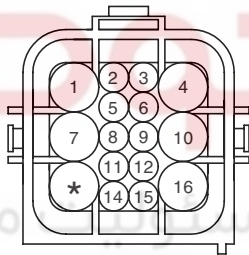


AMP_MTIJPT_16M_B

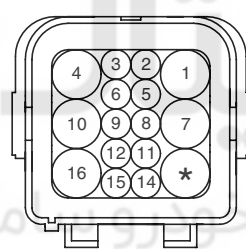 


AMP_MJT_WP_16F(B)

 EC11(GSL)

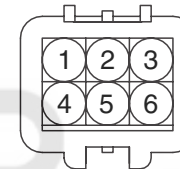

KUM_NMWP_06M_B

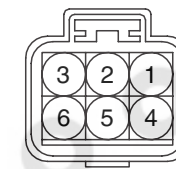 

KUM_NMWP_06F_B

EC21



KET_58L_01M_B




KET_58L_01F_B

EE11




 KET_SWP_01M_B




KET_SWP_01F_B

 EM11

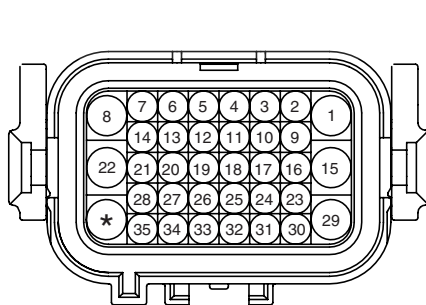


AMP_MTIJPT_36F_B

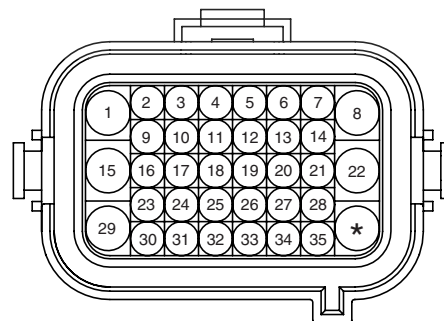 


AMP_MTIJPT_36M_B

 EM21

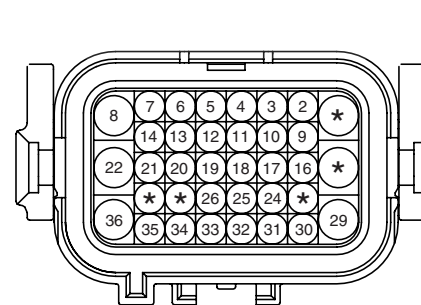

AMP_MTIJPT_36F_Gr

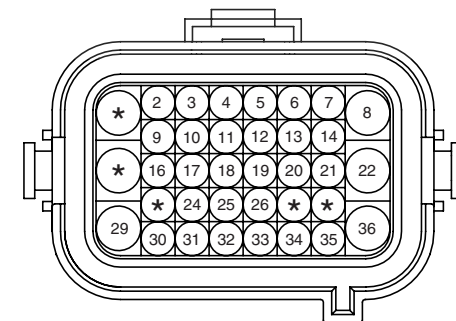 


AMP_MTIJPT_36M_Gr

HARNESS CONNECTOR


HARNESS CONNECTOR (3)

CC-3

 FD11

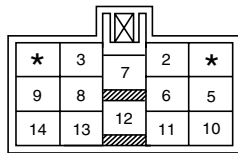


KET_1809_14F_W

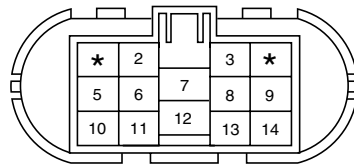 


KET_1809_14M_W

 FD12

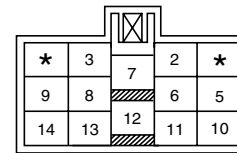


KET_1809_14F_W

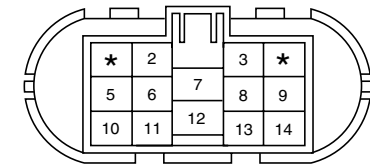 


KET_1809_14M_W

 FR01

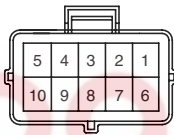


AMP_EJMKII_10F_B

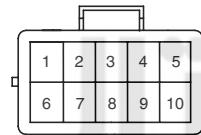 


AMP_EJMKII_10M_B

 FR11

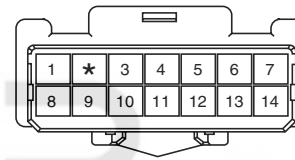

AMP_090III_14M_W

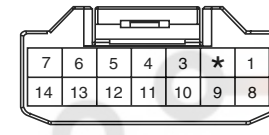 


AMP_090III_14F_W

FR21



 KUM_DSD_04M_W_CLIP




KUM_DSD_04F_W


BLANK

IF11

 (): M/T

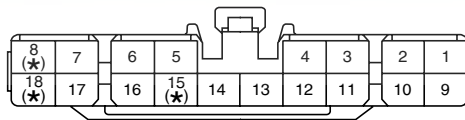


KET_ASC_18F_W

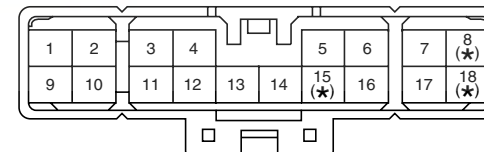 


KET_ASC_18M_W

 IF12(LHD)



KET_ASC_22F_B

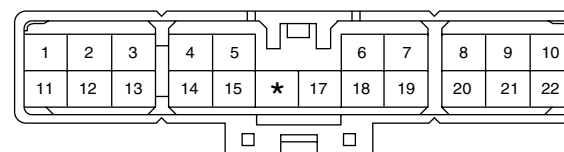 


KET_ASC_22M_B

HARNESS CONNECTOR


HARNESS CONNECTOR (4)

CC-4

 IF12(RHD)

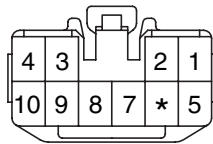


KET_ASC_10F_B

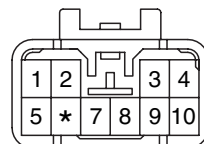 


KET_ASC_10M_B

 II01




AMP_070_14F_W

 


AMP_070_14M_W

 II02

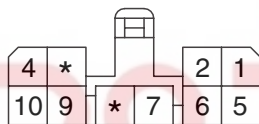


AMP_070_10F_W

 


AMP_070_10M_W

 II03




AMP_0725_11F_W

 


AMP_0725_11M_W

 II06

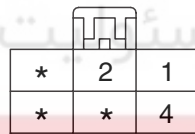


KUM_DSD_06F_W

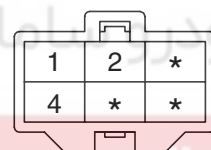 


KUM_DSD_06M_W

BLANK

 MA01

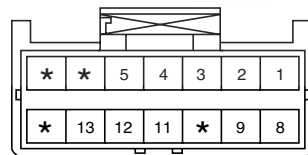


AMP_025_14F_Y_ABAG

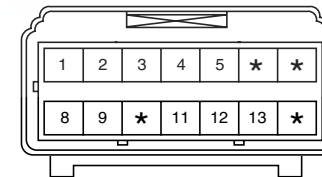 


AMP_025_14M_Y_ABAG

MC11

 (): M/T

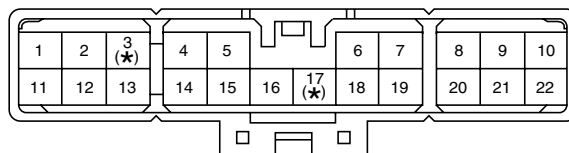

KET_ASC_22M_W

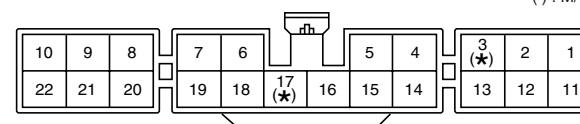 


KET_ASC_22F_W

HARNESS CONNECTOR

HARNESS CONNECTOR (5)


CC-5

 MC21

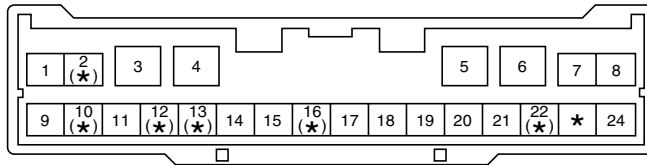


MLX_0409_24M_B

 (): M/T

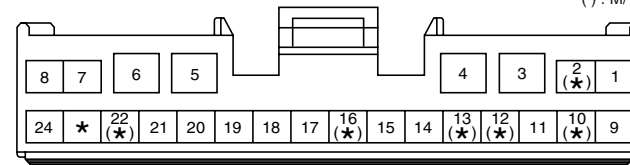


MLX_0409_24F_B

 MC31

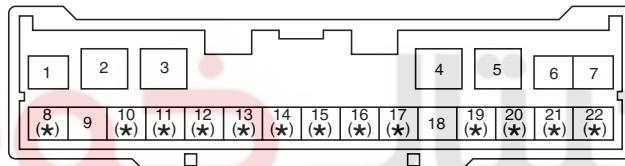


MLX_0409_22M_W

 (): M/T

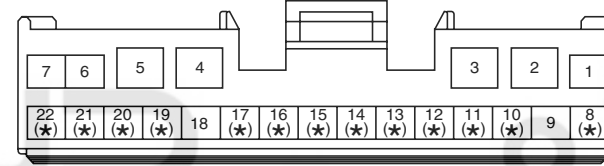


MLX_0409_22F_W

 MC41(A/T)




KET_ASC_14F_W

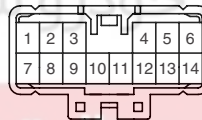 


KET_ASC_14M_W

BLANK

 MD11

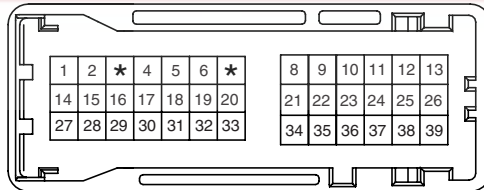


KET_LIF0409_39M_Gr

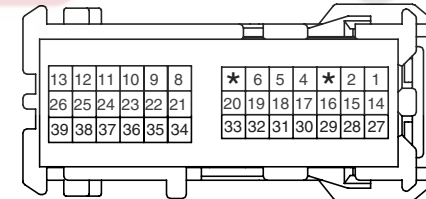 


KET_LIF0409_39F_Gr

 MD12

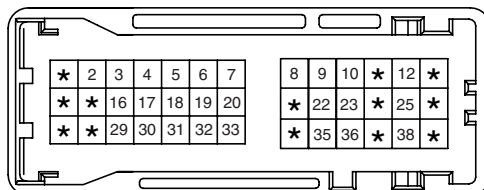

KET_LIF0409_39M_Gr

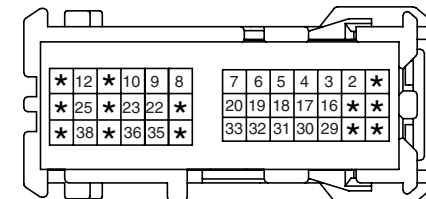 


KET_LIF0409_39F_Gr

HARNESS CONNECTOR


HARNESS CONNECTOR (6)

CC-6

 MF11

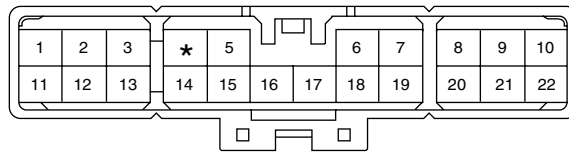


KET_ASC_22M_W

 


KET_ASC_22F_W

 MF12

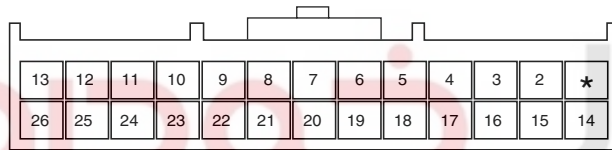


AMP_090III_26F_W

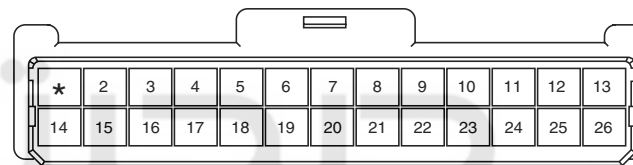 


AMP_090III_26M_W

 MF21

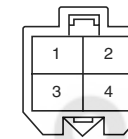


KUM_DSD_04M_W

 


KUM_DSD_04F_W

MI11(RHD)

 (): M/T

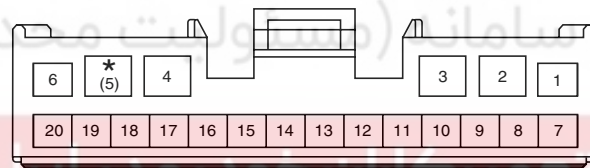


MLX_0409_20F_W

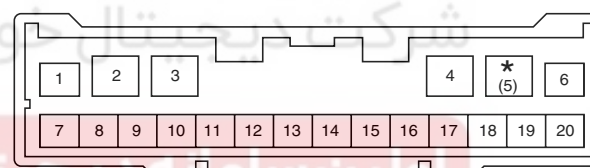 


MLX_0409_20M_W

 MF22

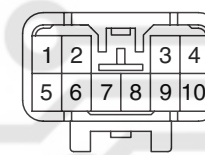


KET_ASC_10M_W

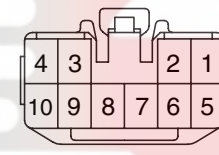 


KET_ASC_10F_W

 MI11(LHD)

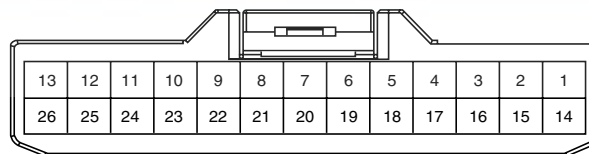


AMP_090III_26F_B

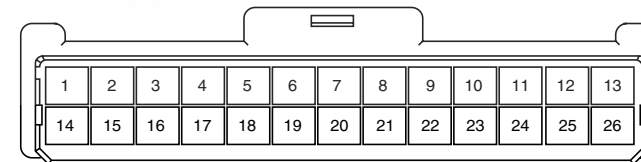 


AMP_090III_26M_B

 MI21

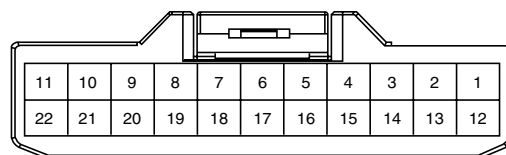

AMP_090III_22F_L

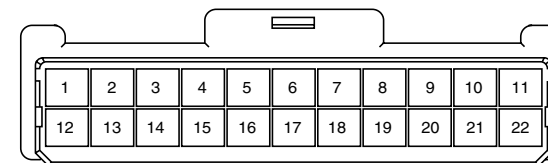 


AMP_090III_22M_L

HARNESS CONNECTOR


HARNESS CONNECTOR (7)

 CC-7

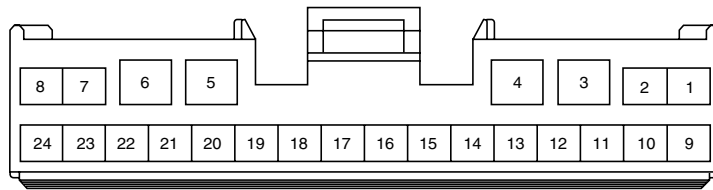


MLX_0409_24F_B

 MI31

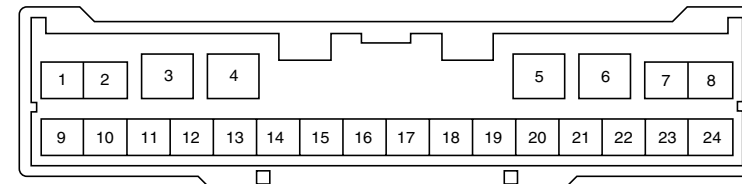


MLX_0409_24M_B

 MI41

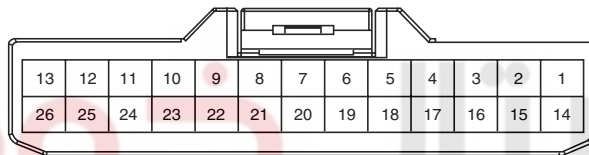


AMP_090III_26F_W

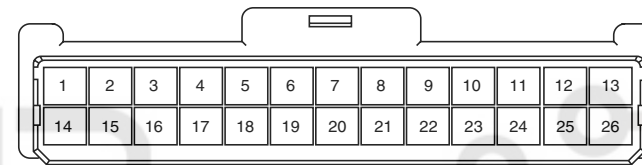 


AMP_090III_26M_W

 MI51

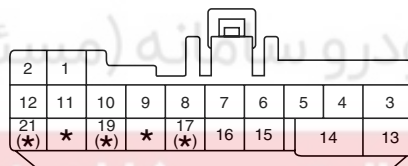


KET_1809_21F_W_A

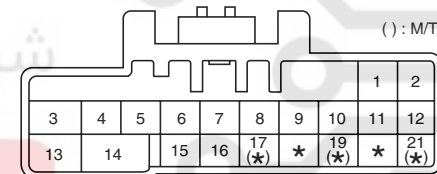 


KET_1809_21M_W_A

(): M/T

 MR11

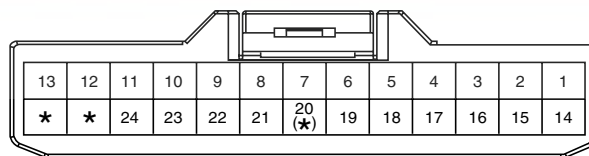


AMP_090III_26F_W

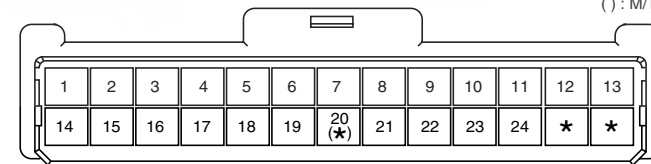 


AMP_090III_26M_W

(): M/T

 RR11

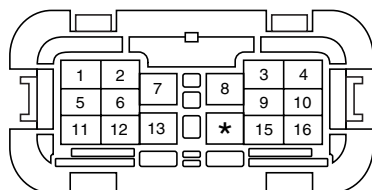

KET_1809_16M_W

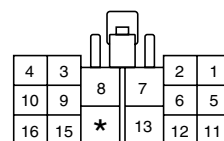 

KET_1809_16F_W

 
BLANK

JUNCTION BOX E9E046C3

JUNCTION BOX (1)


CC-8

E/R-A

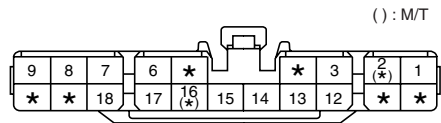


KET_090II_20F_W

 E/R-B

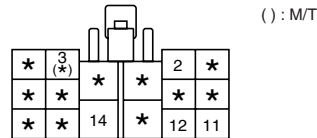


KET_1809_16F_W

 E/R-C



KET_09312_06F_W

 E/R-D

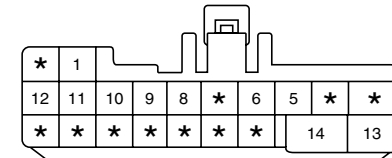


KET_1809_21F_W_A

E/R-E




KET_187II_08F_W

 E/R-F




KET_312II_04F_W

 E/R-G




KET_090II_18F_W

 E/R-H




KET_1809_14F_W

 E/R-I




KET_3118_08F_W

 
E/R-J



E/R-K

 


I/P-A

 


AMP_0925_14F_W

 I/P-B




KUM_DSD_04F_W

 I/P-C




AMP_0925_20F_W

 I/P-D



AMP_0925_16F_W

 I/P-E



AMP_0925_14F_W

BLANK

BLANK

 
BLANK

JOINT CONNECTOR ED71BB13

JOINT CONNECTOR (1)

CC-9


C22

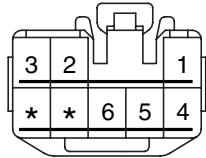

KET_090II_08F_W


C23(WGT)

 (): M/T

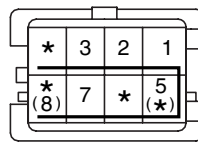


KET_070_08F_B_JCH

 C23(VGT)

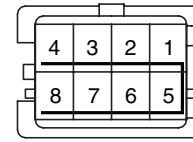


KET_070_08F_B_JCH

 E09




KET_ASCWP_06F_B

 F02

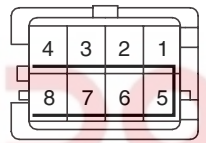


KET_070_08F_B_JCH

 F03

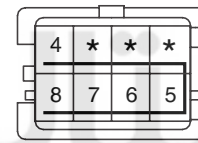

KET_070_08F_B_JCH

 
F32

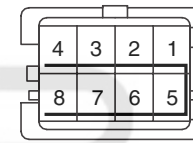

KET_070_08F_B_JCH

F33

 
(): M/T

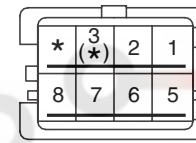

KET_070_08F_B_JCH


I31

 (): M/T



KUM_JCU_22F_B

 
I32



KUM_JCU_22F_W


I33

 (): M/T




KUM_JCU_22F_Gr

 I34



KUM_JCU_22F_B

 
I35



KUM_JCU_22F_W

I36

 (): M/T



KUM_JCU_22F_Gr

EBLCC7003AI

 
JOINT CONNECTOR E8BD4CBF

JOINT CONNECTOR (2)

CC-10


I37

(): M/T




KUM_JCU_22F_L

 I38




KUM_JCU_22F_L

 I50

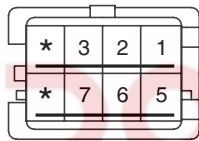

KET_070_08F_B_JCH

 I105

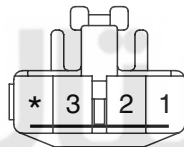


KET_090II_04F_W

BLANK

M21

 
(): M/T



KUM_JCU_22F_B

M22

 
(): M/T



KUM_JCU_22F_W

M23

 
(): M/T



KUM_JCU_22F_Gr

M24

 
(): M/T



KUM_JCU_22F_L

M25

 
(): M/T



KUM_JCU_22F_B

M26

 (): M/T



KUM_JCU_22F_W

EBLCC7003BI

 
JOINT CONNECTOR

JOINT CONNECTOR (3)

CC-11

M27


(): M/T



KUM_JCU_22F_Gr


M28

 (): M/T




KUM_JCU_22F_L

 M31(M/T)

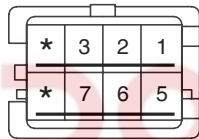


KET_070_08F_B_JCH

 M32

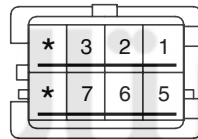


KET_070_08F_B_JCH

 M33(A/T)

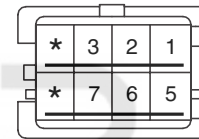


KET_070_08F_B_JCH

 M34(A/T)

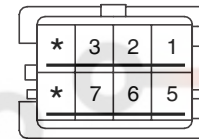

KET_070_08F_B_JCH

 R35

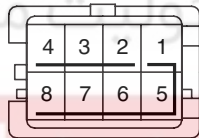

KET_070_08F_B_JCH

BLANK

BLANK

 
 
BLANK

MAIN HARNESS E554B729


MAIN HARNESS (1)

HL-1

LH

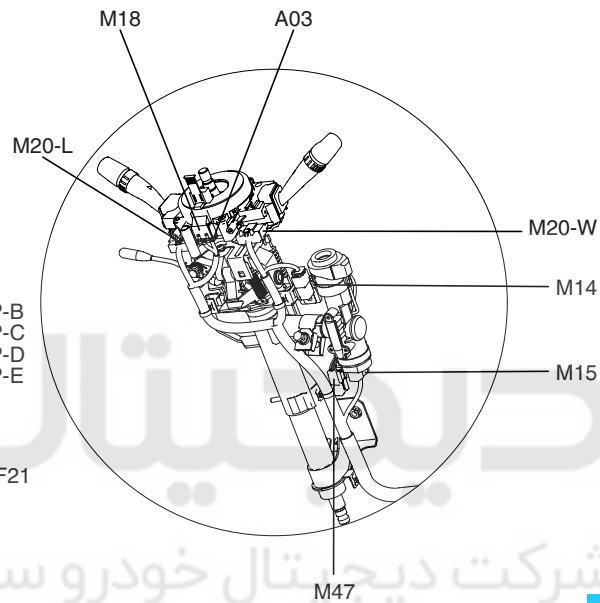
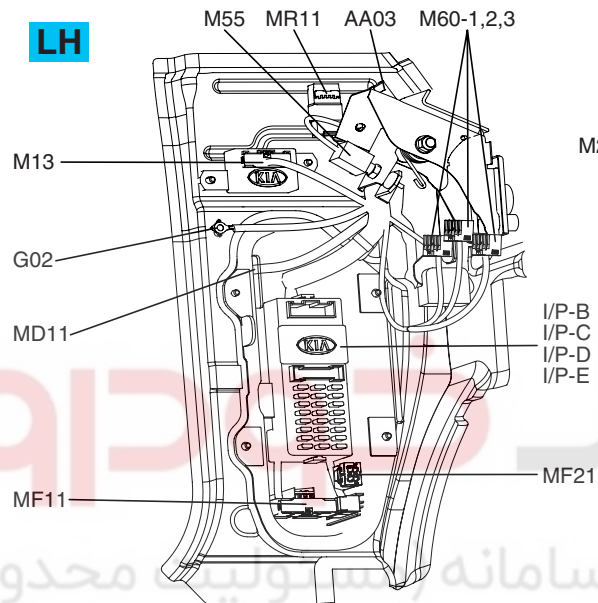


RH

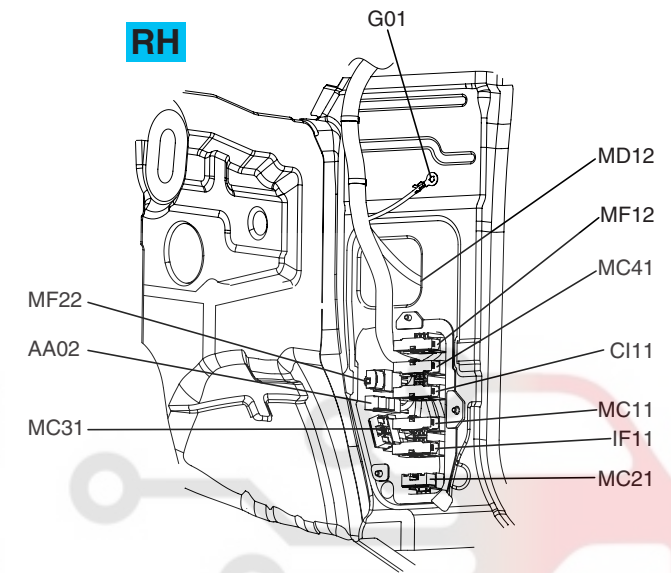 

ENGINE ROOM LH

  CENTER CONSOLE BOX REMOVED

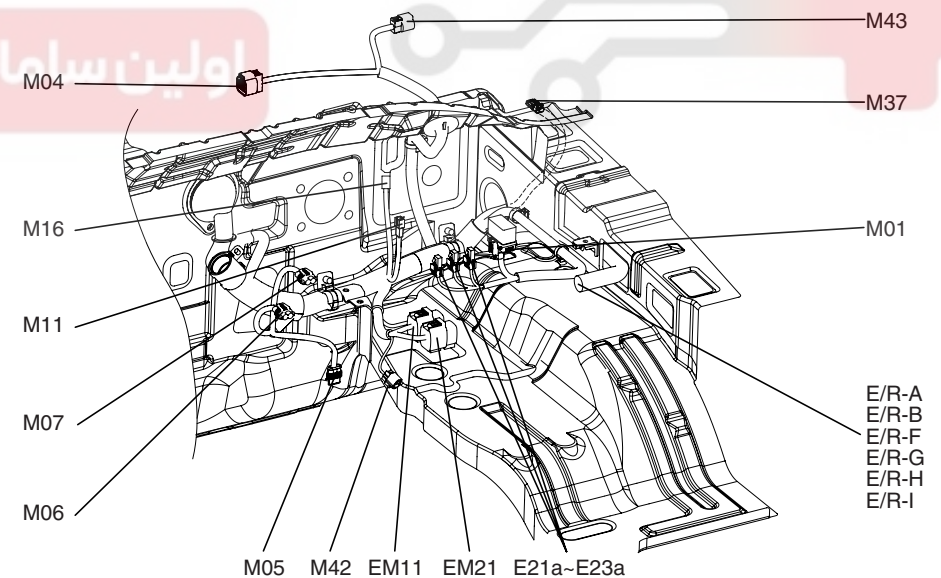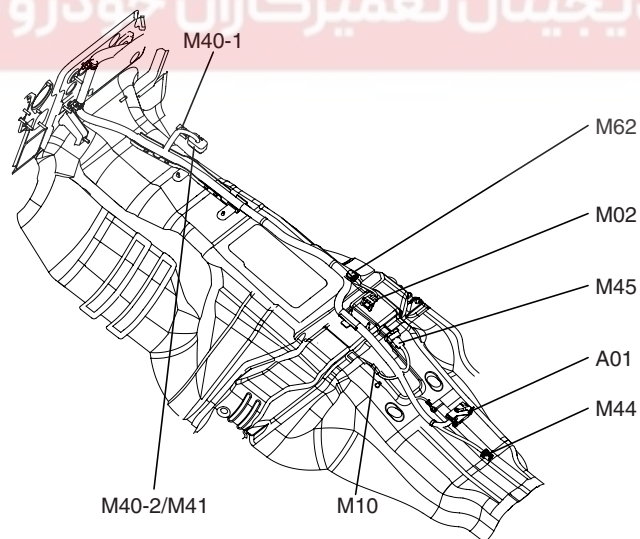

MAIN HARNESS

MAIN HARNESS (2)

HL-2

MAIN HARNESS

M01 Multipurpose check connector (LHD)
 M02 ABS accel sensor (EST)
 M03 Flasher unit
 M04 Front wiper motor (LHD)
 M05 Fuel filter warning sensor (DIESEL)
 M06 Fuel filter heater (DIESEL)
 M07 Thermo switch (DIESEL)
 M10 Parking brake switch
 M11 Brake fluid level sensor
 M12 Immobilizer control module
 M13 IC module
 M14 Door warning switch
 M15 Ignition switch
 M16 Brake vacuum switch (DIESEL)
 M17 Accel pedal module (DIESEL)
 M18 Multifunction switch (REMOCON)
 M18-1 Remocon switch
 M20-L Multifunction switch (LHD)
 M20-LR Multifunction switch (RHD)
 M20-W Multifunction switch (LHD)
 M20-WR Multifunction switch (RHD)
 M21 Joint connector
 M22 Joint connector
 M23 Joint connector
 M24 Joint connector
 M25 Joint connector
 M26 Joint connector
 M27 Joint connector
 M28 Joint connector
 M31 Joint connector (M/T)
 M32 Joint connector
 M33 Joint connector (A/T)
 M34 Joint connector (A/T)
 M36 Stop lamp switch
 M37 Side repeater lamp LH
 M40-1 TOD control module
 M40-2 TOD control module
 M41 EST control module
 M42 Front wheel sensor LH
 M43 Windshield defogger (LHD)
 M45 YAW rate sensor (ESP)
 M46 PTC heater (DIESEL)
 M47 Steering angle sensor (ESP)

M50-1 EXT amp
 M50-2 EXT amp
 M55 Clutch inter lock switch (M/T)
 M57 Accel pedal module (GASOLINE)
 M60-1 TCM
 M60-2 TCM
 M60-3 TCM
 M62 Sport mode switch
 M65 Power relay (DIESEL)
 E/R-A Connection with E/R JUNCTION BOX
 E/R-B Connection with E/R JUNCTION BOX
 E/R-F Connection with E/R JUNCTION BOX
 E/R-G Connection with E/R JUNCTION BOX
 E/R-H Connection with E/R JUNCTION BOX
 E/R-I Connection with E/R JUNCTION BOX
 I/P-B Connection with I/P JUNCTION BOX
 I/P-C Connection with I/P JUNCTION BOX
 I/P-D Connection with I/P JUNCTION BOX
 I/P-E Connection with I/P JUNCTION BOX
 EM11 Connection with ENGINE harness
 EM21 Connection with ENGINE harness
 MA01 Connection with A/BAG harness
 MC11 Connection with CONTROL harness
 MC21 Connection with CONTROL harness
 MC31 Connection with CONTROL harness
 MC41 Connection with CONTROL harness (A/T)
 MD11 Connection with DRIVER DOOR harness
 MD12 Connection with PASSENGER DOOR harness
 MF11 Connection with FLOOR LH harness
 MF12 Connection with FLOOR RH harness
 MF21 Connection with FLOOR LH harness
 MF22 Connection with FLOOR RH harness
 MI11 Connection with INSTRUMENT harness
 MI21 Connection with INSTRUMENT harness
 MI31 Connection with INSTRUMENT harness
 MI41 Connection with INSTRUMENT harness
 MI51 Connection with INSTRUMENT harness
 MR11 Connection with ROOF harness
 G01 Ground
 G02 Ground
 Z03 Diode
 E21a PTC heater #1
 E22a PTC heater #2
 E23a PTC heater #3

 
A/BAG MAIN HARNESS

A01 SRS control module
 A03 Driver air bag
 A04 Passenger air bag
 AA01 Connection with A/BAG FLOOR harness
 AA02 Connection with A/BAG FLOOR harness
 AA03 Connection with A/BAG ROOF harness
 MA01 Connection with MAIN harness
 G03 Ground

ENGINE HARNESS E9AE98C8

ENGINE HARNESS (1)

HL-3

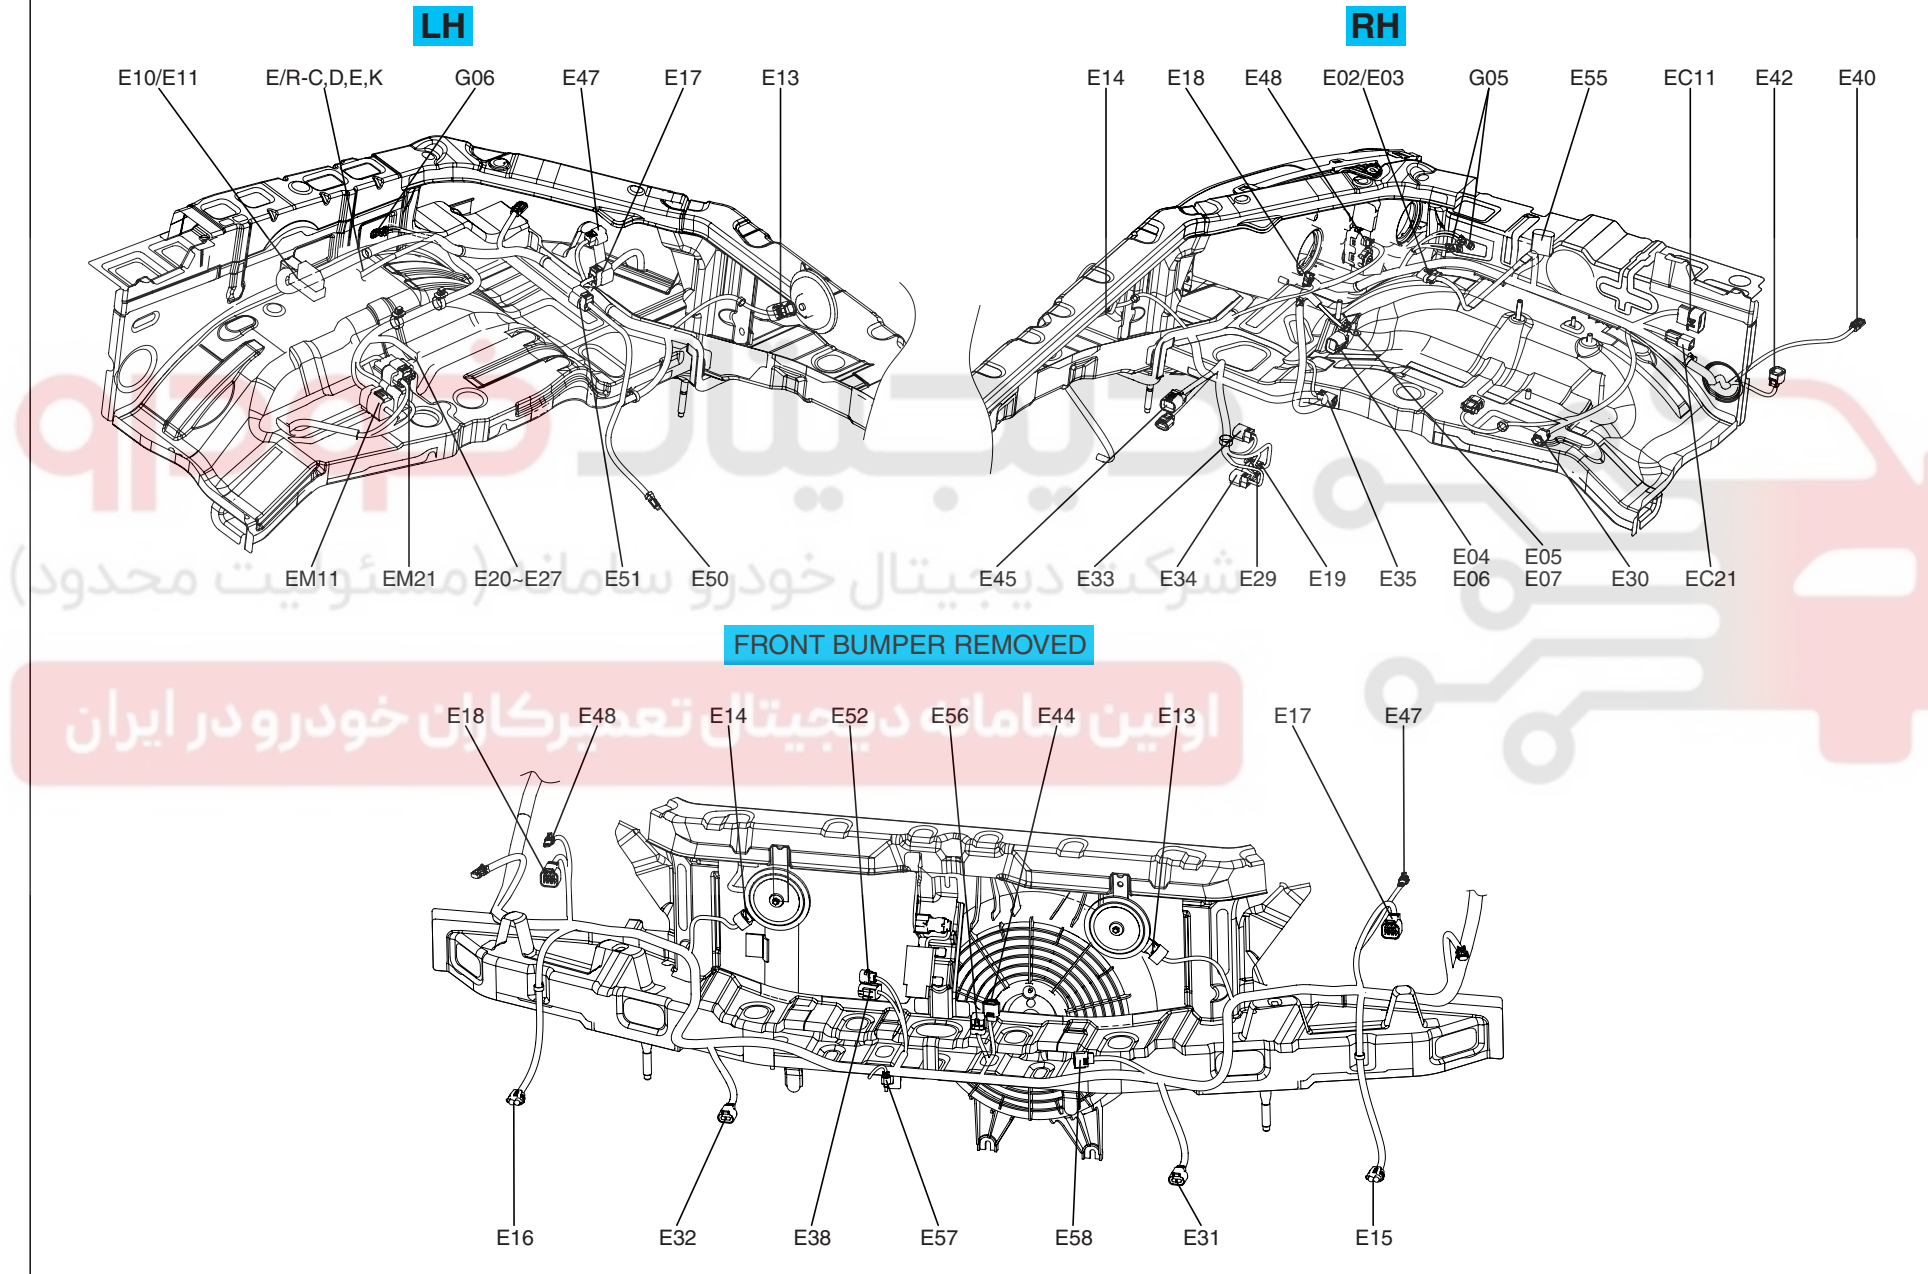

ENGINE HARNESS

ENGINE HARNESS (2)

HL-4

ENGINE HARNESS

E02 Air flow sensor (WGT)
 E03 Air flow sensor (VGT)
 E04 Generator (VGT)
 E05 Generator (VGT)
 E06 Generator (WGT)
 E07 Generator (WGT)
 E09 Joint connector
 E10 ABS control module
 E11 ESP control module
 E13 Horn LH
 E14 Horn RH
 E15 Front fog lamp LH
 E16 Front fog lamp RH
 E17 Head lamp LH
 E18 Head lamp RH
 E19 Head lamp washer motor
 E20 Glow plug relay (DIESEL)
 E21 PTC heater relay #1 (DIESEL)
 E22 PTC heater relay #2 (DIESEL)
 E23 PTC heater relay #3 (DIESEL)
 E24 Fuel filter heater relay (DIESEL)
 E26 Cooling fan relay (LOW) (GASOLINE)
 E27 Cooling fan relay (HIGH) (GASOLINE)
 E29 Washer motor
 E30 Front wheel sensor RH
 E31 Front impact sensor LH
 E32 Front impact sensor RH
 E33 Head lamp washer relay
 E34 Washer fluid level sensor
 E35 Oil pressure switch (DIESEL)
 E36 Fuel fired heater burner unit (DIESEL)
 E38 A/C pressure transducer (GASOLINE)
 E40 Side repeater lamp RH
 E42 Power antenna
 E44 Condenser fan motor (DIESEL)
 E45 Cooling fan motor (GASOLINE)
 E47 Head lamp leveling actuator LH
 E48 Head lamp leveling actuator RH
 E50 A/C compressor (DIESEL)

E51 Free running differential air pump
 E52 Dual pressure switch (DIESEL)
 E53 CAN resister
 E55 Fuel cut sensor (GASOLINE)
 E57 Ambient temperature sensor
 E58 Ambient temperature sensor (AUTO A/C)
 E66 VGT control solenoid valve (VGT)
 E67 Throttle flap actuator (WGT)
 E81 Multipurpose check connector (RHD)
 E82 Front wiper motor (RHD)
 E83 Windshield defogger (RHD)
 E85 VGT actuator (RHD)
 E86 Brake vacuum switch(RHD)
 E87 Brake fluid level sensor (RHD)
 EC02 Connection with BPS & FAN MOTOR harness (VGT)
 EC11 Connection with CONTROL harness (WGT)
 EC11 Connection with CONTROL harness (VGT)
 EC21 Connection with CONTROL harness (GASOLINE)
 EE11 Connection with BATTERY harness (GASOLINE)
 EM11 Connection with MAIN harness
 EM21 Connection with MAIN harness
 E/R-C Connection with E/R JUNCTION BOX
 E/R-D Connection with E/R JUNCTION BOX
 E/R-E Connection with E/R JUNCTION BOX
 E/R-K Connection with E/R JUNCTION BOX (VGT)
 E/R-K Connection with E/R JUNCTION BOX (WGT)
 G04 Ground
 G05 Ground
 G06 Ground

 
BATTERY HARNESS

E71 A/C compressor (GASOLINE)
 E72 Start motor(GASOLINE)
 E74 Generator (GASOLINE)
 E75 Generator (GASOLINE)
 E/R-J Connection with E/R JUNCTION BOX
 E/R-K Connection with E/R JUNCTION BOX (GASOLINE)
 EC01 Connection with CONTROL harness (GASOLINE)
 EE11 Connection with ENGINE harness (GASOLINE)

INSTRUMENT HARNESS E1DEF597

INSTRUMENT HARNESS (1)

HL-5

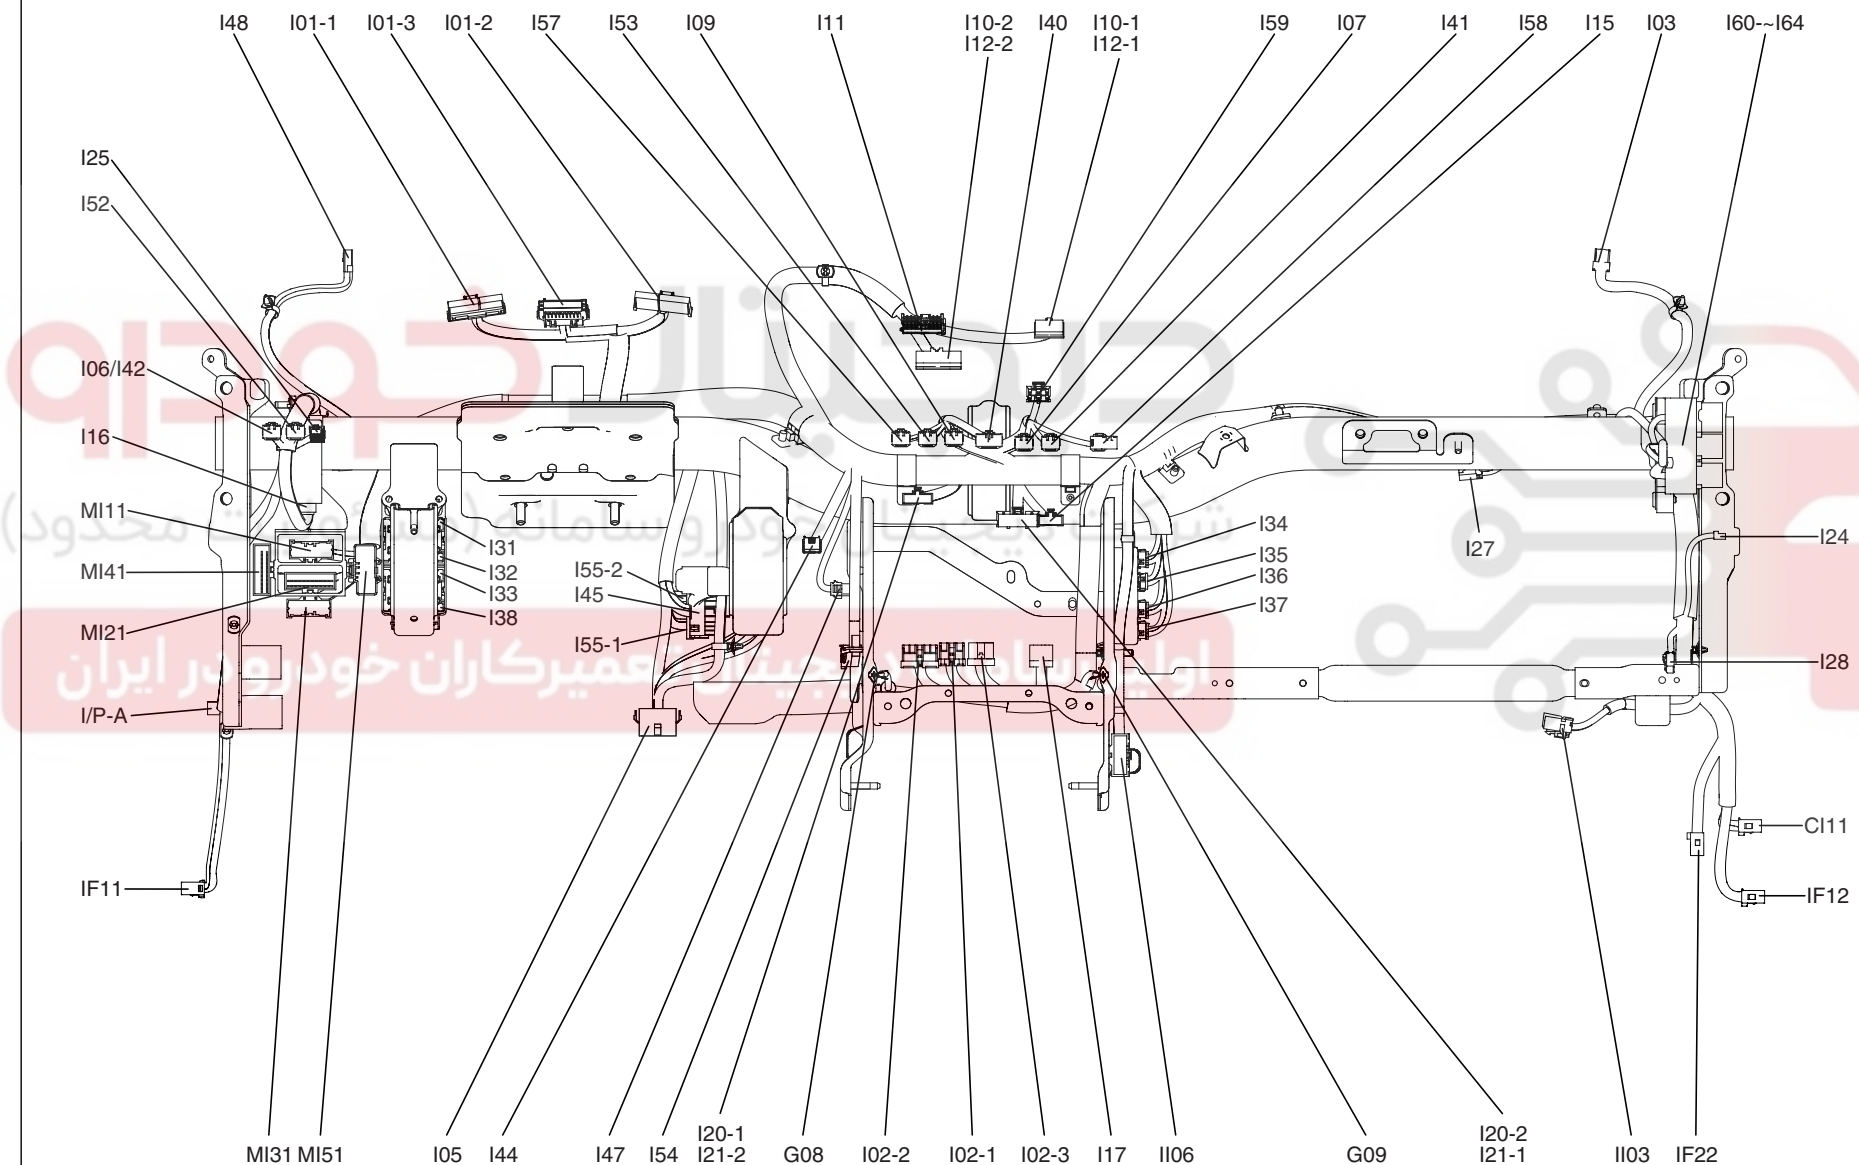

INSTRUMENT HARNESS

INSTRUMENT HARNESS (2)

HL-6

INSTRUMENT HARNESS

I01-1 Instrument cluster
 I01-2 Instrument cluster
 I01-3 Instrument cluster
 I02-1 BCM
 I02-2 BCM
 I02-3 BCM
 I03 Auto light control module
 I05 Data link connector
 I06 Rheostat
 I07 Rear defogger switch
 I09 Rear fog lamp switch
 I11 Audio
 I15 Digital clock
 I16 DRL control module
 I17 Front cigarette lighter & ILL.
 I20-1 A/C control module (AUTO A/C)
 I20-2 A/C control module (AUTO A/C)
 I21-1 A/C control module (MANUAL A/C)
 I21-2 A/C control module (MANUAL A/C)
 I24 PAD switch
 I25 EST & TOD & SNOW switch
 I27 Glove box ILL.
 I28 Glove box switch
 I31 Joint connector
 I32 Joint connector
 I33 Joint connector
 I34 Joint connector
 I35 Joint connector
 I36 Joint connector
 I37 Joint connector
 I38 Joint connector
 I40 Hazard switch
 I41 Head lamp washer switch
 I42 Head lamp leveling switch
 I44 Active incar & Humidity sensor
 I47 Back warning buzzer
 I48 Photo sensor
 I50 Joint connector
 I52 ESP switch
 I53 Windshield defogger switch (LHD)
 I54 Inter cooler fan relay (VGT)
 I57 Driver seat warmer switch
 I58 Passenger seat warmer switch

I60 Hazard relay
 I61 Super door lock relay
 I63 Outside mirror defogger relay
 I64 Back-up lamp relay
 I68 Flasher unit (RHD)
 I69 Power relay (RHD)
 CI11 Connection with CONTROL harness
 IF11 Connection with FLOOR LH harness
 IF12 Connection with FLOOR RH harness
 II01 Connection with A/C harness (AUTO A/C)
 II02 Connection with A/C harness (MANUAL A/C)
 II03 Connection with A/C harness
 II06 Connection with CONSOLE harness
 MI11 Connection with MAIN harness
 MI21 Connection with MAIN harness
 MI31 Connection with MAIN harness
 MI41 Connection with MAIN harness
 MI51 Connection with MAIN harness
 I/P-A Connection with I/P JUNCTION BOX
 G08 Ground
 G09 Ground

A/C HARNESS

I80 Blower motor
 I81 FE(Field-Effect) transistor
 I82 Evaporater sensor
 I83 Intake actuator
 I84 Temperature actuator
 I85 Mode actuator
 I86 Mix actuator (PASSENGER, AUTO A/C)
 I87 Water temperature sensor (AUTO A/C)
 II01 Connection with INSTRUMENT harness
 II02 Connection with INSTRUMENT harness
 II03 Connection with INSTRUMENT harness

CONSOLE HARNESS

 
I101 Front power outlet
 I102 Center power outlet
 I105 Joint connector
 II06 Connection with INSTRUMENT harness

CONTROL HARNESS E1EFBDCB


CONTROL HARNESS (1)

HL-7



DSL EURO IV VGT

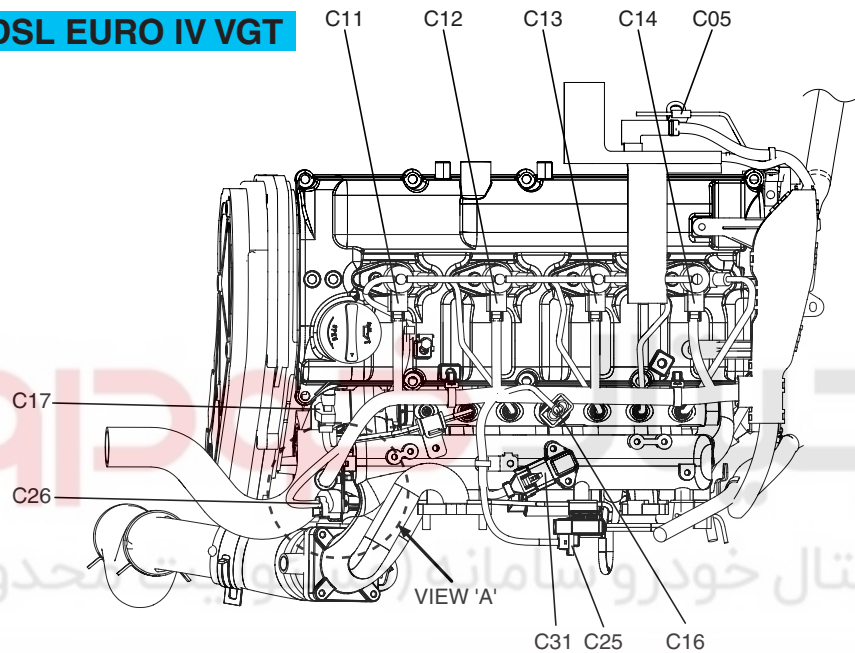

DSL EURO III WGT

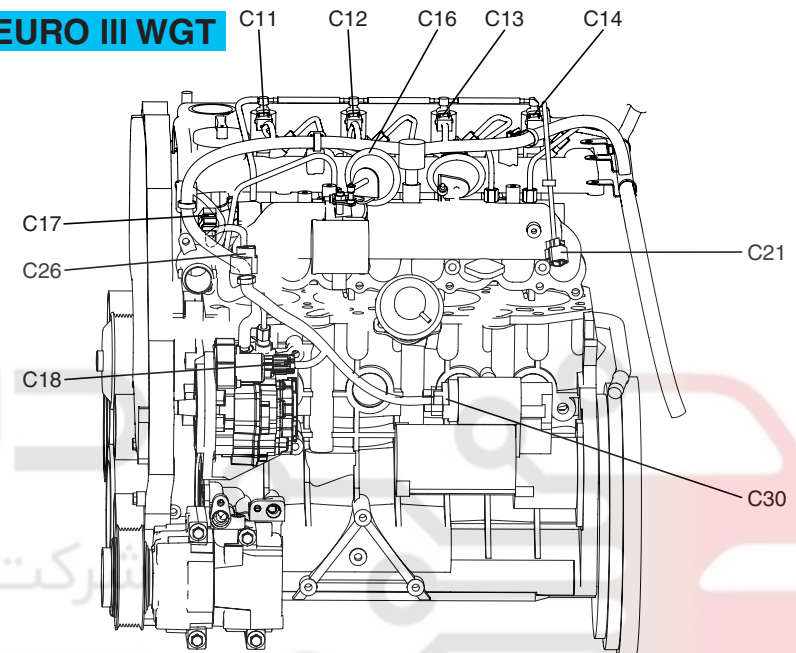 

VIEW 'A'

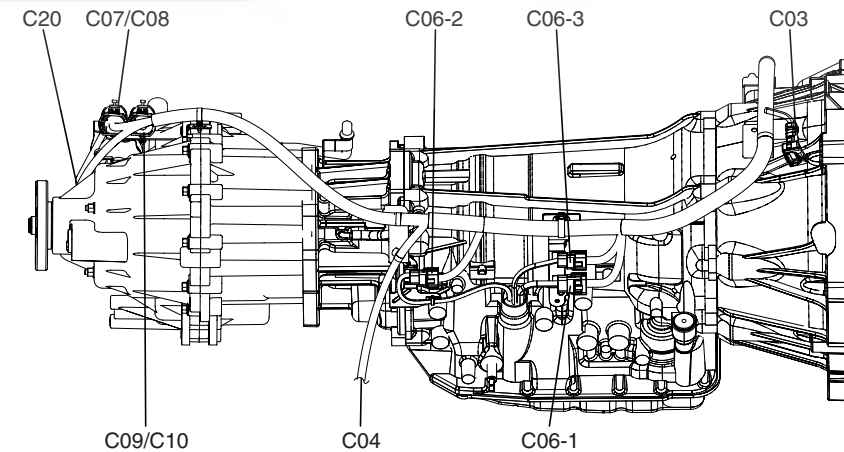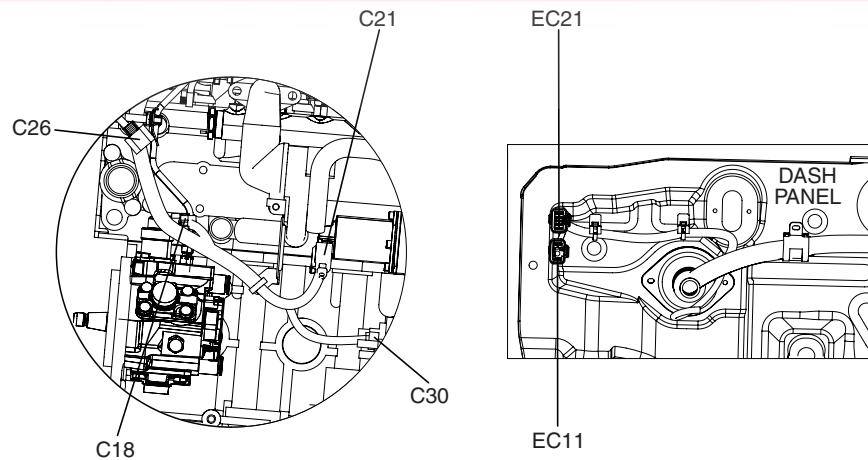  

CONTROL HARNESS

CONTROL HARNESS (2)

HL-8

 
CONTROL HARNESS (DSL WGT & VGT)

C01-K ECM (WGT)
 C01-M ECM (WGT)
 C02-A ECM (VGT)
 C02-K ECM (VGT)
 C03 Crankshaft position sensor
 C04 Dosing pump
 C05 Glow plug
 C06-1 Auto module
 C06-2 Auto module
 C06-3 Auto module
 C07 T/F solenoid motor (EST)
 C08 T/F solenoid motor (TOD)
 C09 T/F speed coil (TOD)
 C10 T/F speed sensor (EST)
 C11 Injector #1
 C12 Injector #2
 C13 Injector #3
 C14 Injector #4
 C16 Rail pressure sensor
 C17 Camshaft position sensor
 C18 Fuel pressure regulating valve
 C20 Vehicle speed sensor
 C21 Electric EGR actuator
 C22 Joint connector (WGT)
 C23 Joint connector
 C25 Throttle flap actuator (VGT)
 C26 Engine coolant temperature sensor & sender
 C30 Start motor
 C32 Lambda sensor (VGT)
 C33 Fuel temperature sensor (VGT)
 C34 Rail pressure regulator (VGT)
 C35 Back-up lamp switch (M/T)
 C36 Neutral switch (M/T)

C111 Connection with MAIN harness
 EC11 Connection with MAIN harness
 EC21 Connection with MAIN harness
 MC11 Connection with MAIN harness
 MC21 Ground
 MC31 Ground
 MC41
 G15
 G16

BPS & FAN MOTOR HARNESS (DSL VGT)

C41 Boost pressure sensor
 C42 Inter cooler fan motor
 EC02 Connection with ENGINE harness

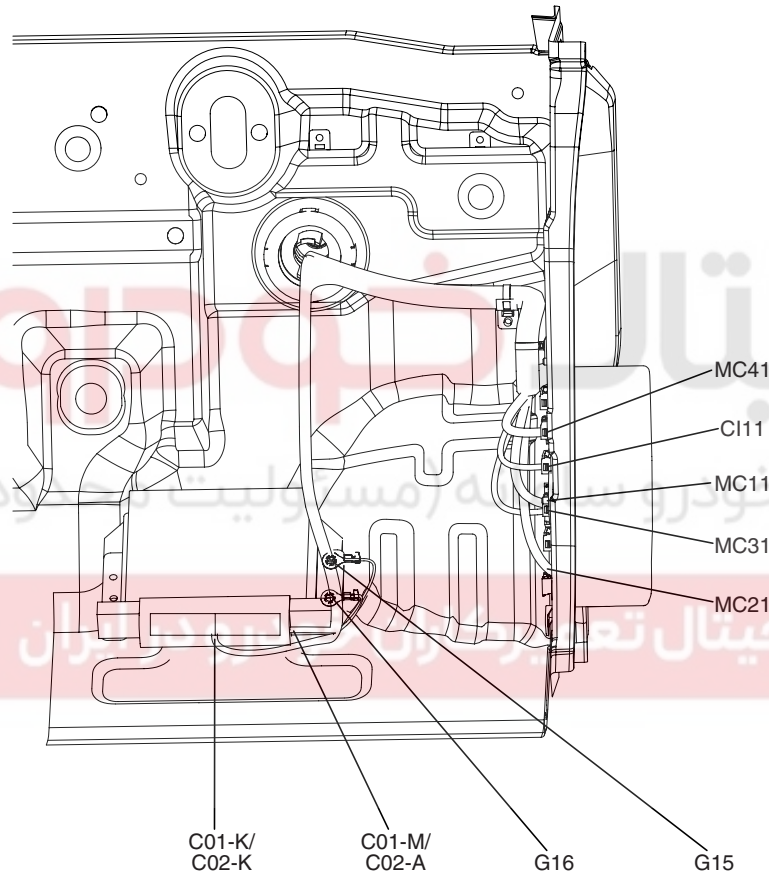


CONTROL HARNESS

CONTROL HARNESS (3)

HL-9

 GASOLINE 3.3L/3.8L

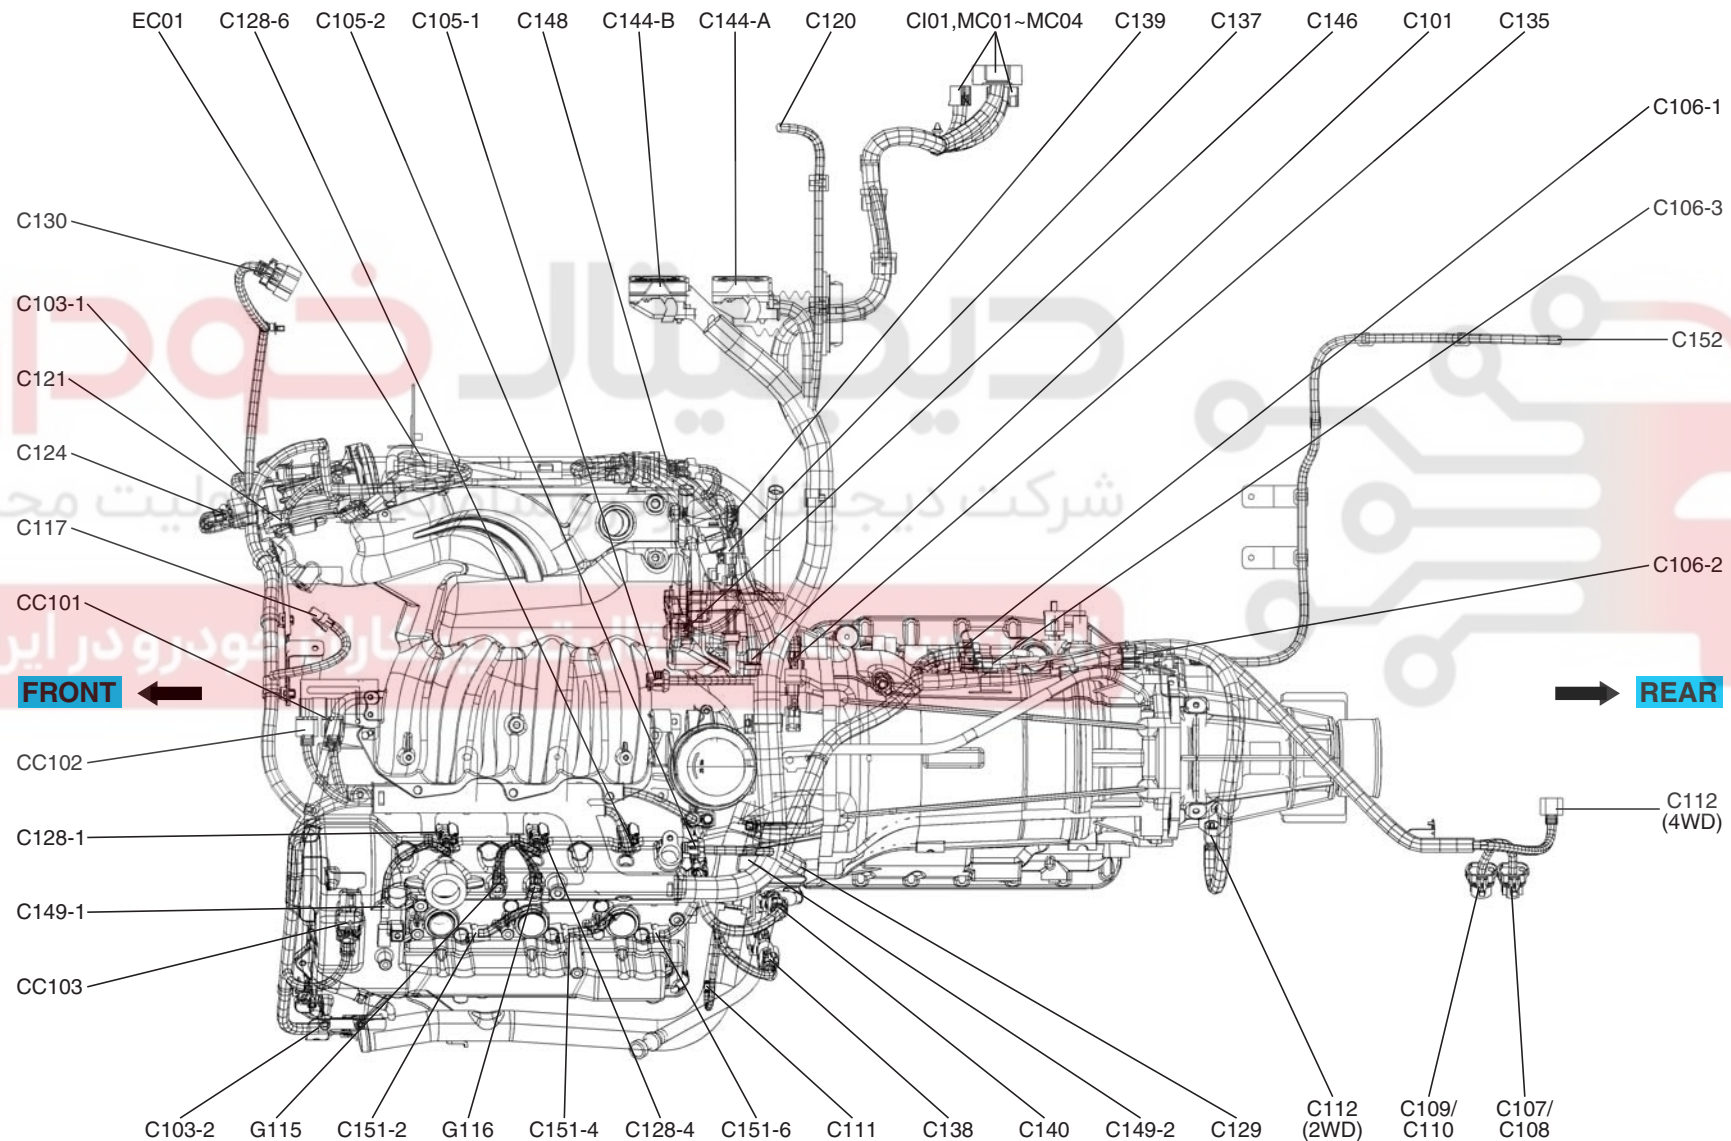

CONTROL HARNESS

CONTROL HARNESS (4)

HL-10

CONTROL HARNESS (GASOLINE 3.3L/3.8L)

C101 Engine coolant temperature sensor & sender
 C103-1 Knock sensor #1
 C103-2 Knock sensor #2
 C105-1 Camshaft position sensor #1
 C105-2 Camshaft position sensor #2
 C106-1 Auto module
 C106-2 Auto module
 C106-3 Auto module
 C107 T/F solenoid motor (EST)
 C108 T/F solenoid motor (TOD)
 C109 T/F speed coil (TOD)
 C110 T/F speed sensor (EST)
 C111 Oil pressure switch
 C112 Vehicle speed sensor
 C117 Manifold absolute pressure sensor
 C120 TCM
 C121 Power steering switch
 C124 ETC motor & Throttle position sensor
 C128-2 Injector #2
 C128-4 Injector #4
 C128-6 Injector #6
 C129 Crankshaft position sensor
 C130 Mass air flow sensor
 C135 Oil temperature sensor
 C137 Oxygen sensor #1(B1/S1)
 C138 Oxygen sensor #2(B2/S1)
 C139 Oxygen sensor #3(B1/S2)
 C140 Oxygen sensor #4(B2/S2)
 C144-A PCM
 C144-B PCM
 C146 Variable intake manifold valve
 C148 Purge control solenoid valve
 C149-1 Condenser #1
 C149-2 Condenser #2
 C151-2 Ignition coil #2
 C151-4 Ignition coil #4
 C151-6 Ignition coil #6

CC101 Connection with IGNITION COIL harness
 CC102 Connection with INJECTOR harness
 CC103 Connection with OIL CONTROL VALVE harness
 C111 Connection with INSTRUMENT harness
 EC01 Connection with BATTERY harness
 EC11 Connection with ENGINE harness
 MC11 Connection with MAIN harness
 MC21 Connection with MAIN harness
 MC31 Connection with MAIN harness
 G115 Ground
 G116 Ground
 G117 Ground

IGNITION COIL HARNESS

C151-1 Ignition coil #1
 C151-3 Ignition coil #3
 C151-5 Ignition coil #5
 CC101 Connection with CONTROL harness

INJECTOR HARNESS

C128-1 Injector #1
 C128-3 Injector #3
 C128-5 Injector #5
 CC102 Connection with CONTROL harness

 
OIL CONTROL VALVE HARNESS

C156-1 Oil control valve #1
 C156-2 Oil control valve #2
 CC103 Connection with CONTROL harness

FLOOR HARNESS E11FF5FC

FLOOR HARNESS (1)

HL-11

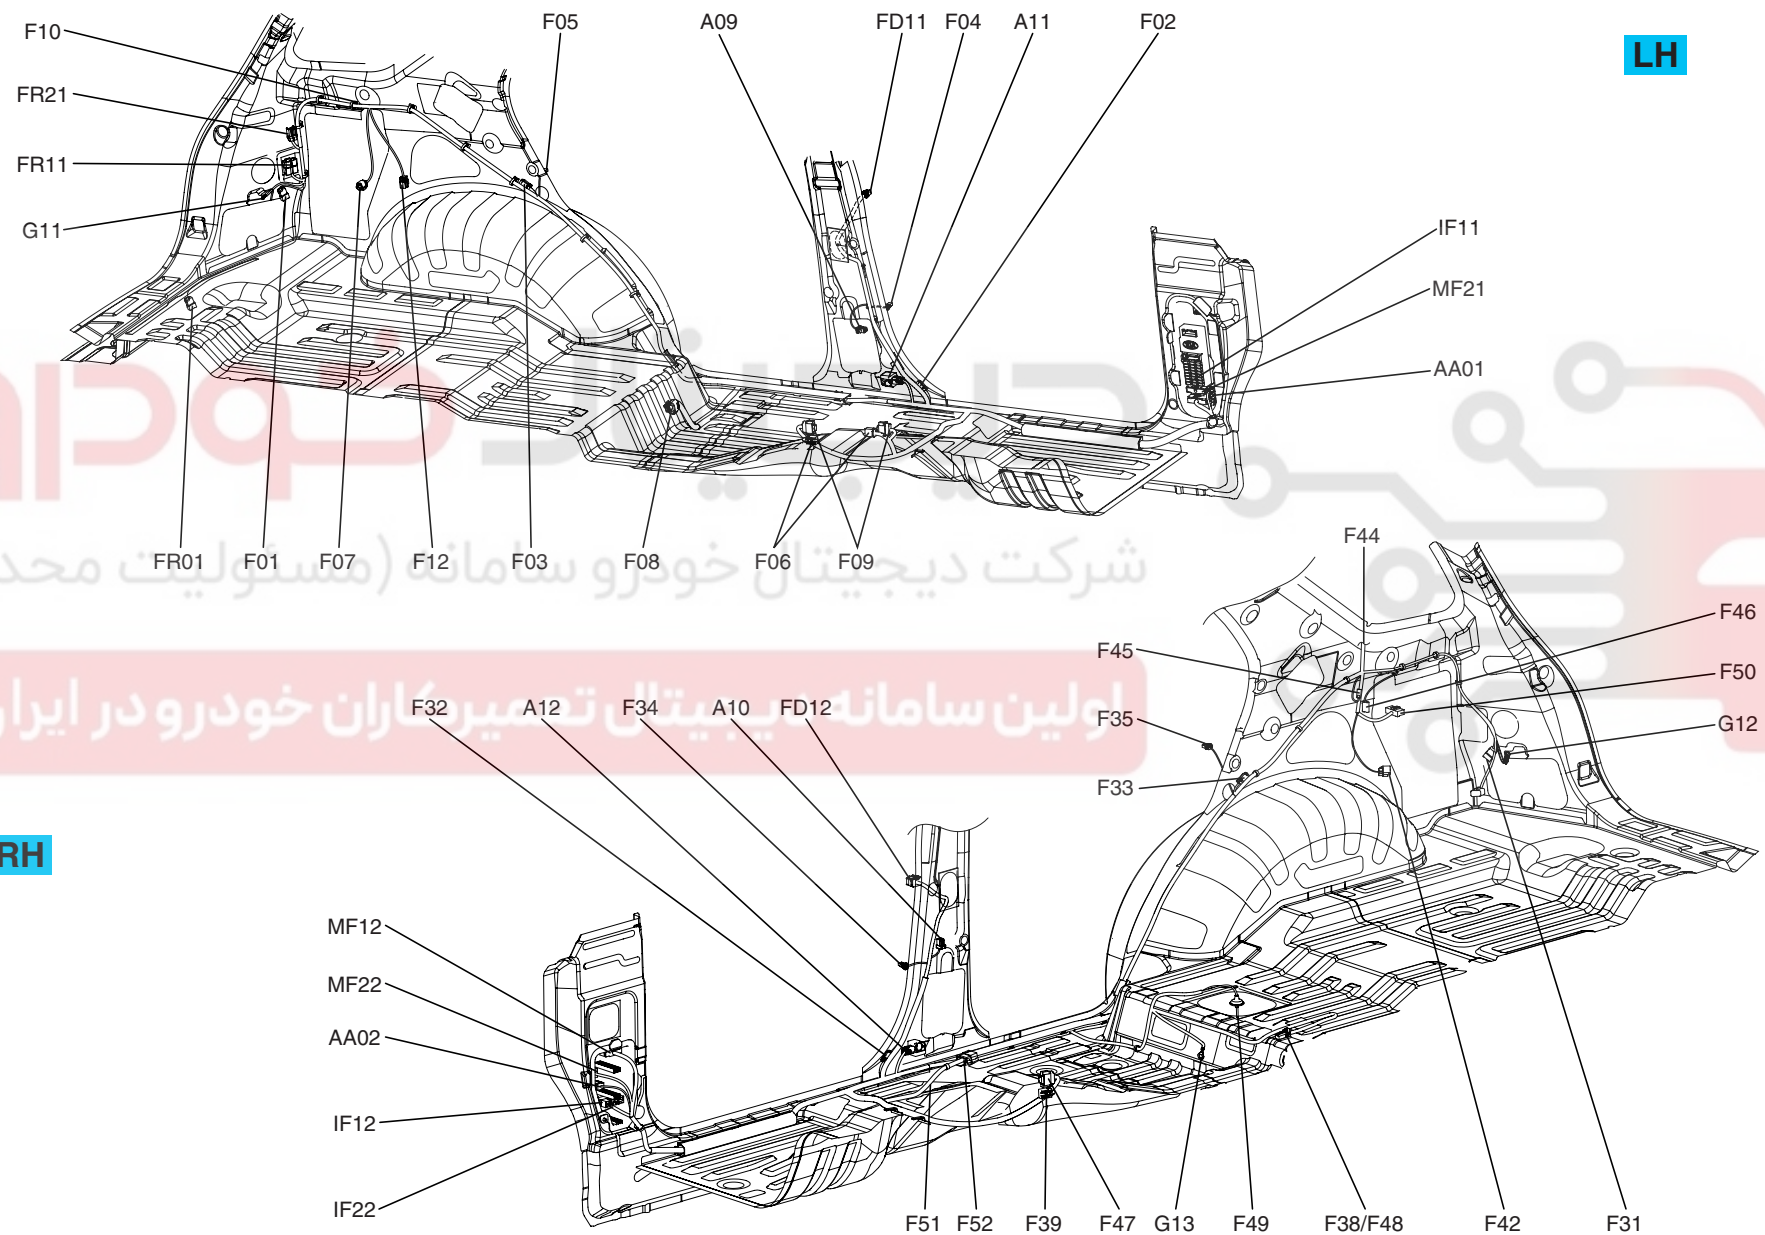

FLOOR HARNESS

FLOOR HARNESS (2)

HL-12

FLOOR LH HARNESS

F01	Rear combination lamp LH
F02	Joint connector
F03	Joint connector
F04	Driver door switch
F05	Rear door switch LH
F06	Driver power seat (LHD)
F07	Rear power outlet
F09	Driver seat belt switch (LHD)
F10	Back warning control module
F12	Rear wheel sensor LH
F17	Passenger seat warmer (RHD)
F19	Passenger seat belt switch (RHD)
IF11	Connection with INSTRUMENT harness
FD11	Connection with REAR DOOR LH harness
FR01	Connection with BACK WARNING harness
FR11	Connection with TAIL GATE EXT. harness
FR21	Connection with TAIL GATE EXT. harness
MF11	Connection with MAIN harness
MF21	Connection with MAIN harness
G11	Ground

FLOOR RH HARNESS

F31	Rear combination lamp RH
F32	Joint connector
F33	Joint connector
F34	Passenger door switch
F35	Rear door switch RH
F39	Passenger seat belt switch (LHD)
F42	Rear wheel sensor RH
F46	Fuel filler actuator
F47	Passenger seat warmer (LHD)
F49	Fuel pump motor & fuel sender
F57	Driver power seat (RHD)
F59	Driver seat belt switch (RHD)
FD12	Connection with REAR DOOR RH harness
IF12	Connection with INSTRUMENT harness
MF12	Connection with MAIN harness
MF22	Connection with MAIN harness
G12	Ground
G13	Ground


A/BAG FLOOR HARNESS

A09	Driver seat belt pretensioner
A10	Passenger seat belt pretensioner
A11	Front side impact sensor LH
A12	Front side impact sensor RH
AA01	Connection with A/BAG MAIN harness
AA02	Connection with A/BAG MAIN harness

DOOR HARNESS EAAFF81

DOOR HARNESS (1)

 HL-13

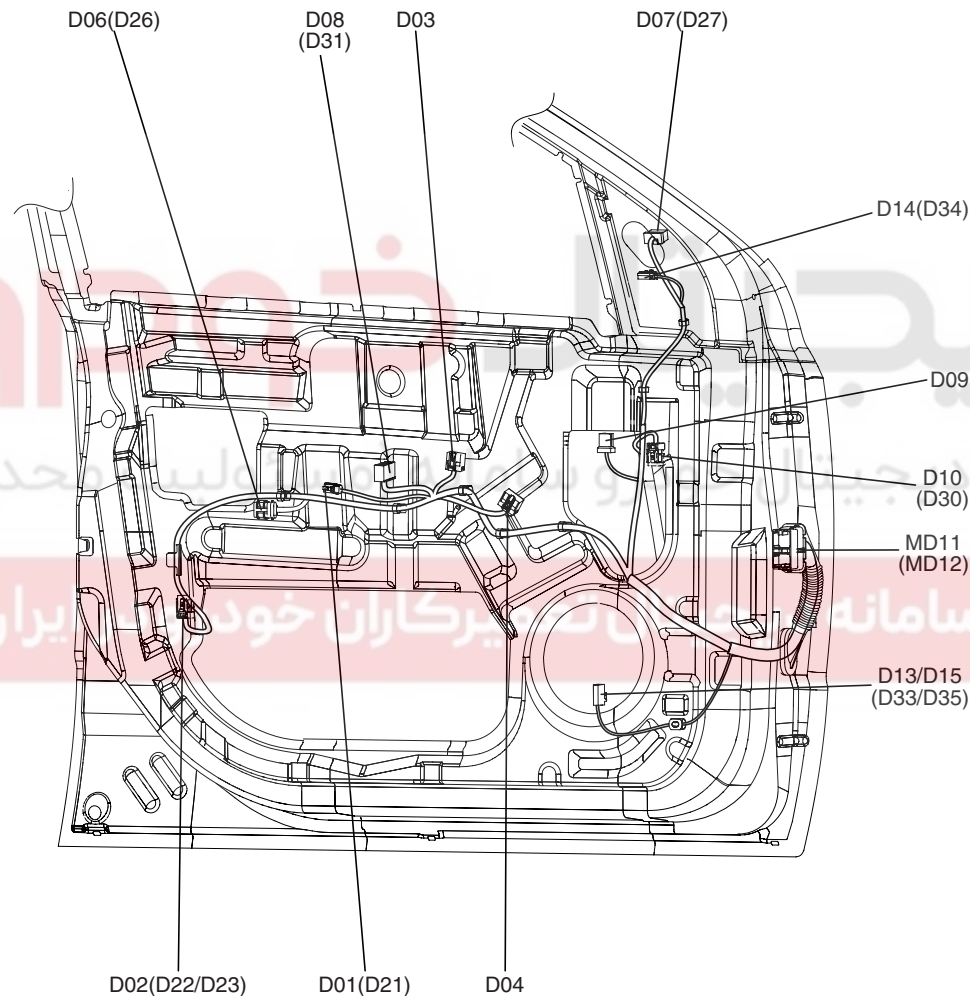

DRIVER DOOR HARNESS

D01	Driver door lamp
D02	Driver door lock actuator
D03	Outside mirror switch
D04	Fuel filler door & tail gate glass switch
D06	Driver key cylinder switch
D07	Driver outside mirror motor & defogger
D08	Power window main switch
D09	Outside mirror folding module
D10	Driver power window motor
D13	Driver door speaker
D14	Driver tweeter speaker
D15	Driver amp speaker
MD11	Connection with MAIN harness

PASSENGER DOOR HARNESS


D21	Passenger door lamp
D22	Passenger door lock motor
D23	Passenger super door lock motor
D26	Passenger key cylinder switch
D27	Passenger outside mirror motor & defogger
D30	Passenger power window motor
D31	Passenger power window switch
D33	Passenger door speaker
D34	Passenger tweeter speaker
D35	Passenger amp speaker
MD12	Connection with MAIN harness

() : PASSENGER

DOOR HARNESS

DOOR HARNESS (2)

 HL-14

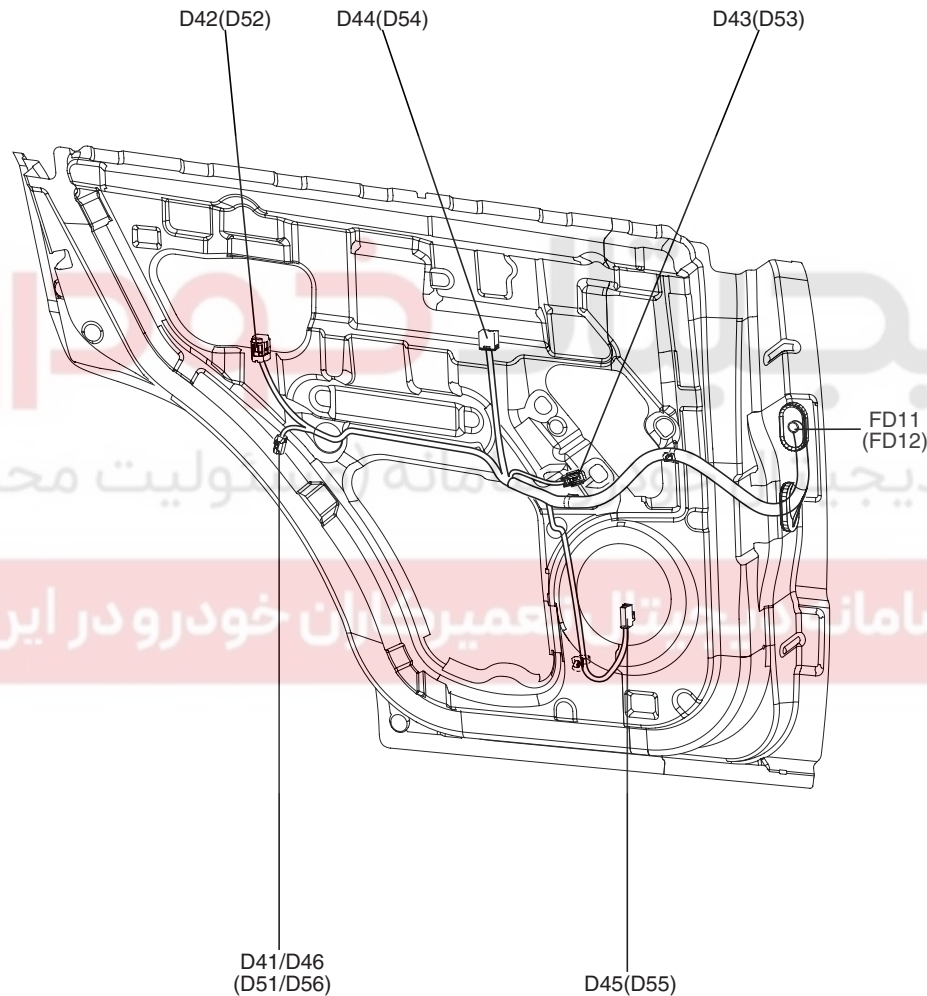

REAR DOOR LH HARNESS

D41	Rear door lamp LH
D42	Rear door lock motor LH
D43	Rear power window motor LH
D44	Rear power window switch LH
D45	Rear door speaker LH
D46	Rear super door lock motor LH
FD11	Connection with FLOOR LH harness

REAR DOOR RH HARNESS


D51	Rear door lamp RH
D52	Rear door lock motor RH
D53	Rear power window motor RH
D54	Rear power window switch RH
D55	Rear door speaker RH
D56	Rear super door lock motor RH
FD12	Connection with FLOOR RH harness

() : RIGHT

ROOF HARNESS EDE5FF4B

ROOF HARNESS (1)

 HL-15

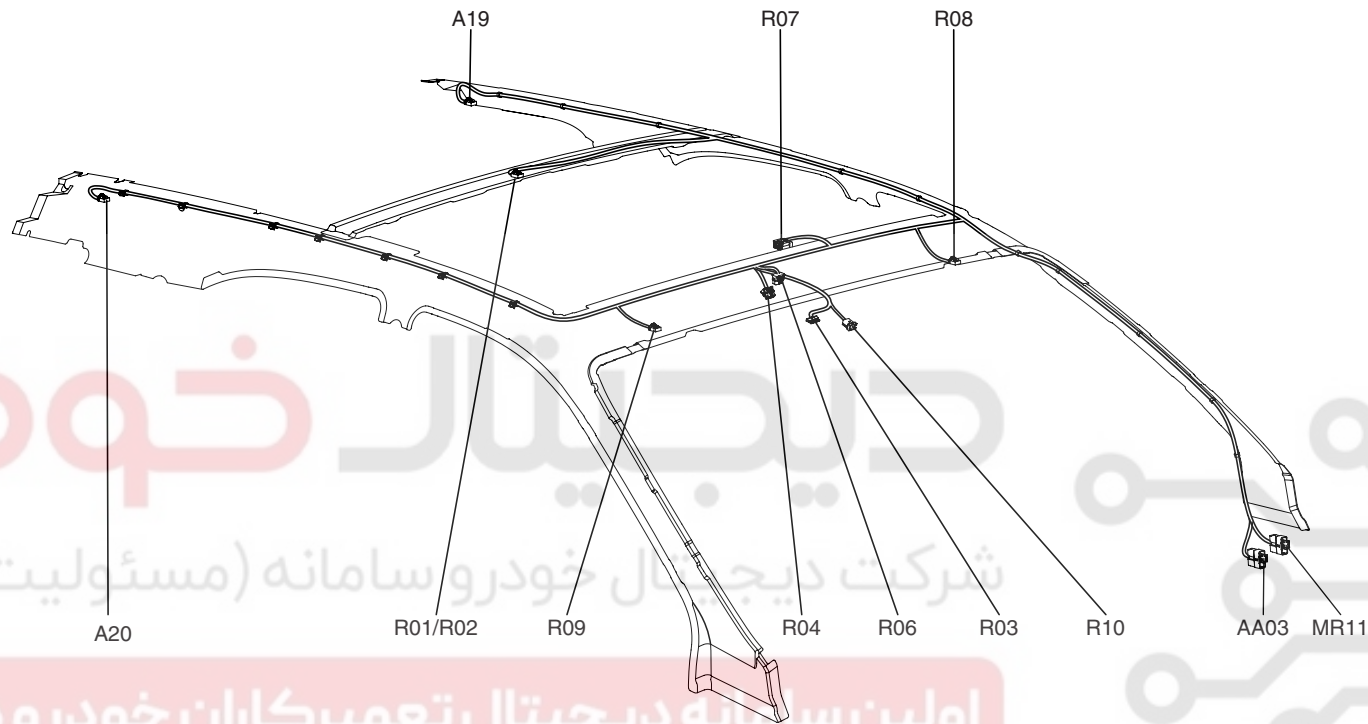

ROOF HARNESS

R01	Center room lamp (WITH SUNROOF)
R02	Center room lamp (W/O SUNROOF)
R04	Multimeter
R06	Overhead console
R07	Sunroof control module
R08	Vanity lamp LH
R09	Vanity lamp RH
MR11	Connection with MAIN harness


A/BAG ROOF HARNESS

A19	Driver curtain air bag
A20	Passenger curtain air bag
AA03	Connection with A/BAG MAIN harness

TAIL GATE HARNESS E6DFEBC8

TAIL GATE HARNESS (1)

 HL-16

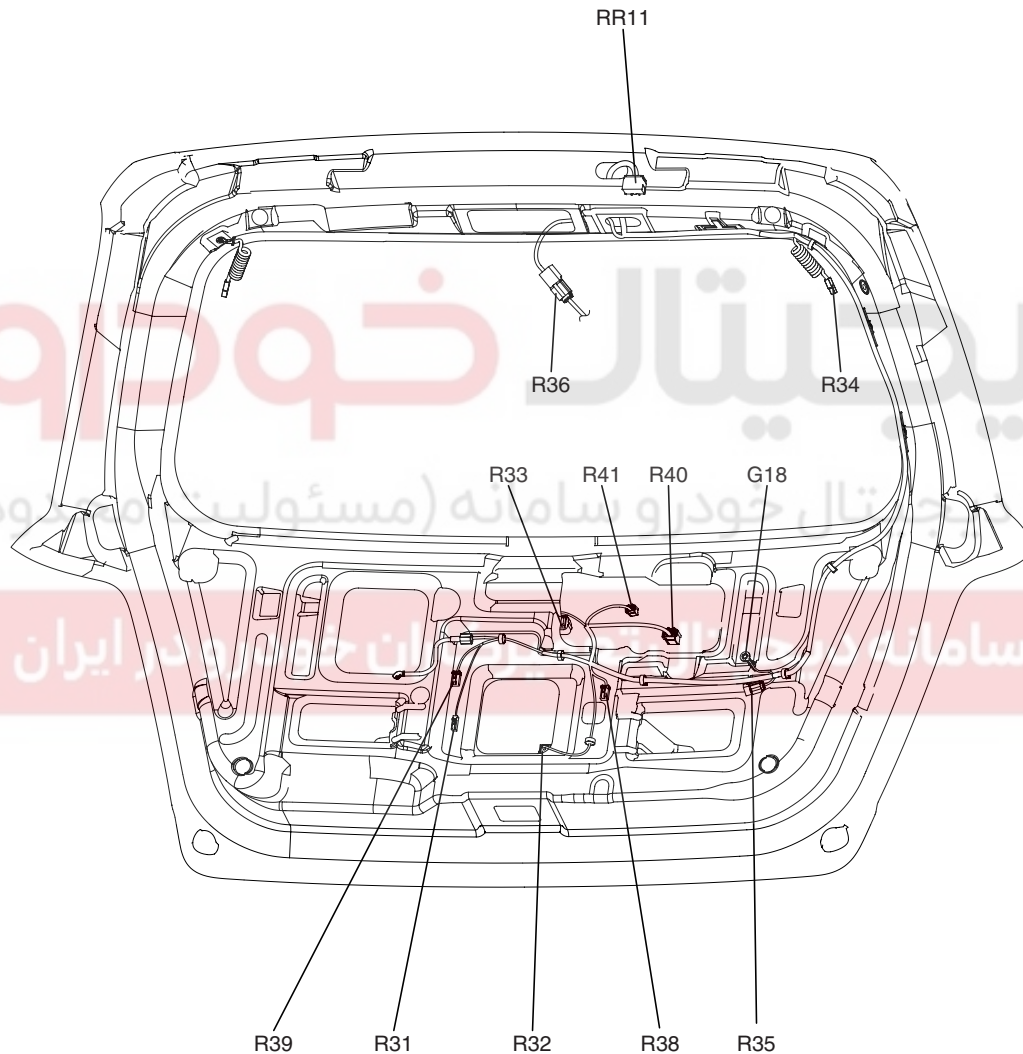

TAIL GATE HARNESS

- R31 Tail gate switch
- R32 Tail gate door lock motor
- R33 Tail gate glass actuator
- R34 Rear window defogger
- R35 Joint connector
- R36 High-mounted stop lamp
- R37 Tail gate key switch
- R38 License lamp LH
- R39 License lamp RH
- R40 Rear wiper controller
- R41 Rear wiper motor
- RR11 Connection with TAIL GATE EXT. harness
- G18 Ground

TAIL GATE EXT. HARNESS

- R45 Cargo room lamp
- FR11 Connection with FLOOR LH harness
- FR21 Connection with FLOOR LH harness
- RR11 Connection with TAIL GATE harness

BACK WARNING HARNESS

- R51 Side back warning sensor LH
- R52 Back warning sensor LH
- R53 Back warning sensor RH
- R54 Side back warning sensor RH
- FR01 Connection with FLOOR LH harness